

Description	Group-Page	Description	Group-Page	Description	Group-Page
ABS	5-34	ADJUSTMENT USING ALIGNMENT		ANGLE MEASUREMENT, PROPELLER	
ABS BRAKE SYSTEM	5-38	SCREEN, HEADLAMP	8L-6	SHAFT	3-6
ABS BRAKE SYSTEM, BLEEDING	5-38	ADJUSTMENTS, ALIGNMENT		ANGLE, UNIVERSAL JOINT	3-5
ABS MAIN RELAY	8W-35-1	MEASUREMENTS	2-4	ANNOUNCEMENT CHIME, LOW FUEL	
ABS PUMP MOTOR RELAY	8W-35-1	AFTER MARKET PAINT REPAIR		WARNING LAMP	8W-45-2
ABS SYSTEM RELAYS	5-38	PRODUCTS	23-3	ANTENNA	8F-11,8F-3,8F-6
ABS WARNING LAMP; 8W-35		AIR CLEANER ELEMENT (FILTER)	14-59	ANTENNA—EXPORT ONLY, POWER	8W-47-2
ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	AIR CLEANER HOUSING	14-58	ANTI-LOCK BRAKE SYSTEM LAMP	8E-12,8E-6
ABS WARNING LAMP; 8W-40		AIR CONDITIONER CONTROLS, HEATER	24-2	ANTILOCK BRAKES	5-34
INSTRUMENT CLUSTER	8W-40-1	AIR CONDITIONER, HEATER	24-2	ANTILOCK BRAKES (CAB), CONTROLLER	5-35
ABS WARNING LAMP; BRAKES	5-38	AIR CONDITIONING (A/C) CLUTCH		ANTILOCK BRAKES, CONTROLLER	5-38
ABS, WARNING LAMPS—EXCEPT	8W-40-1	RELAY—PCM OUTPUT	14-35	A-PILLAR TRIM	23-31
ABSOLUTE PRESSURE (MAP) SENSOR,		AIR CONDITIONING (A/C) CONTROLS—		APPLICATION, BULB	8L-19
MANIFOLD	8D-17,8D-4	PCM INPUT	14-29	APPLIQUE/AIR EXHAUSTER, QUARTER	
ABSOLUTE PRESSURE (MAP) SENSOR		AIR CONTROL (IAC) MOTOR, IDLE	8W-30-5	WINDOW	23-45
TEST—4.0L ENGINE, MANIFOLD	14-47	AIR CONTROL (IAC) MOTOR—4.0L		ARM, LOWER SUSPENSION	2-14,2-8
ABSOLUTE PRESSURE (MAP) SENSOR		ENGINE, IDLE	14-50,14-55	ARM, PITMAN	19-29
TEST—5.2L ENGINES, MANIFOLD	14-46	AIR CONTROL (IAC) MOTOR—4.0L		ARM, UPPER SUSPENSION	2-15,2-9
ABSOLUTE PRESSURE (MAP)		ENGINE—PCM OUTPUT, IDLE	14-37	ARMING	8Q-2
SENSOR—4.0L ENGINE, MANIFOLD	14-56	AIR CONTROL (IAC) MOTOR—5.2L		ARMS AND BLADES, WIPER	8K-1
ABSOLUTE PRESSURE (MAP)		ENGINE, IDLE	14-50,14-55	ARMS AND PUSH RODS,	
SENSOR—4.0L ENGINE—PCM INPUT,		AIR CONTROL (IAC) MOTOR—5.2L		ROCKER	9-30,9-48,9-61
MANIFOLD	14-33	ENGINES—PCM OUTPUT, IDLE	14-37	ARMS, WIPER	8K-9
ABSOLUTE PRESSURE (MAP)		AIR DOOR ACTUATOR, RECIRCULATING	24-40	ASD AND FUEL PUMP RELAYS	14-46
SENSOR—5.2L ENGINES, MANIFOLD	14-56	AIR DOOR MOTOR ACTUATOR—		ASSEMBLY, ADJUSTER PLUG	19-12
ABSOLUTE PRESSURE (MAP)		MANUAL A/C-HEATER, BLEND	8W-42-2	ASSEMBLY, ENGINE	9-27,9-60
SENSOR—5.2L ENGINES—PCM INPUT,		AIR DOOR, RECIRCULATING	24-44	ASSEMBLY, FINAL	3-38,3-60,3-91
MANIFOLD	14-33	AIR FLOW CHECK PROCEDURE,		ASSEMBLY, GUIDE	23-10
ABSOLUTE PRESSURE SENSOR,		THROTTLE BODY MINIMUM	14-51	ASSEMBLY, INSTRUMENT PANEL	8E-30
MANIFOLD	8W-30-4	AIR TEMPERATURE SENSOR, INTAKE	8W-30-4	ASSEMBLY, PISTON AND CONNECTING	
ABSORBER, SHOCK	2-14,2-7	AIR TEMPERATURE SENSOR, INTAKE		ROD	9-53,9-70,9-78
A/C, A/C OPERATION—MANUAL	8W-42-2	MANIFOLD	8D-17,8D-4,8D-9	ASSEMBLY REPLACEMENT, DRIVE AXLE	3-21
A/C OPERATION—AUTOMATIC		AIR TEMPERATURE SENSOR—4.0L		ASSEMBLY REPLACEMENT VEHICLES,	
TEMPERATURE CONTROL	8W-42-2	ENGINE, INTAKE MANIFOLD	14-50,14-61	DRIVE AXLE	3-51
A/C OPERATION—MANUAL A/C	8W-42-2	AIR TEMPERATURE SENSOR—4.0L		ASSEMBLY (SHORT BLOCK), SERVICE	
A/C PERFORMANCE	24-9	ENGINE—PCM INPUT, INTAKE		ENGINE	9-4
A/C SELECT SWITCH	8W-45-1	MANIFOLD	14-32	ASSEMBLY, TRANSMISSION SOLENOID	8W-31-1
ACCELERATION SWITCH	5-37,5-42	AIR TEMPERATURE SENSOR—5.2L		ASSIST HANDLE	23-33
ACCELERATOR PEDAL	14-21	ENGINE, INTAKE MANIFOLD	14-50,14-60	ATC SYSTEM	24-14
ACCESSORY DRIVE BELT TENSION	7-3	AIR TEMPERATURE SENSOR—5.2L		AUDIO SYSTEM	8F-3
ACCESSORY DRIVE BELTS, ENGINE	7-1	ENGINES—PCM INPUT, INTAKE		AUTO HEADLAMP AND PARK LAMP	
ACCUMULATOR; HEATING AND AIR		MANIFOLD	14-32	RELAYS	8Q-7
CONDITIONING	24-34,24-4	AIR TESTING TRANSMISSION CLUTCH		AUTO HEADLAMP RELAY	8Q-3
ACCUMULATOR; TRANSMISSION AND		AND BAND OPERATION	21-16	AUTO HEADLAMP SENSOR	8L-17
TRANSFER CASE	21-119	AIRBAG CONTROL MODULE	8M-2,8M-8	AUTO HEADLAMPS; 8W-45 BODY	
A/C-HEATER, BLEND AIR DOOR MOTOR		AIRBAG IMPACT SENSORS	8W-43-1	CONTROL MODULE	8W-45-2
ACTUATOR—MANUAL	8W-42-2	AIRBAG INDICATOR LAMP	8E-11,8E-6	AUTO HEADLAMPS; 8W-50 FRONT	
A/C-HEATER, BLOWER MOTOR—		AIRBAG MODULE	8M-2,8M-4	LIGHTING	8W-50-1
MANUAL	8W-42-1	AIRBAG REAR MOUNTING BRACKET,		AUTO SHUTDOWN (ASD) RELAY—PCM	
A/C-HEATER, MANUAL	8W-42-1	PASSENGER'S	8M-7	OUTPUT	14-36
ACTION TEST MODE, CIRCUIT	25-2	AIRBAG SQUIB (AIRBAG IGNITER)	8W-43-1	AUTOMATIC BELT TENSIONER	7-44
ACTUATOR, FRONT DOOR INSIDE		AIRBAG SYSTEM	8M-3	AUTOMATIC DAY/NIGHT MIRROR	8T-5,8T-6
HANDLE	23-25	AIRBAG TRIM COVER AND HORN		AUTOMATIC SHUT DOWN (ASD) RELAY	8W-30-1
ACTUATOR, HEAT/DEFROST DOOR	24-43	SWITCH, DRIVER'S	8M-5	AUTOMATIC SHUTDOWN (ASD) RELAY;	
ACTUATOR, PANEL/DEFROST DOOR	24-43	AIRBAG WARNING LAMP	8W-43-1	FUEL SYSTEM	14-52
ACTUATOR, REAR DOOR INSIDE		AJAR CHIME	8W-45-2	AUTOMATIC SHUTDOWN (ASD) RELAY;	
HANDLE	23-29	AJAR SWITCH, DOOR	8Q-2,8Q-4	IGNITION SYSTEM	8D-15,8D-3
ACTUATOR, RECIRCULATING AIR DOOR	24-40	AJAR SWITCH, LIFTGATE	8Q-2,8Q-5	AUTOMATIC SHUTDOWN (ASD) RELAY	
ACTUATOR—MANUAL A/C-HEATER,		AJAR SWITCH, LIFTGLASS	8Q-3,8Q-6	SENSE—PCM INPUT	14-29
BLEND AIR DOOR MOTOR	8W-42-2	ALERT, TAMPER	8Q-2	AUTOMATIC SHUTDOWN (ASD) RELAY	
ADDING ADDITIONAL COOLANT	7-24	ALIGNMENT	2-1	TEST	8D-5
ADDITIONAL COOLANT, ADDING	7-24	ALIGNMENT, HEADLAMP	8L-6	AUTOMATIC TEMPERATURE CONTROL	
ADJUSTER PLUG ASSEMBLY	19-12	ALIGNMENT MEASUREMENTS AND		(ATC)	8W-42-2
ADJUSTER/MOTOR, POWER LUMBAR	8R-4,8R-6	ADJUSTMENTS	2-4	AUTOMATIC TEMPERATURE CONTROL	
ADJUSTER/MOTOR, POWER		ALIGNMENT PREPARATION, HEADLAMP	8L-6	(ATC) MODULE	8W-42-2
RECLINER	8R-4,8R-6	ALIGNMENT, REAR AXLE	3-47,3-78	AUTOMATIC TRANSMISSION, 42/44RE	21-1
ADJUSTER/MOTORS, POWER LUMBAR	8R-2	ALIGNMENT SCREEN, HEADLAMP		AUTOMATIC TRANSMISSION DIAGNOSIS	21-9
ADJUSTER/MOTORS, POWER RECLINER	8R-2	ADJUSTMENT USING	8L-6	AUTOMATIC TRANSMISSION OIL	
ADJUSTER/MOTORS, POWER		ALIGNMENT, SPECIAL TOOLS—		COOLERS	7-2
SEAT	8R-2,8R-4,8R-5	HEADLAMP	8L-8	AXLE ALIGNMENT, REAR	3-47,3-78
ADJUSTMENT AT AXLE WITH LEAF		ALIGNMENT SPECIFICATIONS	2-5	AXLE ASSEMBLY REPLACEMENT, DRIVE	3-21
SPRINGS	3-14	ALIGNMENT, WHEEL	2-1	AXLE ASSEMBLY REPLACEMENT	
ADJUSTMENT BRACKET, SUNROOF	23-7	ALUMINUM THREAD REPAIR	21-31	VEHICLES, DRIVE	3-51
ADJUSTMENT, COMPASS VARIATION	8V-4	AMBIENT TEMPERATURE SENSOR;		AXLE BUSHING	2-9
ADJUSTMENT, DIFFERENTIAL SHIM		8W-42 AIR CONDITIONING/HEATER	8W-42-2	AXLE BUSHING REPLACEMENT	3-25
PACK MEASUREMENT	3-35	AMBIENT TEMPERATURE SENSOR;		AXLE COMPONENTS	3-65,3-96
ADJUSTMENT, DOOR LATCH	23-46	8W-45 BODY CONTROL MODULE	8W-45-1	AXLE, FRONT DRIVE	3-19
ADJUSTMENT, FOG LAMP	8L-7	AMBIENT TEMPERATURE SENSOR;		AXLE, MODEL 35	3-43,3-71
ADJUSTMENT, FRONT BAND	21-128	HEATING AND AIR CONDITIONING	24-35,24-5	AXLE, MODEL 44	3-100,3-102,3-75
ADJUSTMENT, GLASS PANEL VERTICAL		AMBIENT TEMPERATURE SENSOR;		AXLE, REAR	3-82
HEIGHT	23-11	OVERHEAD CONSOLE SYSTEMS	8V-7	AXLE SHAFT	3-53,3-84
ADJUSTMENT, HOOD	23-45	AMPLIFIER	8F-9	AXLE SHAFT, HUB BEARING	3-23
ADJUSTMENT, REAR BAND	21-128	AMPLIFIER AND SPEAKERS, POWER	8W-47-1	AXLE SHAFT OIL SEAL REPLACEMENT,	
ADJUSTMENT, SHIFT LINKAGE	21-167,21-189	ANALYSIS, BACKLASH AND CONTACT		INNER	3-27
ADJUSTMENT, TRANSMISSION		PATTERN	3-36	AXLE SHAFT SEAL AND BEARING	3-53,3-84
CONTROL CABLE	21-12	ANALYSIS, STALL TEST	21-15	AXLE SHAFT—CARDAN U-JOINT	3-30
ADJUSTMENT, TRANSMISSION		ANALYZING ROAD TEST	21-12	AXLE, TORQUE—MODEL 30	3-38
THROTTLE VALVE CABLE	21-126				

Description	Group-Page	Description	Group-Page	Description	Group-Page
AXLE WITH LEAF SPRINGS, ADJUSTMENT AT	3-14	BLEND AIR DOOR MOTOR ACTUATOR— MANUAL A/C-HEATER	8W-42-2	BRAKE PEDAL	5-14,5-2
AXLE—MODEL 30, FRONT	3-38,3-39	BLEND DOOR MOTOR—AUTOMATIC TEMPERATURE CONTROL	8W-42-3	BRAKE ROTOR, DISC	5-19
AXLE—MODEL 35, FRONT	3-71	BLENDS, GASOLINE/OXYGENATE	14-1	BRAKE ROTOR, FRONT DISC	5-9
AXLE—TUBE AND MODEL 30, FRONT	3-15	BLOCK, CYLINDER	9-47,9-48,9-77,9-80	BRAKE ROTOR, REAR DISC	5-10,5-21
AXLES	3-44,3-75	BLOCK HEATER, ENGINE	7-42,7-4	BRAKE SWITCH—PCM INPUT	14-30
BACK, BUCKET SEAT	23-12	BLOCK, JUNCTION	8E-29,8E-4	BRAKE SYSTEM	5-2
BACK COVER, BUCKET SEAT	23-12	BLOCKER, KNEE	8E-21	BRAKE SYSTEM, ABS	5-38
BACK COVER, REAR SEAT	23-14	BLOWER MOTOR	24-23,24-37,24-5	BRAKE SYSTEM, BASE	5-1,5-5
BACK WITH CHILD SEAT, REAR SEAT	23-37	BLOWER MOTOR POWER MODULE	24-5	BRAKE SYSTEM, BLEEDING ABS	5-38
BACKLASH AND CONTACT PATTERN ANALYSIS	3-36	BLOWER MOTOR RELAY, HIGH SPEED	24-25,24-38,24-7	BRAKE SYSTEM LAMP, ANTI-LOCK	8E-12,8E-6
BACK-UP AND SIDE MARKER LAMP BULBS, TAIL, STOP, TURN SIGNAL	8L-10	BLOWER MOTOR RESISTOR	24-23,24-5	BRAKE TRANSMISSION SHIFT INTERLOCK	21-125,21-11,21-35
BACK-UP AND SIDE MARKER LAMP, TAIL, STOP, TURN SIGNAL	8L-14	BLOWER MOTOR RESISTOR/POWER MODULE	24-38	BRAKE TRANSMISSION SHIFT INTERLOCK MECHANISM	21-8
BACK-UP LAMPS	8W-51-1	BLOWER MOTOR SWITCH	24-23,24-6	BRAKE WARNING LAMP	8E-12,8E-6
BALANCE, TIRE AND WHEEL	22-10	BLOWER MOTOR—AUTOMATIC TEMPERATURE CONTROL	8W-42-3	BRAKE WARNING LAMP, RED	5-2,5-8
BALL STUDS, STEERING KNUCKLE	3-24	BLOWER MOTOR—MANUAL A/C- HEATER	8W-42-1	BRAKES, ANTILOCK	5-34
BAND ADJUSTMENT, FRONT	21-128	BODY	23-47	BRAKES, BASE	5-33
BAND ADJUSTMENT, REAR	21-128	BODY CODE PLATE	Intro-2	BRAKES (CAB), CONTROLLER ANTILOCK	5-35
BAND CLAMP (TORCA)	11-3	BODY COMPONENTS	23-15	BRAKES, CONTROLLER ANTILOCK	5-38
BAND OPERATION, AIR TESTING TRANSMISSION CLUTCH	21-16	BODY CONTROL MODULE; AUDIO SYSTEMS	8F-2	BRAKES, FRONT DISC	5-4
BAR, STABILIZER	2-15,2-9	BODY CONTROL MODULE; CHIME/ BUZZER WARNING SYSTEMS	8U-1	BRAKES, PARKING	5-5
BAR, TRACK	2-10,2-16	BODY CONTROL MODULE; ELECTRICALLY HEATED SYSTEMS	8N-2	BRAKES, REAR DISC	5-4
BASE BRAKE SYSTEM	5-1,5-5	BODY CONTROL MODULE; HORN SYSTEMS	8G-1	BRAKESHOE, DISC	5-17
BASE BRAKES	5-33	BODY CONTROL MODULE; INSTRUMENT PANEL SYSTEMS	8E-24,8E-4	BRAKESHOE, PARKING	5-32
BASE COAT/CLEAR COAT FINISH	23-2	BODY CONTROL MODULE; POWER LOCK SYSTEMS	8P-3	BRAKESHOES, PARKING	5-23
BATTERY	8A-11,8A-13,8A-2,8A-3	BODY CONTROL MODULE; POWER WINDOW SYSTEMS	8S-2	BRAKESHOES, REAR DISC	5-20
BATTERY CHARGING	8A-9	BODY CONTROL MODULE; VEHICLE THEFT/SECURITY SYSTEMS	8Q-2	BREAKER, CIRCUIT; POWER LOCK SYSTEMS	8P-3,8P-4
BATTERY FEED	8W-30-1	BODY CONTROL MODULE; WIPER AND WASHER SYSTEMS	8K-3	BREAKER, CIRCUIT; POWER SEAT SYSTEMS	8R-3
BATTERY MOUNTING	8A-3	BODY CONTROL MODULE INPUTS	8U-2	BREAKER, CIRCUIT; POWER WINDOW SYSTEMS	8S-2,8S-3
BATTERY REPLACEMENT, REMOTE KEYLESS ENTRY TRANSMITTER	8P-5	BODY LUBRICANTS	23-47	BREATHING/FILTER—5.2L ENGINE, CRANKCASE	25-17
BATTERY SIZE AND RATINGS	8A-2	BODY LUBRICATION	23-17	BUCKET SEAT BACK	23-12
BATTERY TEMPERATURE SENSOR; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-2	BODY MINIMUM AIR FLOW CHECK PROCEDURE, THROTTLE	14-51	BUCKET SEAT BACK COVER	23-12
BATTERY TEMPERATURE SENSOR; CHARGING SYSTEM	8C-2,8C-6,8C-8	BODY SIDE CLADDING	23-31	BUCKET SEAT CUSHION COVER	23-13
BATTERY TEMPERATURE SENSOR—PCM INPUT	14-29	BODY STRIPES/DECALS	23-20	BUCKET SEAT, FRONT	23-35
BATTERY VOLTAGE—PCM INPUT	14-30	BODY, VALVE	21-116,21-128,21-38,21-45	BUCKET SEAT TRACK	23-13
BEAM INDICATOR LAMP, HEADLAMP HIGH	8E-15,8E-7	BODY—4.0L ENGINE, THROTTLE	14-40,14-53	BUFFING, AND POLISHING, WET SANDING	23-2
BEAM INDICATOR LAMP, HIGH	8W-40-2	BODY—5.2L ENGINE, THROTTLE	14-53	BUILT-IN TEST INDICATOR	8A-5
BEARING AND AXLE SHAFT, HUB	3-23	BODY—5.2L ENGINES, THROTTLE	14-39	BULB APPLICATION	8L-19
BEARING, AXLE SHAFT SEAL	3-53,3-84	BOOSTER, MASTER CYLINDER/POWER	5-8	BULB, CARGO LAMP	8L-12
BEARING, HUB	2-10	BOOSTER, POWER BRAKE	5-15,5-2	BULB, CENTER HIGH MOUNTED STOP LAMP (CHMSL)	8L-10
BEARING NOISE, GEAR	3-17,3-46,3-77	BOOT, SPLASH SHIELD/CALIPER BRACKET/LEVER	5-24	BULB, DOME LAMP	8L-11
BEARING, OUTPUT SHAFT FRONT	21-35	BORES, HONING CYLINDER	9-2	BULB, DOOR COURTESY LAMP	8L-11
BEARING, OUTPUT SHAFT REAR	21-34	BOX COMPONENTS, GLOVE	8E-28	BULB, FOG LAMP	8L-9
BEARING, PITMAN SHAFT SEALS	19-17	BOX, GLOVE	8E-27	BULB, HEADLAMP	8L-9
BEARING PRELOAD AND GEAR LASH, DIFFERENTIAL	3-67,3-99	BOX LAMP AND SWITCH, GLOVE	8E-26	BULB, LICENSE PLATE LAMP	8L-10
BEARINGS AND SEALS, TRANSFER CASE	21-174	BOX LAMP, GLOVE	8W-44-2	BULB, OVERHEAD CONSOLE READING LAMP	8L-11
BEARINGS, CAMSHAFT	9-67	BOX LATCH STRIKER, GLOVE	8E-26	BULB, PARKING LAMP	8L-10
BEARINGS, CRANKSHAFT MAIN	9-39,9-58,9-68	B-PILLAR TRIM PANEL, LOWER	23-33	BULB, READING LAMP	8L-11
BEARINGS, DIFFERENTIAL SIDE	3-55,3-87	B-PILLAR TRIM PANEL, UPPER	23-33	BULB SERVICE, LAMP	8L-9
BEARINGS, FITTING CONNECTING ROD	9-21,9-57	BRACKET, PASSENGER'S AIRBAG REAR MOUNTING	8M-7	BULB, TURN SIGNAL AND SIDE MARKER LAMP	8L-10
BEARINGS, FITTING CRANKSHAFT MAIN	9-22	BRACKET, REARVIEW MIRROR SUPPORT	23-38	BULB, UNDERHOOD LAMP	8L-11
BELT DIAGNOSIS	7-10	BRACKET, SUNROOF ADJUSTMENT	23-7	BULB, VISOR VANITY LAMP	8L-11
BELT REMINDER LAMP, SEAT	8E-16,8E-8	BRACKET/LEVER BOOT, SPLASH SHIELD/CALIPER	5-24	BULBS, CLUSTER	8E-23
BELT REPLACEMENT/ADJUSTMENT	7-43	BRAKE BLEEDING	5-12	BULBS, READING/COURTESY LAMP	8V-7
BELT SEAL, FRONT DOOR INNER	23-25	BRAKE BOOSTER, POWER	5-15,5-2	BULBS, TAIL, STOP, TURN SIGNAL, BACK-UP AND SIDE MARKER LAMP	8L-10
BELT SEAL, FRONT DOOR OUTER	23-25	BRAKE CABLE, FRONT PARKING	5-22	BUMPER FASCIA, REAR	13-2
BELT SEAL, REAR DOOR INNER	23-29	BRAKE CABLE, REAR PARKING	5-22	BUMPER, REAR	13-2
BELT SEAL, REAR DOOR OUTER	23-29	BRAKE CABLE TENSIONER, PARKING	5-32	BUMPER/FASCIA, FRONT	13-1
BELT SWITCH, SEAT	8W-45-2	BRAKE CALIPER, DISC	5-16,5-28	BUMPERS	13-1
BELT TENSION, ACCESSORY DRIVE	7-3	BRAKE CALIPER, REAR DISC	5-19,5-30	BURNED FLUID, CAUSES OF	21-10
BELT TENSION, DRIVE	7-48	BRAKE CAM AND LEVER, PARKING	5-24	BUS, CCD	8W-30-5
BELT TENSIONER, AUTOMATIC	7-44	BRAKE COMPONENTS	5-33	BUSHING, AXLE	2-9
BELT/BUCKLE, FRONT SHOULDER	23-34	BRAKE FLUID	5-32	BUSHING, DISTRIBUTOR DRIVE SHAFT	9-68
BELT/BUCKLE, REAR SHOULDER/LAP	23-35	BRAKE FLUID CONTAMINATION	5-11	BUSHING, OVERDRIVE HOUSING	21-34
BELTS, ENGINE ACCESSORY DRIVE	7-1	BRAKE FLUID LEVEL	5-11	BUSHING REPLACEMENT, AXLE	3-25
BETTS CONNECTORS, TERMINAL/ CONNECTOR REPAIR—THOMAS	8W-01-8	BRAKE HAND LEVER, PARKING	5-21	BYPASS HOSE, WATER PUMP	7-39
BEZEL, CLUSTER	8E-21	BRAKE HOSES AND LINES	5-5	BYPASS HOSE—5.2L V-8 ENGINE, WATER PUMP	7-2
BEZEL, INSTRUMENT PANEL CENTER	8E-27	BRAKE LINE	5-13	CABLE ADJUSTMENT, TRANSMISSION CONTROL	21-12
BEZELS, SWITCH POD	8E-21	BRAKE LINE AND HOSES	5-11	CABLE ADJUSTMENT, TRANSMISSION THROTTLE VALVE	21-126
BIN, GARAGE DOOR OPENER STORAGE	8V-2	BRAKE, PARKING	5-10	CABLE, FRONT PARKING BRAKE	5-22
BIN, SUNGLASSES STORAGE	8V-2			CABLE, GEARSHIFT	21-127,21-11,21-35
BLADE INSPECTION, FAN	7-47			CABLE, HOOD RELEASE	23-19
BLADES AND ELEMENTS, WIPER	8K-8			CABLE LOCATORS, DRIVE	23-9
BLADES, WIPER ARMS	8K-2			CABLE, REAR PARKING BRAKE	5-22
BLEEDING ABS BRAKE SYSTEM	5-38			CABLE RESISTANCE, SPARK PLUG	8D-25
BLEEDING, BRAKE	5-12				

Description	Group-Page	Description	Group-Page	Description	Group-Page
CABLE, SERVO	8H-2,8H-8	CENTER, VEHICLE INFORMATION; TURN		CLUSTER BULBS	8E-23
CABLE TENSIONER, PARKING BRAKE	5-32	SIGNAL AND HAZARD WARNING		CLUSTER, GAUGE	8E-9
CABLE, THROTTLE	14-22	SYSTEMS	8J-2	CLUSTER ILLUMINATION LAMPS	8E-13,8E-7
CABLES, DRIVE	23-9	CENTERING, CLOCKSPrING	8M-10	CLUSTER, INSTRUMENT	8E-22
CABLES, SPARK PLUG	8D-13,8D-3,8D-9	CERTIFICATION LABEL, VEHICLE SAFETY	Intro.-2	CLUSTER LENS, HOOD, AND MASK	8E-22
CALIBRATION, COMPASS	8V-4	CHAIN AND SPROCKETS, TIMING	9-35	CLUSTERS, INSTRUMENT	8E-2
CALIFORNIA EMISSIONS PACKAGE,		CHAIN COVER, TIMING	9-64	CLUTCH AND BAND OPERATION, AIR	
LEAK DETECTION PUMP (LDP)—4.0L	25-15	CHAIN STRETCH, MEASURING TIMING	9-56	TESTING TRANSMISSION	21-16
CALIPER	5-31	CHAIN, TIMING	9-66	CLUTCH COIL, COMPRESSOR	24-24
CALIPER, DISC BRAKE	5-16,5-28	CHANGE, LUBRICANT	3-21,3-50,3-81	CLUTCH, COMPRESSOR	24-30,24-6
CALIPER, REAR DISC BRAKE	5-19,5-30	CHANNEL, DRAIN	23-9	CLUTCH ENGAGEMENT, CONVERTER	21-7
CAM AND LEVER, PARKING BRAKE	5-24	CHANNEL WEATHERSTRIP, FRONT DOOR		CLUTCH, FRONT	21-120,21-82
CAMSHAFT	9-36,9-66	RUN	23-26	CLUTCH, REAR	21-122,21-85
CAMSHAFT AND CRANKSHAFT POSITION		CHARGE, REFRIGERANT SYSTEM	24-26	CLUTCH RELAY, COMPRESSOR	24-24,24-6
SENSORS	14-49	CHARGING, BATTERY	8A-9	CLUTCH RELAY—PCM OUTPUT, AIR	
CAMSHAFT BEARINGS	9-67	CHARGING SYSTEM; 8W-20 CHARGING		CONDITIONING (A/C)	14-35
CAMSHAFT PIN REPLACEMENT	9-38	SYSTEM	8W-20-1	CLUTCH SWITCH, LOW PRESSURE	
CAMSHAFT PLUGS, ENGINE CORE OIL	9-74	CHARGING SYSTEM; CHARGING		CYCLING	24-25,24-35,24-7
CAMSHAFT POSITION SENSOR; 8W-30		SYSTEM	8C-2	CLUTCH (TCC) SOLENOID—PCM	
FUEL/IGNITION SYSTEMS	8W-30-3	CHARGING SYSTEM OPERATION	8C-1	OUTPUT, TORQUE CONVERTOR	14-39
CAMSHAFT POSITION SENSOR; FUEL		CHARGING SYSTEM RESISTANCE TESTS	8C-3	CLUTCH, TORQUE CONVERTER—	
SYSTEM	14-57	CHART, LEAD CORRECTION	22-4	ELECTRONIC	21-4
CAMSHAFT POSITION SENSOR;		CHART, TORQUE; BRAKES	5-33,5-43	CLUTCH/LOW-REVERSE DRUM,	
IGNITION SYSTEM	8D-16,8D-4,8D-8	CHART, TORQUE; EMISSION CONTROL		OVERRUNNING	21-77
CAMSHAFT POSITION SENSOR—PCM		SYSTEMS	25-21	CLUTCH/LOW-REVERSE DRUM/REAR	
INPUT	14-30	CHART, TORQUE; FUEL SYSTEM	14-23,14-62	SUPPORT, OVERRUNNING	21-119
CANISTER, EVAP	25-19	CHART, TORQUE;		COAT FINISH, BASE COAT/CLEAR	23-2
CANISTER, EVAPORATION (EVAP)	25-13	STEERING	19-20,19-24,19-30,19-8	COAT/CLEAR COAT FINISH, BASE	23-2
CANISTER PURGE SOLENOID, DUTY		CHART, TORQUE; SUSPENSION	2-11,2-16	CODE DECODING, VEHICLE	Intro.-2
CYCLE EVAP; EMISSION CONTROL		CHART, TORQUE; TIRES AND WHEELS	22-11	CODE IDENTIFICATION, WIRE	8W-01-2
SYSTEMS	25-14	CHARTS, POWER STEERING SYSTEM		CODE, PAINT	23-2
CANISTER PURGE SOLENOID, DUTY		DIAGNOSIS	19-2	CODE PLATE, BODY	Intro.-2
CYCLE EVAP; FUEL SYSTEM	14-56	CHARTS—RE TRANSMISSION,		CODES, DIAGNOSTIC TROUBLE	25-2
CANISTER PURGE SOLENOID,		DIAGNOSIS TABLES	21-19	CODES, OVERSIZE AND UNDERSIZE	
EVAPORATIVE	25-19	CHECK, FLUID LEVEL	21-29	COMPONENT	9-18
CAP, DISTRIBUTOR	8D-7	CHECK GAUGES LAMP	8E-12,8E-7	COIL, COMPRESSOR CLUTCH	24-24
CAP, FUEL TANK FILLER TUBE;		CHECK, OIL COOLER FLOW	21-11	COIL, EVAPORATOR	24-42,24-7
EMISSION CONTROL SYSTEMS	25-14,25-20	CHECK PROCEDURE, THROTTLE BODY		COIL, IGNITION; 8W-30 FUEL/IGNITION	
CAP, FUEL TANK FILLER TUBE; FUEL		MINIMUM AIR FLOW	14-51	SYSTEMS	8W-30-5
SYSTEM	14-6	CHECK, RADIATOR CAP-TO-FILLER NECK		COIL, IGNITION; IGNITION SYSTEM	8D-26,8D-3
CAP, PRESSURE TESTING RADIATOR	7-23	SEAL—PRESSURE RELIEF	7-23	COIL SPRING	2-14,2-8
CAP, RADIATOR	7-47	CHECK, RADIATOR COOLANT FLOW	7-21	COIL TEST, IGNITION	8D-5
CAP, RADIATOR PRESSURE	7-5	CHECK, ROUTINE COOLANT LEVEL	7-24	COIL, TESTING FOR SPARK AT	8D-5
CAPACITIES, COOLING SYSTEM	7-47	CHECK VALVE SERVICE, CONVERTER		COIL—4.0L ENGINE, IGNITION	8D-15
CAPACITIES, FLUID	0-2	DRAINBACK	21-31	COIL—4.0L ENGINES—PCM OUTPUT,	
CAPACITY, FUEL TANK	14-23	CHECKING FLUID LEVEL AND		IGNITION	14-38
CAPACITY TEST, FUEL PUMP	14-8	CONDITION	21-9	COIL—5.2L ENGINES, IGNITION	8D-14
CAP-TO-FILLER NECK SEAL—PRESSURE		CHECK—SERVICE, COOLANT LEVEL	7-24	COIL—5.2L ENGINES—PCM OUTPUT,	
RELIEF CHECK, RADIATOR	7-23	CHECKS, PRELIMINARY	7-14	IGNITION	14-38
CARDAN (CV), DOUBLE	3-10	CHILD SEAT MODULE	23-37	COLD CRANKING TEST	8B-4
CARDAN JOINT, SINGLE AND DOUBLE	3-14	CHILD SEAT, REAR SEAT BACK WITH	23-37	COLUMN, STEERING	19-21,19-22
CARDAN, SINGLE	3-8	CHIME, AJAR	8W-45-2	COMBINATION FLASHER	8J-1,8J-4
CARDAN U-JOINT	3-38	CHIME, ENGINE TEMPERATURE		COMBINATION VALVE	5-14,5-37,5-3,5-9
CARGO CARPET/MAT	23-38	CRITICAL	8W-45-2	COMBUSTION PRESSURE LEAKAGE	
CARGO LAMP	8L-16	CHIME, KEY-IN IGNITION	8W-45-2	TEST, CYLINDER	9-9
CARGO LAMP BULB	8L-12	CHIME, LOW FUEL WARNING LAMP		COMPASS	8V-2
CARGO LAMP, IGNITION SWITCH KEY-IN		ANNOUNCEMENT	8W-45-2	COMPASS CALIBRATION	8V-4
HALO LAMP, COURTESY LAMPS	8W-44-1	CHIME, LOW OIL PRESSURE WARNING	8W-45-2	COMPASS DEMAGNETIZING	8V-5
CARPET/MAT, CARGO	23-38	CHMSL LAMPS, STOP LAMPS	8W-51-1	COMPASS, THERMOMETER, DISPLAY	
CARPET/MAT, FRONT	23-37	CIGAR LIGHTER; 8W-41 HORN/CIGAR		MODULE, TRIP COMPUTER	8V-6
CASE BEARINGS AND SEALS, TRANSFER	21-174	LIGHTER	8W-41-1	COMPASS VARIATION ADJUSTMENT	8V-4
CASE COVER OIL SEAL, TIMING	9-44	CIGAR LIGHTER; INSTRUMENT PANEL		COMPRESSION PRESSURE TEST,	
CASE COVER, TIMING	9-34	SYSTEMS	8E-26	CYLINDER	9-8
CASE IDENTIFICATION, TRANSFER	21-147	CIRCUIT ACTUATION TEST MODE	25-2	COMPRESSOR	24-23,24-29,24-6
CASE, NV231		CIRCUIT BREAKER; POWER LOCK		COMPRESSOR CLUTCH	24-30,24-6
TRANSFER	21-147,21-149,21-150,21-163	SYSTEMS	8P-3,8P-4	COMPRESSOR CLUTCH COIL	24-24
CASE, NV249 TRANSFER	21-170,21-191	CIRCUIT BREAKER; POWER SEAT		COMPRESSOR CLUTCH RELAY	24-24,24-6
CASE SKID PLATE, TRANSFER	13-4	SYSTEMS	8R-3	COMPUTER, COMPASS, THERMOMETER,	
CASE, TRANSFER	21-173,21-178	CIRCUIT BREAKER; POWER WINDOW		DISPLAY MODULE, TRIP	8V-6
CATALYTIC CONVERTER	11-2	SYSTEMS	8S-2,8S-3	COMPUTER, TRIP	8V-1
CATALYTIC CONVERTER—4.0/5.2L		CIRCUIT IDENTIFICATION	8W-01-3	COMPUTER/COMPASS/DISPLAY	
ENGINES	11-5	CIRCUIT SENSE—PCM INPUT, IGNITION	14-32	MODULE, TRIP	8V-3
CAUSES OF BURNED FLUID	21-10	CIRCUIT TESTS, CONTROL	8B-5	CONDENSER	24-32,24-6
CAUTIONS, AND WARNINGS, NOTES	8W-01-1	CIRCUIT TESTS, FEED	8B-4	CONDITION, CHECKING FLUID LEVEL	21-9
CAUTIONS, SERVICE WARNINGS &	5-2	CIRCUITS, NON-MONITORED	25-11	CONDITIONER CONTROLS, HEATER AND	
CCD BUS	8W-30-5	CLADDING, BODY SIDE	23-31	AIR	24-2
CENTER BEZEL, INSTRUMENT PANEL	8E-27	CLAMP (TORCA), BAND	11-3	CONDITIONER, HEATER AND AIR	24-2
CENTER, GRAPHIC DISPLAY MODULE/		CLAMPS, FUEL TUBES/LINES/HOSES	14-11	CONNECTING ROD ASSEMBLY,	
VEHICLE INFORMATION	8E-25	CLASSIFICATION OF LUBRICANTS	0-1	PISTON	9-53,9-70,9-78
CENTER HIGH MOUNTED STOP LAMP		CLEANER ELEMENT (FILTER), AIR	14-59	CONNECTING ROD BEARINGS,	
(CHMSL)	8L-15	CLEANER HOUSING, AIR	14-58	FITTING	9-21,9-57
CENTER HIGH MOUNTED STOP LAMP		CLEANING OF TIRES	22-7	CONNECTING RODS, PISTONS	9-42
(CHMSL) BULB	8L-10	CLEANING/REVERSE FLUSHING,		CONNECTIONS, INTERMITTENT AND	
CENTER, VEHICLE INFORMATION; 8W-46		COOLING SYSTEM	7-25	POOR	8W-01-5
MESSAGE CENTER	8W-46-1	CLEAN-UP PROCEDURE	8M-4	CONNECTOR AND TERMINAL	
CENTER, VEHICLE INFORMATION;		CLOCKSPrING	8M-2,8M-9	REPLACEMENT	8W-01-9
INSTRUMENT PANEL		CLOCKSPrING CENTERING	8M-10	CONNECTOR, DATA LINK; 8W-30	
SYSTEMS	8E-16,8E-18,8E-3	CLUSTER BEZEL	8E-21	FUEL/IGNITION SYSTEMS	8W-30-1

Description	Group-Page	Description	Group-Page	Description	Group-Page
CONNECTOR, DATA LINK; 8W-35 ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	CONTROL MODULE (PCM), POWERTRAIN; IGNITION SYSTEM	8D-21,8D-2	COOLING	7-48
CONNECTOR, DATA LINK; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1	CONTROL MODULE (PCM), POWERTRAIN; VEHICLE SPEED CONTROL SYSTEM	8H-2,8H-7	COOLING SYSTEM	7-15,7-2
CONNECTOR REPLACEMENT	8W-01-8	CONTROL MODULE, POWERTRAIN	8H-9	COOLING SYSTEM CAPACITIES	7-47
CONNECTOR/GROUND LOCATIONS; 8W-01 GENERAL INFORMATION	8W-01-1	CONTROL MODULE, SPEED PROPORTIONAL STEERING; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1	COOLING SYSTEM CLEANING/REVERSE FLUSHING	7-25
CONNECTOR/GROUND LOCATIONS; 8W-90 CONNECTOR LOCATIONS	8W-90-1	CONTROL MODULE, SPEED PROPORTIONAL STEERING; STEERING	19-25,19-27	COOLING SYSTEM COMPONENTS	7-2
CONNECTOR—PCM INPUT AND OUTPUT, DATA LINK	14-36	CONTROL, RECIRCULATION DOOR MOTOR—AUTOMATIC TEMPERATURE	8W-42-3	COOLING SYSTEM, DRAINING AND FILLING	7-24
CONNECTORS	8W-01-3	CONTROL RELAY, TRANSMISSION	8W-31-1	COOLING SYSTEM FAN 4.0L ENGINE	7-45
CONNECTORS, TERMINAL/CONNECTOR REPAIR—MOLEX	8W-01-7	CONTROL SERVO, SPEED	8H-1,8H-6,8H-7	COOLING SYSTEM FAN 5.2L ENGINE	7-46
CONNECTORS, TERMINAL/CONNECTOR REPAIR—THOMAS AND BETTS	8W-01-8	CONTROL SOLENOIDS—PCM OUTPUT, SPEED	14-38	COOLING SYSTEM FOR LEAKS, TESTING	7-21
CONSOLE, FLOOR	23-35	CONTROL SWITCHES, SPEED	8H-1,8H-6,8H-8	COOLING SYSTEM HOSES	7-6
CONSOLE LAMPS, OVERHEAD; 8W-44 INTERIOR LIGHTING	8W-44-2	CONTROL SWITCHES—PCM INPUT, SPEED	14-34	CORE, HEATER	24-42
CONSOLE LAMPS, OVERHEAD; 8W-49 OVERHEAD CONSOLE	8W-49-1	CONTROL SYSTEM, EVAPORATION	25-13	CORE OIL AND CAMSHAFT PLUGS, ENGINE	9-74
CONSOLE, OVERHEAD; 8W-49 OVERHEAD CONSOLE	8W-49-1	CONTROL SYSTEM, HYDRAULIC	21-6	COUPLERS, REFRIGERANT LINE	24-29,24-8
CONSOLE, OVERHEAD; OVERHEAD CONSOLE SYSTEMS	8V-6	CONTROL UNIT (HCU), HYDRAULIC	5-35	COURTESY LAMP BULB, DOOR	8L-11
CONSOLE READING LAMP BULB, OVERHEAD	8L-11	CONTROL UNIT, HYDRAULIC	8W-35-2	COURTESY LAMP DISABLE SWITCH, LIFTGATE	8W-45-2
CONTACT PATTERN ANALYSIS, BACKLASH	3-36	CONTROL, VEHICLE SPEED	8W-33-1	COURTESY LAMP, DOOR	8L-16
CONTAMINATION, BRAKE FLUID	5-11	CONTROLLER ANTILOCK BRAKES	5-38	COURTESY LAMP SWITCH	8W-45-1
CONTAMINATION, FLUID	21-10	CONTROLLER ANTILOCK BRAKES (CAB)	5-35	COURTESY LAMPS, CARGO LAMP, IGNITION SWITCH KEY-IN HALO LAMP	8W-44-1
CONTINUED	3-20	CONTROLLER UNIT, HYDRAULIC	5-39	COVER AND HORN SWITCH, DRIVER'S AIRBAG TRIM	8M-5
CONTROL, A/C OPERATION— AUTOMATIC TEMPERATURE	8W-42-2	CONTROLS, EVAPORATIVE EMISSION CONTROLS, HEATER AND AIR CONDITIONER	24-2	COVER, BUCKET SEAT BACK	23-12
CONTROL AND DISPLAY SYMBOLS, INTERNATIONAL	Intro-4	CONTROLS, OVERDRIVE ELECTRICAL	21-11	COVER, BUCKET SEAT CUSHION	23-13
CONTROL AND DISPLAY SYMBOLS, INTERNATIONAL VEHICLE	Intro-3	CONTROLS—PCM INPUT, AIR CONDITIONING (A/C)	14-29	COVER, CYLINDER HEAD	9-61
CONTROL (ATC), AUTOMATIC TEMPERATURE	8W-42-2	CONVERSION FORMULAS AND EQUIVALENT VALUES	Intro-7	COVER, ENGINE CYLINDER HEAD	9-29,9-47
CONTROL (ATC) MODULE, AUTOMATIC TEMPERATURE	8W-42-2	CONVERSION, METRIC	Intro-8	COVER OIL SEAL, TIMING CASE	9-44
CONTROL, BLEND DOOR MOTOR— AUTOMATIC TEMPERATURE	8W-42-3	CONVERTER, CATALYTIC	11-2	COVER, REAR SEAT BACK	23-14
CONTROL, BLOWER MOTOR— AUTOMATIC TEMPERATURE	8W-42-3	CONVERTER CLUTCH ENGAGEMENT	21-7	COVER, REAR SEAT CUSHION	23-14
CONTROL CABLE ADJUSTMENT, TRANSMISSION	21-12	CONVERTER DRAINBACK CHECK VALVE SERVICE	21-31	COVER, TIMING CASE	9-34
CONTROL CIRCUIT TESTS	8B-5	CONVERTER DRAINBACK VALVE	21-8	COVER, TIMING CHAIN	9-64
CONTROL ELECTRICAL TEST, SPEED	8H-6	CONVERTER HOUSING FLUID LEAK DIAGNOSIS	21-16	COWL GRILLE AND SCREEN	23-20
CONTROL, HEATER-A/C	24-35	CONVERTER STALL TEST	21-15	COWL TOP TRIM PANEL	8E-29
CONTROL (IAC) MOTOR, IDLE AIR	8W-30-5	CONVERTER, TORQUE	21-44	C-PILLAR TRIM	23-34
CONTROL (IAC) MOTOR—4.0L ENGINE, IDLE AIR	14-50,14-55	CONVERTER—4.0/5.2L ENGINES, CATALYTIC	11-5	CRANKCASE BREATHER/FILTER—5.2L ENGINE	25-17
CONTROL (IAC) MOTOR—4.0L ENGINE—PCM OUTPUT, IDLE AIR	14-37	CONVERTER—ELECTRONIC CLUTCH, TORQUE	21-4	CRANKCASE VENTILATION (CCV) SYSTEM—4.0L ENGINE	25-16
CONTROL (IAC) MOTOR—5.2L ENGINE, IDLE AIR	14-50,14-55	CONVERTOR CLUTCH (TCC) SOLENOID—PCM OUTPUT, TORQUE	14-39	CRANKCASE VENTILATION (PCV) SYSTEM—5.2L ENGINE, POSITIVE	25-15
CONTROL (IAC) MOTOR—5.2L ENGINES—PCM OUTPUT, IDLE AIR	14-37	COOLANT	7-2	CRANKING TEST, COLD	8B-4
CONTROL INFORMATION (VECI) LABEL, VEHICLE EMISSION	25-17	COOLANT, ADDING ADDITIONAL	7-24	CRANKSHAFT	9-59,9-70
CONTROL, MODE DOOR MOTOR— AUTOMATIC TEMPERATURE	8W-42-3	COOLANT FLOW CHECK, RADIATOR	7-21	CRANKSHAFT INSPECTION OF JOURNALS	9-78
CONTROL MODULE, AIRBAG	8M-2,8M-8	COOLANT LEVEL CHECK, ROUTINE	7-24	CRANKSHAFT MAIN BEARINGS	9-39,9-58,9-68
CONTROL MODULE, BODY; AUDIO SYSTEMS	8F-2	COOLANT LEVEL CHECK—SERVICE	7-24	CRANKSHAFT MAIN BEARINGS, FITTING	9-22
CONTROL MODULE, BODY; CHIME/ BUZZER WARNING SYSTEMS	8U-1	COOLANT LEVEL—AERATION, LOW	7-24	CRANKSHAFT OIL SEAL, FRONT	9-71
CONTROL MODULE, BODY; ELECTRICALLY HEATED SYSTEMS	8N-2	COOLANT LEVEL—PERFORMANCE	7-5	CRANKSHAFT POSITION SENSOR; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-3
CONTROL MODULE, BODY; HORN SYSTEMS	8G-1	COOLANT RESERVE/OVERFLOW SYSTEM	7-2	CRANKSHAFT POSITION SENSOR; FUEL SYSTEM	14-57
CONTROL MODULE, BODY; INSTRUMENT PANEL SYSTEMS	8E-24,8E-4	COOLANT ROUTING, SYSTEM	7-2	CRANKSHAFT POSITION SENSOR—4.0L ENGINE	8D-15,8D-3,8D-8
CONTROL MODULE, BODY; POWER LOCK SYSTEMS	8P-3	COOLANT SELECTION-ADDITIVES	7-5	CRANKSHAFT POSITION SENSOR—4.0L ENGINE—PCM INPUT	14-31
CONTROL MODULE, BODY; POWER WINDOW SYSTEMS	8S-2	COOLANT TEMPERATURE GAUGE	8E-10,8E-4	CRANKSHAFT POSITION SENSOR—5.2L ENGINES	8D-15,8D-8
CONTROL MODULE, BODY; VEHICLE THEFT/SECURITY SYSTEMS	8Q-2	COOLANT TEMPERATURE GAUGE, ENGINE	8W-40-1	CRANKSHAFT POSITION SENSOR—5.2L ENGINES—PCM INPUT	14-30
CONTROL MODULE, BODY; WIPER AND WASHER SYSTEMS	8K-3	COOLANT TEMPERATURE SENSOR, ENGINE; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-3	CRANKSHAFT POSITION SENSOR—5.2L V-8 ENGINE	8D-3
CONTROL MODULE, HEATED SEAT	8N-7,8N-9	COOLANT TEMPERATURE SENSOR, ENGINE; IGNITION SYSTEM	8D-17,8D-4,8D-9	CRANKSHAFT POSITION SENSORS, CAMSHAFT	14-49
CONTROL MODULE INPUTS, BODY	8U-2	COOLANT TEMPERATURE SENSOR— 4.0L ENGINE, ENGINE	14-50,14-60	CRANKSHAFT REAR OIL SEALS	9-72
CONTROL MODULE (PCM), POWERTRAIN; FUEL SYSTEM	14-28,14-56	COOLANT TEMPERATURE SENSOR— 5.2L ENGINE, ENGINE	14-49,14-60	CRITICAL CHIME, ENGINE TEMPERATURE	8W-45-2
		COOLANT TEMPERATURE SENSOR— 5.2L ENGINES—PCM INPUT, ENGINE	14-31	CRUISE-ON INDICATOR LAMP	8E-13,8E-7
		COOLER FLOW CHECK, OIL TRANSMISSION	21-11	CURRENT OUTPUT TEST	8C-5
		COOLER, TRANSMISSION	21-40	CURVES, GOVERNOR PRESSURE	21-6
		COOLER—AUXILIARY, TRANSMISSION OIL	7-26	CUSHION COVER, BUCKET SEAT	23-13
		COOLERS AND TUBES, FLUSHING	21-31	CUSHION COVER, REAR SEAT	23-14
		COOLERS, AUTOMATIC TRANSMISSION OIL	7-2	CUSHION, REAR SEAT	23-36
				CUT-OFF SWITCH, HIGH PRESSURE	24-25,24-32,24-7
				CYCLE EVAP CANISTER PURGE SOLENOID, DUTY; EMISSION CONTROL SYSTEMS	25-14
				CYCLE EVAP CANISTER PURGE SOLENOID, DUTY; FUEL SYSTEM	14-56
				CYCLE EVAP PURGE SOLENOID VALVE—PCM OUTPUT, DUTY	14-36
				CYCLE EVAP/PURGE SOLENOID, DUTY	8W-30-5
				CYCLING CLUTCH SWITCH, LOW PRESSURE	24-25,24-35,24-7
				CYLINDER BLOCK	9-47,9-48,9-77,9-80

Description	Group-Page	Description	Group-Page	Description	Group-Page
CYLINDER BORES, HONING	9-2	DIAGNOSIS, SERVICE	3-48,3-79	DISARMING	8Q-1
CYLINDER COMBUSTION PRESSURE		DIAGNOSIS, SHOCK	2-14,2-7	DISC BRAKE CALIPER	5-16,5-28
LEAKAGE TEST	9-9	DIAGNOSIS, SUSPENSION AND STEERING SYSTEM	2-3	DISC BRAKE CALIPER, REAR	5-19,5-30
CYLINDER COMPRESSION PRESSURE TEST	9-8	DIAGNOSIS, SYSTEM	14-28	DISC BRAKE ROTOR	5-19
CYLINDER, FRONT DOOR LOCK	23-24	DIAGNOSIS TABLES AND CHARTS—RE TRANSMISSION	21-19	DISC BRAKE ROTOR, FRONT	5-9
CYLINDER HEAD	9-62	DIAGNOSIS, TRAC-LOK NOISE	3-50,3-81	DISC BRAKE ROTOR, REAR	5-10,5-21
CYLINDER HEAD COVER	9-61	DIAGNOSTIC PROCEDURES	8L-1	DISC BRAKES, FRONT	5-4
CYLINDER HEAD COVER, ENGINE	9-29,9-47	DIAGNOSTIC SYSTEM TEST, ON-BOARD	8C-6	DISC BRAKES, REAR	5-4
CYLINDER HEAD, ENGINE	9-31,9-47	DIAGNOSTIC TROUBLE CODES	25-2	DISC BRAKESHOE	5-17
CYLINDER HEAD GASKET FAILURE		DIAGNOSTICS (OBD), ON-BOARD	7-8	DISC BRAKESHOES, REAR	5-20
DIAGNOSIS, ENGINE	9-8	DIAGNOSTICS, ON-BOARD	25-1	DISC ROTOR MACHINING	5-12
CYLINDER HEADS	9-77	DIAGNOSTICS TEST, ON-BOARD	8H-2	DISCHARGE (ESD) SENSITIVE DEVICES, ELECTROSTATIC	8W-01-5
CYLINDER, IGNITION SWITCH AND KEY	8D-21	DIAGRAM INDEX, WIRING; 8W-20		DISPLAY MODULE, GRAPHIC; 8W-46	
CYLINDER, IGNITION SWITCH AND KEY LOCK	8D-5	CHARGING SYSTEM	8W-20-1	MESSAGE CENTER	8W-46-1
CYLINDER, LIFTGATE LOCK	23-42	DIAGRAM INDEX, WIRING; 8W-21		DISPLAY MODULE, GRAPHIC; INSTRUMENT PANEL SYSTEMS	8E-13,8E-3
CYLINDER, MASTER	5-11,5-15,5-3	STARTING SYSTEM	8W-21-1	DISPLAY MODULE, TRIP COMPUTER, COMPASS, THERMOMETER	8V-6
CYLINDER RESERVOIR, MASTER	5-27	DIAGRAM INDEX, WIRING; 8W-30		DISPLAY MODULE/VEHICLE INFORMATION CENTER, GRAPHIC	8E-25
CYLINDER SWITCH, DOOR LOCK	8Q-2,8Q-4	FUEL/IGNITION SYSTEMS	8W-30-5	DISPLAY SYMBOLS, INTERNATIONAL CONTROL	Intro.-4
CYLINDER SWITCH, LIFTGATE LOCK	8Q-2,8Q-6	DIAGRAM INDEX, WIRING; 8W-31		DISPLAY SYMBOLS, INTERNATIONAL VEHICLE CONTROL	Intro.-3
CYLINDER/POWER BOOSTER, MASTER	5-8	TRANSMISSION CONTROL SYSTEM	8W-31-2	DISPLAY TEST MODE, STATE	25-2
DAMAGED OR WORN THREADS, REPAIR	9-4	DIAGRAM INDEX, WIRING; 8W-33		DISTANCE SENSOR—PCM INPUT, VEHICLE SPEED	14-35
DAMPENER, STEERING	19-29	VEHICLE SPEED CONTROL	8W-33-1	DISTRIBUTOR	8D-2
DAMPER, VIBRATION	9-34,9-64	DIAGRAM INDEX, WIRING; 8W-35		DISTRIBUTOR CAP	8D-7
DATA LINK CONNECTOR; 8W-30		ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	DISTRIBUTOR DRIVE SHAFT BUSHING	9-68
FUEL/IGNITION SYSTEMS	8W-30-1	DIAGRAM INDEX, WIRING; 8W-39		DISTRIBUTOR ROTOR	8D-7
DATA LINK CONNECTOR; 8W-35		VEHICLE THEFT SECURITY SYSTEM	8W-39-2	DISTRIBUTOR—4.0L ENGINE	8D-18
ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	DIAGRAM INDEX, WIRING; 8W-40		DISTRIBUTOR—5.2L ENGINE	8D-17
DATA LINK CONNECTOR; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1	INSTRUMENT CLUSTER	8W-40-2	DOME LAMP BULB	8L-11
DATA LINK CONNECTOR—PCM INPUT AND OUTPUT	14-36	DIAGRAM INDEX, WIRING; 8W-41		DOME/READING LAMP	8L-15
DAY/NIGHT MIRROR	8W-44-2	HORN/CIGAR LIGHTER	8W-41-1	DOOR	23-45
DAY/NIGHT MIRROR, AUTOMATIC	8T-5,8T-6	DIAGRAM INDEX, WIRING; 8W-42		DOOR ACTUATOR, HEAT/DEFROST	24-43
DAYTIME RUNNING LAMP DIAGNOSIS	8L-4	CONDITIONING/HEATER	8W-42-3	DOOR ACTUATOR, PANEL/DEFROST	24-43
DAYTIME RUNNING LAMP SYSTEM	8L-17	DIAGRAM INDEX, WIRING; 8W-43		DOOR ACTUATOR, RECIRCULATING AIR	24-40
DAYTIME RUNNING LAMPS MODULE	8W-50-2	AIRBAG SYSTEM	8W-43-1	DOOR AJAR SWITCH	8Q-2,8Q-4
DAYTIME RUNNING LIGHT MODULE	8L-17	DIAGRAM INDEX, WIRING; 8W-44		DOOR COURTESY LAMP	8L-16
DEAERATION	7-24	INTERIOR LIGHTING	8W-44-2	DOOR COURTESY LAMP BULB	8L-11
DECODING, VEHICLE CODE	Intro.-2	DIAGRAM INDEX, WIRING; 8W-45		DOOR, FRONT	23-23
DEFINITION, TRIP	25-10	CONTROL MODULE	8W-45-2	DOOR, FUEL	23-31
DEFLECTOR, WIND	23-7	DIAGRAM INDEX, WIRING; 8W-46		DOOR, HEAT/DEFROST	24-44
DEFOGGER, REAR WINDOW	8W-48-1	MESSAGE CENTER	8W-46-2	DOOR HINGE, FRONT	23-23
DEFOGGER RELAY	8N-2,8N-4,8N-6	DIAGRAM INDEX, WIRING; 8W-47		DOOR HINGE, REAR	23-28
DEFOGGER SWITCH	8N-2,8N-3,8N-5	AUDIO SYSTEM	8W-47-2	DOOR INNER BELT SEAL, FRONT	23-25
DEFOGGER SYSTEM	8N-1,8N-2	DIAGRAM INDEX, WIRING; 8W-48		DOOR INNER BELT SEAL, REAR	23-29
DELIVERY SYSTEM, FUEL	14-3	WINDOW DEFOGGER	8W-48-1	DOOR INSIDE HANDLE ACTUATOR, FRONT	23-25
DEMAGNETIZING, COMPASS	8V-5	DIAGRAM INDEX, WIRING; 8W-49		DOOR INSIDE HANDLE ACTUATOR, REAR	23-29
DEPTH INFORMATION, PINION GEAR	3-16	OVERHEAD CONSOLE	8W-49-1	DOOR LATCH ADJUSTMENT	23-46
DEPTH, PINION GEAR	3-65,3-97	DIAGRAM INDEX, WIRING; 8W-50		DOOR LATCH, FRONT	23-24
DEPTH VARIANCE, PINION GEAR	3-17,3-66,3-98	FRONT LIGHTING	8W-50-2	DOOR LATCH, REAR	23-29
DESCRIPTION, ENGINE	9-15,9-53	DIAGRAM INDEX, WIRING; 8W-51		DOOR LATCH STRIKER, FRONT	23-25
DESCRIPTION, SYSTEM	25-1	LIGHTING	8W-51-1	DOOR LATCH STRIKER, REAR	23-29
DETECTION PUMP, EVAPORATIVE		DIAGRAM INDEX, WIRING; 8W-52		DOOR LOCK CYLINDER, FRONT	23-24
SYSTEM LEAK	8W-30-3	TURN SIGNALS	8W-52-1	DOOR LOCK CYLINDER SWITCH	8Q-2,8Q-4
DETECTION PUMP (LDP), LEAK	25-19,25-20	DIAGRAM INDEX, WIRING; 8W-53		DOOR LOCKS, POWER	8W-61-1
DETECTION PUMP (LDP)—4.0L CALIFORNIA EMISSIONS PACKAGE, LEAK	25-15	WIPERS	8W-53-1	DOOR MODULE; POWER LOCK SYSTEMS	8P-2,8P-4,8P-5
DEVICES, ELECTROSTATIC DISCHARGE (ESD) SENSITIVE	8W-01-5	DIAGRAM INDEX, WIRING; 8W-54		DOOR MODULE; POWER MIRROR SYSTEMS	8T-2,8T-3
DIAGNOSIS	3-19	TRAILER TOW	8W-54-1	DOOR MODULE; POWER WINDOW SYSTEMS	8S-2,8S-3,8S-5
DIAGNOSIS, AUTOMATIC TRANSMISSION	21-9	DIAGRAM INDEX, WIRING; 8W-60		DOOR MOTOR ACTUATOR—MANUAL A/C-HEATER, BLEND AIR	8W-42-2
DIAGNOSIS, BELT	7-10	POWER WINDOWS	8W-60-2	DOOR MOTOR, HEAT/DEFROST - PANEL/DEFROST	24-44
DIAGNOSIS CHARTS, POWER STEERING SYSTEM	19-2	DIAGRAM INDEX, WIRING; 8W-61		DOOR MOTOR, TEMPERATURE/BLEND-AIR	24-39
DIAGNOSIS (CONT'D), SERVICE	3-49,3-80	POWER DOOR LOCKS	8W-61-1	DOOR MOTOR—AUTOMATIC TEMPERATURE CONTROL, BLEND	8W-42-3
DIAGNOSIS, CONVERTER HOUSING FLUID LEAK	21-16	DIAGRAM INDEX, WIRING; 8W-62		DOOR MOTOR—AUTOMATIC TEMPERATURE CONTROL, MODE	8W-42-3
DIAGNOSIS, DAYTIME RUNNING LAMP	8L-4	POWER MIRRORS	8W-62-1	DOOR MOTOR—AUTOMATIC TEMPERATURE CONTROL, RECIRCULATION	8W-42-3
DIAGNOSIS, ENGINE	9-8	DIAGRAM INDEX, WIRING; 8W-63		DOOR OPENER STORAGE BIN, GARAGE	8V-2
DIAGNOSIS, ENGINE CYLINDER HEAD GASKET FAILURE	9-8	POWER SEAT	8W-63-3	DOOR OPENER, UNIVERSAL GARAGE	8W-44-2
DIAGNOSIS, EXHAUST SYSTEM	11-3	DIAGRAM INDEX, WIRING; 8W-64		DOOR OPENING WEATHERSTRIP, FRONT	23-26
DIAGNOSIS, FOG LAMP	8L-3	POWER SUNROOF	8W-64-1	DOOR OPENING WEATHERSTRIP, REAR	23-30
DIAGNOSIS, HEADLAMP	8L-2	DIAGRAM INDEX, WIRING; 8W-65		DOOR OUTER BELT SEAL, FRONT	23-25
DIAGNOSIS, INTAKE MANIFOLD LEAKAGE	9-8	SPEED PROPORTIONAL STEERING	8W-65-1	DOOR OUTER BELT SEAL, REAR	23-29
DIAGNOSIS, LAMP	8L-1	DIFFERENTIAL	3-25,3-31,3-38,3-54,3-85	DOOR OUTSIDE HANDLE, FRONT	23-24
DIAGNOSIS, LAMP OUTAGE MODULE	8L-4,8L-5	DIFFERENTIAL AND PINION MEASUREMENT	3-33		
DIAGNOSIS, NV231	21-148	DIFFERENTIAL BEARING PRELOAD AND GEAR LASH	3-67,3-99		
DIAGNOSIS, NV249	21-171	DIFFERENTIAL, LIMITED SLIP	3-47,3-78		
DIAGNOSIS, POWER STEERING GEAR LEAKAGE	19-9	DIFFERENTIAL SHIM PACK MEASUREMENT AND ADJUSTMENT	3-35		
DIAGNOSIS, PRELIMINARY	21-9	DIFFERENTIAL SIDE BEARINGS	3-55,3-87		
DIAGNOSIS, PUMP LEAKAGE	19-5	DIFFERENTIAL, STANDARD	3-61,3-92		
		DIFFERENTIAL, TRAC-LOK	3-61,3-92		
		DIMENSIONS, VEHICLE; FRAME AND BUMPERS	13-5		
		DIMENSIONS, VEHICLE; INTRODUCTION	Intro.-3		
		DIMMING, INSTRUMENT PANEL	8W-45-2		
		DIODE REPLACEMENT	8W-01-11		
		DISABLE SWITCH, LIFTGATE COURTESY LAMP	8W-45-2		

Description	Group-Page	Description	Group-Page	Description	Group-Page
DOOR OUTSIDE HANDLE, REAR	23-28	ENGINE COOLANT TEMPERATURE		ENGINE, THROTTLE POSITION SENSOR	
DOOR, PANEL/DEFROST	24-40	SENSOR; 8W-30 FUEL/IGNITION		(TPS)—4.0L	14-51,14-54
DOOR, POWER OUTLET	8E-27	SYSTEMS	8W-30-3	ENGINE, THROTTLE POSITION SENSOR	
DOOR, REAR	23-27	ENGINE COOLANT TEMPERATURE		(TPS)—5.2L	14-51,14-54
DOOR, RECIRCULATING AIR	24-44	SENSOR; IGNITION SYSTEM	8D-17,8D-4,8D-9	ENGINE, VISUAL INSPECTION—4.0L	14-43
DOOR RUN CHANNEL WEATHERSTRIP,		ENGINE COOLANT TEMPERATURE		ENGINE, VISUAL INSPECTION—5.2L	14-40
FRONT	23-26	SENSOR—4.0L ENGINE	14-50,14-60	ENGINE, WATER PUMP 4.0L	7-27
DOOR SCUFF PLATE, FRONT	23-33	ENGINE COOLANT TEMPERATURE		ENGINE, WATER PUMP 5.2L	7-29
DOOR SCUFF PLATE, REAR	23-34	SENSOR—4.0L ENGINE—PCM INPUT	14-31	ENGINE, WATER PUMP BYPASS	
DOOR, TEMPERATURE/BLEND-AIR	24-45	ENGINE COOLANT TEMPERATURE		HOSE—5.2L V-8	7-2
DOOR TRIM PANEL, FRONT	23-23	SENSOR—5.2L ENGINE	14-49,14-60	ENGINE—LUBRICATION	9-14
DOOR TRIM PANEL, REAR	23-27	ENGINE COOLANT TEMPERATURE		ENGINE—MECHANICAL	9-13
DOOR WINDOW GLASS, FRONT	23-27	SENSOR—5.2L ENGINES—PCM INPUT	14-31	ENGINE—PCM INPUT, CRANKSHAFT	
DOOR WINDOW GLASS, REAR	23-30	ENGINE, COOLING SYSTEM FAN 4.0L	7-45	POSITION SENSOR—4.0L	14-31
DOOR WINDOW REGULATOR, FRONT	23-26	ENGINE, COOLING SYSTEM FAN 5.2L	7-46	ENGINE—PCM INPUT, ENGINE COOLANT	
DOOR WINDOW REGULATOR, REAR	23-30	ENGINE CORE OIL AND CAMSHAFT		TEMPERATURE SENSOR—4.0L	14-31
DOUBLE CARDAN (CV)	3-10	PLUGS	9-74	ENGINE—PCM INPUT, INTAKE	
DOUBLE CARDAN JOINT, SINGLE	3-14	ENGINE, CRANKCASE BREATHER/		MANIFOLD AIR TEMPERATURE	
D-PILLAR TRIM	23-34	FILTER—5.2L	25-17	SENSOR—4.0L	14-32
DRAG LINK	19-29	ENGINE, CRANKCASE VENTILATION		ENGINE—PCM INPUT, MANIFOLD	
DRAIN CHANNEL	23-9	(CCV) SYSTEM—4.0L	25-16	ABSOLUTE PRESSURE (MAP)	
DRAINBACK CHECK VALVE SERVICE,		ENGINE, CRANKSHAFT POSITION		SENSOR—4.0L	14-33
CONVERTER	21-31	SENSOR—4.0L	8D-15,8D-3,8D-8	ENGINE—PCM INPUT, THROTTLE	
DRAINBACK VALVE, CONVERTER	21-8	ENGINE, CRANKSHAFT POSITION		POSITION SENSOR (TPS)—4.0L	14-34
DRAINING AND FILLING COOLING		SENSOR—5.2L V-8	8D-3	ENGINE—PCM INPUT, THROTTLE	
SYSTEM	7-24	ENGINE CYLINDER HEAD	9-31,9-47	POSITION SENSOR (TPS)—5.2L	14-34
DRAW FUSE, IGNITION-OFF	8F-2	ENGINE CYLINDER HEAD COVER	9-29,9-47	ENGINE—PCM OUTPUT, FUEL	
DRAW TEST, IGNITION-OFF	8A-9	ENGINE CYLINDER HEAD GASKET		INJECTORS—4.0L	14-36
DRB SCAN TOOL	7-9	FAILURE DIAGNOSIS	9-8	ENGINE—PCM OUTPUT, IDLE AIR	
DRIVE AXLE ASSEMBLY REPLACEMENT	3-21	ENGINE DESCRIPTION	9-15,9-53	CONTROL (IAC) MOTOR—4.0L	14-37
DRIVE AXLE ASSEMBLY REPLACEMENT		ENGINE DIAGNOSIS	9-8	ENGINE—PERFORMANCE	9-12
VEHICLES	3-51	ENGINE, DISTRIBUTOR—4.0L	8D-18	ENGINES, CATALYTIC CONVERTER—4.0/	
DRIVE AXLE, FRONT	3-19	ENGINE, DISTRIBUTOR—5.2L	8D-17	5.2L	11-5
DRIVE BELT TENSION	7-48	ENGINE, ENGINE COOLANT		ENGINES, CRANKSHAFT POSITION	
DRIVE BELT TENSION, ACCESSORY	7-3	TEMPERATURE SENSOR—4.0L	14-50,14-60	SENSOR—5.2L	8D-15,8D-8
DRIVE BELTS, ENGINE ACCESSORY	7-1	ENGINE, ENGINE COOLANT		ENGINES, EXHAUST PIPE—4.0/5.2L	11-4
DRIVE CABLE LOCATORS	23-9	TEMPERATURE SENSOR—5.2L	14-49,14-60	ENGINES, FORM-IN-PLACE GASKETS—	
DRIVE CABLES	23-9	ENGINE, ENGINE FIRING ORDER—4.0L		GASOLINE	9-1
DRIVE GEARS, MOTOR	23-9	6-CYLINDER	8D-25	ENGINES, FUEL INJECTOR RAIL—5.2L	14-18
DRIVE SHAFT BUSHING, DISTRIBUTOR	9-68	ENGINE, ENGINE FIRING ORDER—5.2L		ENGINES, FUEL INJECTORS—5.2L	14-5
DRIVE, VISCOUS FAN	7-22,7-46,7-7	V-8	8D-25	ENGINES, IGNITION COIL—5.2L	8D-14
DRIVELINE SNAP	3-18,3-47,3-78	ENGINE, EXHAUST MANIFOLD—5.2L	11-10,11-9	ENGINES, MANIFOLD ABSOLUTE	
DRIVELINE VIBRATION	3-4	ENGINE FIRING ORDER—4.0L		PRESSURE (MAP) SENSOR TEST—	
DRIVER'S AIRBAG TRIM COVER AND		6-CYLINDER ENGINE	8D-25	5.2L	14-46
HORN SWITCH	8M-5	ENGINE FIRING ORDER—5.2L V-8		ENGINES, MANIFOLD ABSOLUTE	
DRUM, OVERRUNNING CLUTCH/LOW-		ENGINE	8D-25	PRESSURE (MAP) SENSOR—5.2L	14-56
REVERSE	21-77	ENGINE, FUEL INJECTOR RAIL—4.0L	14-19	ENGINES, MUFFLER AND TAILPIPE—4.0/	
DRUM/REAR SUPPORT, OVERRUNNING		ENGINE, FUEL INJECTORS—4.0L	14-5	5.2L	11-5
CLUTCH/LOW-REVERSE	21-119	ENGINE, FUEL PUMP PRESSURE		ENGINES, THROTTLE BODY—5.2L	14-39
DUCTS AND OUTLETS	24-39	TEST—4.0L	14-6	ENGINES WITH PRESSURE TEST PORT,	
DUTY CYCLE EVAP CANISTER PURGE		ENGINE, IDLE AIR CONTROL (IAC)		FUEL PUMP PRESSURE TEST—5.2L	14-7
SOLENOID; EMISSION CONTROL		MOTOR—4.0L	14-50,14-55	ENGINES WITHOUT PRESSURE TEST	
SYSTEMS	25-14	ENGINE, IDLE AIR CONTROL (IAC)		PORT, FUEL PUMP PRESSURE	
DUTY CYCLE EVAP CANISTER PURGE		MOTOR—5.2L	14-50,14-55	TEST-5.2L	14-7
SOLENOID; FUEL SYSTEM	14-56	ENGINE, IGNITION COIL—4.0L	8D-15	ENGINES—PCM INPUT, CRANKSHAFT	
DUTY CYCLE EVAP PURGE SOLENOID		ENGINE, INTAKE AND EXHAUST		POSITION SENSOR—5.2L	14-30
VALVE-PCM OUTPUT	14-36	MANIFOLD—4.0L	11-10,11-6	ENGINES—PCM INPUT, ENGINE	
DUTY CYCLE EVAP/PURGE SOLENOID	8W-30-5	ENGINE, INTAKE MANIFOLD AIR		COOLANT TEMPERATURE SENSOR—	
EFFECTS OF INCORRECT FLUID LEVEL	21-10	TEMPERATURE SENSOR—4.0L	14-50,14-61	5.2L	14-31
ELECTRICAL CONTROLS, OVERDRIVE	21-11	ENGINE, INTAKE MANIFOLD AIR		ENGINES—PCM INPUT, INTAKE	
ELECTRICAL TEST, SPEED CONTROL	8H-6	TEMPERATURE SENSOR—5.2L	14-50,14-60	MANIFOLD AIR TEMPERATURE	
ELECTRONIC FLASHER RELAY	8W-52-1	ENGINE, INTAKE MANIFOLD—5.2L	11-10	SENSOR—5.2L	14-32
ELECTRONIC GOVERNOR	21-4	ENGINE, INTAKE MANIFOLD—5.2L	11-7	ENGINES—PCM INPUT, MANIFOLD	
ELECTROSTATIC DISCHARGE (ESD)		ENGINE, MANIFOLD ABSOLUTE		ABSOLUTE PRESSURE (MAP)	
SENSITIVE DEVICES	8W-01-5	PRESSURE (MAP) SENSOR TEST—		SENSOR—5.2L	14-33
ELEMENT (FILTER), AIR CLEANER	14-59	4.0L	14-47	ENGINES—PCM OUTPUT, FUEL	
ELEMENT, HEATED SEAT	8N-9	ENGINE, MANIFOLD ABSOLUTE		INJECTORS—5.2L	14-36
ELEMENTS AND SENSOR, HEATED SEAT	8N-8	PRESSURE (MAP) SENSOR—4.0L	14-56	ENGINES—PCM OUTPUT, IDLE AIR	
ELEMENTS, HEATER	8W-62-1	ENGINE MOUNT—REAR	9-26	CONTROL (IAC) MOTOR—5.2L	14-37
ELEMENTS, WIPER BLADES	8K-8	ENGINE MOUNTS—FRONT	9-26,9-59	ENGINES—PCM OUTPUT, IGNITION	
EMERGENCY TOW HOOKS	0-10	ENGINE MOUNTS—REAR	9-60	COIL—4.0L	14-38
EMISSION CONTROL INFORMATION		ENGINE OIL	9-5	ENGINES—PCM OUTPUT, IGNITION	
(VECI) LABEL, VEHICLE	25-17	ENGINE OIL PRESSURE	9-11	COIL—5.2L	14-38
EMISSION CONTROLS, EVAPORATIVE	25-13	ENGINE, OXYGEN (O2S) SENSORS—4.0L	14-49	ENTRY RECEIVER, REMOTE KEYLESS	8P-3
EMISSIONS PACKAGE, LEAK DETECTION		ENGINE, OXYGEN (O2S) SENSORS—5.2L	14-48	ENTRY, REMOTE KEYLESS	8W-61-1
PUMP (LDP)—4.0L CALIFORNIA	25-15	ENGINE, OXYGEN SENSOR—4.0L	14-58	ENTRY SYSTEM, POWER LOCK/REMOTE	
END PLUG, HOUSING	19-11	ENGINE, OXYGEN SENSOR—5.2L	14-57	KEYLESS	8P-4
ENGAGEMENT, CONVERTER CLUTCH	21-7	ENGINE, PCV VALVE TEST—5.2L	25-18	ENTRY SYSTEM, REMOTE KEYLESS	8P-1
ENGINE, 4.0L	9-15,9-52	ENGINE PERFORMANCE	9-2	ENTRY TRANSMITTER BATTERY	
ENGINE, 5.2L	9-53,9-81,9-85	ENGINE, POSITIVE CRANKCASE		REPLACEMENT, REMOTE KEYLESS	8P-5
ENGINE ACCESSORY DRIVE BELTS	7-1	VENTILATION (PCV) SYSTEM—5.2L	25-15	ENTRY TRANSMITTER PROGRAMMING,	
ENGINE ASSEMBLY	9-27,9-60	ENGINE SPECIFICATIONS, 4.0L	9-49	REMOTE KEYLESS	8P-5
ENGINE ASSEMBLY (SHORT BLOCK),		ENGINE TEMPERATURE CRITICAL CHIME	8W-45-2	ENTRY TRANSMITTER, REMOTE	
SERVICE	9-4	ENGINE, THERMOSTAT 4.0L	7-32	KEYLESS	8P-3,8P-5
ENGINE BLOCK HEATER	7-42,7-4	ENGINE, THERMOSTAT 5.2L	7-33	EQUIPMENT, REFRIGERANT SYSTEM	
ENGINE COMPONENTS	9-56	ENGINE, THROTTLE BODY—4.0L	14-40,14-53	SERVICE	24-8
ENGINE COOLANT TEMPERATURE		ENGINE, THROTTLE BODY—5.2L	14-53	EQUIVALENT VALUES, CONVERSION	
GAUGE	8W-40-1			FORMULAS	Intro.-7

Description	Group-Page	Description	Group-Page	Description	Group-Page
EVACUATE, REFRIGERANT SYSTEM	24-26	FLUID, BRAKE	5-32	FUEL INJECTORS—5.2L ENGINES	14-5
EVAP CANISTER	25-19	FLUID CAPACITIES	0-2	FUEL INJECTORS—5.2L ENGINES—PCM	
EVAP CANISTER PURGE SOLENOID, DUTY CYCLE; EMISSION CONTROL SYSTEMS	25-14	FLUID, CAUSES OF BURNED	21-10	OUTPUT	14-36
EVAP CANISTER PURGE SOLENOID, DUTY CYCLE; FUEL SYSTEM	14-56	FLUID CONTAMINATION	21-10	FUEL LEVEL SENSOR	14-18
EVAP PURGE SOLENOID VALVE-PCM		FLUID CONTAMINATION, BRAKE	5-11	FUEL LEVEL SENSOR—PCM INPUT	14-30
OUTPUT, DUTY CYCLE	14-36	FLUID LEAK DIAGNOSIS, CONVERTER HOUSING	21-16	FUEL PRESSURE LEAK DOWN TEST	14-8
EVAPORATION CONTROL SYSTEM	25-13	FLUID LEVEL AND CONDITION, CHECKING	21-9	FUEL PRESSURE REGULATOR	14-16,14-4
EVAPORATION (EVAP) CANISTER	25-13	FLUID LEVEL, BRAKE	5-11	FUEL PUMP	14-3
EVAPORATIVE CANISTER PURGE SOLENOID	25-19	FLUID LEVEL CHECK	21-29	FUEL PUMP CAPACITY TEST	14-8
EVAPORATIVE EMISSION CONTROLS	25-13	FLUID LEVEL, EFFECTS OF INCORRECT	21-10	FUEL PUMP INLET STRAINER	14-18
EVAPORATIVE SYSTEM LEAK DETECTION PUMP	8W-30-3	FLUID LEVEL SENSOR, LOW WASHER	8W-53-1	FUEL PUMP MODULE; 8W-30	
EVAPORATOR COIL	24-42,24-7	FLUID, RECOMMENDED	21-4	FUEL/IGNITION SYSTEMS	8W-30-2
EVAP/PURGE SOLENOID, DUTY CYCLE	8W-30-5	FLUSHING COOLERS AND TUBES	21-31	FUEL PUMP MODULE; FUEL SYSTEM	14-17,14-3
EXHAUST MANIFOLD—4.0L ENGINE, INTAKE	11-10,11-6	FLUSHING, COOLING SYSTEM CLEANING/REVERSE	7-25	FUEL PUMP PRESSURE TEST-5.2L ENGINES WITHOUT PRESSURE TEST PORT	14-7
EXHAUST MANIFOLD—5.2L ENGINE	11-10,11-9	FOG LAMP	8L-13	FUEL PUMP PRESSURE TEST—5.2L ENGINES WITH PRESSURE TEST PORT	14-7
EXHAUST PIPE—4.0/5.2L ENGINES	11-4	FOG LAMP ADJUSTMENT	8L-7	FUEL PUMP PRESSURE TEST—4.0L ENGINE	14-6
EXHAUST SYSTEM	11-1	FOG LAMP BULB	8L-9	FUEL PUMP RELAY; 8W-30 FUEL/ IGNITION SYSTEMS	8W-30-2
EXHAUST SYSTEM DIAGNOSIS	11-3	FOG LAMP DIAGNOSIS	8L-3	FUEL PUMP RELAY; FUEL SYSTEM	14-16,14-52
EXHAUSTER, QUARTER WINDOW APPLIQUE/AIR	23-45	FOG LAMPS	8W-50-1	FUEL PUMP RELAY-PCM OUTPUT	14-37
EXTERIOR LAMPS	8L-19	FORCE SOLENOID—PCM OUTPUT, VARIABLE	14-39	FUEL PUMP RELAYS, ASD	14-46
EXTERIOR NAMEPLATES	23-20	FORM-IN-PLACE GASKETS—GASOLINE ENGINES	9-1	FUEL RAIL	14-5
FAILURE DIAGNOSIS, ENGINE CYLINDER HEAD GASKET	9-8	FORMULAS AND EQUIVALENT VALUES, CONVERSION	Intro.-7	FUEL REQUIREMENTS	14-1
FAILURE TO START TEST	8D-6	FOUR-WHEEL-DRIVE VEHICLE TOWING	0-10	FUEL SYSTEM	14-63
FAN 4.0L ENGINE, COOLING SYSTEM	7-45	FRAME	13-3	FUEL SYSTEM PRESSURE	14-23
FAN 5.2L ENGINE, COOLING SYSTEM	7-46	FREQUENCY INTERFERENCE, RADIO	8F-7	FUEL SYSTEM PRESSURE RELEASE PROCEDURE—WITHOUT PRESSURE TEST PORT	14-11
FAN BLADE INSPECTION	7-47	FRONT AXLE—MODEL 30	3-38,3-39	FUEL SYSTEM PRESSURE RELEASE PROCEDURE—WITH PRESSURE TEST PORT	14-11
FAN DRIVE, VISCOUS	7-22,7-46,7-7	FRONT AXLE—MODEL 35	3-71	FUEL TANK	14-20,14-5
FASCIA, REAR BUMPER	13-2	FRONT AXLE—TUBE AND MODEL 30	3-15	FUEL TANK CAPACITY	14-23
FASTENER IDENTIFICATION	Intro.-3,Intro.-5	FRONT BAND ADJUSTMENT	21-128	FUEL TANK FILLER TUBE CAP; EMISSION CONTROL SYSTEMS	25-14,25-20
FASTENER STRENGTH	Intro.-6	FRONT BEARING, OUTPUT SHAFT	21-35	FUEL TANK FILLER TUBE CAP; FUEL SYSTEM	14-6
FEED, BATTERY	8W-30-1	FRONT BUCKET SEAT	23-35	FUEL TANK SKID PLATE	13-4
FEED CIRCUIT TESTS	8B-4	FRONT BUMPER/FASCIA	13-1	FUEL TUBES/LINES/HOSES AND CLAMPS	14-11
FENDER, FRONT	23-22	FRONT CARPET/MAT	23-37	FUEL WARNING LAMP ANNOUNCEMENT CHIME, LOW	8W-45-2
FIELD—PCM OUTPUT, GENERATOR	14-37	FRONT CLUTCH	21-120,21-82	FUEL WARNING LAMP, LOW	8E-15,8E-8
FILL LEVEL, RECOMMENDED LUBRICANT	21-147,21-170,21-172	FRONT CRANKSHAFT OIL SEAL	9-71	FUSE, IGNITION-OFF DRAW	8F-2
FILL PROCEDURE, TRANSMISSION	21-31	FRONT DISC BRAKE ROTOR	5-9	GARAGE DOOR OPENER STORAGE BIN	8V-2
FILL VALVE, QUICK	21-7	FRONT DISC BRAKES	5-4	GARAGE DOOR OPENER, UNIVERSAL	8W-44-2
FILLER TUBE CAP, FUEL TANK; EMISSION CONTROL SYSTEMS	25-14,25-20	FRONT DOOR	23-23	GASKET FAILURE DIAGNOSIS, ENGINE CYLINDER HEAD	9-8
FILLER TUBE CAP, FUEL TANK; FUEL SYSTEM	14-6	FRONT DOOR HINGE	23-23	GASKETS—GASOLINE ENGINES, FORM-IN-PLACE	9-1
FILLING COOLING SYSTEM, DRAINING	7-24	FRONT DOOR INNER BELT SEAL	23-25	GASOLINE/OXYGENATE BLENDS	14-1
FILTER, FUEL	14-16,14-4	FRONT DOOR INSIDE HANDLE ACTUATOR	23-25	GAUGE CLUSTER	8E-9
FILTER REPLACEMENT, FLUID	21-30	FRONT DOOR LATCH	23-24	GAUGE, COOLANT TEMPERATURE	8E-10,8E-4
FINAL ASSEMBLY	3-38,3-60,3-91	FRONT DOOR LATCH STRIKER	23-25	GAUGE, ENGINE COOLANT TEMPERATURE	8W-40-1
FINISH, BASE COAT/CLEAR COAT	23-2	FRONT DOOR LOCK CYLINDER	23-24	GAUGE, FUEL; 8W-40 INSTRUMENT CLUSTER	8W-40-1
FIRING ORDER—4.0L 6-CYLINDER ENGINE, ENGINE	8D-25	FRONT DOOR OPENING WEATHERSTRIP	23-26	GAUGE, FUEL; INSTRUMENT PANEL SYSTEMS	8E-10,8E-5
FIRING ORDER—5.2L V-8 ENGINE, ENGINE	8D-25	FRONT DOOR OUTER BELT SEAL	23-25	GAUGE, OIL PRESSURE; 8W-40 INSTRUMENT CLUSTER	8W-40-2
FITTING CONNECTING ROD BEARINGS	9-21,9-57	FRONT DOOR OUTSIDE HANDLE	23-24	GAUGE, OIL PRESSURE; INSTRUMENT PANEL SYSTEMS	8E-10,8E-5
FITTING CRANKSHAFT MAIN BEARINGS	9-22	FRONT DOOR RUN CHANNEL WEATHERSTRIP	23-26	GAUGE SENDING UNIT, FUEL	14-4,14-9
FITTING, PISTON	9-18	FRONT DOOR SCUFF PLATE	23-33	GAUGES	8E-23,8E-3
FITTING, PISTON RING	9-19	FRONT DOOR TRIM PANEL	23-23	GAUGES LAMP, CHECK	8E-12,8E-7
FITTING PISTON RINGS	9-57	FRONT DOOR WINDOW GLASS	23-27	GAUGES, PRESSURE	22-3
FITTING PISTONS	9-57	FRONT DOOR WINDOW REGULATOR	23-26	GEAR AND BEARING NOISE	3-17,3-46,3-77
FITTINGS, QUICK-CONNECT	14-12,14-6	FRONT DRIVE AXLE	3-19	GEAR DEPTH INFORMATION, PINION	3-16
FITTINGS, TRANSMISSION COOLER LINE	21-39	FRONT FENDER	23-22	GEAR DEPTH, PINION	3-65,3-97
FIVE VOLT SENSOR SUPPLY—PRIMARY	14-30	FRONT PARKING BRAKE CABLE	5-22	GEAR DEPTH VARIANCE, PINION	3-17,3-66,3-98
FIVE VOLT SENSOR SUPPLY— SECONDARY	14-30	FRONT PROPELLER SHAFT	3-1,3-7	GEAR, INPUT AND LOW RANGE	21-187
FIXED ORIFICE TUBE	24-34,24-7	FRONT SERVO	21-119	GEAR LASH, DIFFERENTIAL BEARING PRELOAD	3-67,3-99
FLASHER, COMBINATION	8J-1,8J-4	FRONT SERVO PISTON	21-79	GEAR LEAKAGE DIAGNOSIS, POWER STEERING	19-9
FLASHER RELAY, ELECTRONIC	8W-52-1	FRONT SHOULDER BELT/BUCKLE	23-34	GEAR, PINION	3-27,3-57,3-88
FLASHERS, HAZARD	8W-52-1	FRONT SKID PLATE	13-3	GEAR, POWER	
FLIP-UP GLASS LATCH HANDLE/ STRIKER, LIFTGATE	23-44	FRONT SUSPENSION	2-12,2-6	STEERING	19-19,19-20,19-26,19-9
FLIP-UP GLASS LATCH, LIFTGATE	23-44	FRONT TOW HOOK	13-3	GEAR RATIOS, TRANSMISSION	21-4
FLIP-UP GLASS, LIFTGATE	23-43	FRONT WHEEL SPEED SENSOR	5-41	GEAR, RING	3-55,3-87
FLIP-UP GLASS SWITCH	23-43	FUEL DELIVERY SYSTEM	14-3	GEAR, STEERING	19-10,19-18
FLIP-UP GLASS WEATHERSTRIP, LIFTGATE	23-43	FUEL DOOR	23-31	GEARS, MOTOR AND DRIVE	23-9
FLOOR CONSOLE	23-35	FUEL FILTER	14-16,14-4	GEARSHIFT CABLE	21-127,21-11,21-35
FLOW CHECK, OIL COOLER	21-11	FUEL GAUGE; 8W-40 INSTRUMENT CLUSTER	8W-40-1		
FLOW CHECK PROCEDURE, THROTTLE BODY MINIMUM AIR	14-51	FUEL GAUGE; INSTRUMENT PANEL SYSTEMS	8E-10,8E-5		
FLOW CHECK, RADIATOR COOLANT	7-21	FUEL GAUGE SENDING UNIT	14-4,14-9		
FLUID AND FILTER REPLACEMENT	21-30	FUEL INJECTION SYSTEM	14-24		
		FUEL INJECTOR RAIL—4.0L ENGINE	14-19		
		FUEL INJECTOR RAIL—5.2L ENGINES	14-18		
		FUEL INJECTORS	8W-30-4		
		FUEL INJECTOR(S)	14-20		
		FUEL INJECTORS	14-9		
		FUEL INJECTORS—4.0L ENGINE	14-5		
		FUEL INJECTORS—4.0L ENGINE—PCM OUTPUT	14-36		

Description	Group-Page	Description	Group-Page	Description	Group-Page
GEARSHIFT MECHANISM	21-4	HEAD GASKET FAILURE DIAGNOSIS, ENGINE CYLINDER	9-8	HORN RELAY; HORN SYSTEMS	8G-1,8G-2,8G-3
GEARTRAIN, OVERDRIVE	21-109	HEADLAMP	8L-13	HORN RELAY; VEHICLE THEFT/SECURITY SYSTEMS	8Q-3,8Q-7
GEARTRAIN, PLANETARY	21-122	HEADLAMP ADJUSTMENT USING ALIGNMENT SCREEN	8L-6	HORN SWITCH	8G-1,8G-2,8G-3
GEARTRAIN/OUTPUT SHAFT, PLANETARY	21-87	HEADLAMP ALIGNMENT	8L-6	HORN SWITCH, DRIVER'S AIRBAG TRIM COVER	8M-5
GENERAL INFORMATION; BODY	23-10,23-7	HEADLAMP ALIGNMENT PREPARATION	8L-6	HOSE, WATER PUMP BYPASS	7-39
GENERAL INFORMATION; DIFFERENTIAL AND DRIVELINE	3-17,3-43,3-46,3-75,3-77	HEADLAMP AND PARK LAMP RELAYS, AUTO	8Q-7	HOSE—5.2L V-8 ENGINE, WATER PUMP BYPASS	7-2
GENERAL INFORMATION; ENGINE	9-8	HEADLAMP BULB	8L-9	HOSES AND LINES, BRAKE	5-5
GENERAL INFORMATION; FRAME AND BUMPERS	13-3	HEADLAMP DIAGNOSIS	8L-2	HOSES, BRAKE LINE	5-11
GENERAL INFORMATION; FUEL SYSTEM	14-1	HEADLAMP HIGH BEAM INDICATOR LAMP	8E-15,8E-7	HOSES, COOLING SYSTEM	7-6
GENERAL INFORMATION; LAMPS	8L-19,8L-1	HEADLAMP RELAY, AUTO	8Q-3	HOUSING, AIR CLEANER	14-58
GENERAL INFORMATION; LUBRICATION AND MAINTENANCE	0-1	HEADLAMP SENSOR, AUTO	8L-17	HOUSING BUSHING, OVERDRIVE	21-34
GENERAL INFORMATION; TRANSMISSION AND TRANSFER CASE	21-147,21-170	HEADLAMPS	8W-50-1	HOUSING END PLUG	19-11
GENERAL SERVICE INFORMATION	23-1	HEADLAMPS, AUTO; 8W-45 BODY CONTROL MODULE	8W-45-2	HOUSING FLUID LEAK DIAGNOSIS, CONVERTER	21-16
GENERATOR	8C-2,8C-7	HEADLAMPS, AUTO; 8W-50 FRONT LIGHTING	8W-50-1	HOUSING, HEATER-A/C	24-41
GENERATOR FIELD—PCM OUTPUT	14-37	HEADLINER	23-39	HOUSING, LICENSE PLATE LAMP	23-44
GENERATOR LAMP—PCM OUTPUT	14-37	HEADS, CYLINDER	9-77	HOW TO USE THIS GROUP	8W-01-1
GENERATOR RATINGS	8C-8	HEAT SHIELDS	11-2	HUB BEARING	2-10
GLASS, FRONT DOOR WINDOW	23-27	HEAT/DEFROST - PANEL/DEFROST DOOR MOTOR	24-44	HUB BEARING AND AXLE SHAFT	3-23
GLASS HEATING GRID, REAR	8N-1,8N-3	HEAT/DEFROST DOOR	24-44	HYDRAULIC CONTROL SYSTEM	21-6
GLASS HEATING GRID REPAIRS, REAR	8N-5	HEAT/DEFROST DOOR ACTUATOR	24-43	HYDRAULIC CONTROL UNIT	8W-35-2
GLASS LATCH HANDLE/STRIKER, LIFTGATE FLIP-UP	23-44	HEATED MIRRORS	8N-2	HYDRAULIC CONTROL UNIT (HCU)	5-35
GLASS LATCH, LIFTGATE FLIP-UP	23-44	HEATED OXYGEN SENSORS	8W-30-2	HYDRAULIC CONTROLLER UNIT	5-39
GLASS, LIFTGATE	23-6	HEATED SEAT CONTROL MODULE	8N-7,8N-9	HYDRAULIC PRESSURE TEST	21-13
GLASS, LIFTGATE FLIP-UP	23-43	HEATED SEAT ELEMENT	8N-9	HYDRAULIC SCHEMATICS	21-129
GLASS PANEL	23-7	HEATED SEAT ELEMENTS AND SENSOR	8N-8	HYDRAULIC TAPPETS	9-10,9-33,9-48,9-63,9-75
GLASS PANEL VERTICAL HEIGHT ADJUSTMENT	23-11	HEATED SEAT SENSOR	8N-9	HYDROMETER TEST	8A-6
GLASS, QUARTER WINDOW	23-6	HEATED SEAT SWITCH	8N-7,8N-8,8N-9	HYDROSTATIC LOCK	9-4
GLASS, REAR DOOR WINDOW	23-30	HEATED SEAT SYSTEM	8N-8	IDENTIFICATION, CIRCUIT	8W-01-3
GLASS, STATIONARY	23-4	HEATED SEATS; 8W-63 POWER SEAT	8W-63-2	IDENTIFICATION, FASTENER	Intro.-3,Intro.-5
GLASS SWITCH, FLIP-UP	23-43	HEATED SEATS; ELECTRICALLY HEATED SYSTEMS	8N-7	IDENTIFICATION NUMBER (VIN), VEHICLE	Intro.-1
GLASS WEATHERSTRIP, LIFTGATE FLIP-UP	23-43	HEATER AND AIR CONDITIONER	24-2	IDENTIFICATION, SECTION	8W-01-1
GLOVE BOX	8E-27	HEATER AND AIR CONDITIONER CONTROLS	24-2	IDENTIFICATION, TRANSFER CASE	21-147
GLOVE BOX COMPONENTS	8E-28	HEATER CORE	24-42	IDENTIFICATION, TRANSMISSION	21-4
GLOVE BOX LAMP	8W-44-2	HEATER ELEMENTS	8W-62-1	IDENTIFICATION, WIRE CODE	8W-01-2
GLOVE BOX LAMP AND SWITCH	8E-26	HEATER, ENGINE BLOCK	7-42,7-4	IDLE AIR CONTROL (IAC) MOTOR	8W-30-5
GLOVE BOX LATCH STRIKER	8E-26	HEATER PERFORMANCE	24-12	IDLE AIR CONTROL (IAC) MOTOR—4.0L ENGINE	14-50,14-55
GOVERNOR, ELECTRONIC	21-4	HEATER-A/C CONTROL	24-35	IDLE AIR CONTROL (IAC) MOTOR—4.0L ENGINE—PCM OUTPUT	14-37
GOVERNOR PRESSURE CURVES	21-6	HEATER-A/C HOUSING	24-41	IDLE AIR CONTROL (IAC) MOTOR—5.2L ENGINE	14-50,14-55
GOVERNOR PRESSURE SENSOR	8W-31-1	HEATING GRID, REAR GLASS	8N-1,8N-3	IDLE AIR CONTROL (IAC) MOTOR—5.2L ENGINES—PCM OUTPUT	14-37
GOVERNOR PRESSURE SENSOR—PCM INPUT, TRANSMISSION	14-34	HEATING GRID REPAIRS, REAR GLASS	8N-5	IGNITION CHIME, KEY-IN	8W-45-2
GOVERNOR SOLENOID AND PRESSURE SENSOR	21-36	HEIGHT ADJUSTMENT, GLASS PANEL VERTICAL	23-11	IGNITION CIRCUIT SENSE—PCM INPUT	14-32
GRAPHIC DISPLAY MODULE; 8W-46 MESSAGE CENTER	8W-46-1	HIGH AND LOW LIMITS	25-12	IGNITION COIL; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-5
GRAPHIC DISPLAY MODULE; INSTRUMENT PANEL SYSTEMS	8E-13,8E-3	HIGH BEAM INDICATOR LAMP	8W-40-2	IGNITION COIL; IGNITION SYSTEM	8D-26,8D-3
GRAPHIC DISPLAY MODULE/VEHICLE INFORMATION CENTER	8E-25	HIGH BEAM INDICATOR LAMP, HEADLAMP	8E-15,8E-7	IGNITION COIL TEST	8D-5
GRID, REAR GLASS HEATING	8N-1,8N-3	HIGH MOUNTED STOP LAMP (CHMSL) BULB, CENTER	8L-10	IGNITION COIL—4.0L ENGINE	8D-15
GRID REPAIRS, REAR GLASS HEATING	8N-5	HIGH MOUNTED STOP LAMP (CHMSL), CENTER	8L-15	IGNITION COIL—4.0L ENGINES—PCM OUTPUT	14-38
GRILLE	23-18	HIGH PRESSURE CUT-OFF SWITCH	24-25,24-32, 24-7	IGNITION COIL—5.2L ENGINES	8D-14
GRILLE AND SCREEN, COWL	23-20	HIGH PRESSURE RELIEF VALVE	24-32,24-7	IGNITION COIL—5.2L ENGINES—PCM OUTPUT	14-38
GRILLE OPENING REINFORCEMENT (GOR)	23-18	HIGH SPEED BLOWER MOTOR RELAY	24-25,24-38,24-7	IGNITION SWITCH; 8W-30 FUEL/ IGNITION SYSTEMS	8W-30-1
GROUND	8W-30-1	HIGH—SPEED OPERATION, TIRE PRESSURE	22-3	IGNITION SWITCH; STEERING	19-22
GROUND, POWER	14-35	HINGE, FRONT DOOR	23-23	IGNITION SWITCH AND KEY CYLINDER	8D-21
GROUP, HOW TO USE THIS	8W-01-1	HINGE, HOOD	23-19	IGNITION SWITCH AND KEY LOCK CYLINDER	8D-5
G-SWITCH	8W-35-1	HINGE, LIFTGATE	23-41	IGNITION SWITCH KEY-IN HALO LAMP, COURTESY LAMPS, CARGO LAMP	8W-44-1
GUIDE ASSEMBLY	23-10	HINGE, REAR DOOR	23-28	IGNITION SWITCH SENSE	8W-45-2
HALO LAMP, COURTESY LAMPS, CARGO LAMP, IGNITION SWITCH KEY-IN	8W-44-1	HITCH, TRAILER	13-5	IGNITION SYSTEM	8D-2
HAND LEVER, PARKING BRAKE	5-21	HOISTING AND TOWING, JUMP STARTING	0-8	IGNITION TIMING	8D-25,8D-8
HANDLE ACTUATOR, FRONT DOOR INSIDE	23-25	HOISTING RECOMMENDATIONS	0-10	IGNITION-OFF DRAW FUSE	8F-2
HANDLE ACTUATOR, REAR DOOR INSIDE	23-29	HONING CYLINDER BORES	9-2	IGNITION-OFF DRAW TEST	8A-9
HANDLE, ASSIST	23-33	HOOD	23-18	ILLUMINATION LAMPS; 8W-40 INSTRUMENT CLUSTER	8W-40-2
HANDLE, FRONT DOOR OUTSIDE	23-24	HOOD ADJUSTMENT	23-45	ILLUMINATION LAMPS; 8W-44 INTERIOR LIGHTING	8W-44-1
HANDLE, LIFTGATE OUTSIDE	23-42	HOOD, AND MASK, CLUSTER LENS	8E-22	ILLUMINATION LAMPS, CLUSTER	8E-13,8E-7
HANDLE, REAR DOOR OUTSIDE	23-28	HOOD HINGE	23-19	ILLUMINATION, RADIO	8W-47-1
HANDLE/STRIKER, LIFTGATE FLIP-UP GLASS LATCH	23-44	HOOD LATCH	23-19	IMPACT SENSORS	8M-2,8M-7
HAZARD FLASHERS	8W-52-1	HOOD LATCH STRIKER	23-19	IMPACT SENSORS, AIRBAG	8W-43-1
HAZARD WARNING SYSTEM	8J-1	HOOD RELEASE CABLE	23-19	IN-CAR TEMPERATURE SENSOR	8W-42-2
HEAD COVER, CYLINDER	9-61	HOOD SWITCH	8Q-2,8Q-4	INCORRECT FLUID LEVEL, EFFECTS OF	21-10
HEAD COVER, ENGINE CYLINDER	9-29,9-47	HOOK, FRONT TOW	13-3	INDEX, WIRING DIAGRAM; 8W-20 CHARGING SYSTEM	8W-20-1
HEAD, CYLINDER	9-62	HOOK, REAR TOW	13-4	INDEX, WIRING DIAGRAM; 8W-21 STARTING SYSTEM	8W-21-1
HEAD, ENGINE CYLINDER	9-31,9-47	HOOKS, EMERGENCY TOW	0-10		
		HORN; 8W-41 HORN/CIGAR LIGHTER	8W-41-1		
		HORN; HORN SYSTEMS	8G-1,8G-3		

Description	Group-Page	Description	Group-Page	Description	Group-Page
INDEX, WIRING DIAGRAM; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-5	INNER AXLE SHAFT OIL SEAL REPLACEMENT	3-27	INSTRUMENT PANEL TOP PAD	8E-29
INDEX, WIRING DIAGRAM; 8W-31 TRANSMISSION CONTROL SYSTEM	8W-31-2	INNER BELT SEAL, FRONT DOOR	23-25	INTAKE AIR TEMPERATURE SENSOR	8W-30-4
INDEX, WIRING DIAGRAM; 8W-33 VEHICLE SPEED CONTROL	8W-33-1	INNER BELT SEAL, REAR DOOR	23-29	INTAKE AND EXHAUST MANIFOLD—4.0L ENGINE	11-10,11-6
INDEX, WIRING DIAGRAM; 8W-35 ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	INPUT, AIR CONDITIONING (A/C) CONTROLS—PCM	14-29	INTAKE MANIFOLD AIR TEMPERATURE SENSOR	8D-17,8D-4,8D-9
INDEX, WIRING DIAGRAM; 8W-39 VEHICLE THEFT SECURITY SYSTEM	8W-39-2	INPUT AND LOW RANGE GEAR	21-187	INTAKE MANIFOLD AIR TEMPERATURE SENSOR—4.0L ENGINE	14-50,14-61
INDEX, WIRING DIAGRAM; 8W-40 INSTRUMENT CLUSTER	8W-40-2	INPUT AND OUTPUT, DATA LINK CONNECTOR—PCM	14-36	INTAKE MANIFOLD AIR TEMPERATURE SENSOR—4.0L ENGINE—PCM INPUT	14-32
INDEX, WIRING DIAGRAM; 8W-41 HORN/CIGAR LIGHTER	8W-41-1	INPUT, AUTOMATIC SHUTDOWN (ASD) RELAY SENSE—PCM	14-29	INTAKE MANIFOLD AIR TEMPERATURE SENSOR—5.2L ENGINE	14-50,14-60
INDEX, WIRING DIAGRAM; 8W-42 AIR CONDITIONING/HEATER	8W-42-3	INPUT, BATTERY TEMPERATURE SENSOR—PCM	14-29	INTAKE MANIFOLD AIR TEMPERATURE SENSOR—5.2L ENGINES—PCM INPUT	14-32
INDEX, WIRING DIAGRAM; 8W-43 AIRBAG SYSTEM	8W-43-1	INPUT, BATTERY VOLTAGE—PCM	14-30	INTAKE MANIFOLD LEAKAGE DIAGNOSIS	9-8
INDEX, WIRING DIAGRAM; 8W-44 INTERIOR LIGHTING	8W-44-2	INPUT, BRAKE SWITCH—PCM	14-30	INTAKE MANIFOLD—5.2L ENGINE	11-10
INDEX, WIRING DIAGRAM; 8W-45 BODY CONTROL MODULE	8W-45-2	INPUT, CAMSHAFT POSITION SENSOR—PCM	14-30	INTAKE MANIFOLD—5.2L ENGINE	11-7
INDEX, WIRING DIAGRAM; 8W-46 MESSAGE CENTER	8W-46-2	INPUT, CRANKSHAFT POSITION SENSOR—4.0L ENGINE—PCM	14-31	INTERFERENCE, RADIO FREQUENCY	8F-7
INDEX, WIRING DIAGRAM; 8W-47 AUDIO SYSTEM	8W-47-2	INPUT, CRANKSHAFT POSITION SENSOR—5.2L ENGINES—PCM	14-30	INTERIOR LAMPS	8L-19
INDEX, WIRING DIAGRAM; 8W-48 REAR WINDOW DEFOGGER	8W-48-1	INPUT, ENGINE COOLANT TEMPERATURE SENSOR—4.0L ENGINE—PCM	14-31	INTERLOCK, BRAKE TRANSMISSION SHIFT	21-125,21-11,21-35
INDEX, WIRING DIAGRAM; 8W-49 OVERHEAD CONSOLE	8W-49-1	INPUT, ENGINE COOLANT TEMPERATURE SENSOR—5.2L ENGINES—PCM	14-31	INTERLOCK MECHANISM, BRAKE TRANSMISSION SHIFT	21-8
INDEX, WIRING DIAGRAM; 8W-50 FRONT LIGHTING	8W-50-2	INPUT, FUEL LEVEL SENSOR—PCM	14-30	INTERLOCK, SHIFT	8W-31-1
INDEX, WIRING DIAGRAM; 8W-51 REAR LIGHTING	8W-51-1	INPUT, IGNITION CIRCUIT SENSE—PCM	14-32	INTERLOCK, SHIFTER/IGNITION	8D-24
INDEX, WIRING DIAGRAM; 8W-52 TURN SIGNALS	8W-52-1	INPUT, INTAKE MANIFOLD AIR TEMPERATURE SENSOR—4.0L ENGINE—PCM	14-32	INTERMITTENT AND POOR CONNECTIONS	8W-01-5
INDEX, WIRING DIAGRAM; 8W-53 WIPERS	8W-53-1	INPUT, INTAKE MANIFOLD AIR TEMPERATURE SENSOR—5.2L ENGINES—PCM	14-32	INTERMITTENT WIPE RELAY	8K-11,8K-3,8K-7
INDEX, WIRING DIAGRAM; 8W-54 TRAILER TOW	8W-54-1	INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—4.0L ENGINE—PCM	14-33	INTERMITTENT WIPER OPERATION	8W-53-1
INDEX, WIRING DIAGRAM; 8W-60 POWER WINDOWS	8W-60-2	INPUT, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR—5.2L ENGINES—PCM	14-33	INTERNATIONAL CONTROL AND DISPLAY SYMBOLS	Intro-4
INDEX, WIRING DIAGRAM; 8W-61 POWER DOOR LOCKS	8W-61-1	INPUT, OUTPUT SHAFT SPEED SENSOR—PCM	14-33	INTERNATIONAL SYMBOLS	0-1
INDEX, WIRING DIAGRAM; 8W-62 POWER MIRRORS	8W-62-1	INPUT, OVERDRIVE/OVERRIDE SWITCH—PCM	14-33	INTERNATIONAL VEHICLE CONTROL AND DISPLAY SYMBOLS	Intro-3
INDEX, WIRING DIAGRAM; 8W-63 POWER SEAT	8W-63-3	INPUT, OXYGEN SENSOR (O2S)—PCM	14-32	INTRODUCTION; 8W-02 COMPONENT INDEX	8W-02-1
INDEX, WIRING DIAGRAM; 8W-64 POWER SUNROOF	8W-64-1	INPUT, SPEED CONTROL SWITCHES—PCM	14-34	INTRODUCTION; 8W-11 POWER DISTRIBUTION	8W-11-1
INDEX, WIRING DIAGRAM; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1	INPUT, STOP LAMP SWITCH	8W-35-2	INTRODUCTION; 8W-12 JUNCTION BLOCK	8W-12-1
INDICATOR, BUILT-IN TEST	8A-5	INPUT, THROTTLE POSITION SENSOR (TPS)—4.0L ENGINE—PCM	14-34	INTRODUCTION; 8W-15 GROUND DISTRIBUTION	8W-15-1
INDICATOR (CHECK ENGINE) LAMP—PCM OUTPUT, MALFUNCTION	14-38	INPUT, THROTTLE POSITION SENSOR (TPS)—5.2L ENGINE—PCM	14-34	INTRODUCTION; 8W-35 ALL-WHEEL ANTI-LOCK BRAKES	8W-35-1
INDICATOR LAMP, AIRBAG	8E-11,8E-6	INPUT, TRANSMISSION GOVERNOR PRESSURE SENSOR—PCM	14-34	INTRODUCTION; 8W-39 VEHICLE THEFT SECURITY SYSTEM	8W-39-1
INDICATOR LAMP, CRUISE-ON	8E-13,8E-7	INPUT, TRANSMISSION PARK/NEUTRAL SWITCH—PCM	14-34	INTRODUCTION; 8W-40 INSTRUMENT CLUSTER	8W-40-1
INDICATOR LAMP, HEADLAMP HIGH BEAM	8E-15,8E-7	INPUT, TRANSMISSION TEMPERATURE SENSOR—PCM	14-34	INTRODUCTION; 8W-42 AIR CONDITIONING/HEATER	8W-42-1
INDICATOR LAMP, HIGH BEAM	8W-40-2	INPUT, VEHICLE SPEED AND DISTANCE SENSOR—PCM	14-35	INTRODUCTION; 8W-43 AIRBAG SYSTEM	8W-43-1
INDICATOR LAMP, MALFUNCTION	8E-15,8E-8	INPUTS, BODY CONTROL MODULE	8U-2	INTRODUCTION; 8W-44 INTERIOR LIGHTING	8W-44-1
INDICATOR LAMP, MASTER LIGHTING	8E-8	INSIDE HANDLE ACTUATOR, FRONT DOOR	23-25	INTRODUCTION; 8W-45 BODY CONTROL MODULE	8W-45-1
INDICATOR LAMP (MIL), MALFUNCTION	25-1	INSIDE HANDLE ACTUATOR, REAR DOOR	23-29	INTRODUCTION; 8W-46 MESSAGE CENTER	8W-46-1
INDICATOR LAMP, UPSHIFT	8E-9	INSPECTION	3-5	INTRODUCTION; 8W-47 AUDIO SYSTEM	8W-47-1
INDICATOR LAMPS	8E-3	INSPECTION (ENGINE OIL LEAKS IN GENERAL)	9-9	INTRODUCTION; 8W-50 FRONT LIGHTING	8W-50-1
INDICATOR LAMPS, TURN SIGNAL; 8W-40 INSTRUMENT CLUSTER	8W-40-2	INSPECTION, FAN BLADE	7-47	INTRODUCTION; 8W-54 TRAILER TOW	8W-54-1
INDICATOR LAMPS, TURN SIGNAL; INSTRUMENT PANEL SYSTEMS	8E-16,8E-8	INSPECTION OF JOURNALS, CRANKSHAFT	9-78	INTRODUCTION; 8W-60 POWER WINDOWS	8W-60-1
INDICATOR LAMPS, TURN SIGNAL; TURN SIGNAL AND HAZARD WARNING SYSTEMS	8J-2	INSPECTION, PRE-ALIGNMENT	2-1	INTRODUCTION; 8W-61 POWER DOOR LOCKS	8W-61-1
INDICATORS, TREAD WEAR	22-3	INSPECTION, UNSCHEDULED	0-3	INTRODUCTION; 8W-62 POWER MIRRORS	8W-62-1
INFLATION PRESSURES, TIRE	22-2	INSPECTION, WATER PUMP	7-47	INTRODUCTION; 8W-63 POWER SEAT	8W-63-1
INJECTION SYSTEM, FUEL	14-24	INSPECTION, WHEEL	22-8	INTRODUCTION; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1
INJECTOR RAIL—4.0L ENGINE, FUEL	14-19	INSPECTION—4.0L ENGINE, VISUAL	14-43	INTRODUCTION; 8W-70 SPLICE INFORMATION	8W-70-1
INJECTOR RAIL—5.2L ENGINES, FUEL	14-18	INSPECTION—5.2L ENGINE, VISUAL	14-40	INTRODUCTION; 8W-80 CONNECTOR PIN-OUTS	8W-80-1
INJECTORS, FUEL	8W-30-4	INSTALLATION, WHEEL	22-9	INTRODUCTION; 8W-90 CONNECTOR LOCATIONS	8W-90-1
INJECTOR(S), FUEL	14-20	INSTALLED, TRAILER TOW—FACTORY	8W-54-1	INTRODUCTION; 8W-95 SPLICE LOCATIONS	8W-95-1
INJECTORS, FUEL	14-9	INSTRUMENT CLUSTER	8E-22	INTRODUCTION; AUDIO SYSTEMS	8F-1
INJECTORS—4.0L ENGINE, FUEL	14-5	INSTRUMENT CLUSTERS	8E-2	INTRODUCTION; BATTERY	8A-1
INJECTORS—4.0L ENGINE—PCM OUTPUT, FUEL	14-36	INSTRUMENT PANEL	8E-2	INTRODUCTION; CHIME/BUZZER WARNING SYSTEMS	8U-1
INJECTORS—5.2L ENGINES, FUEL	14-5	INSTRUMENT PANEL ASSEMBLY	8E-30	INTRODUCTION; ELECTRICALLY HEATED SYSTEMS	8N-1,8N-7
INJECTORS—5.2L ENGINES—PCM OUTPUT, FUEL	14-36	INSTRUMENT PANEL CENTER BEZEL	8E-27	INTRODUCTION; FUEL SYSTEM	14-25,14-1
INLET STRAINER, FUEL PUMP	14-18	INSTRUMENT PANEL DIMMING	8W-45-2	INTRODUCTION; HORN SYSTEMS	8G-1
		INSTRUMENT PANEL MODULE, LOWER RIGHT	8E-25	INTRODUCTION; IGNITION SYSTEM	8D-2

Description	Group-Page	Description	Group-Page	Description	Group-Page
INTRODUCTION; INSTRUMENT PANEL SYSTEMS	8E-2	LAMP BULBS, READING/COURTESY	8V-7	LAMPS, PARKING	8W-50-1
INTRODUCTION; LUBRICATION AND MAINTENANCE	0-1,0-3	LAMP BULBS, TAIL, STOP, TURN SIGNAL, BACK-UP AND SIDE MARKER	8L-10	LAMPS, READING/COURTESY	8V-2
INTRODUCTION; OVERHEAD CONSOLE SYSTEMS	8V-1	LAMP, CARGO	8L-16	LAMPS, REAR LICENSE PLATE LAMPS AND SIDE MARKER LAMPS, TAIL	8W-51-1
INTRODUCTION; PASSIVE RESTRAINT SYSTEMS	8M-1	LAMP, CHECK GAUGES	8E-12,8E-7	LAMPS, STOP LAMPS AND CHMSL	8W-51-1
INTRODUCTION; POWER LOCK SYSTEMS	8P-1	LAMP (CHMSL) BULB, CENTER HIGH MOUNTED STOP	8L-10	LAMPS, TAIL LAMPS, REAR LICENSE PLATE LAMPS AND SIDE MARKER	8W-51-1
INTRODUCTION; POWER MIRROR SYSTEMS	8T-1,8T-5	LAMP (CHMSL), CENTER HIGH MOUNTED STOP	8L-15	LAMPS, TURN SIGNAL	8J-2
INTRODUCTION; POWER SEAT SYSTEMS	8R-1	LAMP, COURTESY LAMPS, CARGO	8W-44-1	LAMPS, TURN SIGNAL INDICATOR; 8W-40 INSTRUMENT CLUSTER	8W-40-2
INTRODUCTION; POWER WINDOW SYSTEMS	8S-1	LAMP, IGNITION SWITCH KEY-IN HALO	8E-13,8E-7	LAMPS, TURN SIGNAL INDICATOR; INSTRUMENT PANEL SYSTEMS	8E-16,8E-8
INTRODUCTION; STARTING SYSTEMS	8B-1	LAMP DIAGNOSIS	8L-1	LAMPS, TURN SIGNAL INDICATOR; TURN SIGNAL AND HAZARD WARNING SYSTEMS	8J-2
INTRODUCTION; TURN SIGNAL AND HAZARD WARNING SYSTEMS	8J-1,8J-2	LAMP DIAGNOSIS, DAYTIME RUNNING	8L-4	LAMPS—EXCEPT ABS, WARNING LASH, DIFFERENTIAL BEARING PRELOAD AND GEAR	8W-40-1
INTRODUCTION; VEHICLE SPEED CONTROL SYSTEM	8H-1	LAMP DIAGNOSIS, FOG	8L-3	LATCH ADJUSTMENT, DOOR	23-46
INTRODUCTION; VEHICLE THEFT/SECURITY SYSTEMS	8Q-1	LAMP DISABLE SWITCH, LIFTGATE COURTESY	8W-45-2	LATCH, FRONT DOOR	23-24
INTRODUCTION; WIPER AND WASHER SYSTEMS	8K-1	LAMP, DOOR COURTESY	8L-16	LATCH HANDLE/STRIKER, LIFTGATE FLIP-UP GLASS	23-44
IN-VEHICLE TEMPERATURE SENSOR	24-36,24-7	LAMP, FOG	8L-13	LATCH, HOOD	23-19
JOINT ANGLE, UNIVERSAL	3-5	LAMP, GLOVE BOX	8W-44-2	LATCH, LIFTGATE	23-42
JOINT, SINGLE AND DOUBLE CARDAN	3-14	LAMP, HEADLAMP HIGH BEAM INDICATOR	8E-15,8E-7	LATCH, LIFTGATE FLIP-UP GLASS	23-44
JOINTS, UNIVERSAL	3-2	LAMP, HIGH BEAM INDICATOR	8W-40-2	LATCH, REAR DOOR	23-29
JOURNALS, CRANKSHAFT INSPECTION OF	9-78	LAMP HOUSING, LICENSE PLATE	23-44	LATCH STRIKER, FRONT DOOR	23-25
JUMP STARTING, HOISTING AND TOWING	0-8	LAMP, IGNITION SWITCH KEY-IN HALO	8W-44-1	LATCH STRIKER, GLOVE BOX	8E-26
JUMP STARTING PROCEDURE	0-8	LAMP, LICENSE PLATE	8L-14	LATCH STRIKER, HOOD	23-19
JUNCTION BLOCK	8E-29,8E-4	LAMP, LOW FUEL WARNING	8E-15,8E-8	LATCH STRIKER, LIFTGATE	23-42
KEY CYLINDER, IGNITION SWITCH	8D-21	LAMP, MALFUNCTION INDICATOR	8E-15,8E-8	LATCH STRIKER, REAR DOOR	23-29
KEY LOCK CYLINDER, IGNITION SWITCH	8D-5	LAMP, MASTER LIGHTING INDICATOR	8E-8	LATCH STRIKER, SAFETY (LDP)—4.0L CALIFORNIA EMISSIONS PACKAGE, LEAK DETECTION PUMP	25-15
KEY-IN HALO LAMP, COURTESY LAMPS, CARGO LAMP, IGNITION SWITCH	8W-44-1	LAMP (MIL), MALFUNCTION INDICATOR	25-1	LEAD CORRECTION CHART	22-4
KEY-IN IGNITION CHIME	8W-45-2	LAMP OUTAGE MODULE	8L-17,8L-18	LEAF SPRINGS, ADJUSTMENT AT AXLE WITH	3-14
KEYLESS ENTRY RECEIVER, REMOTE	8P-3	LAMP OUTAGE MODULE DIAGNOSIS	8L-4,8L-5	LEAK DETECTION PUMP, EVAPORATIVE SYSTEM	8W-30-3
KEYLESS ENTRY, REMOTE	8W-61-1	LAMP OUTAGE MODULE (LOM)	8W-51-1	LEAK DETECTION PUMP (LDP)	25-19,25-20
KEYLESS ENTRY SYSTEM, POWER LOCK/REMOTE	8P-4	LAMP, PARKING	8L-13	LEAK DETECTION PUMP (LDP)—4.0L CALIFORNIA EMISSIONS PACKAGE	25-15
KEYLESS ENTRY SYSTEM, REMOTE	8P-1	LAMP, RED BRAKE WARNING	5-2,5-8	LEAK DIAGNOSIS, CONVERTER HOUSING FLUID	21-16
KEYLESS ENTRY TRANSMITTER	8P-5	LAMP RELAY, PARK	8Q-3	LEAK DOWN TEST, FUEL PRESSURE	14-8
BATTERY REPLACEMENT, REMOTE	8P-5	LAMP RELAYS, AUTO HEADLAMP AND PARK	8Q-7	LEAKAGE DIAGNOSIS, INTAKE MANIFOLD	9-8
KEYLESS ENTRY TRANSMITTER PROGRAMMING, REMOTE	8P-5	LAMP, SEAT BELT REMINDER	8E-16,8E-8	LEAKAGE DIAGNOSIS, POWER STEERING GEAR	19-9
KEYLESS ENTRY TRANSMITTER, REMOTE	8P-3,8P-5	LAMP SERVICE	8L-13	LEAKAGE DIAGNOSIS, PUMP	19-5
KNEE BLOCKER	8E-21	LAMP, SET	8Q-3,8Q-8	LEAKAGE TEST, CYLINDER COMBUSTION PRESSURE	9-9
KNOCK, LOW SPEED	3-18,3-46,3-78	LAMP SWITCH, COURTESY	8W-45-1	LEAKS, REFRIGERANT SYSTEM	24-26
KNUCKLE AND BALL STUDS, STEERING	3-24	LAMP SWITCH INPUT, STOP	8W-35-2	LEAKS, REPAIRING	22-7
KNUCKLE, STEERING	2-8	LAMP SWITCH SENSE, PARK	8W-45-2	LEAKS, TESTING COOLING SYSTEM	7-21
LABEL SPECIFICATIONS, VECI; FUEL SYSTEM	14-23,14-62	LAMP SWITCH, STOP; BRAKES	5-14,5-32,5-2,5-8	LEAKS, WATER	23-16
LABEL SPECIFICATIONS, VECI; IGNITION SYSTEM	8D-25	LAMP SWITCH, STOP; VEHICLE SPEED CONTROL SYSTEM	8H-1,8H-6,8H-8	LEFT SWITCH POD	8E-23
LABEL, VEHICLE EMISSION CONTROL INFORMATION (VECI)	25-17	LAMP SYSTEM, DAYTIME RUNNING	8L-17	LENS, HOOD, AND MASK, CLUSTER LEVEL AND CONDITION, CHECKING FLUID	21-9
LABEL, VEHICLE SAFETY CERTIFICATION	Intro-2	LAMP SYSTEMS	8L-17	LEVEL, BRAKE FLUID	5-11
LAMP, ABS WARNING; 8W-35	8W-35-2	LAMP, TAIL, STOP, TURN SIGNAL, BACK-UP AND SIDE MARKER	8L-14	LEVEL CHECK, FLUID	21-29
ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	LAMP, TURN SIGNAL AND SIDE MARKER	8L-14	LEVEL CHECK, ROUTINE COOLANT	7-24
LAMP, ABS WARNING; 8W-40	8W-40-1	LAMP, UNDERHOOD; 8W-44 INTERIOR LIGHTING	8W-44-2	LEVEL CHECK—SERVICE, COOLANT	7-24
INSTRUMENT CLUSTER	8W-40-1	LAMP, UNDERHOOD; LAMPS	8L-15	LEVEL, EFFECTS OF INCORRECT FLUID	21-10
LAMP, ABS WARNING; BRAKES	5-38	LAMP, UPSHIFT INDICATOR	8E-9	LEVEL, RECOMMENDED LUBRICANT AND FILL	21-147,21-170,21-172
LAMP ADJUSTMENT, FOG	8L-7	LAMP, VISOR VANITY	8L-15	LEVEL, REFRIGERANT OIL	24-27
LAMP, AIRBAG INDICATOR	8E-11,8E-6	LAMP, WAIT-TO-START	8E-9	LEVEL SENSOR, FUEL	14-18
LAMP, AIRBAG WARNING	8W-43-1	LAMP, WATER-IN-FUEL	8E-9	LEVEL SENSOR, LOW WASHER FLUID	8W-53-1
LAMP AND SWITCH, GLOVE BOX	8E-26	LAMP—PCM OUTPUT, GENERATOR	14-37	LEVEL SENSOR—PCM INPUT, FUEL	14-30
LAMP ANNOUNCEMENT CHIME, LOW FUEL WARNING	8W-45-2	LAMP—PCM OUTPUT, MALFUNCTION INDICATOR (CHECK ENGINE)	14-38	LEVEL-AERATION, LOW COOLANT	7-24
LAMP, ANTI-LOCK BRAKE SYSTEM	8E-12,8E-6	LAMP—PCM OUTPUT, OVERDRIVE	14-38	LEVER, PARKING BRAKE CAM	5-24
LAMP, BRAKE WARNING	8E-12,8E-6	LAMPS AND CHMSL LAMPS, STOP	8W-51-1	LEVER, PARKING BRAKE HAND	5-21
LAMP BULB, CARGO	8L-12	LAMPS AND SIDE MARKER LAMPS, TAIL LAMPS, REAR LICENSE PLATE	8W-51-1	LEVER, SHIFT	21-149
LAMP BULB, DOME	8L-11	LAMPS, BACK-UP	8W-51-1	LICENSE PLATE LAMP	8L-14
LAMP BULB, DOOR COURTESY	8L-11	LAMPS, CARGO LAMP, IGNITION SWITCH KEY-IN HALO LAMP, COURTESY	8W-44-1	LICENSE PLATE LAMP BULB	8L-10
LAMP BULB, FOG	8L-9	LAMPS, CLUSTER ILLUMINATION	8E-13,8E-7	LICENSE PLATE LAMP HOUSING	23-44
LAMP BULB, LICENSE PLATE	8L-10	LAMPS, EXTERIOR	8L-19	LICENSE PLATE LAMPS AND SIDE MARKER LAMPS, TAIL LAMPS, REAR	8W-51-1
LAMP BULB, OVERHEAD CONSOLE READING	8L-11	LAMPS, FOG	8W-50-1	LIFTGATE	23-40,23-46
LAMP BULB, PARKING	8L-10	LAMPS, ILLUMINATION; 8W-40 INSTRUMENT CLUSTER	8W-40-2	LIFTGATE AJAR SWITCH	8Q-2,8Q-5
LAMP BULB, READING	8L-11	LAMPS, ILLUMINATION; 8W-44 INTERIOR LIGHTING	8W-44-1	LIFTGATE COURTESY LAMP DISABLE SWITCH	8W-45-2
LAMP BULB SERVICE	8L-9	LAMPS, INDICATOR	8E-3	LIFTGATE FLIP-UP GLASS	23-43
LAMP BULB, TURN SIGNAL AND SIDE MARKER	8L-10	LAMPS, INTERIOR	8L-19	LIFTGATE FLIP-UP GLASS LATCH	23-44
LAMP BULB, UNDERHOOD	8L-11	LAMPS MODULE, DAYTIME RUNNING	8W-50-2	LIFTGATE FLIP-UP GLASS LATCH HANDLE/STRIKER	23-44
LAMP BULB, VISOR VANITY	8L-11	LAMPS, OVERHEAD CONSOLE; 8W-44 INTERIOR LIGHTING	8W-44-2		
		LAMPS, OVERHEAD CONSOLE; 8W-49 OVERHEAD CONSOLE	8W-49-1		

Description	Group-Page	Description	Group-Page	Description	Group-Page
LIFTGATE FLIP-UP GLASS		LUBRICANTS, BODY	23-47	MECHANISM, GEARSHIFT	21-4
WEATHERSTRIP	23-43	LUBRICANTS, CLASSIFICATION OF	0-1	MEMORY, RADIO	8W-47-1
LIFTGATE GLASS	23-6	LUBRICATION	3-2	MEMORY SEAT MODULE	8R-1,8R-6
LIFTGATE HINGE	23-41	LUBRICATION, BODY	23-17	MEMORY SEATS	8W-63-2
LIFTGATE LATCH	23-42	LUBRICATION SPECIFICATIONS	3-15	MEMORY SYSTEM; AUDIO SYSTEMS	8F-1
LIFTGATE LATCH STRIKER	23-42	LUBRICATION SYSTEM	9-16,9-54	MEMORY SYSTEM; POWER LOCK	8P-2
LIFTGATE LOCK CYLINDER	23-42	LUGGAGE RACK	23-45	SYSTEMS	8P-2
LIFTGATE LOCK CYLINDER SWITCH	8Q-2,8Q-6	LUMBAR ADJUSTER/MOTOR, POWER	8R-4,8R-6	MEMORY SYSTEM; POWER MIRROR	8T-1
LIFTGATE OPENING WEATHERSTRIP	23-42	LUMBAR ADJUSTER/MOTORS, POWER	8R-2	SYSTEMS	8T-1
LIFTGATE OUTSIDE HANDLE	23-42	LUMBAR SUPPORT	23-12	MEMORY SYSTEM; POWER SEAT	8R-1
LIFTGATE TRIM PANEL	23-40	LUMBAR SWITCH, POWER	8R-2,8R-4,8R-5	SYSTEMS	8R-1
LIFTGLASS	8W-61-1	— 4.0L, POWER STEERING PUMP	19-6	METRIC CONVERSION	Intro-8
LIFTGLASS AJAR SWITCH	8Q-3,8Q-6	— 5.2L, POWER STEERING PUMP	19-6	METRIC SYSTEM	Intro-3
LIFTGLASS RELEASE SYSTEM,		MACHINING, DISC ROTOR	5-12	MINIMUM AIR FLOW CHECK	
POWER	8P-1,8P-5	MAIN BEARINGS, CRANKSHAFT	9-39,9-58,9-68	PROCEDURE, THROTTLE BODY	14-51
LIGHT MODULE, DAYTIME RUNNING	8L-17	MAIN BEARINGS, FITTING CRANKSHAFT	9-22	MIRROR, AUTOMATIC DAY/NIGHT	8T-5,8T-6
LIGHTER, CIGAR; 8W-41 HORN/CIGAR		MAIN OIL SEALS, REAR	9-43	MIRROR, DAY/NIGHT	8W-44-2
LIGHTER	8W-41-1	MAIN RELAY, ABS	8W-35-1	MIRROR, POWER; 8W-62 POWER	
LIGHTER, CIGAR; INSTRUMENT PANEL		MAINTENANCE SCHEDULES	0-3	MIRRORS	8W-62-1
SYSTEMS	8E-26	MALFUNCTION INDICATOR (CHECK		MIRROR, POWER; POWER MIRROR	
LIGHTING INDICATOR LAMP, MASTER	8E-8	ENGINE) LAMP—PCM OUTPUT	14-38	SYSTEMS	8T-1,8T-3,8T-4
LIMITED SLIP DIFFERENTIAL	3-47,3-78	MALFUNCTION INDICATOR LAMP	8E-15,8E-8	MIRROR, REARVIEW	23-38
LIMITS, HIGH AND LOW	25-12	MALFUNCTION INDICATOR LAMP (MIL)	25-1	MIRROR SUPPORT BRACKET, REARVIEW	23-38
LINE AND FITTINGS, TRANSMISSION		MANIFOLD ABSOLUTE PRESSURE (MAP)		MIRROR SWITCH, POWER	8T-2
COOLER	21-39	SENSOR	8D-17,8D-4	MIRROR SYSTEM, POWER	8T-2
LINE AND HOSES, BRAKE	5-11	MANIFOLD ABSOLUTE PRESSURE (MAP)		MIRRORS, HEATED	8N-2
LINE, BRAKE	5-13	SENSOR TEST—4.0L ENGINE	14-47	MIRRORS, OUTSIDE POWER	8T-1
LINE COUPLERS, REFRIGERANT	24-29,24-8	MANIFOLD ABSOLUTE PRESSURE (MAP)		MIRRORS, SIDE VIEW	23-21
LINES, BRAKE HOSES	5-5	SENSOR TEST—5.2L ENGINES	14-46	MIRRORS, VISOR VANITY	8W-44-2
LINES, REFRIGERANT	24-8	MANIFOLD ABSOLUTE PRESSURE (MAP)		MODE, CIRCUIT ACTUATION TEST	25-2
LINK CONNECTOR, DATA; 8W-30		SENSOR—4.0L ENGINE	14-56	MODE DOOR MOTOR—AUTOMATIC	
FUEL/IGNITION SYSTEMS	8W-30-1	MANIFOLD ABSOLUTE PRESSURE (MAP)		TEMPERATURE CONTROL	8W-42-3
LINK CONNECTOR, DATA; 8W-35		SENSOR—4.0L ENGINE—PCM INPUT	14-33	MODE, POWER-UP	8Q-2
ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	MANIFOLD ABSOLUTE PRESSURE (MAP)		MODE, STATE DISPLAY TEST	25-2
LINK CONNECTOR, DATA; 8W-65 SPEED		SENSOR—5.2L ENGINES	14-56	MODEL 30, FRONT AXLE—TUBE	3-15
PROPORTIONAL STEERING	8W-65-1	MANIFOLD ABSOLUTE PRESSURE (MAP)		MODEL 35 AXLE	3-43,3-71
LINK CONNECTOR—PCM INPUT AND		SENSOR—5.2L ENGINES—PCM INPUT	14-33	MODEL 44 AXLE	3-100,3-102,3-75
OUTPUT, DATA	14-36	MANIFOLD ABSOLUTE PRESSURE		MODES OF OPERATION	14-26
LINK, DRAG	19-29	SENSOR	8W-30-4	MODULE, AIRBAG	8M-2,8M-4
LINKAGE ADJUSTMENT, SHIFT	21-167,21-189	MANIFOLD AIR TEMPERATURE SENSOR,		MODULE, AIRBAG CONTROL	8M-2,8M-8
LINKAGE AND PIVOTS, WIPER	8K-11,8K-2	INTAKE	8D-17,8D-4,8D-9	MODULE, AUTOMATIC TEMPERATURE	
LINKAGE, STEERING	19-28,19-30	MANIFOLD AIR TEMPERATURE		CONTROL (ATC)	8W-42-2
LOAD TEST	8A-7	SENSOR—4.0L ENGINE, INTAKE	14-50,14-61	MODULE, BLOWER MOTOR POWER	24-5
LOAD VALUE	25-12	MANIFOLD AIR TEMPERATURE		MODULE, BLOWER MOTOR RESISTOR/	
LOCATIONS, CONNECTOR/GROUND;		SENSOR—4.0L ENGINE—PCM INPUT,		POWER	24-38
8W-01 GENERAL INFORMATION	8W-01-1	INTAKE	14-32	MODULE, BODY CONTROL; AUDIO	
LOCATIONS, CONNECTOR/GROUND;		MANIFOLD AIR TEMPERATURE		SYSTEMS	8F-2
8W-90 CONNECTOR LOCATIONS	8W-90-1	SENSOR—5.2L ENGINE, INTAKE	14-50,14-60	MODULE, BODY CONTROL; CHIME/	
LOCATIONS, SPLICE; 8W-01 GENERAL		MANIFOLD AIR TEMPERATURE		BUZZER WARNING SYSTEMS	8U-1
INFORMATION	8W-01-1	SENSOR—5.2L ENGINES—PCM INPUT,		MODULE, BODY CONTROL;	
LOCATIONS, SPLICE; 8W-95 SPLICE		INTAKE	14-32	ELECTRICALLY HEATED SYSTEMS	8N-2
LOCATIONS	8W-95-1	MANIFOLD LEAKAGE DIAGNOSIS,		MODULE, BODY CONTROL; HORN	
LOCATORS, DRIVE CABLE	23-9	INTAKE	9-8	SYSTEMS	8G-1
LOCK CYLINDER, FRONT DOOR	23-24	MANIFOLD— 5.2L ENGINE, INTAKE	11-10	MODULE, BODY CONTROL;	
LOCK CYLINDER, IGNITION SWITCH AND		MANIFOLD—4.0L ENGINE, INTAKE AND		INSTRUMENT PANEL SYSTEMS	8E-24,8E-4
KEY	8D-5	EXHAUST	11-10,11-6	MODULE, BODY CONTROL; POWER	
LOCK CYLINDER, LIFTGATE	23-42	MANIFOLD—5.2L ENGINE, EXHAUST	11-10,11-9	LOCK SYSTEMS	8P-3
LOCK CYLINDER SWITCH, DOOR	8Q-2,8Q-4	MANIFOLD—5.2L ENGINE, INTAKE	11-7	MODULE, BODY CONTROL; POWER	
LOCK CYLINDER SWITCH, LIFTGATE	8Q-2,8Q-6	MANUAL A/C-HEATER	8W-42-1	WINDOW SYSTEMS	8S-2
LOCK, HYDROSTATIC	9-4	MAP SENSOR	8D-8	MODULE, BODY CONTROL; VEHICLE	
LOCK MOTOR, POWER	8P-3,8P-4,8P-6	MARKER LAMP BULB, TURN SIGNAL		THEFT/SECURITY SYSTEMS	8Q-2
LOCK, PARK	21-36	AND SIDE	8L-10	MODULE, BODY CONTROL; WIPER AND	
LOCK SWITCH, POWER	8P-2	MARKER LAMP BULBS, TAIL, STOP,		WASHER SYSTEMS	8K-3
LOCK SYSTEM, POWER	8P-1	TURN SIGNAL, BACK-UP AND SIDE	8L-10	MODULE, CHILD SEAT	23-37
LOCK/REMOTE KEYLESS ENTRY		MARKER LAMP, TAIL, STOP, TURN		MODULE, DAYTIME RUNNING LAMPS	8W-50-2
SYSTEM, POWER	8P-4	SIGNAL, BACK-UP AND SIDE	8L-14	MODULE, DAYTIME RUNNING LIGHT	8L-17
LOCKS, POWER DOOR	8W-61-1	MARKER LAMP, TURN SIGNAL AND		MODULE DIAGNOSIS, LAMP OUTAGE	8L-4,8L-5
LOW COOLANT LEVEL-AERATION	7-24	SIDE	8L-14	MODULE, DOOR; POWER LOCK	
LOW FUEL WARNING LAMP	8E-15,8E-8	MARKER LAMPS, TAIL LAMPS, REAR		SYSTEMS	8P-2,8P-4,8P-5
LOW FUEL WARNING LAMP		LICENSE PLATE LAMPS AND SIDE	8W-51-1	MODULE, DOOR; POWER MIRROR	
ANNOUNCEMENT CHIME	8W-45-2	MASK, CLUSTER LENS, HOOD	8E-22	SYSTEMS	8T-2,8T-3
LOW LIMITS, HIGH	25-12	MASTER CYLINDER	5-11,5-15,5-3	MODULE, DOOR; POWER WINDOW	
LOW OIL PRESSURE WARNING CHIME	8W-45-2	MASTER CYLINDER RESERVOIR	5-27	SYSTEMS	8S-2,8S-3,8S-5
LOW PRESSURE CYCLING CLUTCH		MASTER CYLINDER/POWER BOOSTER	5-8	MODULE, FUEL PUMP; 8W-30	
SWITCH	24-25,24-35,24-7	MASTER LIGHTING INDICATOR LAMP	8E-8	FUEL/IGNITION SYSTEMS	8W-30-2
LOW RANGE GEAR, INPUT	21-187	MATCH MOUNTING	22-6	MODULE, FUEL PUMP; FUEL	
LOW SPEED KNOCK	3-18,3-46,3-78	MEASUREMENT AND ADJUSTMENT,		SYSTEM	14-17,14-3
LOW WASHER FLUID LEVEL SENSOR	8W-53-1	DIFFERENTIAL SHIM PACK	3-35	MODULE, GRAPHIC DISPLAY; 8W-46	
LOWER B-PILLAR TRIM PANEL	23-33	MEASUREMENT, DIFFERENTIAL AND		MESSAGE CENTER	8W-46-1
LOWER RIGHT INSTRUMENT PANEL		PINION	3-33	MODULE, GRAPHIC DISPLAY;	
MODULE	8E-25	MEASUREMENT, PROPELLER SHAFT		INSTRUMENT PANEL SYSTEMS	8E-13,8E-3
LOWER SUSPENSION ARM	2-14,2-8	ANGLE	3-6	MODULE, HEATED SEAT CONTROL	8N-7,8N-9
LUBRICANT AND FILL LEVEL,		MEASUREMENTS AND ADJUSTMENTS,		MODULE INPUTS, BODY CONTROL	8U-2
RECOMMENDED	21-147,21-170,21-172	ALIGNMENT	2-4	MODULE, LAMP OUTAGE	8L-17,8L-18
LUBRICANT CHANGE	3-21,3-50,3-81	MEASURING TIMING CHAIN STRETCH	9-56	MODULE (LOM), LAMP OUTAGE	8W-51-1
LUBRICANT RECOMMENDATIONS,		MEASURING WITH PLASTIGAGE	9-3	MODULE, LOWER RIGHT INSTRUMENT	
PARTS	0-1	MECHANISM, BRAKE TRANSMISSION		PANEL	8E-25
LUBRICANT SPECIFICATIONS	3-43,3-75	SHIFT INTERLOCK	21-8	MODULE, MEMORY SEAT	8R-1,8R-6

Description	Group-Page	Description	Group-Page	Description	Group-Page
MODULE (PCM), POWERTRAIN CONTROL; FUEL SYSTEM	14-28,14-56	NUMBER (VIN), VEHICLE IDENTIFICATION	Intro.-1	OUTPUT, AIR CONDITIONING (A/C) CLUTCH RELAY—PCM	14-35
MODULE (PCM), POWERTRAIN CONTROL; IGNITION SYSTEM	8D-21,8D-2	NV231 DIAGNOSIS	21-148	OUTPUT, AUTO SHUTDOWN (ASD) RELAY—PCM	14-36
MODULE (PCM), POWERTRAIN CONTROL; VEHICLE SPEED CONTROL SYSTEM	8H-2,8H-7	NV231 TRANSFER CASE	21-147,21-149,21-150,21-163	OUTPUT, DATA LINK CONNECTOR—PCM INPUT	14-36
MODULE, POWERTRAIN CONTROL	8H-9	NV249 COMPONENTS	21-188	OUTPUT, DUTY CYCLE EVAP PURGE SOLENOID VALVE—PCM	14-36
MODULE, PUSH-BUTTON	8V-7	NV249 DIAGNOSIS	21-171	OUTPUT, FUEL INJECTORS—4.0L ENGINE—PCM	14-36
MODULE, SPEED PROPORTIONAL STEERING CONTROL; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1	NV249 TRANSFER CASE (O2S)—PCM INPUT, OXYGEN SENSOR	14-32	OUTPUT, FUEL INJECTORS—5.2L ENGINES—PCM	14-36
MODULE, SPEED PROPORTIONAL STEERING CONTROL; STEERING	19-25,19-27	ODOMETER - TRIP ODOMETER	8E-10	OUTPUT, FUEL PUMP RELAY—PCM	14-37
MODULE, TRIP COMPUTER, COMPASS, THERMOMETER, DISPLAY	8V-6	ODOMETER, ODOMETER - TRIP	8E-10	OUTPUT, GENERATOR FIELD—PCM	14-37
MODULE, TRIP COMPUTER/COMPASS/ DISPLAY	8V-3	ODOMETER, ODOMETER/TRIP	8E-5	OUTPUT, GENERATOR LAMP—PCM	14-37
MODULE/VEHICLE INFORMATION CENTER, GRAPHIC DISPLAY	8E-25	ODOMETER/TRIP ODOMETER	8E-5	OUTPUT, IDLE AIR CONTROL (IAC) MOTOR—4.0L ENGINE—PCM	14-37
MONITORED SYSTEMS	25-8	OFF SWITCH, OVERDRIVE	21-7	OUTPUT, IDLE AIR CONTROL (IAC) MOTOR—5.2L ENGINES—PCM	14-37
MONITORS, COMPONENT	25-11	OIL AND CAMSHAFT PLUGS, ENGINE CORE	9-74	OUTPUT, IGNITION COIL—4.0L ENGINES—PCM	14-38
MOTOR ACTUATOR—MANUAL A/C-HEATER, BLEND AIR DOOR	8W-42-2	OIL COOLER FLOW CHECK	21-11	OUTPUT, IGNITION COIL—5.2L ENGINES—PCM	14-38
MOTOR AND DRIVE GEARS	23-9	OIL COOLER—AUXILIARY, TRANSMISSION	7-26	OUTPUT, MALFUNCTION INDICATOR (CHECK ENGINE) LAMP—PCM	14-38
MOTOR, BLOWER	24-23,24-37,24-5	OIL COOLERS, AUTOMATIC TRANSMISSION	7-2	OUTPUT, OVERDRIVE LAMP—PCM	14-38
MOTOR, HEAT/DEFROST - PANEL/ DEFROST DOOR	24-44	OIL, ENGINE	9-5	OUTPUT, SHAFT FRONT BEARING	21-35
MOTOR, IDLE AIR CONTROL (IAC)	8W-30-5	OIL LEVEL, REFRIGERANT	24-27	OUTPUT, SHAFT REAR BEARING	21-34
MOTOR, POWER LOCK	8P-3,8P-4,8P-6	OIL PAN	9-41,9-69,9-78	OUTPUT, SHAFT SPEED SENSOR	8W-31-1
MOTOR POWER MODULE, BLOWER	24-5	OIL PRESSURE, ENGINE	9-11	OUTPUT, SHAFT SPEED SENSOR—PCM INPUT	14-33
MOTOR, POWER WINDOW	8S-2,8S-4,8S-6	OIL PRESSURE GAUGE; 8W-40 INSTRUMENT CLUSTER	8W-40-2	OUTPUT, SPEED CONTROL SOLENOIDS—PCM	14-38
MOTOR RELAY, ABS PUMP	8W-35-1	OIL PRESSURE GAUGE; INSTRUMENT PANEL SYSTEMS	8E-10,8E-5	OUTPUT, TACHOMETER—PCM	14-38
MOTOR RELAY, HIGH SPEED BLOWER	24-25,24-38,24-7	OIL PRESSURE SENSOR	8W-30-4	OUTPUT TEST, CURRENT	8C-5
MOTOR RESISTOR, BLOWER	24-23,24-5	OIL PRESSURE WARNING CHIME, LOW	8W-45-2	OUTPUT, THREE-FOUR SHIFT SOLENOID—PCM	14-38
MOTOR RESISTOR/POWER MODULE, BLOWER	24-38	OIL PUMP	9-44,9-71,9-77,9-78	OUTPUT, TORQUE CONVERTOR CLUTCH (TCC) SOLENOID—PCM	14-39
MOTOR SWITCH, BLOWER	24-23,24-6	OIL PUMP AND REACTION SHAFT SUPPORT	21-120,21-79	OUTPUT, TRANSMISSION RELAY—PCM	14-39
MOTOR, TEMPERATURE/BLEND-AIR DOOR	24-39	OIL PUMP PRESSURE	9-16,9-53	OUTPUT, VARIABLE FORCE SOLENOID—PCM	14-39
MOTOR, WIPER	8K-10	OIL, REFRIGERANT	24-8	OUTS, TAKE	8W-01-3
MOTOR—4.0L ENGINE, IDLE AIR CONTROL (IAC)	14-50,14-55	OIL SEAL, FRONT CRANKSHAFT	9-71	OUTSIDE HANDLE, FRONT DOOR	23-24
MOTOR—4.0L ENGINE—PCM OUTPUT, IDLE AIR CONTROL (IAC)	14-37	OIL SEAL REPLACEMENT, INNER AXLE SHAFT	3-27	OUTSIDE HANDLE, LIFTGATE	23-42
MOTOR—5.2L ENGINE, IDLE AIR CONTROL (IAC)	14-50,14-55	OIL SEAL, REAR MAIN	9-43	OUTSIDE HANDLE, REAR DOOR	23-28
MOTOR—5.2L ENGINES—PCM OUTPUT, IDLE AIR CONTROL (IAC)	14-37	ON-BOARD DIAGNOSTIC SYSTEM TEST	8C-6	OUTSIDE POWER MIRRORS	8T-1
MOTOR—AUTOMATIC TEMPERATURE CONTROL, BLEND DOOR	8W-42-3	ON-BOARD DIAGNOSTICS	25-1	OVERDRIVE	21-123
MOTOR—AUTOMATIC TEMPERATURE CONTROL, BLOWER	8W-42-3	ON-BOARD DIAGNOSTICS (OBD)	7-8	OVERDRIVE ELECTRICAL CONTROLS	21-11
MOTOR—AUTOMATIC TEMPERATURE CONTROL, MODE DOOR	8W-42-3	ON-BOARD DIAGNOSTICS TEST	8H-2	OVERDRIVE GEARTRAIN	21-109
MOTOR—AUTOMATIC TEMPERATURE CONTROL, RECIRCULATION DOOR	8W-42-3	ONLY, POWER ANTENNA—EXPORT	8W-47-2	OVERDRIVE HOUSING BUSHING	21-34
MOTOR—MANUAL A/C-HEATER, BLOWER	8W-42-1	OPEN-CIRCUIT VOLTAGE TEST	8A-6	OVERDRIVE LAMP—PCM OUTPUT	14-38
MOTORS, WIPER	8K-2	OPENER STORAGE BIN, GARAGE DOOR	8V-2	OVERDRIVE OFF SWITCH	21-7
MOUNTED STOP LAMP (CHMSL) BULB, CENTER HIGH	8L-10	OPENER, UNIVERSAL GARAGE DOOR	8W-44-2	OVERDRIVE SWITCH	8W-31-1
MOUNTED STOP LAMP (CHMSL), CENTER HIGH	8L-15	OPENING REINFORCEMENT (GOR), GRILLE	23-18	OVERDRIVE UNIT	21-40,21-92
MOUNTING, BATTERY	8A-3	OPENING WEATHERSTRIP, FRONT DOOR	23-26	OVERDRIVE/OVERRIDE SWITCH—PCM INPUT	14-33
MOUNTING BRACKET, PASSENGER'S AIRBAG REAR	8M-7	OPENING WEATHERSTRIP, LIFTGATE	23-42	OVERHEAD CONSOLE; 8W-49 OVERHEAD CONSOLE	8W-49-1
MOUNTING, MATCH	22-6	OPENING WEATHERSTRIP, REAR DOOR	23-30	OVERHEAD CONSOLE; OVERHEAD CONSOLE SYSTEMS	8V-6
MOUNTING STUDS, WHEEL	2-11	OPERATION, AIR TESTING		OVERHEAD CONSOLE LAMPS; 8W-44 INTERIOR LIGHTING	8W-44-2
MOUNT—REAR, ENGINE	9-26	TRANSMISSION CLUTCH AND BAND	21-16	OVERHEAD CONSOLE LAMPS; 8W-49 OVERHEAD CONSOLE	8W-49-1
MOUNTS—FRONT, ENGINE	9-26,9-59	OPERATION, CHARGING SYSTEM	8C-1	OVERHEAD CONSOLE READING LAMP BULB	8L-11
MOUNTS—REAR, ENGINE	9-60	OPERATION, INTERMITTENT WIPER	8W-53-1	OVERRUNNING CLUTCH/LOW-REVERSE DRUM	21-77
MUFFLER AND TAILPIPE—4.0/5.2L ENGINES	11-5	OPERATION, MODES OF OPERATION, POWER STEERING PUMP—INITIAL	19-5	OVERRUNNING CLUTCH/LOW-REVERSE DRUM/REAR SUPPORT	21-119
MULTI-FUNCTION SWITCH	8J-2,8J-3,8J-4	OPERATION, SHIFT VALVE	21-6	OVERSIZE AND UNDERSIZE COMPONENT CODES	9-18
NAMEPLATES, EXTERIOR	23-20	OPERATION, TIRE PRESSURE FOR HIGH—SPEED	22-3	OVERVIEW; BATTERY	8A-1
NECK SEAL—PRESSURE RELIEF CHECK, RADIATOR CAP-TO-FILLER	7-23	OPERATION, TRAC-LOK	3-45,3-76	OVERVIEW; CHARGING SYSTEM	8C-1
NOISE DIAGNOSIS, TRAC-LOK	3-50,3-81	OPERATION, VEHICLE THEFT SECURITY SYSTEM	8W-39-1	OVERVIEW; STARTING SYSTEMS	8B-1
NOISE, GEAR AND BEARING	3-17,3-46,3-77	OPERATION—AUTOMATIC TEMPERATURE CONTROL, A/C	8W-42-2	OXYGEN (O2S) SENSORS—4.0L ENGINE	14-49
NOISE OR VIBRATION, TIRE	22-4	OPERATION—MANUAL A/C, A/C	8W-42-2	OXYGEN (O2S) SENSORS—5.2L ENGINE	14-48
NOISE SUPPRESSION, RADIO	8F-3	ORDER—4.0L 6-CYLINDER ENGINE, ENGINE FIRING	8D-25	OXYGEN SENSOR (O2S)—PCM INPUT	14-32
NOISE, WIND	23-17	ORDER—5.2L V-8 ENGINE, ENGINE FIRING	8D-25	OXYGEN SENSOR—4.0L ENGINE	14-58
NON-MONITORED CIRCUITS	25-11	ORIFICE TUBE, FIXED	24-34,24-7	OXYGEN SENSOR—5.2L ENGINE	14-57
NOTES, CAUTIONS, AND WARNINGS	8W-01-1	OUTAGE MODULE DIAGNOSIS, LAMP	8L-4,8L-5	OXYGEN SENSORS, HEATED	8W-30-2
NOZZLES AND PLUMBING, WASHER	8K-4	OUTAGE MODULE, LAMP	8L-17,8L-18	PACK MEASUREMENT AND ADJUSTMENT, DIFFERENTIAL SHIM	3-35
		OUTAGE MODULE (LOM), LAMP	8W-51-1	PACKAGE, LEAK DETECTION PUMP (LDP)—4.0L CALIFORNIA EMISSIONS	25-15
		OUTER BELT SEAL, FRONT DOOR	23-25	PAD, INSTRUMENT PANEL TOP	8E-29
		OUTER BELT SEAL, REAR DOOR	23-29	PAINT	23-2
		OUTLET DOOR, POWER	8E-27		
		OUTLET, POWER; 8W-41 HORN/CIGAR LIGHTER	8W-41-1		
		OUTLET, POWER; INSTRUMENT PANEL SYSTEMS	8E-27		
		OUTLETS, DUCTS	24-39		

Description	Group-Page	Description	Group-Page	Description	Group-Page
PAINT CODE	23-2	PLATE, FRONT SKID	13-3	POWER LUMBAR SWITCH	8R-2,8R-4,8R-5
PAINT REPAIR PRODUCTS, AFTER MARKET	23-3	PLATE, FUEL TANK SKID	13-4	POWER MIRROR; 8W-62 POWER MIRRORS	8W-62-1
PAINTED SURFACE TOUCHUP	23-2	PLATE LAMP BULB, LICENSE	8L-10	POWER MIRROR; POWER MIRROR SYSTEMS	8T-1,8T-3,8T-4
PAN, OIL	9-41,9-69,9-78	PLATE LAMP HOUSING, LICENSE	23-44	POWER MIRROR SWITCH	8T-2
PANEL ASSEMBLY, INSTRUMENT	8E-30	PLATE LAMP, LICENSE	8L-14	POWER MIRROR SYSTEM	8T-2
PANEL CENTER BEZEL, INSTRUMENT	8E-27	PLATE LAMPS AND SIDE MARKER LAMPS, TAIL LAMPS, REAR LICENSE	8W-51-1	POWER MIRRORS, OUTSIDE	8T-1
PANEL, COWL TOP TRIM	8E-29	PLATE, REAR DOOR SCUFF	23-34	POWER MODULE, BLOWER MOTOR	24-5
PANEL DIMMING, INSTRUMENT	8W-45-2	PLATE, TRANSFER CASE SKID	13-4	POWER OUTLET; 8W-41 HORN/CIGAR LIGHTER	8W-41-1
PANEL, FRONT DOOR TRIM	23-23	PLUG ASSEMBLY, ADJUSTER	19-12	POWER OUTLET; INSTRUMENT PANEL SYSTEMS	8E-27
PANEL, GLASS	23-7	PLUG CABLE RESISTANCE, SPARK	8D-25	POWER OUTLET DOOR	8E-27
PANEL, INSTRUMENT	8E-2	PLUG CABLES, SPARK	8D-13,8D-3,8D-9	POWER RECLINER ADJUSTER/MOTOR	8R-4,8R-6
PANEL, LIFTGATE TRIM	23-40	PLUG CONDITIONS, SPARK	8D-10	POWER RECLINER ADJUSTER/MOTORS	8R-2
PANEL, LOWER B-PILLAR TRIM	23-33	PLUG, HOUSING END	19-11	POWER SEAT ADJUSTER/MOTORS	8R-2,8R-4,8R-5
PANEL MODULE, LOWER RIGHT INSTRUMENT	8E-25	PLUGS, ENGINE CORE OIL AND CAMSHAFT	9-74	POWER SEAT SWITCH	8R-2,8R-3,8R-5
PANEL, REAR DOOR TRIM	23-27	PLUGS, SPARK	8D-13,8D-25,8D-3	POWER SEAT SYSTEM	8R-3
PANEL TOP PAD, INSTRUMENT	8E-29	PLUMBING, WASHER NOZZLES	8K-4	POWER SEATS	8W-63-1
PANEL, UPPER B-PILLAR TRIM	23-33	POD BEZELS, SWITCH	8E-21	POWER STEERING	19-1
PANEL VERTICAL HEIGHT ADJUSTMENT, GLASS	23-11	POD, LEFT SWITCH	8E-23	POWER STEERING GEAR	19-19,19-20,19-26,19-9
PANEL/DEFROST DOOR	24-40	POD, RIGHT SWITCH	8E-24	POWER STEERING GEAR LEAKAGE DIAGNOSIS	19-9
PANEL/DEFROST DOOR ACTUATOR	24-43	POLISHING, WET SANDING, BUFFING	23-2	POWER STEERING PUMP	19-4,19-8
PANEL/DEFROST DOOR MOTOR, HEAT/DEFROST	24-44	POOR CONNECTIONS, INTERMITTENT	8W-01-5	POWER STEERING PUMP — 4.0L	19-6
PANELS, QUARTER TRIM	23-34	PORT, FUEL PUMP PRESSURE TEST—5.2L ENGINES WITHOUT PRESSURE TEST	14-7	POWER STEERING PUMP — 5.2L	19-6
PARK LAMP RELAY	8Q-3	PORT, FUEL SYSTEM PRESSURE RELEASE PROCEDURE—WITHOUT PRESSURE TEST	14-11	POWER STEERING PUMP—INITIAL OPERATION	19-5
PARK LAMP RELAYS, AUTO HEADLAMP	8Q-7	PORT, FUEL SYSTEM PRESSURE RELEASE PROCEDURE—WITH PRESSURE TEST	14-11	POWER STEERING SYSTEM DIAGNOSIS CHARTS	19-2
PARK LAMP SWITCH SENSE	8W-45-2	PORTS, REFRIGERANT SYSTEM SERVICE	24-9	POWER SUNROOF; 8W-64 POWER SUNROOF	8W-64-1
PARK LOCK	21-36	POSITION SENSOR, CAMSHAFT; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-3	POWER SUNROOF; BODY	23-7
PARKING BRAKE	5-10	POSITION SENSOR, CAMSHAFT; FUEL SYSTEM	14-57	POWER WINDOW MOTOR	8S-2,8S-4,8S-6
PARKING BRAKE CABLE, FRONT	5-22	POSITION SENSOR, CAMSHAFT; IGNITION SYSTEM	8D-16,8D-4,8D-8	POWER WINDOW SWITCH	8S-1,8S-4,8S-5
PARKING BRAKE CABLE, REAR	5-22	POSITION SENSOR, CRANKSHAFT; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-3	POWER WINDOW SYSTEM	8S-1,8S-2
PARKING BRAKE CABLE TENSIONER	5-32	POSITION SENSOR, CRANKSHAFT; FUEL SYSTEM	14-57	POWER WINDOWS	8W-60-1
PARKING BRAKE CAM AND LEVER	5-24	POSITION SENSOR, THROTTLE; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-3	POWERTRAIN CONTROL MODULE (PCM); FUEL SYSTEM	14-28,14-56
PARKING BRAKE HAND LEVER	5-21	POSITION SENSOR, THROTTLE; IGNITION SYSTEM	8D-17,8D-4	POWERTRAIN CONTROL MODULE (PCM); IGNITION SYSTEM	8D-21,8D-2
PARKING BRAKES	5-5	POSITION SENSOR (TPS)—4.0L ENGINE, THROTTLE	14-51,14-54	POWERTRAIN CONTROL MODULE (PCM); VEHICLE SPEED CONTROL SYSTEM	8H-2,8H-7
PARKING BRAKESHOE	5-32	POSITION SENSOR (TPS)—4.0L ENGINE—PCM INPUT, THROTTLE	14-34	POWER-UP MODE	8Q-2
PARKING BRAKESHOES	5-23	POSITION SENSOR (TPS)—5.2L ENGINE, THROTTLE	14-51,14-54	PRE-ALIGNMENT INSPECTION	2-1
PARKING LAMP	8L-13	POSITION SENSOR (TPS)—5.2L ENGINE—PCM INPUT, THROTTLE	14-34	PRECAUTIONS	3-2
PARKING LAMP BULB	8L-10	POSITION SENSOR—4.0L ENGINE, CRANKSHAFT	8D-15,8D-3,8D-8	PRECAUTIONS AND WARNINGS, SAFETY	23-1
PARKING LAMPS	8W-50-1	POSITION SENSOR—4.0L ENGINE—PCM INPUT, CRANKSHAFT	14-31	PRECAUTIONS, SAFETY; BODY	23-4
PARK/NEUTRAL POSITION SWITCH	21-33,21-9	POSITION SENSOR—5.2L ENGINES, CRANKSHAFT	8D-15,8D-8	PRECAUTIONS, SAFETY; LAMPS	8L-1
PARK/NEUTRAL SWITCH—PCM INPUT, TRANSMISSION	14-34	POSITION SENSOR—5.2L ENGINES—PCM INPUT, CRANKSHAFT	14-30	PRECAUTIONS, SERVICE WARNINGS	24-3
PARTS AND LUBRICANT RECOMMENDATIONS	0-1	POSITION SENSOR—5.2L V-8 ENGINE, CRANKSHAFT	8D-3	PRELIMINARY CHECKS	7-14
PASSENGER'S AIRBAG REAR MOUNTING BRACKET	8M-7	POSITION SENSOR—PCM INPUT, CAMSHAFT	14-30	PRELIMINARY DIAGNOSIS	21-9
PATTERN ANALYSIS, BACKLASH AND CONTACT	3-36	POSITION SENSORS, CAMSHAFT AND CRANKSHAFT	14-49	PRELOAD AND GEAR LASH, DIFFERENTIAL BEARING	3-67,3-99
PATTERNS, TIRE WEAR	22-3	POSITION SWITCH, PARK/NEUTRAL	21-33,21-9	PREPARATION, HEADLAMP ALIGNMENT	8L-6
PCV VALVE TEST—5.2L ENGINE	25-18	POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM—5.2L ENGINE	25-15	PRESSURE CAP, RADIATOR	7-5
PEDAL, ACCELERATOR	14-21	POWER AMPLIFIER AND SPEAKERS	8W-47-1	PRESSURE CURVES, GOVERNOR	21-6
PEDAL, BRAKE	5-14,5-2	POWER ANTENNA—EXPORT ONLY	8W-47-2	PRESSURE CUT-OFF SWITCH, HIGH	24-25,24-32,24-7
PERFORMANCE, A/C	24-9	POWER BRAKE BOOSTER	5-15,5-2	PRESSURE CYCLING CLUTCH SWITCH, LOW	24-25,24-35,24-7
PERFORMANCE, COOLANT	7-5	POWER DOOR LOCKS	8W-61-1	PRESSURE, ENGINE OIL	9-11
PERFORMANCE, ENGINE	9-2	POWER GROUND	14-35	PRESSURE FOR HIGH—SPEED OPERATION, TIRE	22-3
PERFORMANCE, HEATER	24-12	POWER LIFTGLASS RELEASE SYSTEM	8P-1,8P-5	PRESSURE, FUEL SYSTEM	14-23
PIN REPLACEMENT, CAMSHAFT	9-38	POWER LOCK MOTOR	8P-3,8P-4,8P-6	PRESSURE GAUGE, OIL; 8W-40 INSTRUMENT CLUSTER	8W-40-2
PINION GEAR	3-27,3-57,3-88	POWER LOCK SWITCH	8P-2	PRESSURE GAUGE, OIL; INSTRUMENT PANEL SYSTEMS	8E-10,8E-5
PINION GEAR DEPTH	3-65,3-97	POWER LOCK SYSTEM	8P-1	PRESSURE GAUGES	22-3
PINION GEAR DEPTH INFORMATION	3-16	POWER LOCK/REMOTE KEYLESS ENTRY SYSTEM	8P-4	PRESSURE LEAK DOWN TEST, FUEL	14-8
PINION GEAR DEPTH VARIANCE	3-17,3-66,3-98	POWER LUMBAR ADJUSTER/MOTOR	8R-4,8R-6	PRESSURE LEAKAGE TEST, CYLINDER COMBUSTION	9-9
PINION MEASUREMENT, DIFFERENTIAL	3-33	POWER LUMBAR ADJUSTER/MOTORS	8R-2	PRESSURE (MAP) SENSOR, MANIFOLD ABSOLUTE	8D-17,8D-4
PINION SEAL REPLACEMENT	3-22			PRESSURE (MAP) SENSOR TEST—4.0L ENGINE, MANIFOLD ABSOLUTE	14-47
PINION SHAFT SEAL REPLACEMENT	3-51,3-82			PRESSURE (MAP) SENSOR TEST—5.2L ENGINES, MANIFOLD ABSOLUTE	14-46
PIPE—4.0/5.2L ENGINES, EXHAUST	11-4			PRESSURE (MAP) SENSOR—4.0L ENGINE, MANIFOLD ABSOLUTE	14-56
PISTON AND CONNECTING ROD ASSEMBLY	9-53,9-70,9-78				
PISTON AND WORM SHAFT, RACK	19-15				
PISTON FITTING	9-18				
PISTON, FRONT SERVO	21-79				
PISTON, REAR SERVO	21-79				
PISTON RING FITTING	9-19				
PISTON RINGS, FITTING	9-57				
PISTONS AND CONNECTING RODS	9-42				
PISTONS, FITTING	9-57				
PITMAN ARM	19-29				
PITMAN SHAFT	19-10				
PITMAN SHAFT SEALS AND BEARING	19-17				
PITMAN SHAFT SEALS (IN VEHICLE)	19-10				
PIVOTS, WIPER LINKAGE	8K-11,8K-2				
PLANETARY GEARTRAIN	21-122				
PLANETARY GEARTRAIN/OUTPUT SHAFT	21-87				
PLASTIGAGE, MEASURING WITH	9-3				
PLATE, BODY CODE	Intro-2				
PLATE, FRONT DOOR SCUFF	23-33				

Description	Group-Page	Description	Group-Page	Description	Group-Page
PRESSURE (MAP) SENSOR—4.0L ENGINE—PCM INPUT, MANIFOLD ABSOLUTE	14-33	PUMP CAPACITY TEST, FUEL	14-8	READING LAMP BULB	8L-11
PRESSURE (MAP) SENSOR—5.2L ENGINES, MANIFOLD ABSOLUTE	14-56	PUMP, EVAPORATIVE SYSTEM LEAK DETECTION	8W-30-3	READING LAMP BULB, OVERHEAD CONSOLE	8L-11
PRESSURE (MAP) SENSOR—5.2L ENGINES—PCM INPUT, MANIFOLD ABSOLUTE	14-33	PUMP, FUEL	14-3	READING/COURTESY LAMP BULBS	8V-7
PRESSURE, OIL PUMP	9-16,9-53	PUMP INLET STRAINER, FUEL	14-18	READING/COURTESY LAMPS	8V-2
PRESSURE REGULATOR, FUEL	14-16,14-4	PUMP INSPECTION, WATER	7-47	REAR AXLE	3-82
PRESSURE RELEASE PROCEDURE—WITHOUT PRESSURE TEST PORT, FUEL SYSTEM	14-11	PUMP (LDP), LEAK DETECTION	25-19,25-20	REAR AXLE ALIGNMENT	3-47,3-78
PRESSURE RELEASE PROCEDURE—WITH PRESSURE TEST PORT, FUEL SYSTEM	14-11	PUMP (LDP)—4.0L CALIFORNIA EMISSIONS PACKAGE, LEAK DETECTION	25-15	REAR BAND ADJUSTMENT	21-128
PRESSURE RELIEF VALVE, HIGH	24-32,24-7	PUMP LEAKAGE DIAGNOSIS	19-5	REAR BEARING, OUTPUT SHAFT	21-34
PRESSURE RELIEF/ROLLOVER VALVE	25-13, 25-20	PUMP — 4.0L, POWER STEERING	19-6	REAR BUMPER	13-2
PRESSURE SENSOR, GOVERNOR	8W-31-1	PUMP — 5.2L, POWER STEERING	19-6	REAR BUMPER FASCIA	13-2
PRESSURE SENSOR, GOVERNOR SOLENOID	21-36	PUMP MODULE, FUEL; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-2	REAR CLUTCH	21-122,21-85
PRESSURE SENSOR, MANIFOLD ABSOLUTE	8W-30-4	PUMP MODULE, FUEL; FUEL SYSTEM	14-17, 14-3	REAR DISC BRAKE CALIPER	5-19,5-30
PRESSURE SENSOR, OIL	8W-30-4	PUMP MOTOR RELAY, ABS	8W-35-1	REAR DISC BRAKE ROTOR	5-10,5-21
PRESSURE SENSOR—PCM INPUT, TRANSMISSION GOVERNOR	14-34	PUMP, OIL	9-44,9-71,9-77,9-78	REAR DISC BRAKES	5-4
PRESSURE TEST, CYLINDER COMPRESSION	9-8	PUMP, POWER STEERING	19-4,19-8	REAR DISC BRAKESHOES	5-20
PRESSURE TEST, HYDRAULIC	21-13	PUMP PRESSURE, OIL	9-16,9-53	REAR DOOR	23-27
PRESSURE TEST PORT, FUEL PUMP		PUMP PRESSURE TEST—5.2L ENGINES WITHOUT PRESSURE TEST PORT, FUEL	14-7	REAR DOOR HINGE	23-28
PRESSURE TEST—5.2L ENGINES WITHOUT	14-7	PUMP PRESSURE TEST—5.2L ENGINES WITH PRESSURE TEST PORT, FUEL	14-7	REAR DOOR INNER BELT SEAL	23-29
PRESSURE TEST PORT, FUEL PUMP		PUMP PRESSURE TEST—4.0L ENGINE, FUEL	14-6	REAR DOOR INSIDE HANDLE ACTUATOR	23-29
PRESSURE TEST—5.2L ENGINES WITH	14-7	PUMP PULLEY	19-7	REAR DOOR LATCH	23-29
PRESSURE TEST PORT, FUEL SYSTEM		PUMP RELAY, FUEL; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-2	REAR DOOR LATCH STRIKER	23-29
PRESSURE RELEASE PROCEDURE—WITHOUT	14-11	PUMP RELAY, FUEL; FUEL SYSTEM	14-16,14-52	REAR DOOR OPENING WEATHERSTRIP	23-30
PRESSURE TEST PORT, FUEL SYSTEM		PUMP RELAY-PCM OUTPUT, FUEL	14-37	REAR DOOR OUTER BELT SEAL	23-29
PRESSURE RELEASE PROCEDURE—WITHOUT	14-11	PUMP RELAYS, ASD AND FUEL	14-46	REAR DOOR OUTSIDE HANDLE	23-28
PRESSURE TEST—5.2L ENGINES WITHOUT PRESSURE TEST PORT, FUEL PUMP	14-7	PUMP RESERVOIR, TC-SERIES	19-7	REAR DOOR SCUFF PLATE	23-34
PRESSURE TESTING RADIATOR CAP	7-23	PUMP TESTS, WATER	7-9	REAR DOOR TRIM PANEL	23-27
PRESSURE TEST—5.2L ENGINES WITH PRESSURE TEST PORT, FUEL PUMP	14-7	PUMP, WATER	7-6	REAR DOOR WINDOW GLASS	23-30
PRESSURE TEST—4.0L ENGINE, FUEL PUMP	14-6	PUMP—INITIAL OPERATION, POWER STEERING	19-5	REAR DOOR WINDOW REGULATOR	23-30
PRESSURE WARNING CHIME, LOW OIL	8W-45-2	PUMPS AND RESERVOIR, WASHER	8K-13	REAR GLASS HEATING GRID	8N-1,8N-3
PRESSURES, TIRE INFLATION	22-2	PUMPS, WASHER	8K-4	REAR GLASS HEATING GRID REPAIRS	8N-5
PROBLEMS, TROUBLESHOOTING		PURGE SOLENOID, DUTY CYCLE EVAP CANISTER; EMISSION CONTROL SYSTEMS	25-14	REAR LICENSE PLATE LAMPS AND SIDE MARKER LAMPS, TAIL LAMPS	8W-51-1
WIRING	8W-01-6	PURGE SOLENOID, DUTY CYCLE EVAP CANISTER; FUEL SYSTEM	14-56	REAR MAIN OIL SEALS	9-43
PROCEDURE—WITHOUT PRESSURE TEST PORT, FUEL SYSTEM PRESSURE RELEASE	14-11	PURGE SOLENOID, EVAPORATIVE CANISTER	25-19	REAR MOUNTING BRACKET, PASSENGER'S AIRBAG	8M-7
PROCEDURE—WITH PRESSURE TEST PORT, FUEL SYSTEM PRESSURE RELEASE	14-11	PURGE SOLENOID VALVE-PCM OUTPUT, DUTY CYCLE EVAP	14-36	REAR OIL SEALS, CRANKSHAFT	9-72
PRODUCTS, AFTER MARKET PAINT REPAIR	23-3	PUSH RODS, ROCKER ARMS	9-30,9-48,9-61	REAR PARKING BRAKE CABLE	5-22
PROGRAMMING, REMOTE KEYLESS ENTRY TRANSMITTER	8P-5	PUSH-BUTTON MODULE	8V-7	REAR PROPELLER SHAFT	3-8
PROPELLER SHAFT	3-14	QUARTER TRIM PANELS	23-34	REAR SEAT BACK COVER	23-14
PROPELLER SHAFT ANGLE MEASUREMENT	3-6	QUARTER WINDOW APPLIQUE/AIR EXHAUSTER	23-45	REAR SEAT BACK WITH CHILD SEAT	23-37
PROPELLER SHAFT, FRONT	3-1,3-7	QUARTER WINDOW GLASS	23-6	REAR SEAT CUSHION	23-36
PROPELLER SHAFT, REAR	3-8	QUICK FILL VALVE	21-7	REAR SEAT CUSHION COVER	23-14
PROPELLER SHAFTS	3-1	QUICK-CONNECT FITTINGS	14-12,14-6	REAR SEATBACK	23-36
PROPORTIONAL STEERING CONTROL MODULE, SPEED; 8W-65 SPEED	8W-65-1	RACK, LUGGAGE	23-45	REAR SERVO	21-120
PROPORTIONAL STEERING CONTROL MODULE, SPEED; STEERING	19-25,19-27	RACK PISTON AND WORM SHAFT	19-15	REAR SERVO PISTON	21-79
PROPORTIONAL STEERING SOLENOID, SPEED; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1	RADIAL-PLY TIRES	22-2	REAR SHOULDER/LAP BELT/BUCKLE	23-35
PROPORTIONAL STEERING SOLENOID, SPEED; STEERING	19-25	RADIATOR	7-35,7-47,7-2	REAR SUSPENSION	2-13
PROPORTIONAL STEERING, SPEED	19-25,19-26	RADIATOR CAP	7-47	REAR TOW HOOK	13-4
PULLEY, PUMP	19-7	RADIATOR CAP, PRESSURE TESTING	7-23	REAR WHEEL SPEED SENSOR	5-42
PUMP 4.0L ENGINE, WATER	7-27	RADIATOR CAP-TO-FILLER NECK SEAL—PRESSURE RELIEF CHECK	7-23	REAR WINDOW DEFOGGER	8W-48-1
PUMP 5.2L ENGINE, WATER	7-29	RADIATOR COOLANT FLOW CHECK	7-21	REAR WIPER AND WASHER SYSTEM	8K-1
PUMP AND REACTION SHAFT SUPPORT, OIL	21-120,21-79	RADIATOR PRESSURE CAP	7-5	REAR WIPER/WASHER	8W-53-1
PUMP BYPASS HOSE, WATER	7-39	RADIO	8F-5,8F-8	REARVIEW MIRROR	23-38
PUMP BYPASS HOSE—5.2L V-8 ENGINE, WATER	7-2	RADIO FREQUENCY INTERFERENCE	8F-7	REARVIEW MIRROR SUPPORT BRACKET	23-38
		RADIO ILLUMINATION	8W-47-1	RECEIVER, REMOTE KEYLESS ENTRY	8P-3
		RADIO MEMORY	8W-47-1	RECIRCULATING AIR DOOR	24-44
		RADIO NOISE SUPPRESSION	8F-3	RECIRCULATING AIR DOOR ACTUATOR	24-40
		RADIO REMOTE SWITCHES	8W-47-2	RECIRCULATION DOOR MOTOR—AUTOMATIC TEMPERATURE CONTROL	8W-42-3
		RADIO, SPEAKERS—STANDARD	8W-47-1	RECLINER ADJUSTER/MOTOR, POWER	8R-4,8R-6
		RADIO SWITCHES, REMOTE	8F-2,8F-5,8F-8	RECLINER ADJUSTER/MOTORS, POWER	8R-2
		RADIOS	8F-1	RECOMMENDATIONS, HOISTING	0-10
		RAIL, FUEL	14-5	RECOMMENDATIONS, PARTS AND LUBRICANT	0-1
		RAIL—4.0L ENGINE, FUEL INJECTOR	14-19	RECOMMENDATIONS, TOWING	0-9
		RAIL—5.2L ENGINES, FUEL INJECTOR	14-18	RECOMMENDED FLUID	21-4
		RANGE GEAR, INPUT AND LOW	21-187	RECOMMENDED LUBRICANT AND FILL LEVEL	21-147,21-170,21-172
		RATINGS, BATTERY SIZE	8A-2	RECOVERY, REFRIGERANT	24-26
		RATINGS, GENERATOR	8C-8	RED BRAKE WARNING LAMP	5-2,5-8
		RATIOS, TRANSMISSION GEAR	21-4	REFERENCES, TORQUE	Intro-4
		RE, 42/44	21-143	REFRIGERANT	24-8
		RE TRANSMISSION, 42/44	21-2	REFRIGERANT LINE COUPLERS	24-29,24-8
		REACTION SHAFT SUPPORT, OIL PUMP	21-120,21-79	REFRIGERANT LINES	24-8
				REFRIGERANT OIL	24-8
				REFRIGERANT OIL LEVEL	24-27
				REFRIGERANT RECOVERY	24-26
				REFRIGERANT SYSTEM CHARGE	24-26
				REFRIGERANT SYSTEM EVACUATE	24-26
				REFRIGERANT SYSTEM LEAKS	24-26
				REFRIGERANT SYSTEM SERVICE EQUIPMENT	24-8
				REFRIGERANT SYSTEM SERVICE PORTS	24-9
				REGULATOR, FRONT DOOR WINDOW	23-26
				REGULATOR, FUEL PRESSURE	14-16,14-4
				REGULATOR, REAR DOOR WINDOW	23-30

Description	Group-Page	Description	Group-Page	Description	Group-Page
REGULATOR, VOLTAGE	8C-2	RESERVOIR, WASHER PUMPS	8K-13	SEAT BELT REMINDER LAMP	8E-16,8E-8
REINFORCEMENT (GOR), GRILLE		RESISTANCE, SPARK PLUG CABLE	8D-25	SEAT BELT SWITCH	8W-45-2
OPENING	23-18	RESISTANCE TESTS, CHARGING SYSTEM	8C-3	SEAT CONTROL MODULE, HEATED	8N-7,8N-9
RELAY, ABS MAIN	8W-35-1	RESISTOR, BLOWER MOTOR	24-23,24-5	SEAT CUSHION COVER, BUCKET	23-13
RELAY, ABS PUMP MOTOR	8W-35-1	RESISTOR/POWER MODULE, BLOWER		SEAT CUSHION COVER, REAR	23-14
RELAY, AUTO HEADLAMP	8Q-3	MOTOR	24-38	SEAT CUSHION, REAR	23-36
RELAY, AUTOMATIC SHUT DOWN (ASD)	8W-30-1	RIGHT INSTRUMENT PANEL MODULE,		SEAT ELEMENT, HEATED	8N-9
RELAY, AUTOMATIC SHUTDOWN (ASD);		LOWER	8E-25	SEAT ELEMENTS AND SENSOR, HEATED	8N-8
FUEL SYSTEM	14-52	RIGHT SWITCH POD	8E-24	SEAT, FRONT BUCKET	23-35
RELAY, AUTOMATIC SHUTDOWN (ASD);		RING FITTING, PISTON	9-19	SEAT MODULE, CHILD	23-37
IGNITION SYSTEM	8D-15,8D-3	RING GEAR	3-55,3-87	SEAT MODULE, MEMORY	8R-1,8R-6
RELAY, COMPRESSOR CLUTCH	24-24,24-6	RINGS, FITTING PISTON	9-57	SEAT, REAR SEAT BACK WITH CHILD	23-37
RELAY, DEFOGGER	8N-2,8N-4,8N-6	ROAD TEST	8H-2	SEAT SENSOR, HEATED	8N-9
RELAY, ELECTRONIC FLASHER	8W-52-1	ROAD TEST, ANALYZING	21-12	SEAT SWITCH, HEATED	8N-7,8N-8,8N-9
RELAY, FUEL PUMP; 8W-30 FUEL/		ROAD TESTING	21-12	SEAT SWITCH, POWER	8R-2,8R-3,8R-5
IGNITION SYSTEMS	8W-30-2	ROCKER ARMS AND PUSH		SEAT SYSTEM, HEATED	8N-8
RELAY, FUEL PUMP; FUEL SYSTEM	14-16,14-52	RODS	9-30,9-48,9-61	SEAT SYSTEM, POWER	8R-3
RELAY, HIGH SPEED BLOWER		ROD ASSEMBLY, PISTON AND		SEAT TRACK, BUCKET	23-13
MOTOR	24-25,24-38,24-7	CONNECTING	9-53,9-70,9-78	SEATBACK, REAR	23-36
RELAY, HORN; HORN SYSTEMS	8G-1,8G-2,8G-3	ROD BEARINGS, FITTING		SEATS	23-12
RELAY, HORN; VEHICLE THEFT/		CONNECTING	9-21,9-57	SEATS, HEATED; 8W-63 POWER SEAT	8W-63-2
SECURITY SYSTEMS	8Q-3,8Q-7	ROD, TIE	19-28	SEATS, HEATED; ELECTRICALLY HEATED	
RELAY, INTERMITTENT WIPE	8K-11,8K-3,8K-7	RODS, PISTONS AND CONNECTING	9-42	SYSTEMS	8N-7
RELAY, PARK LAMP	8Q-3	RODS, ROCKER ARMS AND		SEATS, MEMORY	8W-63-2
RELAY SENSE—PCM INPUT, AUTOMATIC		PUSH	9-30,9-48,9-61	SEATS, POWER	8W-63-1
SHUTDOWN (ASD)	14-29	ROTATION	22-6	SECTION IDENTIFICATION	8W-01-1
RELAY, STARTER	8B-2,8B-8	ROTOR, DISC BRAKE	5-19	SECURITY SYSTEM OPERATION,	
RELAY TEST, AUTOMATIC SHUTDOWN		ROTOR, DISTRIBUTOR	8D-7	VEHICLE THEFT	8W-39-1
(ASD)	8D-5	ROTOR, FRONT DISC BRAKE	5-9	SECURITY SYSTEM, VEHICLE THEFT	8Q-3
RELAY, TRANSMISSION CONTROL	8W-31-1	ROTOR MACHINING, DISC	5-12	SELECT SWITCH, A/C	8W-45-1
RELAY—PCM OUTPUT, AIR		ROTOR, REAR DISC BRAKE	5-10,5-21	SELECTION-ADDITIVES, COOLANT	7-5
CONDITIONING (A/C) CLUTCH	14-35	ROUTINE COOLANT LEVEL CHECK	7-24	SENDING UNIT, FUEL GAUGE	14-4,14-9
RELAY—PCM OUTPUT, AUTO		ROUTING, SYSTEM COOLANT	7-2	SENSE, IGNITION SWITCH	8W-45-2
SHUTDOWN (ASD)	14-36	RUN CHANNEL WEATHERSTRIP, FRONT		SENSE, PARK LAMP SWITCH	8W-45-2
RELAY—PCM OUTPUT, TRANSMISSION	14-39	DOOR	23-26	SENSE—PCM INPUT, AUTOMATIC	
RELAY-PCM OUTPUT, FUEL PUMP	14-37	RUNNING LAMP DIAGNOSIS, DAYTIME	8L-4	SHUTDOWN (ASD) RELAY	14-29
RELAYS	8Q-3	RUNNING LAMP SYSTEM, DAYTIME	8L-17	SENSE—PCM INPUT, IGNITION CIRCUIT	14-32
RELAYS, ABS SYSTEM	5-38	RUNNING LAMPS MODULE, DAYTIME	8W-50-2	SENSITIVE DEVICES, ELECTROSTATIC	
RELAYS, ASD AND FUEL PUMP	14-46	RUNNING LIGHT MODULE, DAYTIME	8L-17	DISCHARGE (ESD)	8W-01-5
RELAYS, AUTO HEADLAMP AND PARK		RUNOUT	3-5	SENSOR, AMBIENT TEMPERATURE;	
LAMP	8Q-7	RUNOUT SPECIFICATIONS	3-5	8W-42 AIR CONDITIONING/HEATER	8W-42-2
RELEASE CABLE, HOOD	23-19	RUNOUT, TIRE AND WHEEL	22-9	SENSOR, AMBIENT TEMPERATURE;	
RELEASE PROCEDURE—WITHOUT		SAFETY CERTIFICATION LABEL, VEHICLE	Intro.-2	8W-45 BODY CONTROL MODULE	8W-45-1
PRESSURE TEST PORT, FUEL SYSTEM		SAFETY LATCH STRIKER	23-20	SENSOR, AMBIENT TEMPERATURE;	
PRESSURE	14-11	SAFETY PRECAUTIONS; BODY	23-4	HEATING AND AIR CONDITIONING	24-35,24-5
RELEASE PROCEDURE—WITH PRESSURE		SAFETY PRECAUTIONS; LAMPS	8L-1	SENSOR, AMBIENT TEMPERATURE;	
TEST PORT, FUEL SYSTEM PRESSURE	14-11	SAFETY PRECAUTIONS AND WARNINGS	23-1	OVERHEAD CONSOLE SYSTEMS	8V-7
RELEASE SYSTEM, POWER		SANDING, BUFFING, AND POLISHING,		SENSOR, AUTO HEADLAMP	8L-17
LIFTGLASS	8P-1,8P-5	WET	23-2	SENSOR, BATTERY TEMPERATURE;	
RELIEF CHECK, RADIATOR CAP-TO-		SCAN TOOL, DRB	7-9	8W-30 FUEL/IGNITION SYSTEMS	8W-30-2
FILLER NECK SEAL—PRESSURE	7-23	SCHEDULE—A	0-3	SENSOR, BATTERY TEMPERATURE;	
RELIEF VALVE, HIGH PRESSURE	24-32,24-7	SCHEDULE—B	0-5	CHARGING SYSTEM	8C-2,8C-6,8C-8
RELIEF/ROLLOVER VALVE,		SCHEDULES, MAINTENANCE	0-3	SENSOR, CAMSHAFT POSITION; 8W-30	
PRESSURE	25-13,25-20	SCHEMATICS, HYDRAULIC	21-129	FUEL/IGNITION SYSTEMS	8W-30-3
REMINDER LAMP, SEAT BELT	8E-16,8E-8	SCHEMATICS, VACUUM	25-19	SENSOR, CAMSHAFT POSITION; FUEL	
REMOTE KEYLESS ENTRY	8W-61-1	SCREEN, COWL GRILLE	23-20	SYSTEM	14-57
REMOTE KEYLESS ENTRY RECEIVER	8P-3	SCREEN, HEADLAMP ADJUSTMENT		SENSOR, CAMSHAFT POSITION;	
REMOTE KEYLESS ENTRY SYSTEM	8P-1	USING ALIGNMENT	8L-6	IGNITION SYSTEM	8D-16,8D-4,8D-8
REMOTE KEYLESS ENTRY		SCUFF PLATE, FRONT DOOR	23-33	SENSOR, CRANKSHAFT POSITION;	
TRANSMITTER	8P-3,8P-5	SCUFF PLATE, REAR DOOR	23-34	8W-30 FUEL/IGNITION SYSTEMS	8W-30-3
REMOTE KEYLESS ENTRY		SEAL AND BEARING, AXLE SHAFT	3-53,3-84	SENSOR, CRANKSHAFT POSITION; FUEL	
TRANSMITTER BATTERY		SEAL AND SPRING, VALVE STEM	9-30	SYSTEM	14-57
REPLACEMENT	8P-5	SEAL, FRONT CRANKSHAFT OIL	9-71	SENSOR, ENGINE COOLANT	
REMOTE KEYLESS ENTRY		SEAL, FRONT DOOR INNER BELT	23-25	TEMPERATURE; 8W-30 FUEL/IGNITION	
TRANSMITTER PROGRAMMING	8P-5	SEAL, FRONT DOOR OUTER BELT	23-25	SYSTEMS	8W-30-3
REMOTE RADIO SWITCHES	8F-2,8F-5,8F-8	SEAL, REAR DOOR INNER BELT	23-29	SENSOR, ENGINE COOLANT	
REMOTE SWITCHES, RADIO	8W-47-2	SEAL, REAR DOOR OUTER BELT	23-29	TEMPERATURE; IGNITION	
REPAIR, ALUMINUM THREAD	21-31	SEAL REPLACEMENT, INNER AXLE		SYSTEM	8D-17,8D-4,8D-9
REPAIR DAMAGED OR WORN THREADS	9-4	SHAFT OIL	3-27	SENSOR, FRONT WHEEL SPEED	5-41
REPAIR PRODUCTS, AFTER MARKET		SEAL REPLACEMENT, PINION	3-22	SENSOR, FUEL LEVEL	14-18
PAINT	23-3	SEAL REPLACEMENT, PINION SHAFT	3-51,3-82	SENSOR, GOVERNOR PRESSURE	8W-31-1
REPAIR, WIRING	8W-01-7	SEAL REPLACEMENT, YOKE	21-33	SENSOR, GOVERNOR SOLENOID AND	
REPAIRING LEAKS	22-7	SEAL REPLACEMENT-IN VEHICLE, VALVE		PRESSURE	21-36
REPAIR-MOLEX CONNECTORS,		SPRING AND STEM	9-62	SENSOR, HEATED SEAT	8N-9
TERMINAL/CONNECTOR	8W-01-7	SEAL, TIMING CASE COVER OIL	9-44	SENSOR, HEATED SEAT ELEMENTS	8N-8
REPAIR—THOMAS AND BETTS		SEAL—PRESSURE RELIEF CHECK,		SENSOR, IN-CAR TEMPERATURE	8W-42-2
CONNECTORS, TERMINAL/CONNECTOR	8W-01-8	RADIATOR CAP-TO-FILLER NECK	7-23	SENSOR, INTAKE AIR TEMPERATURE	8W-30-4
REPAIRS, REAR GLASS HEATING GRID	8N-5	SEALS AND BEARING, PITMAN SHAFT	19-17	SENSOR, INTAKE MANIFOLD AIR	
REPLACEMENT/ADJUSTMENT, BELT	7-43	SEALS, CRANKSHAFT REAR OIL	9-72	TEMPERATURE	8D-17,8D-4,8D-9
REPLACEMENT-IN VEHICLE, VALVE		SEALS (IN VEHICLE), PITMAN SHAFT	19-10	SENSOR, IN-VEHICLE	
SPRING AND STEM SEAL	9-62	SEALS, REAR MAIN OIL	9-43	TEMPERATURE	24-36,24-7
REQUIREMENTS, FUEL	14-1	SEALS, TRANSFER CASE BEARINGS	21-174	SENSOR, LOW WASHER FLUID LEVEL	8W-53-1
RESERVE/OVERFLOW SYSTEM,		SEAT ADJUSTER/MOTORS,		SENSOR, MANIFOLD ABSOLUTE	
COOLANT	7-2	POWER	8R-2,8R-4,8R-5	PRESSURE	8W-30-4
RESERVOIR, MASTER CYLINDER	5-27	SEAT BACK, BUCKET	23-12	SENSOR, MANIFOLD ABSOLUTE	
RESERVOIR, TC-SERIES PUMP	19-7	SEAT BACK COVER, BUCKET	23-12	PRESSURE (MAP)	8D-17,8D-4
RESERVOIR, VACUUM	8H-2,8H-9	SEAT BACK COVER, REAR	23-14	SENSOR, MAP	8D-8
RESERVOIR, WASHER	8K-4	SEAT BACK WITH CHILD SEAT, REAR	23-37	SENSOR (O2S)—PCM INPUT, OXYGEN	14-32

Description	Group-Page	Description	Group-Page	Description	Group-Page
SENSOR, OIL PRESSURE	8W-30-4	SENSORS, AIRBAG IMPACT	8W-43-1	SIGNAL AND SIDE MARKER LAMP	
SENSOR, OUTPUT SHAFT SPEED	8W-31-1	SENSORS AND TONE WHEEL, WHEEL		BULB, TURN	8L-10
SENSOR, REAR WHEEL SPEED	5-42	SPEED	5-37	SIGNAL AND SIDE MARKER LAMP,	
SENSOR, SOLAR; 8W-42 AIR		SENSORS, CAMSHAFT AND		TURN	8L-14
CONDITIONING/HEATER	8W-42-2	CRANKSHAFT POSITION	14-49	SIGNAL, BACK-UP AND SIDE MARKER	
SENSOR, SOLAR; HEATING AND AIR		SENSORS, HEATED OXYGEN	8W-30-2	LAMP BULBS, TAIL, STOP, TURN	8L-10
CONDITIONING	24-36,24-9	SENSORS, IMPACT	8M-2,8M-7	SIGNAL, BACK-UP AND SIDE MARKER	
SENSOR, STEERING WHEEL SPEED	19-25,19-26	SENSORS, WHEEL SPEED	8W-35-1	LAMP, TAIL, STOP, TURN	8L-14
SENSOR SUPPLY—PRIMARY, FIVE VOLT	14-30	SENSORS—4.0L ENGINE, OXYGEN (O2S)	14-49	SIGNAL INDICATOR LAMPS, TURN;	
SENSOR SUPPLY—SECONDARY, FIVE		SENSORS—5.2L ENGINE, OXYGEN (O2S)	14-48	8W-40 INSTRUMENT CLUSTER	8W-40-2
VOLT	14-30	SEQUENCE, 3-4 SHIFT	21-7	SIGNAL INDICATOR LAMPS, TURN;	
SENSOR TEST—4.0L ENGINE,		SERVO CABLE	8H-2,8H-8	INSTRUMENT PANEL SYSTEMS	8E-16,8E-8
MANIFOLD ABSOLUTE PRESSURE		SERVO, FRONT	21-119	SIGNAL INDICATOR LAMPS, TURN;	
(MAP)	14-47	SERVO PISTON, FRONT	21-79	TURN SIGNAL AND HAZARD WARNING	
SENSOR TEST—5.2L ENGINES,		SERVO PISTON, REAR	21-79	SYSTEMS	8J-2
MANIFOLD ABSOLUTE PRESSURE		SERVO, REAR	21-120	SIGNAL LAMPS, TURN	8J-2
(MAP)	14-46	SERVO, SPEED CONTROL	8H-1,8H-6,8H-7	SIGNAL SYSTEM, TURN	8J-1
SENSOR, THROTTLE POSITION; 8W-30		SET LAMP	8Q-3,8Q-8	SIGNAL/HAZARD WARNING SYSTEM,	
FUEL/IGNITION SYSTEMS	8W-30-3	SHAFT ANGLE MEASUREMENT,		TURN	8J-2
SENSOR, THROTTLE POSITION;		PROPELLER	3-6	SIGNALS, TURN	8W-52-1
IGNITION SYSTEM	8D-17,8D-4	SHAFT, AXLE	3-53,3-84	SINGLE AND DOUBLE CARDAN JOINT	3-14
SENSOR (TPS)—4.0L ENGINE,		SHAFT BUSHING, DISTRIBUTOR DRIVE	9-68	SINGLE CARDAN	3-8
THROTTLE POSITION	14-51,14-54	SHAFT FRONT BEARING, OUTPUT	21-35	SIZE AND RATINGS, BATTERY	8A-2
SENSOR (TPS)—4.0L ENGINE—PCM		SHAFT, FRONT PROPELLER	3-1,3-7	SKID PLATE, FRONT	13-3
INPUT, THROTTLE POSITION	14-34	SHAFT, HUB BEARING AND AXLE	3-23	SKID PLATE, FUEL TANK	13-4
SENSOR (TPS)—5.2L ENGINE,		SHAFT OIL SEAL REPLACEMENT, INNER		SKID PLATE, TRANSFER CASE	13-4
THROTTLE POSITION	14-51,14-54	AXLE	3-27	SLIP DIFFERENTIAL, LIMITED	3-47,3-78
SENSOR (TPS)—5.2L ENGINE—PCM		SHAFT, PITMAN	19-10	SNAP, DRIVELINE	3-18,3-47,3-78
INPUT, THROTTLE POSITION	14-34	SHAFT, PLANETARY GEARTRAIN/OUTPUT	21-87	SOLAR SENSOR; 8W-42 AIR	
SENSOR, TRANSMISSION		SHAFT, PROPELLER	3-14	CONDITIONING/HEATER	8W-42-2
TEMPERATURE	8W-31-2	SHAFT, RACK PISTON AND WORM	19-15	SOLAR SENSOR; HEATING AND AIR	
SENSOR, VEHICLE SPEED; 8W-30		SHAFT REAR BEARING, OUTPUT	21-34	CONDITIONING	24-36,24-9
FUEL/IGNITION SYSTEMS	8W-30-2	SHAFT, REAR PROPELLER	3-8	SOLENOID AND PRESSURE SENSOR,	
SENSOR, VEHICLE SPEED; FUEL		SHAFT SEAL AND BEARING, AXLE	3-53,3-84	GOVERNOR	21-36
SYSTEM	14-51,14-61	SHAFT SEAL REPLACEMENT, PINION	3-51,3-82	SOLENOID ASSEMBLY, TRANSMISSION	8W-31-1
SENSOR, VEHICLE SPEED; VEHICLE		SHAFT SEALS AND BEARING, PITMAN	19-17	SOLENOID, DUTY CYCLE EVAP	
SPEED CONTROL SYSTEM	8H-2,8H-6,8H-9	SHAFT SEALS (IN VEHICLE), PITMAN	19-10	CANISTER PURGE; EMISSION	
SENSOR—4.0L ENGINE, CRANKSHAFT		SHAFT SPEED SENSOR, OUTPUT	8W-31-1	CONTROL SYSTEMS	25-14
POSITION	8D-15,8D-3,8D-8	SHAFT SPEED SENSOR—PCM INPUT,		SOLENOID, DUTY CYCLE EVAP	
SENSOR—4.0L ENGINE, ENGINE		OUTPUT	14-33	CANISTER PURGE; FUEL SYSTEM	14-56
COOLANT TEMPERATURE	14-50,14-60	SHAFT SUPPORT, OIL PUMP AND		SOLENOID, DUTY CYCLE EVAP/PURGE	8W-30-5
SENSOR—4.0L ENGINE, INTAKE		REACTION	21-120,21-79	SOLENOID, EVAPORATIVE CANISTER	
MANIFOLD AIR TEMPERATURE	14-50,14-61	SHAFT—CARDAN U-JOINT, AXLE	3-30	PURGE	25-19
SENSOR—4.0L ENGINE, MANIFOLD		SHAFTS, PROPELLER	3-1	SOLENOID, SPEED PROPORTIONAL	
ABSOLUTE PRESSURE (MAP)	14-56	SHIELD/CALIPER BRACKET/LEVER BOOT,		STEERING; 8W-65 SPEED	
SENSOR—4.0L ENGINE, OXYGEN	14-58	SPLASH	5-24	PROPORTIONAL STEERING	8W-65-1
SENSOR—4.0L ENGINE—PCM INPUT,		SHIELDS, HEAT	11-2	SOLENOID, SPEED PROPORTIONAL	
CRANKSHAFT POSITION	14-31	SHIFT INTERLOCK	8W-31-1	STEERING; STEERING	19-25
SENSOR—4.0L ENGINE—PCM INPUT,		SHIFT INTERLOCK, BRAKE		SOLENOID VALVE—PCM OUTPUT, DUTY	
ENGINE COOLANT TEMPERATURE	14-31	TRANSMISSION	21-125,21-11,21-35	CYCLE EVAP PURGE	14-36
SENSOR—4.0L ENGINE—PCM INPUT,		SHIFT INTERLOCK MECHANISM, BRAKE		SOLENOID—PCM OUTPUT, THREE-FOUR	
INTAKE MANIFOLD AIR TEMPERATURE	14-32	TRANSMISSION	21-8	SHIFT	14-38
SENSOR—4.0L ENGINE—PCM INPUT,		SHIFT LEVER	21-149	SOLENOID—PCM OUTPUT, TORQUE	
MANIFOLD ABSOLUTE PRESSURE	14-33	SHIFT LINKAGE ADJUSTMENT	21-167,21-189	CONVERTOR CLUTCH (TCC)	14-39
(MAP)		SHIFT SEQUENCE, 3-4	21-7	SOLENOID—PCM OUTPUT, VARIABLE	
SENSOR—5.2L ENGINE, ENGINE		SHIFT SOLENOID—PCM OUTPUT,		FORCE	14-39
COOLANT TEMPERATURE	14-49,14-60	THREE-FOUR	14-38	SOLENOIDS—PCM OUTPUT, SPEED	
SENSOR—5.2L ENGINE, INTAKE		SHIFT VALVE OPERATION	21-6	CONTROL	14-38
MANIFOLD AIR TEMPERATURE	14-50,14-60	SHIFTER/IGNITION INTERLOCK	8D-24	SPARE TIRE (TEMPORARY)	22-2
SENSOR—5.2L ENGINE, OXYGEN	14-57	SHIM PACK MEASUREMENT AND		SPARK AT COIL, TESTING	8D-5
SENSOR—5.2L ENGINES, CRANKSHAFT		ADJUSTMENT, DIFFERENTIAL	3-35	SPARK PLUG CABLE RESISTANCE	8D-25
POSITION	8D-15,8D-8	SHOCK ABSORBER	2-14,2-7	SPARK PLUG CABLES	8D-13,8D-3,8D-9
SENSOR—5.2L ENGINES, MANIFOLD		SHOCK DIAGNOSIS	2-14,2-7	SPARK PLUG CONDITIONS	8D-10
ABSOLUTE PRESSURE (MAP)	14-56	SHOULDER BELT/BUCKLE, FRONT	23-34	SPARK PLUGS	8D-13,8D-25,8D-3
SENSOR—5.2L ENGINES—PCM INPUT,		SHOULDER/LAP BELT/BUCKLE, REAR	23-35	SPEAKERS	8F-2,8F-5,8F-9
CRANKSHAFT POSITION	14-30	SHUT DOWN (ASD) RELAY, AUTOMATIC	8W-30-1	SPEAKERS, POWER AMPLIFIER	8W-47-1
SENSOR—5.2L ENGINES—PCM INPUT,		SHUTDOWN (ASD) RELAY, AUTOMATIC;		SPEAKERS—STANDARD RADIO	8W-47-1
ENGINE COOLANT TEMPERATURE	14-31	FUEL SYSTEM	14-52	SPECIAL TOOLS—HEADLAMP	
SENSOR—5.2L ENGINES—PCM INPUT,		SHUTDOWN (ASD) RELAY, AUTOMATIC;		ALIGNMENT	8L-8
INTAKE MANIFOLD AIR TEMPERATURE	14-32	IGNITION SYSTEM	8D-15,8D-3	SPECIAL TOOLS—NV231	21-168
SENSOR—5.2L ENGINES—PCM INPUT,		SHUTDOWN (ASD) RELAY SENSE—PCM		SPECIFICATIONS, 4.0L ENGINE	9-49
MANIFOLD ABSOLUTE PRESSURE	14-33	INPUT, AUTOMATIC	14-29	SPECIFICATIONS, ALIGNMENT	2-5
(MAP)		SHUTDOWN (ASD) RELAY TEST,		SPECIFICATIONS, LUBRICANT	3-43,3-75
SENSOR—5.2L V-8 ENGINE,		AUTOMATIC	8D-5	SPECIFICATIONS, LUBRICATION	3-15
CRANKSHAFT POSITION	8D-3	SHUTDOWN (ASD) RELAY—PCM		SPECIFICATIONS, RUNOUT	3-5
SENSOR—PCM INPUT, BATTERY		OUTPUT, AUTO	14-36	SPECIFICATIONS, TORQUE; CHARGING	
TEMPERATURE	14-29	SIDE BEARINGS, DIFFERENTIAL	3-55,3-87	SYSTEM	8C-8
SENSOR—PCM INPUT, CAMSHAFT		SIDE CLADDING, BODY	23-31	SPECIFICATIONS, TORQUE; FRAME AND	
POSITION	14-30	SIDE MARKER LAMP BULB, TURN		BUMPERS	13-11
SENSOR—PCM INPUT, FUEL LEVEL	14-30	SIGNAL	8L-10	SPECIFICATIONS, TORQUE; IGNITION	
SENSOR—PCM INPUT, OUTPUT SHAFT		SIDE MARKER LAMP BULBS, TAIL,		SYSTEM	8D-25
SPEED	14-33	STOP, TURN SIGNAL, BACK-UP	8L-10	SPECIFICATIONS, TORQUE;	
SENSOR—PCM INPUT, TRANSMISSION		SIDE MARKER LAMP, TAIL, STOP, TURN		INTRODUCTION	Intro-9
GOVERNOR PRESSURE	14-34	SIGNAL, BACK-UP	8L-14	SPECIFICATIONS, VECI LABEL; FUEL	
SENSOR—PCM INPUT, TRANSMISSION		SIDE MARKER LAMP, TURN SIGNAL	8L-14	SYSTEM	14-23,14-62
TEMPERATURE	14-34	SIDE MARKER LAMPS, TAIL LAMPS,		SPECIFICATIONS, VECI LABEL; IGNITION	
SENSOR—PCM INPUT, VEHICLE SPEED		REAR LICENSE PLATE LAMPS	8W-51-1	SYSTEM	8D-25
AND DISTANCE	14-35	SIDE VIEW MIRRORS	23-21		

Description	Group-Page	Description	Group-Page	Description	Group-Page
SPEED AND DISTANCE SENSOR—PCM INPUT, VEHICLE	14-35	STEERING GEAR LEAKAGE DIAGNOSIS, POWER	19-9	SWITCH, DOOR LOCK CYLINDER	8Q-2,8Q-4
SPEED BLOWER MOTOR RELAY, HIGH	24-25,24-38,24-7	STEERING GEAR, POWER	19-19,19-20,19-26,19-9	SWITCH, DRIVER'S AIRBAG TRIM COVER AND HORN	8M-5
SPEED CONTROL ELECTRICAL TEST	8H-6	STEERING KNUCKLE	2-8	SWITCH, FLIP-UP GLASS	23-43
SPEED CONTROL SERVO	8H-1,8H-6,8H-7	STEERING KNUCKLE AND BALL STUDS	3-24	SWITCH, GLOVE BOX LAMP	8E-26
SPEED CONTROL SOLENOIDS—PCM OUTPUT	14-38	STEERING LINKAGE	19-28,19-30	SWITCH, HEATED SEAT	8N-7,8N-8,8N-9
SPEED CONTROL SWITCHES	8H-1,8H-6,8H-8	STEERING, POWER	19-1	SWITCH, HIGH PRESSURE CUT-OFF	24-25,24-32,24-7
SPEED CONTROL SWITCHES—PCM INPUT	14-34	STEERING PUMP — 4.0L, POWER	19-6	SWITCH, HOOD	8Q-2,8Q-4
SPEED CONTROL, VEHICLE	8W-33-1	STEERING PUMP — 5.2L, POWER	19-6	SWITCH, HORN	8G-1,8G-2,8G-3
SPEED KNOCK, LOW	3-18,3-46,3-78	STEERING PUMP, POWER	19-4,19-8	SWITCH, IGNITION; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-1
SPEED PROPORTIONAL STEERING	19-25,19-26	STEERING PUMP—INITIAL OPERATION, POWER	19-5	SWITCH, IGNITION; STEERING	19-22
SPEED PROPORTIONAL STEERING CONTROL MODULE; 8W-65 SPEED		STEERING SOLENOID, SPEED PROPORTIONAL; 8W-65 SPEED	8W-65-1	SWITCH INPUT, STOP LAMP	8W-35-2
SPEED PROPORTIONAL STEERING PROPORTIONAL STEERING	8W-65-1	STEERING SOLENOID, SPEED PROPORTIONAL; STEERING	19-25	SWITCH KEY-IN HALO LAMP, COURTESY LAMPS, CARGO LAMP, IGNITION	8W-44-1
SPEED PROPORTIONAL STEERING CONTROL MODULE; STEERING	19-25,19-27	STEERING SYSTEM DIAGNOSIS CHARTS, POWER	19-2	SWITCH, LIFTGATE AJAR	8Q-2,8Q-5
SPEED PROPORTIONAL STEERING SOLENOID; 8W-65 SPEED		STEERING SYSTEM DIAGNOSIS, SUSPENSION	2-3	SWITCH, LIFTGATE COURTESY LAMP	
SPEED PROPORTIONAL STEERING SOLENOID; STEERING	19-25	STEERING WHEEL SPEED SENSOR	19-25,19-26	SWITCH, LIFTGATE LOCK CYLINDER	8Q-2,8Q-6
SPEED SENSOR, FRONT WHEEL	5-41	STEM SEAL AND SPRING, VALVE	9-30	SWITCH, LIFTGLASS AJAR	8Q-3,8Q-6
SPEED SENSOR, OUTPUT SHAFT	8W-31-1	STEM SEAL REPLACEMENT-IN VEHICLE, VALVE SPRING	9-62	SWITCH, LOW PRESSURE CYCLING CLUTCH	24-25,24-35,24-7
SPEED SENSOR, REAR WHEEL	5-42	STOP LAMP (CHMSL) BULB, CENTER HIGH MOUNTED	8L-10	SWITCH, MULTI-FUNCTION	8J-2,8J-3,8J-4
SPEED SENSOR, STEERING WHEEL	19-25,19-26	STOP LAMP (CHMSL), CENTER HIGH MOUNTED	8L-15	SWITCH, OVERDRIVE	8W-31-1
SPEED SENSOR, VEHICLE; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-2	STOP LAMP SWITCH; BRAKES	5-14,5-32,5-2,5-8	SWITCH, OVERDRIVE OFF	21-7
SPEED SENSOR, VEHICLE; FUEL SYSTEM	14-51,14-61	STOP LAMP SWITCH; VEHICLE SPEED CONTROL SYSTEM	8H-1,8H-6,8H-8	SWITCH, PARK/NEUTRAL POSITION	21-33,21-9
SPEED SENSOR, VEHICLE; VEHICLE SPEED CONTROL SYSTEM	8H-2,8H-6,8H-9	STOP LAMP SWITCH INPUT	8W-35-2	SWITCH POD BEZELS	8E-21
SPEED SENSOR—PCM INPUT, OUTPUT SHAFT	14-33	STOP LAMPS AND CHMSL LAMPS	8W-51-1	SWITCH POD, LEFT	8E-23
SPEED SENSORS AND TONE WHEEL, WHEEL	5-37	STOP, TURN SIGNAL, BACK-UP AND SIDE MARKER LAMP BULBS, TAIL	8L-10	SWITCH POD, RIGHT	8E-24
SPEED SENSORS, WHEEL	8W-35-1	STOP, TURN SIGNAL, BACK-UP AND SIDE MARKER LAMP, TAIL	8L-14	SWITCH, POWER LOCK	8P-2
SPEEDOMETER; 8W-40 INSTRUMENT CLUSTER	8W-40-1	STORAGE BIN, GARAGE DOOR OPENER	8V-2	SWITCH, POWER LUMBAR	8R-2,8R-4,8R-5
SPEEDOMETER; INSTRUMENT PANEL SYSTEMS	8E-11,8E-5	STORAGE BIN, SUNGLASSES	8V-2	SWITCH, POWER MIRROR	8T-2
SPEEDOMETER; TRANSMISSION AND TRANSFER CASE	21-172	STRAINER, FUEL PUMP INLET	14-18	SWITCH, POWER SEAT	8R-2,8R-3,8R-5
SPEEDOMETER SERVICE	21-32	STRENGTH, FASTENER	Intro-6	SWITCH, POWER WINDOW	8S-1,8S-4,8S-5
SPLASH SHIELD/CALIPER BRACKET/LEVER BOOT	5-24	STRETCH, MEASURING TIMING CHAIN	9-56	SWITCH, SEAT BELT	8W-45-2
SPICE LOCATIONS; 8W-01 GENERAL INFORMATION	8W-01-1	STRIKER, FRONT DOOR LATCH	23-25	SWITCH SENSE, IGNITION	8W-45-2
SPICE LOCATIONS; 8W-95 SPLICE LOCATIONS	8W-95-1	STRIKER, GLOVE BOX LATCH	8E-26	SWITCH SENSE, PARK LAMP	8W-45-2
SPOOL VALVE	19-14	STRIKER, HOOD LATCH	23-19	SWITCH, STOP LAMP; BRAKES	5-14,5-32,5-2,5-8
SPRING AND STEM SEAL REPLACEMENT-IN VEHICLE, VALVE	9-62	STRIKER, LIFTGATE LATCH	23-42	SWITCH, STOP LAMP; VEHICLE SPEED CONTROL SYSTEM	8H-1,8H-6,8H-8
SPRING, COIL	2-14,2-8	STRIKER, REAR DOOR LATCH	23-29	SWITCHES, RADIO REMOTE	8W-47-2
SPRING, VALVE STEM SEAL	9-30	STRIKER, SAFETY LATCH	23-20	SWITCHES, REMOTE RADIO	8F-2,8F-5,8F-8
SPRINGS, ADJUSTMENT AT AXLE WITH LEAF	3-14	STRIPES/DECALS, BODY	23-20	SWITCHES, SPEED CONTROL	8H-1,8H-6,8H-8
SPRINGS, VALVES AND VALVE	9-33,9-53,9-63	STUDS, STEERING KNUCKLE AND BALL	3-24	SWITCHES, WIPER AND WASHER	8K-12,8K-3,8K-6
SPROCKETS, TIMING CHAIN	9-35	STUDS, WHEEL MOUNTING	2-11	SWITCHES—PCM INPUT, SPEED CONTROL	14-34
SQUIB (AIRBAG IGNITER), AIRBAG	8W-43-1	SUNGLASSES STORAGE BIN	8V-2	SWITCH—PCM INPUT, BRAKE	14-30
STABILIZER BAR	2-15,2-9	SUNROOF ADJUSTMENT BRACKET	23-7	SWITCH—PCM INPUT, TRANSMISSION PARK/NEUTRAL	14-34
STALL TEST ANALYSIS	21-15	SUNROOF, POWER; 8W-64 POWER	8W-64-1	SWITCH-PCM INPUT, OVERDRIVE/OVERRIDE	14-33
STALL TEST, CONVERTER	21-15	SUNROOF, POWER; BODY	23-7	SYMBOLS	8W-01-3
STANDARD DIFFERENTIAL	3-61,3-92	SUNSHADE	23-10	SYMBOLS, INTERNATIONAL	0-1
STANDARD SERVICE INFORMATION	9-1	SUNVISOR	23-39	SYMBOLS, INTERNATIONAL CONTROL AND DISPLAY	Intro-4
START TEST, FAILURE TO	8D-6	SUPPLY TEST, VACUUM	8H-6	SYMBOLS, INTERNATIONAL VEHICLE CONTROL AND DISPLAY	Intro-3
STARTER	8B-2,8B-7	SUPPLY—PRIMARY, FIVE VOLT SENSOR	14-30	SYSTEM, ABS BRAKE	5-38
STARTER RELAY	8B-2,8B-8	SUPPLY—SECONDARY, FIVE VOLT SENSOR	14-30	SYSTEM, AIRBAG	8M-3
STARTING, HOISTING AND TOWING, JUMP	0-8	SUPPORT BRACKET, REARVIEW MIRROR	23-38	SYSTEM, ATC	24-14
STARTING PROCEDURE, JUMP	0-8	SUPPORT, LUMBAR	23-12	SYSTEM, AUDIO	8F-3
STARTING SYSTEM; 8W-21 STARTING SYSTEM	8W-21-1	SUPPORT, OIL PUMP AND REACTION SHAFT	21-120,21-79	SYSTEM, BASE BRAKE	5-1,5-5
STARTING SYSTEM; STARTING SYSTEMS	8B-1,8B-2,8B-8	SUPPORT, OVERRUNNING CLUTCH/LOW-REVERSE DRUM/REAR	21-119	SYSTEM, BLEEDING ABS BRAKE	5-38
STATE DISPLAY TEST MODE	25-2	SUPPRESSION, RADIO NOISE	8F-3	SYSTEM, BRAKE	5-2
STATIONARY GLASS	23-4	SURFACE TOUCHUP, PAINTED	23-2	SYSTEM CAPACITIES, COOLING	7-47
STEERING COLUMN	19-21,19-22	SUSPENSION AND STEERING SYSTEM DIAGNOSIS	2-3	SYSTEM CHARGE, REFRIGERANT	24-26
STEERING CONTROL MODULE, SPEED PROPORTIONAL; 8W-65 SPEED		SUSPENSION ARM, LOWER	2-14,2-8	SYSTEM, CHARGING; 8W-20 CHARGING SYSTEM	8W-20-1
STEERING CONTROL MODULE, SPEED PROPORTIONAL STEERING	8W-65-1	SUSPENSION ARM, UPPER	2-15,2-9	SYSTEM, CHARGING; CHARGING SYSTEM	8C-2
STEERING CONTROL MODULE, SPEED PROPORTIONAL; STEERING	19-25,19-27	SUSPENSION, FRONT	2-12,2-6	SYSTEM CLEANING/REVERSE FLUSHING, COOLING	7-25
STEERING DAMPENER	19-29	SUSPENSION, REAR	2-13	SYSTEM COMPONENTS, COOLING	7-2
STEERING GEAR	19-10,19-18	SWITCH, A/C SELECT	8W-45-1	SYSTEM, COOLANT RESERVE/OVERFLOW	7-2
		SWITCH, ACCELERATION	5-37,5-42	SYSTEM COOLANT ROUTING	7-2
		SWITCH AND KEY CYLINDER, IGNITION	8D-21	SYSTEM, COOLING	7-15,7-2
		SWITCH AND KEY LOCK CYLINDER, IGNITION	8D-5	SYSTEM, DAYTIME RUNNING LAMP	8L-17
		SWITCH, BLOWER MOTOR	24-23,24-6	SYSTEM, DEFOGGER	8N-1,8N-2
		SWITCH, COURTESY LAMP	8W-45-1	SYSTEM DESCRIPTION	25-1
		SWITCH, DEFOGGER	8N-2,8N-3,8N-5	SYSTEM DIAGNOSIS	14-28
		SWITCH, DOOR AJAR	8Q-2,8Q-4	SYSTEM DIAGNOSIS CHARTS, POWER STEERING	19-2
				SYSTEM DIAGNOSIS, EXHAUST	11-3

Description Group-Page

SYSTEM DIAGNOSIS, SUSPENSION AND STEERING	2-3
SYSTEM, DRAINING AND FILLING COOLING	7-24
SYSTEM EVACUATE, REFRIGERANT	24-26
SYSTEM, EVAPORATION CONTROL	25-13
SYSTEM, EXHAUST	11-1
SYSTEM FAN 4.0L ENGINE, COOLING	7-45
SYSTEM FAN 5.2L ENGINE, COOLING	7-46
SYSTEM FOR LEAKS, TESTING COOLING	7-21
SYSTEM, FUEL	14-63
SYSTEM, FUEL DELIVERY	14-3
SYSTEM, FUEL INJECTION	14-24
SYSTEM, HAZARD WARNING	8J-1
SYSTEM, HEATED SEAT	8N-8
SYSTEM HOSES, COOLING	7-6
SYSTEM, HYDRAULIC CONTROL	21-6
SYSTEM, IGNITION	8D-2
SYSTEM LAMP, ANTI-LOCK BRAKE	8E-12,8E-6
SYSTEM LEAK DETECTION PUMP, EVAPORATIVE	8W-30-3
SYSTEM LEAKS, REFRIGERANT	24-26
SYSTEM, LUBRICATION	9-16,9-54
SYSTEM, MEMORY; AUDIO SYSTEMS	8F-1
SYSTEM, MEMORY; POWER LOCK	8P-2
SYSTEM, MEMORY; POWER MIRROR	8T-1
SYSTEM, MEMORY; POWER SEAT	8R-1
SYSTEM, METRIC	Intro.-3
SYSTEM OPERATION, CHARGING	8C-1
SYSTEM OPERATION, VEHICLE THEFT SECURITY	8W-39-1
SYSTEM, POWER LIFTGLASS	8P-1,8P-5
SYSTEM, POWER LOCK	8P-1
SYSTEM, POWER LOCK/REMOTE KEYLESS ENTRY	8P-4
SYSTEM, POWER MIRROR	8T-2
SYSTEM, POWER SEAT	8R-3
SYSTEM, POWER WINDOW	8S-1,8S-2
SYSTEM PRESSURE, FUEL	14-23
SYSTEM PRESSURE RELEASE PROCEDURE—WITHOUT PRESSURE	14-11
TEST PORT, FUEL	14-11
SYSTEM PRESSURE RELEASE PROCEDURE—WITH PRESSURE TEST	14-11
PORT, FUEL	14-11
SYSTEM, REAR WIPER AND WASHER	8K-1
SYSTEM RELAYS, ABS	5-38
SYSTEM, REMOTE KEYLESS ENTRY	8P-1
SYSTEM RESISTANCE TESTS, CHARGING	8C-3
SYSTEM SERVICE EQUIPMENT, REFRIGERANT	24-8
SYSTEM SERVICE PORTS, REFRIGERANT	24-9
SYSTEM, STARTING; 8W-21 STARTING	8W-21-1
SYSTEM, STARTING; STARTING	8B-1,8B-2,8B-8
SYSTEM TEST, ON-BOARD DIAGNOSTIC	8C-6
SYSTEM, TURN SIGNAL	8J-1
SYSTEM, TURN SIGNAL/HAZARD WARNING	8J-2
SYSTEM, VACUUM	24-12
SYSTEM, VEHICLE THEFT SECURITY	8Q-3
SYSTEM, WINDSHIELD WASHER	8K-1
SYSTEM, WINDSHIELD WIPER	8K-1
SYSTEM—4.0L ENGINE, CRANKCASE VENTILATION (CCV)	25-16
SYSTEM—5.2L ENGINE, POSITIVE CRANKCASE VENTILATION (PCV)	25-15
SYSTEMS, LAMP	8L-17
SYSTEMS, MONITORED	25-8
SYSTEMS, WASHER	8K-6
SYSTEMS, WIPER	8K-4
TABLES AND CHARTS—RE TRANSMISSION, DIAGNOSIS	21-19
TACHOMETER; 8W-40 INSTRUMENT CLUSTER	8W-40-1
TACHOMETER; INSTRUMENT PANEL	8E-11,8E-6
TACHOMETER—PCM OUTPUT	14-38
TAIL LAMPS, REAR LICENSE PLATE LAMPS AND SIDE MARKER LAMPS	8W-51-1
TAIL, STOP, TURN SIGNAL, BACK-UP AND SIDE MARKER LAMP	8L-14

Description Group-Page

TAIL, STOP, TURN SIGNAL, BACK-UP AND SIDE MARKER LAMP BULBS	8L-10
TAILPIPE—4.0/5.2L ENGINES, MUFFLER	11-5
TAKE OUTS	8W-01-3
TAMPER ALERT	8Q-2
TANK CAPACITY, FUEL	14-23
TANK FILLER TUBE CAP, FUEL; EMISSION CONTROL SYSTEMS	25-14,25-20
TANK FILLER TUBE CAP, FUEL; FUEL SYSTEM	14-6
TANK, FUEL	14-20,14-5
TANK SKID PLATE, FUEL	13-4
TAPPETS, HYDRAULIC	9-10,9-33,9-48,9-63,9-75
TC-SERIES PUMP RESERVOIR	19-7
TEMPERATURE CONTROL, A/C OPERATION—AUTOMATIC	8W-42-2
TEMPERATURE CONTROL (ATC), AUTOMATIC	8W-42-2
TEMPERATURE CONTROL (ATC) MODULE, AUTOMATIC	8W-42-2
TEMPERATURE CONTROL, BLEND DOOR MOTOR—AUTOMATIC	8W-42-3
TEMPERATURE CONTROL, BLOWER MOTOR—AUTOMATIC	8W-42-3
TEMPERATURE CONTROL, MODE DOOR MOTOR—AUTOMATIC	8W-42-3
TEMPERATURE CONTROL, RECIRCULATION DOOR MOTOR—AUTOMATIC	8W-42-3
TEMPERATURE CRITICAL CHIME, ENGINE	8W-45-2
TEMPERATURE GAUGE, COOLANT	8E-10,8E-4
TEMPERATURE GAUGE, ENGINE COOLANT	8W-40-1
TEMPERATURE SENSOR, AMBIENT; 8W-42 AIR CONDITIONING/HEATER	8W-42-2
TEMPERATURE SENSOR, AMBIENT; 8W-45 BODY CONTROL MODULE	8W-45-1
TEMPERATURE SENSOR, AMBIENT; HEATING AND AIR CONDITIONING	24-35,24-5
TEMPERATURE SENSOR, AMBIENT; OVERHEAD CONSOLE SYSTEMS	8V-7
TEMPERATURE SENSOR, BATTERY; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-2
TEMPERATURE SENSOR, BATTERY; CHARGING SYSTEM	8C-2,8C-6,8C-8
TEMPERATURE SENSOR, ENGINE COOLANT; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-3
TEMPERATURE SENSOR, ENGINE COOLANT; IGNITION SYSTEM	8D-17,8D-4,8D-9
TEMPERATURE SENSOR, IN-CAR	8W-42-2
TEMPERATURE SENSOR, INTAKE AIR	8W-30-4
TEMPERATURE SENSOR, INTAKE MANIFOLD AIR	8D-17,8D-4,8D-9
TEMPERATURE SENSOR, IN-VEHICLE	24-36,24-7
TEMPERATURE SENSOR, TRANSMISSION	8W-31-2
TEMPERATURE SENSOR—4.0L ENGINE, ENGINE COOLANT	14-50,14-60
TEMPERATURE SENSOR—4.0L ENGINE, INTAKE MANIFOLD AIR	14-50,14-61
TEMPERATURE SENSOR—4.0L ENGINE—PCM INPUT, ENGINE COOLANT	14-31
TEMPERATURE SENSOR—4.0L ENGINE—PCM INPUT, INTAKE MANIFOLD AIR	14-32
TEMPERATURE SENSOR—5.2L ENGINE, ENGINE COOLANT	14-49,14-60
TEMPERATURE SENSOR—5.2L ENGINE, INTAKE MANIFOLD AIR	14-50,14-60
TEMPERATURE SENSOR—5.2L ENGINES—PCM INPUT, ENGINE COOLANT	14-31
TEMPERATURE SENSOR—5.2L ENGINES—PCM INPUT, INTAKE MANIFOLD AIR	14-32
TEMPERATURE SENSOR—PCM INPUT, BATTERY	14-29
TEMPERATURE SENSOR—PCM INPUT, TRANSMISSION	14-34
TEMPERATURE/BLEND-AIR DOOR	24-45
TEMPERATURE/BLEND-AIR DOOR MOTOR	24-39
TENSION, ACCESSORY DRIVE BELT	7-3
TENSION, DRIVE BELT	7-48

Description Group-Page

TENSIONER, AUTOMATIC BELT	7-44
TENSIONER, PARKING BRAKE CABLE	5-32
TERMINAL REPLACEMENT	8W-01-10
TERMINAL REPLACEMENT, CONNECTOR	8W-01-9
TERMINAL/CONNECTOR REPAIR-MOLEX CONNECTORS	8W-01-7
TERMINAL/CONNECTOR REPAIR—THOMAS AND BETTS CONNECTORS	8W-01-8
TEST ANALYSIS, STALL	21-15
TEST, ANALYZING ROAD	21-12
TEST, AUTOMATIC SHUTDOWN (ASD) RELAY	8D-5
TEST, COLD CRANKING	8B-4
TEST, CONVERTER STALL	21-15
TEST, CURRENT OUTPUT	8C-5
TEST, CYLINDER COMBUSTION PRESSURE LEAKAGE	9-9
TEST, CYLINDER COMPRESSION PRESSURE	9-8
TEST, FAILURE TO START	8D-6
TEST, FUEL PRESSURE LEAK DOWN	14-8
TEST, FUEL PUMP CAPACITY	14-8
TEST, HYDRAULIC PRESSURE	21-13
TEST, HYDROMETER	8A-6
TEST, IGNITION COIL	8D-5
TEST, IGNITION-OFF DRAW	8A-9
TEST INDICATOR, BUILT-IN	8A-5
TEST, LOAD	8A-7
TEST MODE, CIRCUIT ACTUATION	25-2
TEST MODE, STATE DISPLAY	25-2
TEST, ON-BOARD DIAGNOSTIC SYSTEM	8C-6
TEST, ON-BOARD DIAGNOSTICS	8H-2
TEST, OPEN-CIRCUIT VOLTAGE	8A-6
TEST PORT, FUEL PUMP PRESSURE TEST-5.2L ENGINES WITHOUT PRESSURE	14-7
TEST PORT, FUEL PUMP PRESSURE TEST—5.2L ENGINES WITH PRESSURE	14-7
TEST PORT, FUEL SYSTEM PRESSURE RELEASE PROCEDURE—WITHOUT PRESSURE	14-11
TEST PORT, FUEL SYSTEM PRESSURE RELEASE PROCEDURE—WITH PRESSURE	14-11
TEST, ROAD	8H-2
TEST, SPEED CONTROL ELECTRICAL	8H-6
TEST, VACUUM SUPPLY	8H-6
TEST-5.2L ENGINES WITHOUT PRESSURE TEST PORT, FUEL PUMP PRESSURE	14-7
TESTING COOLING SYSTEM FOR LEAKS	7-21
TESTING FOR SPARK AT COIL	8D-5
TESTING RADIATOR CAP, PRESSURE	7-23
TESTING, ROAD	21-12
TESTING TRANSMISSION CLUTCH AND BAND OPERATION, AIR	21-16
TEST—4.0L ENGINE, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	14-47
TEST—5.2L ENGINE, PCV VALVE	25-18
TEST—5.2L ENGINES, MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR	14-46
TEST—5.2L ENGINES WITH PRESSURE TEST PORT, FUEL PUMP PRESSURE	14-7
TEST-4.0L ENGINE, FUEL PUMP PRESSURE	14-6
TESTS, CHARGING SYSTEM RESISTANCE	8C-3
TESTS, CONTROL CIRCUIT	8B-5
TESTS, FEED CIRCUIT	8B-4
TESTS, TROUBLESHOOTING	8W-01-6
TESTS, WATER PUMP	7-9
THEFT SECURITY SYSTEM OPERATION, VEHICLE	8W-39-1
THEFT SECURITY SYSTEM, VEHICLE THERMOMETER	8Q-3
THERMOMETER	8V-2,8V-3
THERMOMETER, DISPLAY MODULE, TRIP COMPUTER, COMPASS	8V-6
THERMOSTAT	7-10,7-4
THERMOSTAT 4.0L ENGINE	7-32
THERMOSTAT 5.2L ENGINE	7-33
THIS GROUP, HOW TO USE	8W-01-1
THREAD REPAIR, ALUMINUM	21-31
THREADS, REPAIR DAMAGED OR WORN	9-4
THREE-FOUR SHIFT SOLENOID—PCM OUTPUT	14-38
THROTTLE BODY MINIMUM AIR FLOW CHECK PROCEDURE	14-51

Description	Group-Page	Description	Group-Page	Description	Group-Page
THROTTLE BODY—4.0L ENGINE . . .	14-40,14-53	TOWING RECOMMENDATIONS	0-9	TRIP COMPUTER/COMPASS/DISPLAY	
THROTTLE BODY—5.2L ENGINE	14-53	TOWING, TWO-WHEEL-DRIVE VEHICLE	0-9	MODULE	8V-3
THROTTLE BODY—5.2L ENGINES	14-39	TOW—AFTER-MARKET, TRAILER	8W-54-1	TRIP DEFINITION	25-10
THROTTLE CABLE	14-22	TOW—FACTORY INSTALLED, TRAILER	8W-54-1	TRIP ODOMETER, ODOMETER -	8E-10
THROTTLE POSITION SENSOR; 8W-30		(TPS)—4.0L ENGINE, THROTTLE		TROUBLE CODES, DIAGNOSTIC	25-2
FUEL/IGNITION SYSTEMS	8W-30-3	POSITION SENSOR	14-51,14-54	TROUBLESHOOTING TESTS	8W-01-6
THROTTLE POSITION SENSOR; IGNITION		(TPS)—4.0L ENGINE—PCM INPUT,		TROUBLESHOOTING TOOLS	8W-01-5
SYSTEM	8D-17,8D-4	THROTTLE POSITION SENSOR	14-34	TROUBLESHOOTING WIRING	
THROTTLE POSITION SENSOR		(TPS)—5.2L ENGINE, THROTTLE		PROBLEMS	8W-01-6
(TPS)—4.0L ENGINE	14-51,14-54	POSITION SENSOR	14-51,14-54	TUBE CAP, FUEL TANK FILLER;	
THROTTLE POSITION SENSOR		(TPS)—5.2L ENGINE—PCM INPUT,		EMISSION CONTROL SYSTEMS	25-14,25-20
(TPS)—4.0L ENGINE—PCM INPUT	14-34	THROTTLE POSITION SENSOR	14-34	TUBE CAP, FUEL TANK FILLER; FUEL	
THROTTLE POSITION SENSOR		TRACK BAR	2-10,2-16	SYSTEM	14-6
(TPS)—5.2L ENGINE	14-51,14-54	TRACK, BUCKET SEAT	23-13	TUBE, FIXED ORIFICE	24-34,24-7
THROTTLE POSITION SENSOR		TRAC-LOK	3-65,3-96	TUBES, FLUSHING COOLERS	21-31
(TPS)—5.2L ENGINE—PCM INPUT	14-34	TRAC-LOK DIFFERENTIAL	3-61,3-92	TUBES/LINES/HOSES AND CLAMPS,	
THROTTLE VALVE CABLE ADJUSTMENT,		TRAC-LOK NOISE DIAGNOSIS	3-50,3-81	FUEL	14-11
TRANSMISSION	21-126	TRAC-LOK OPERATION	3-45,3-76	TURN SIGNAL AND SIDE MARKER LAMP	8L-14
TIE ROD	19-28	TRAILER HITCH	13-5	TURN SIGNAL AND SIDE MARKER LAMP	
TIMING CASE COVER	9-34	TRAILER TOW—AFTER-MARKET	8W-54-1	BULB	8L-10
TIMING CASE COVER OIL SEAL	9-44	TRAILER TOW—FACTORY INSTALLED	8W-54-1	TURN SIGNAL, BACK-UP AND SIDE	
TIMING CHAIN	9-66	TRANSFER CASE	21-173,21-178	MARKER LAMP BULBS, TAIL, STOP	8L-10
TIMING CHAIN AND SPROCKETS	9-35	TRANSFER CASE BEARINGS AND SEALS	21-174	TURN SIGNAL, BACK-UP AND SIDE	
TIMING CHAIN COVER	9-64	TRANSFER CASE IDENTIFICATION	21-147	MARKER LAMP, TAIL, STOP	8L-14
TIMING CHAIN STRETCH, MEASURING		TRANSFER CASE,		TURN SIGNAL INDICATOR LAMPS;	
TIMING, IGNITION	8D-25,8D-8	NV231	21-147,21-149,21-150,21-163	8W-40 INSTRUMENT CLUSTER	8W-40-2
TIMING, VALVE	9-18,9-56	TRANSFER CASE, NV249	21-170,21-191	TURN SIGNAL INDICATOR LAMPS;	
TIRE AND WHEEL BALANCE	22-10	TRANSFER CASE SKID PLATE	13-4	INSTRUMENT PANEL SYSTEMS	8E-16,8E-8
TIRE AND WHEEL RUNOUT	22-9	TRANSMISSION	21-119,21-141,21-61	TURN SIGNAL INDICATOR LAMPS; TURN	
TIRE INFLATION PRESSURES	22-2	TRANSMISSION, 42/44 RE	21-2	SIGNAL AND HAZARD WARNING	
TIRE INFORMATION	22-1	TRANSMISSION, 42/44RE AUTOMATIC	21-1	SYSTEMS	8J-2
TIRE NOISE OR VIBRATION	22-4	TRANSMISSION CLUTCH AND BAND		TURN SIGNAL LAMPS	8J-2
TIRE PRESSURE FOR HIGH—SPEED		OPERATION, AIR TESTING	21-16	TURN SIGNAL SYSTEM	8J-1
OPERATION	22-3	TRANSMISSION CONTROL CABLE		TURN SIGNAL/HAZARD WARNING	
TIRE (TEMPORARY), SPARE	22-2	ADJUSTMENT	21-12	SYSTEM	8J-2
TIRE WEAR PATTERNS	22-3	TRANSMISSION CONTROL RELAY	8W-31-1	TURN SIGNALS	8W-52-1
TIRES	22-1	TRANSMISSION COOLER	21-40	TWO-WHEEL-DRIVE VEHICLE TOWING	0-9
TIRES, CLEANING OF	22-7	TRANSMISSION COOLER LINE AND		U-JOINT, AXLE SHAFT—CARDAN	3-30
TIRES, RADIAL-PLY	22-2	FITTINGS	21-39	U-JOINT, CARDAN	3-38
TIRES, REPLACEMENT	22-3	TRANSMISSION DIAGNOSIS,		UNBALANCE	3-4
TO START TEST, FAILURE	8D-6	AUTOMATIC	21-9	UNDERHOOD LAMP; 8W-44 INTERIOR	
TO USE THIS GROUP, HOW	8W-01-1	TRANSMISSION, DIAGNOSIS TABLES		LIGHTING	8W-44-2
TONE WHEEL, WHEEL SPEED SENSORS	5-37	AND CHARTS—RE	21-19	UNDERHOOD LAMP; LAMPS	8L-15
TOOL, DRB SCAN	7-9	TRANSMISSION FILL PROCEDURE	21-31	UNDERHOOD LAMP BULB	8L-11
TOOLS, TROUBLESHOOTING	8W-01-5	TRANSMISSION GEAR RATIOS	21-4	UNDERSIZE COMPONENT CODES,	
TOOLS—HEADLAMP ALIGNMENT,		TRANSMISSION GOVERNOR PRESSURE		OVERSIZE	9-18
SPECIAL	8L-8	SENSOR—PCM INPUT	14-34	UNIT, FUEL GAUGE SENDING	14-4,14-9
TOOLS—NV231, SPECIAL	21-168	TRANSMISSION IDENTIFICATION	21-4	UNIT (HCU), HYDRAULIC CONTROL	5-35
TOP PAD, INSTRUMENT PANEL	8E-29	TRANSMISSION OIL COOLER—		UNIT, HYDRAULIC CONTROL	8W-35-2
TOP TRIM PANEL, COWL	8E-29	AUXILIARY	7-26	UNIT, HYDRAULIC CONTROLLER	5-39
TORQUE; COOLING SYSTEM	7-48	TRANSMISSION OIL COOLERS,		UNIT, OVERDRIVE	21-40,21-92
TORQUE; DIFFERENTIAL AND		AUTOMATIC	7-2	UNIVERSAL GARAGE DOOR OPENER	8W-44-2
DRIVELINE	3-102,3-14	TRANSMISSION PARK/NEUTRAL		UNIVERSAL JOINT ANGLE	3-5
TORQUE; EXHAUST SYSTEM AND		SWITCH—PCM INPUT	14-34	UNIVERSAL JOINTS	3-2
INTAKE MANIFOLD	11-10	TRANSMISSION RELAY—PCM OUTPUT	14-39	UNSCHEDULED INSPECTION	0-3
TORQUE; TRANSMISSION AND		TRANSMISSION SHIFT INTERLOCK,		UPPER B-PILLAR TRIM PANEL	23-33
TRANSFER CASE	21-167,21-190	BRAKE	21-125,21-11,21-35	UPPER SUSPENSION ARM	2-15,2-9
TORQUE; VEHICLE SPEED CONTROL		TRANSMISSION SHIFT INTERLOCK		UPSHIFT INDICATOR LAMP	8E-9
SYSTEM	8H-9	MECHANISM, BRAKE	21-8	USE THIS GROUP, HOW TO	8W-01-1
TORQUE CHART; BRAKES	5-33,5-43	TRANSMISSION SOLENOID ASSEMBLY	8W-31-1	USING ALIGNMENT SCREEN, HEADLAMP	
TORQUE CHART; EMISSION CONTROL		TRANSMISSION TEMPERATURE SENSOR	8W-31-2	ADJUSTMENT	8L-6
SYSTEMS	25-21	TRANSMISSION TEMPERATURE		V-8 ENGINE, CRANKSHAFT POSITION	
TORQUE CHART; FUEL SYSTEM	14-23,14-62	SENSOR—PCM INPUT	14-34	SENSOR—5.2L	8D-3
TORQUE CHART;		TRANSMISSION THROTTLE VALVE		V-8 ENGINE, ENGINE FIRING ORDER—	
STEERING	19-20,19-24,19-30,19-8	CABLE ADJUSTMENT	21-126	5.2L	8D-25
TORQUE CHART; SUSPENSION	2-11,2-16	TRANSMISSION/OVERDRIVE	21-42	V-8 ENGINE, WATER PUMP BYPASS	
TORQUE CHART; TIRES AND WHEELS	22-11	TRANSMITTER BATTERY REPLACEMENT,		HOSE—5.2L	7-2
TORQUE CONVERTER	21-44	REMOTE KEYLESS ENTRY	8P-5	VACUUM RESERVOIR	8H-2,8H-9
TORQUE CONVERTER—ELECTRONIC		TRANSMITTER PROGRAMMING,		VACUUM SCHEMATICS	25-19
CLUTCH	21-4	REMOTE KEYLESS ENTRY	8P-5	VACUUM SUPPLY TEST	8H-6
TORQUE CONVERTOR CLUTCH (TCC)		TRANSMITTER, REMOTE KEYLESS		VACUUM SYSTEM	24-12
SOLENOID—PCM OUTPUT	14-39	ENTRY	8P-3,8P-5	VALUE, LOAD	25-12
TORQUE REFERENCES	Intro-4	TREAD WEAR INDICATORS	22-3	VALUES, CONVERSION FORMULAS AND	
TORQUE SPECIFICATIONS; CHARGING		TRIM, A-PILLAR	23-31	EQUIVALENT	Intro-7
SYSTEM	8C-8	TRIM COVER AND HORN SWITCH,		VALVE BODY	21-116,21-128,21-38,21-45
TORQUE SPECIFICATIONS; FRAME AND		DRIVER'S AIRBAG	8M-5	VALVE CABLE ADJUSTMENT,	
BUMPERS	13-11	TRIM, C-PILLAR	23-34	TRANSMISSION THROTTLE	21-126
TORQUE SPECIFICATIONS; IGNITION		TRIM, D-PILLAR	23-34	VALVE, COMBINATION	5-14,5-37,5-3,5-9
SYSTEM	8D-25	TRIM PANEL, COWL TOP	8E-29	VALVE, CONVERTER DRAINBACK	21-8
TORQUE SPECIFICATIONS;		TRIM PANEL, FRONT DOOR	23-23	VALVE, HIGH PRESSURE RELIEF	24-32,24-7
INTRODUCTION	Intro-9	TRIM PANEL, LIFTGATE	23-40	VALVE OPERATION, SHIFT	21-6
TORQUE—MODEL 30 AXLE	3-38	TRIM PANEL, LOWER B-PILLAR	23-33	VALVE, PRESSURE RELIEF/	
TOUCHUP, PAINTED SURFACE	23-2	TRIM PANEL, REAR DOOR	23-27	ROLLOVER	25-13,25-20
TOW HOOK, FRONT	13-3	TRIM PANEL, UPPER B-PILLAR	23-33	VALVE, QUICK FILL	21-7
TOW HOOK, REAR	13-4	TRIM PANELS, QUARTER	23-34	VALVE SERVICE	9-45,9-75
TOW HOOKS, EMERGENCY	0-10	TRIP COMPUTER	8V-1	VALVE SERVICE, CONVERTER	
TOWING, FOUR-WHEEL-DRIVE VEHICLE	0-10	TRIP COMPUTER, COMPASS,		DRAINBACK CHECK	21-31
TOWING, JUMP STARTING, HOISTING	0-8	THERMOMETER, DISPLAY MODULE	8V-6	VALVE, SPOOL	19-14

Description	Group-Page	Description	Group-Page	Description	Group-Page
VALVE SPRING AND STEM SEAL REPLACEMENT-IN VEHICLE	9-62	WARNING CHIME, LOW OIL PRESSURE	8W-45-2	WINDSHIELD	23-4
VALVE SPRINGS, VALVES	9-33,9-53,9-63	WARNING LAMP, ABS; 8W-35		WINDSHIELD WASHER SYSTEM	8K-1
VALVE STEM SEAL AND SPRING	9-30	ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2	WINDSHIELD WIPER SYSTEM	8K-1
VALVE TEST—5.2L ENGINE, PCV	25-18	WARNING LAMP, ABS; 8W-40		WIPE RELAY, INTERMITTENT	8K-11,8K-3,8K-7
VALVE TIMING	9-18,9-56	INSTRUMENT CLUSTER	8W-40-1	WIPER AND WASHER SWITCHES	8K-12,8K-3,8K-6
VALVE-PCM OUTPUT, DUTY CYCLE EVAP		WARNING LAMP, ABS; BRAKES	5-38		
PURGE SOLENOID	14-36	WARNING LAMP, AIRBAG	8W-43-1	WIPER AND WASHER SYSTEM, REAR	8K-1
VALVES AND VALVE SPRINGS	9-33,9-53,9-63	WARNING LAMP ANNOUNCEMENT		WIPER ARMS	8K-9
VANITY LAMP BULB, VISOR	8L-11	CHIME, LOW FUEL	8W-45-2	WIPER ARMS AND BLADES	8K-2
VANITY LAMP, VISOR	8L-15	WARNING LAMP, BRAKE	8E-12,8E-6	WIPER BLADES AND ELEMENTS	8K-8
VANITY MIRRORS, VISOR	8W-44-2	WARNING LAMP, LOW FUEL	8E-15,8E-8	WIPER LINKAGE AND PIVOTS	8K-11,8K-2
VARIABLE FORCE SOLENOID—PCM OUTPUT	14-39	WARNING LAMP, RED BRAKE	5-2,5-8	WIPER MOTOR	8K-10
VARIANCE, PINION GEAR DEPTH	3-17,3-66,3-98	WARNING LAMPS—EXCEPT ABS	8W-40-1	WIPER MOTORS	8K-2
VARIATION ADJUSTMENT, COMPASS	8V-4	WARNING SYSTEM, HAZARD	8J-1	WIPER OPERATION, INTERMITTENT	8W-53-1
VECI LABEL SPECIFICATIONS; FUEL SYSTEM	14-23,14-62	WARNING SYSTEM, TURN SIGNAL/HAZARD	8J-2	WIPER SYSTEM, WINDSHIELD	8K-1
VECI LABEL SPECIFICATIONS; IGNITION SYSTEM	8D-25	WARNINGS & CAUTIONS, SERVICE	5-2	WIPER SYSTEMS	8K-4
VEHICLE CODE DECODING	Intro-2	WARNINGS AND PRECAUTIONS, SERVICE	24-3	WIPER/WASHER, REAR	8W-53-1
VEHICLE CONTROL AND DISPLAY SYMBOLS, INTERNATIONAL	Intro-3	WARNINGS, NOTES, CAUTIONS	8W-01-1	WIRE CODE IDENTIFICATION	8W-01-2
VEHICLE DIMENSIONS; FRAME AND BUMPERS	13-5	WARNINGS, SAFETY PRECAUTIONS	23-1	WIRING DIAGRAM INDEX; 8W-20 CHARGING SYSTEM	8W-20-1
VEHICLE DIMENSIONS; INTRODUCTION	Intro-3	WASHER FLUID LEVEL SENSOR, LOW	8W-53-1	WIRING DIAGRAM INDEX; 8W-21 STARTING SYSTEM	8W-21-1
VEHICLE EMISSION CONTROL INFORMATION (VECI) LABEL	25-17	WASHER NOZZLES AND PLUMBING	8K-4	WIRING DIAGRAM INDEX; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-5
VEHICLE IDENTIFICATION NUMBER (VIN)	Intro-1	WASHER PUMPS	8K-4	WIRING DIAGRAM INDEX; 8W-31 TRANSMISSION CONTROL SYSTEM	8W-31-2
VEHICLE INFORMATION CENTER; 8W-46 MESSAGE CENTER	8W-46-1	WASHER PUMPS AND RESERVOIR	8K-13	WIRING DIAGRAM INDEX; 8W-33 VEHICLE SPEED CONTROL	8W-33-1
VEHICLE INFORMATION CENTER; INSTRUMENT PANEL SYSTEMS	8E-16,8E-18,8E-3	WASHER RESERVOIR	8K-4	WIRING DIAGRAM INDEX; 8W-35 ALL-WHEEL ANTI-LOCK BRAKES	8W-35-2
VEHICLE INFORMATION CENTER; TURN SIGNAL AND HAZARD WARNING SYSTEMS	8J-2	WASHER SWITCHES, WIPER	8K-12,8K-3,8K-6	WIRING DIAGRAM INDEX; 8W-39 VEHICLE THEFT SECURITY SYSTEM	8W-39-2
VEHICLE SAFETY CERTIFICATION LABEL	Intro-2	WASHER SYSTEM, REAR WIPER	8K-1	WIRING DIAGRAM INDEX; 8W-40 INSTRUMENT CLUSTER	8W-40-2
VEHICLE SPEED AND DISTANCE SENSOR—PCM INPUT	14-35	WASHER SYSTEM, WINDSHIELD	8K-1	WIRING DIAGRAM INDEX; 8W-41 HORN/CIGAR LIGHTER	8W-41-1
VEHICLE SPEED CONTROL	8W-33-1	WASHER SYSTEMS	8K-6	WIRING DIAGRAM INDEX; 8W-42 AIR CONDITIONING/HEATER	8W-42-3
VEHICLE SPEED SENSOR; 8W-30 FUEL/IGNITION SYSTEMS	8W-30-2	WATER LEAKS	23-16	WIRING DIAGRAM INDEX; 8W-43 AIRBAG SYSTEM	8W-43-1
VEHICLE SPEED SENSOR; FUEL SYSTEM	14-51,14-61	WATER PUMP	7-6	WIRING DIAGRAM INDEX; 8W-44 INTERIOR LIGHTING	8W-44-2
VEHICLE SPEED SENSOR; VEHICLE SPEED CONTROL SYSTEM	8H-2,8H-6,8H-9	WATER PUMP 4.0L ENGINE	7-27	WIRING DIAGRAM INDEX; 8W-45 BODY CONTROL MODULE	8W-45-2
VEHICLE THEFT SECURITY SYSTEM	8Q-3	WATER PUMP 5.2L ENGINE	7-29	WIRING DIAGRAM INDEX; 8W-46 MESSAGE CENTER	8W-46-2
VEHICLE THEFT SECURITY SYSTEM OPERATION	8W-39-1	WATER PUMP BYPASS HOSE	7-39	WIRING DIAGRAM INDEX; 8W-47 AUDIO SYSTEM	8W-47-2
VEHICLE TOWING, FOUR-WHEEL-DRIVE	0-10	WATER PUMP BYPASS HOSE—5.2L V-8 ENGINE	7-2	WIRING DIAGRAM INDEX; 8W-48 REAR WINDOW DEFOGGER	8W-48-1
VEHICLE TOWING, TWO-WHEEL-DRIVE	0-9	WATER PUMP INSPECTION	7-47	WIRING DIAGRAM INDEX; 8W-49 OVERHEAD CONSOLE	8W-49-1
VEHICLE, VALVE SPRING AND STEM SEAL REPLACEMENT-IN	9-62	WATER PUMP TESTS	7-9	WIRING DIAGRAM INDEX; 8W-50 FRONT LIGHTING	8W-50-2
VENTILATION (CCV) SYSTEM—4.0L ENGINE, CRANKCASE	25-16	WATER-IN-FUEL LAMP	8E-9	WIRING DIAGRAM INDEX; 8W-51 REAR LIGHTING	8W-51-1
VENTILATION (PCV) SYSTEM—5.2L ENGINE, POSITIVE CRANKCASE	25-15	WEAR INDICATORS, TREAD	22-3	WIRING DIAGRAM INDEX; 8W-52 TURN SIGNALS	8W-52-1
VERTICAL HEIGHT ADJUSTMENT, GLASS PANEL	23-11	WEAR PATTERNS, TIRE	22-3	WIRING DIAGRAM INDEX; 8W-53 WIPERS	8W-53-1
VIBRATION	3-18,3-46,3-78,3-3	WEATHERSTRIP, FRONT DOOR OPENING	23-26	WIRING DIAGRAM INDEX; 8W-54 TRAILER TOW	8W-54-1
VIBRATION DAMPER	9-34,9-64	WEATHERSTRIP, FRONT DOOR RUN CHANNEL	23-26	WIRING DIAGRAM INDEX; 8W-60 POWER WINDOWS	8W-60-2
VIBRATION, DRIVELINE	3-4	WEATHERSTRIP, LIFTGATE FLIP-UP GLASS	23-43	WIRING DIAGRAM INDEX; 8W-61 POWER DOOR LOCKS	8W-61-1
VIBRATION, TIRE NOISE OR	22-4	WEATHERSTRIP, LIFTGATE OPENING	23-42	WIRING DIAGRAM INDEX; 8W-62 POWER MIRRORS	8W-62-1
VIEW MIRRORS, SIDE	23-21	WEATHERSTRIP, REAR DOOR OPENING	23-30	WIRING DIAGRAM INDEX; 8W-63 POWER SEAT	8W-63-3
VISCOUS FAN DRIVE	7-22,7-46,7-7	WET SANDING, BUFFING, AND POLISHING	23-2	WIRING DIAGRAM INDEX; 8W-64 POWER SUNROOF	8W-64-1
VISOR VANITY LAMP	8L-15	WHEEL	22-8	WIRING DIAGRAM INDEX; 8W-65 SPEED PROPORTIONAL STEERING	8W-65-1
VISOR VANITY LAMP BULB	8L-11	WHEEL ALIGNMENT	2-1	WIRING PROBLEMS, TROUBLESHOOTING	8W-01-6
VISOR VANITY MIRRORS	8W-44-2	WHEEL BALANCE, TIRE	22-10	WIRING REPAIR	8W-01-7
VISUAL INSPECTION—4.0L ENGINE	14-43	WHEEL INSPECTION	22-8	WIRING/TERMINAL	8W-01-11
VISUAL INSPECTION—5.2L ENGINE	14-40	WHEEL INSTALLATION	22-9	WORM SHAFT, RACK PISTON	19-15
VOLT SENSOR SUPPLY—PRIMARY, FIVE	14-30	WHEEL MOUNTING STUDS	2-11	WORN THREADS, REPAIR DAMAGED OR	9-4
VOLT SENSOR SUPPLY—SECONDARY, FIVE	14-30	WHEEL RUNOUT, TIRE	22-9	YOKE SEAL REPLACEMENT	21-33
VOLTAGE REGULATOR	8C-2	WHEEL SPEED SENSOR, FRONT	5-41		
VOLTAGE TEST, OPEN-CIRCUIT	8A-6	WHEEL SPEED SENSOR, REAR	5-42		
VOLTAGE—PCM INPUT, BATTERY	14-30	WHEEL SPEED SENSOR, STEERING	19-25,19-26		
VOLTMETER; 8W-40 INSTRUMENT CLUSTER	8W-40-1	WHEEL SPEED SENSORS	8W-35-1		
VOLTMETER; INSTRUMENT PANEL SYSTEMS	8E-11,8E-6	WHEEL SPEED SENSORS AND TONE	5-37		
WAIT-TO-START LAMP	8E-9	WHEEL, WHEEL SPEED SENSORS AND TONE	5-37		
		WHEELS	22-8		
		WIND DEFLECTOR	23-7		
		WIND NOISE	23-17		
		WINDOW APPLIQUE/AIR EXHAUSTER, QUARTER	23-45		
		WINDOW DEFOGGER, REAR	8W-48-1		
		WINDOW GLASS, FRONT DOOR	23-27		
		WINDOW GLASS, QUARTER	23-6		
		WINDOW GLASS, REAR DOOR	23-30		
		WINDOW MOTOR, POWER	8S-2,8S-4,8S-6		
		WINDOW REGULATOR, FRONT DOOR	23-26		
		WINDOW REGULATOR, REAR DOOR	23-30		
		WINDOW SWITCH, POWER	8S-1,8S-4,8S-5		
		WINDOW SYSTEM, POWER	8S-1,8S-2		
		WINDOWS, POWER	8W-60-1		