





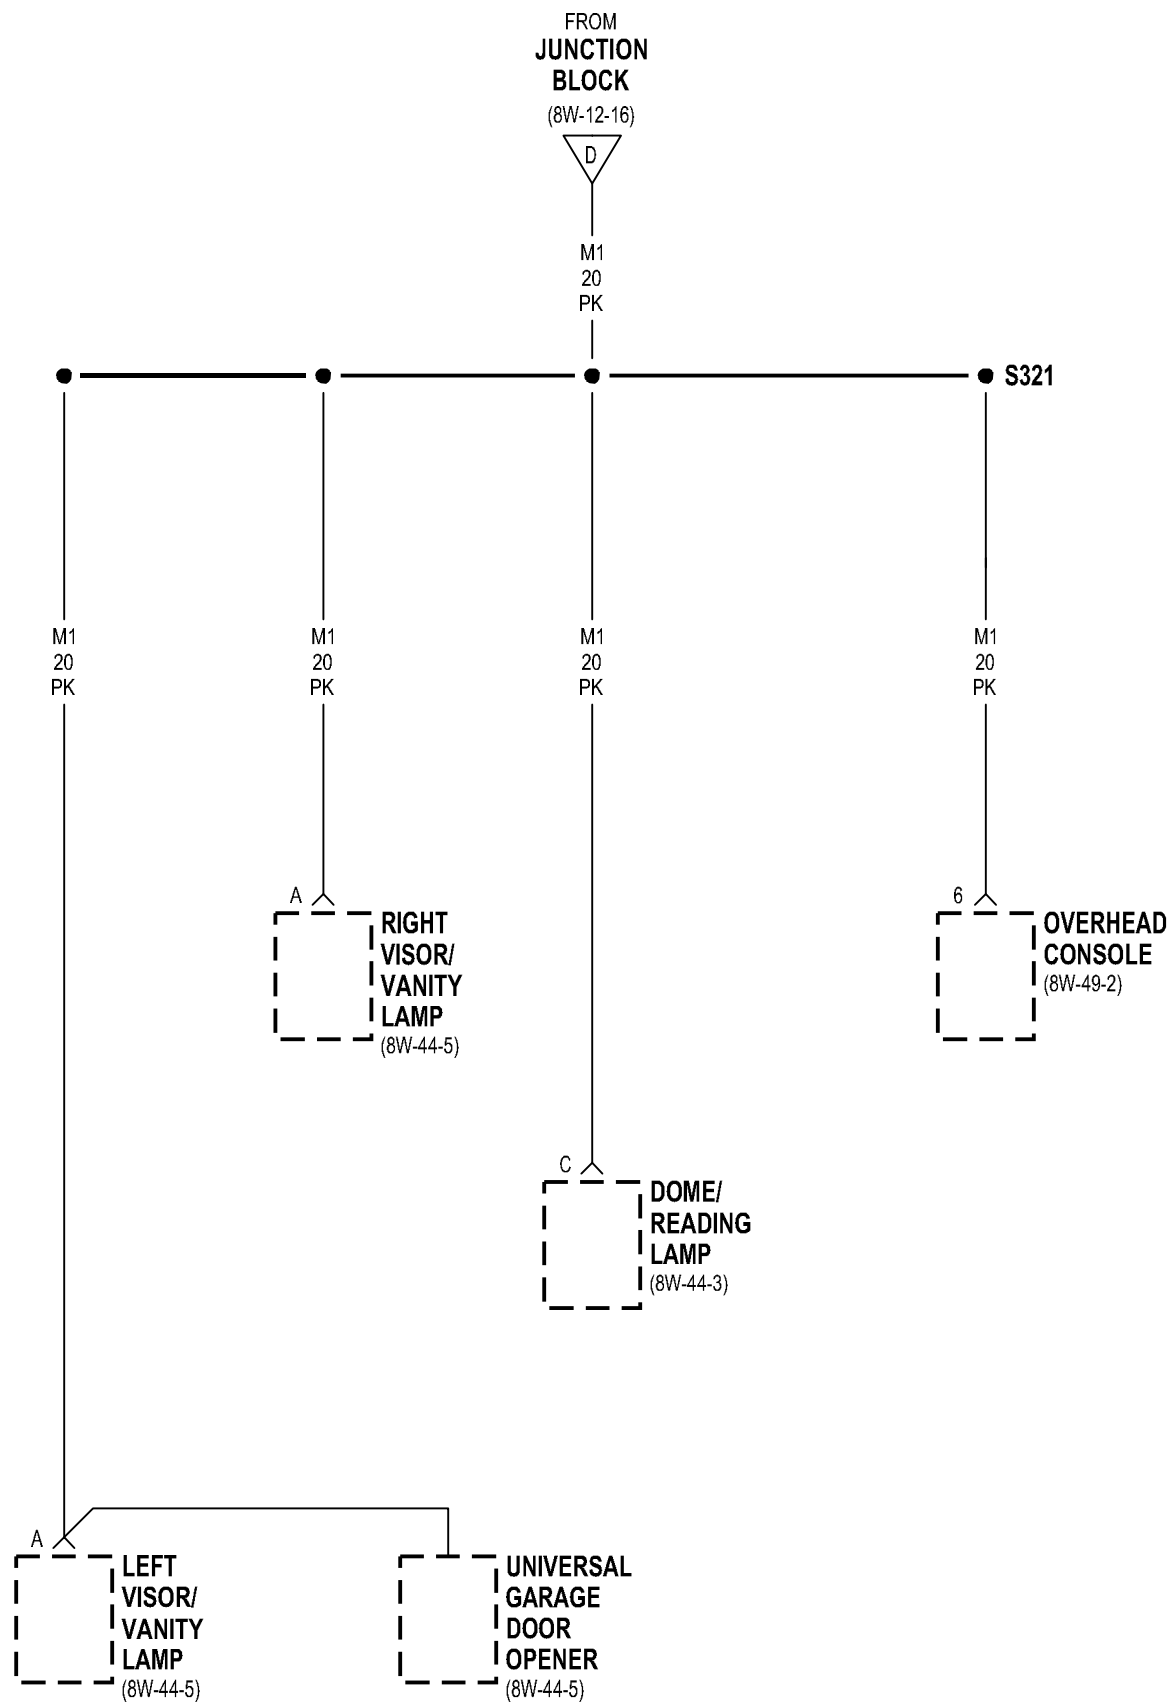


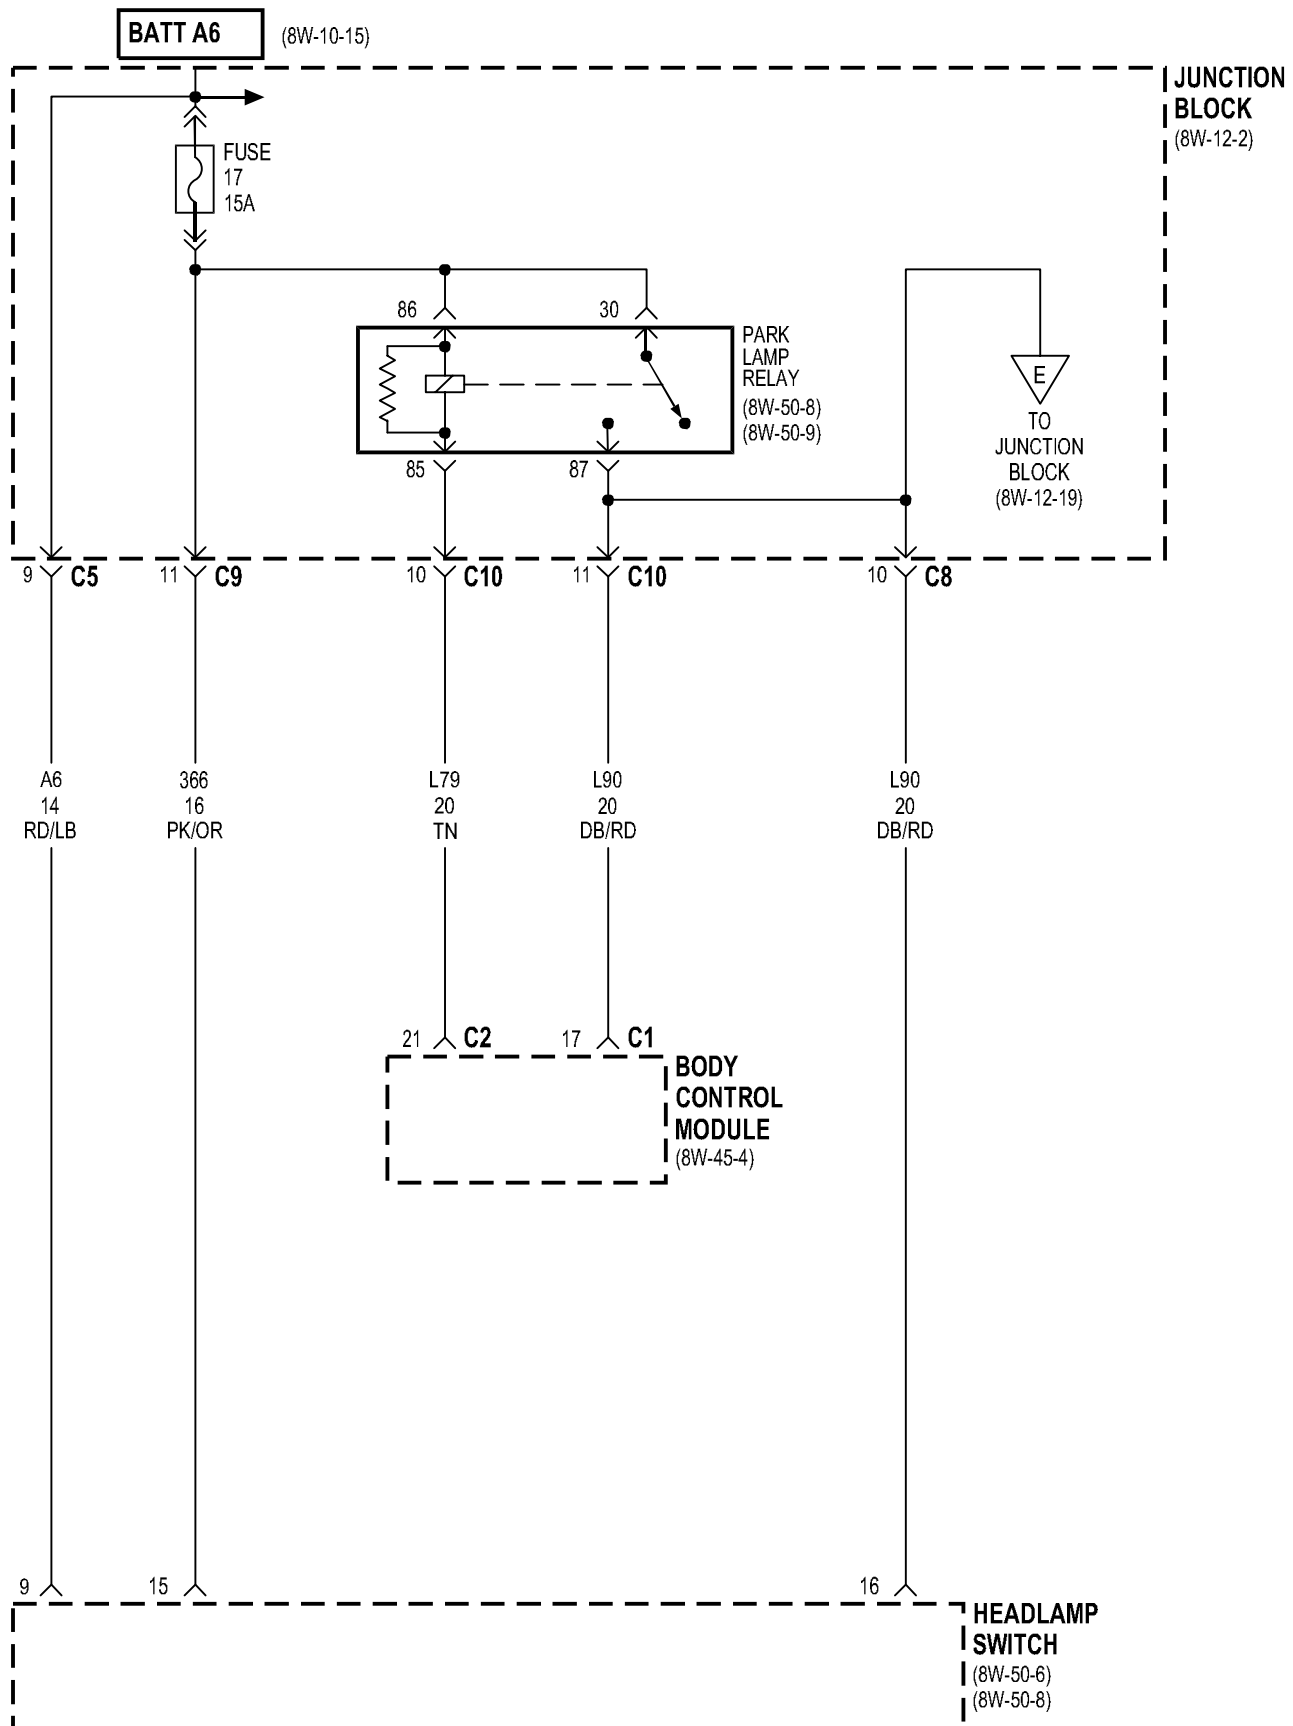

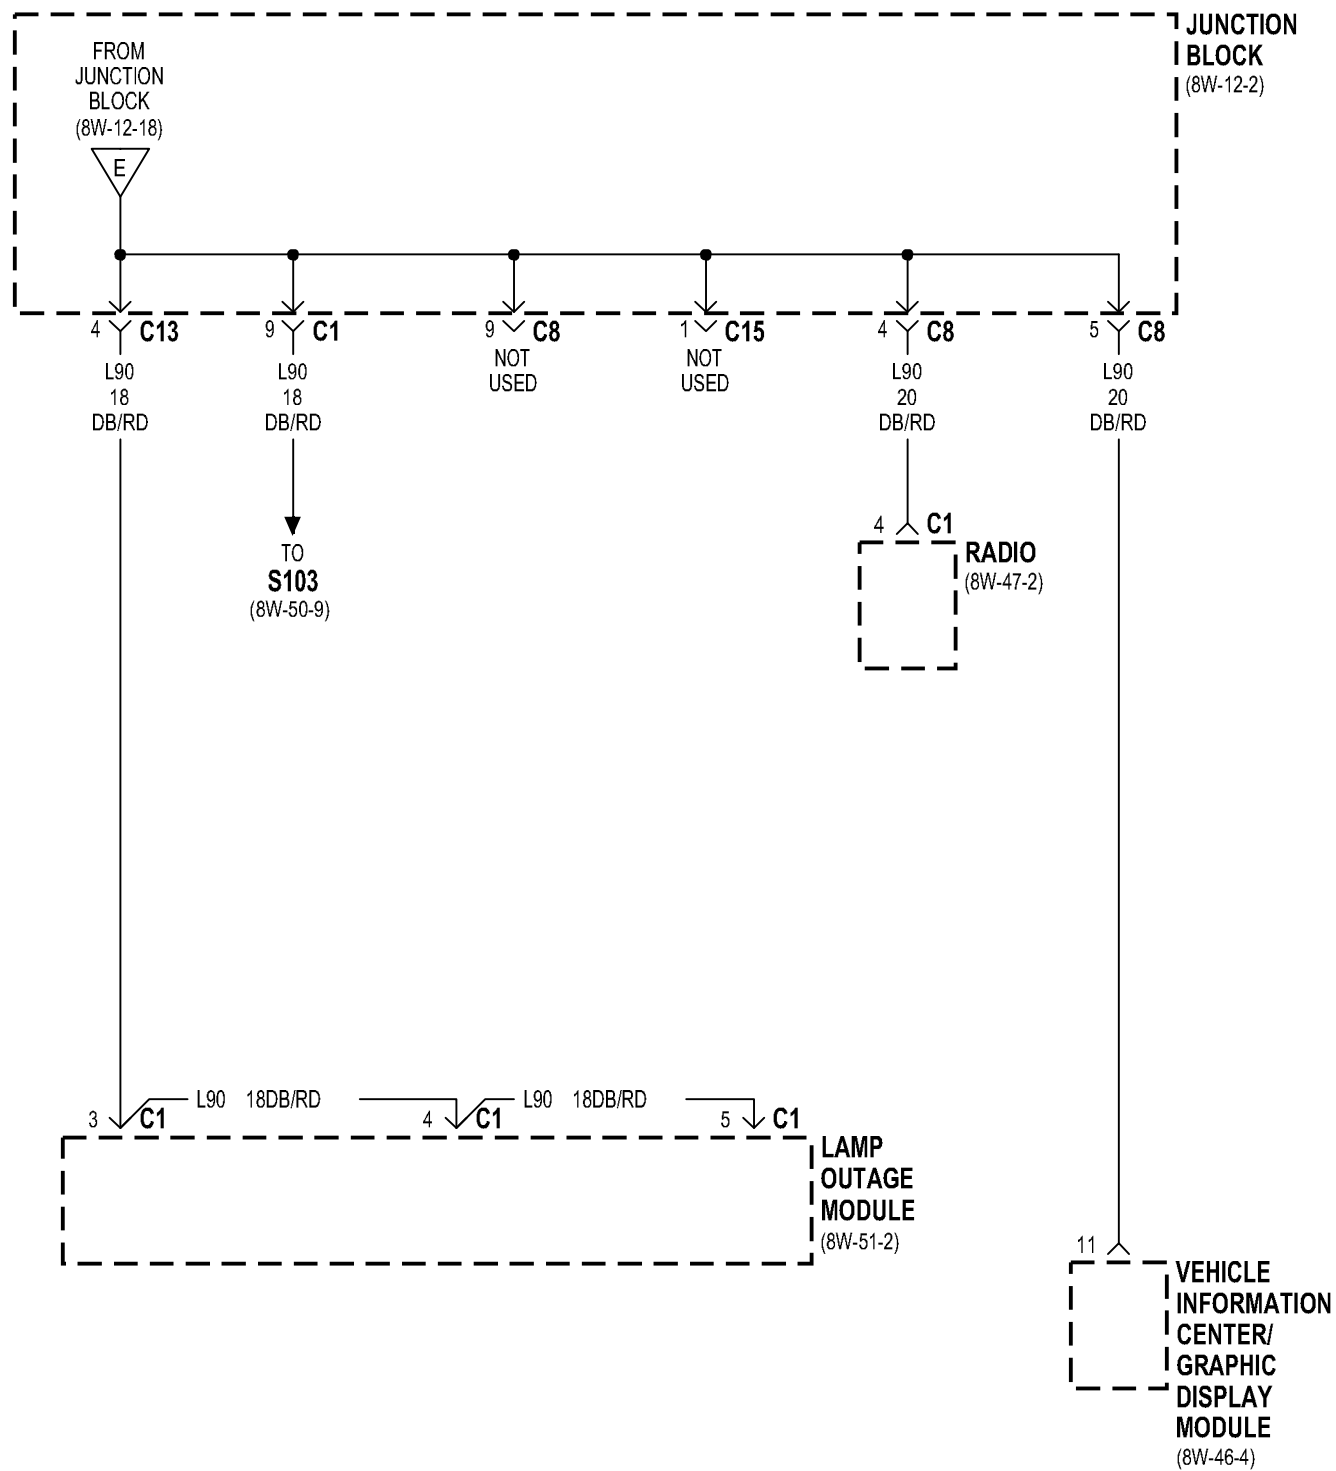


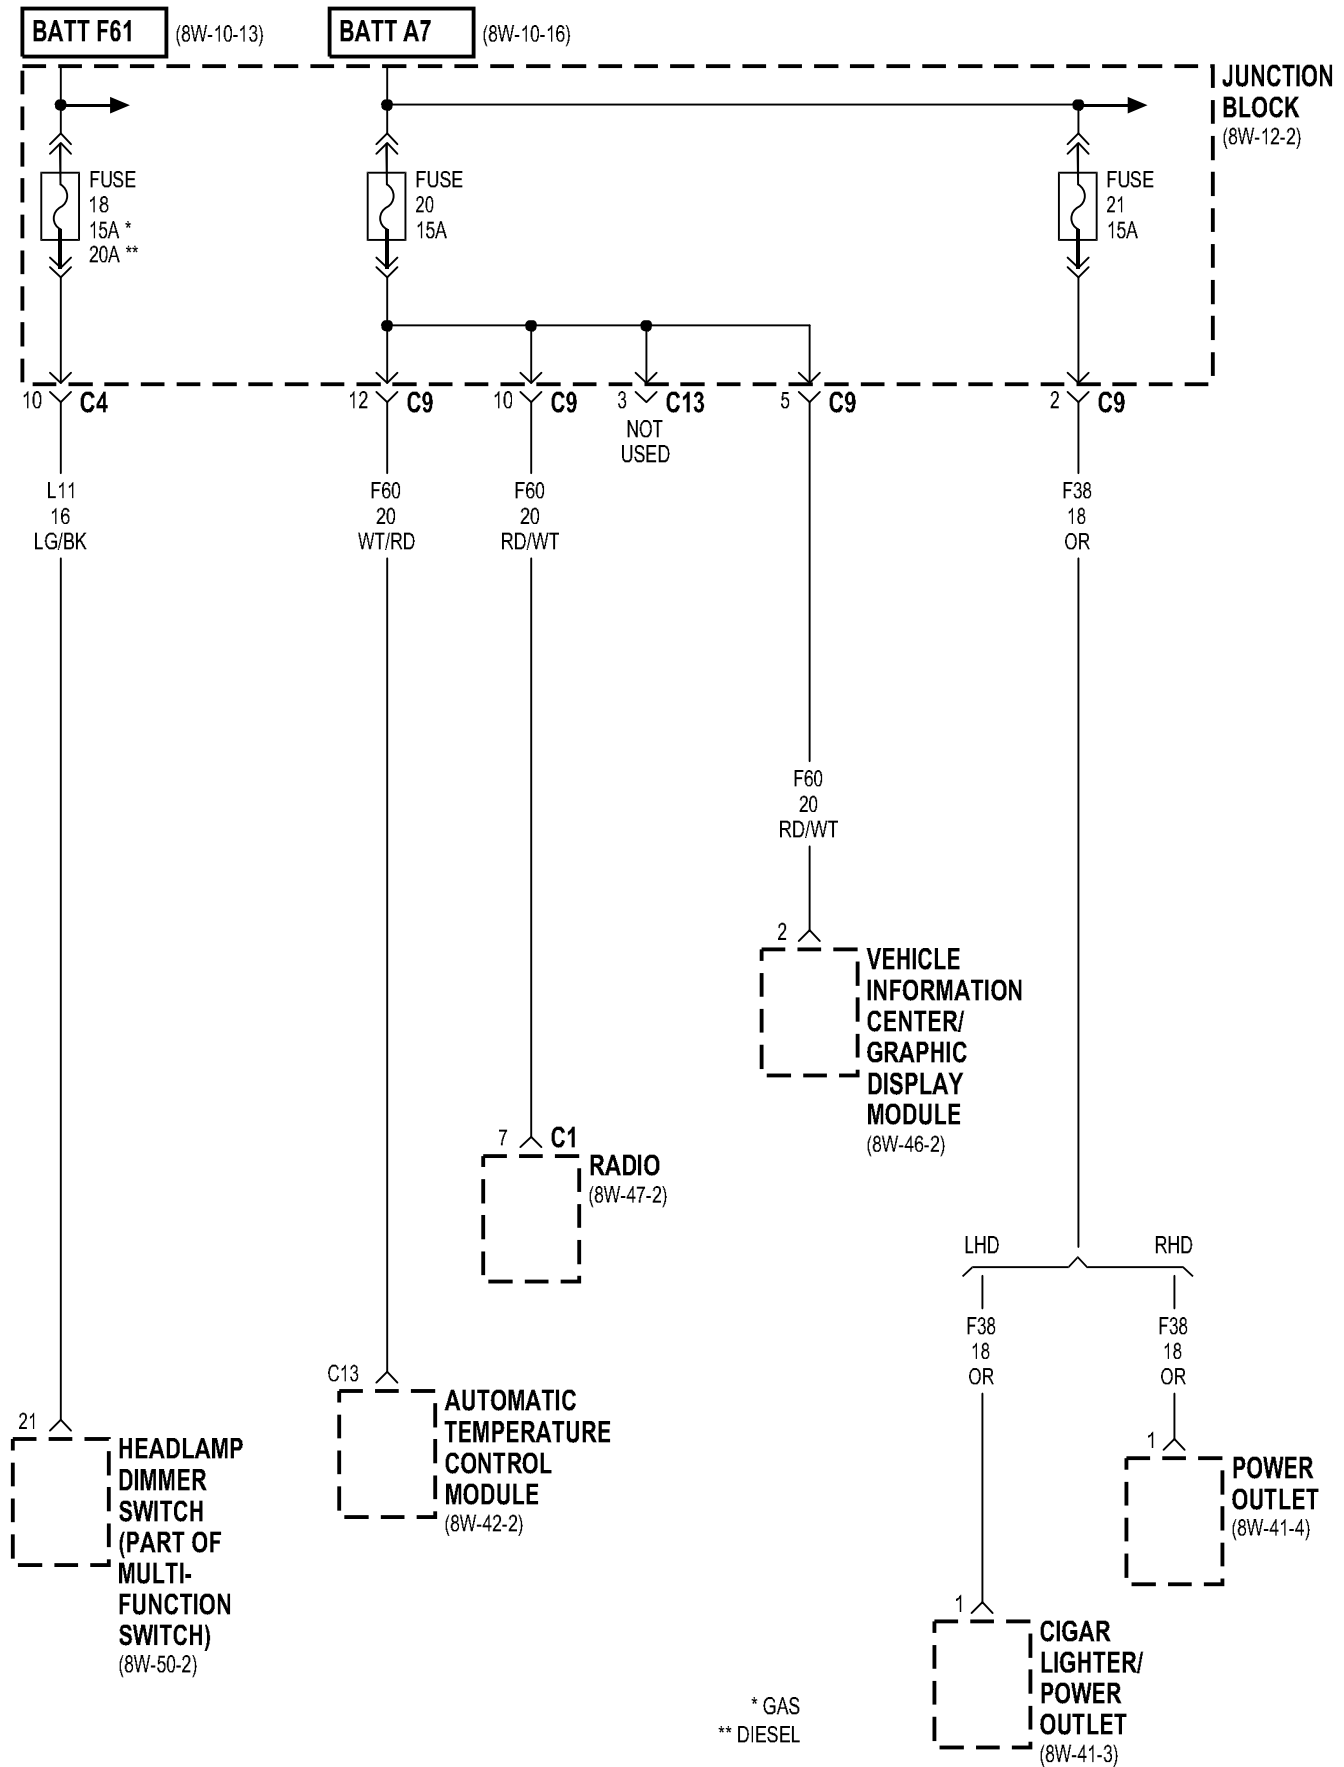





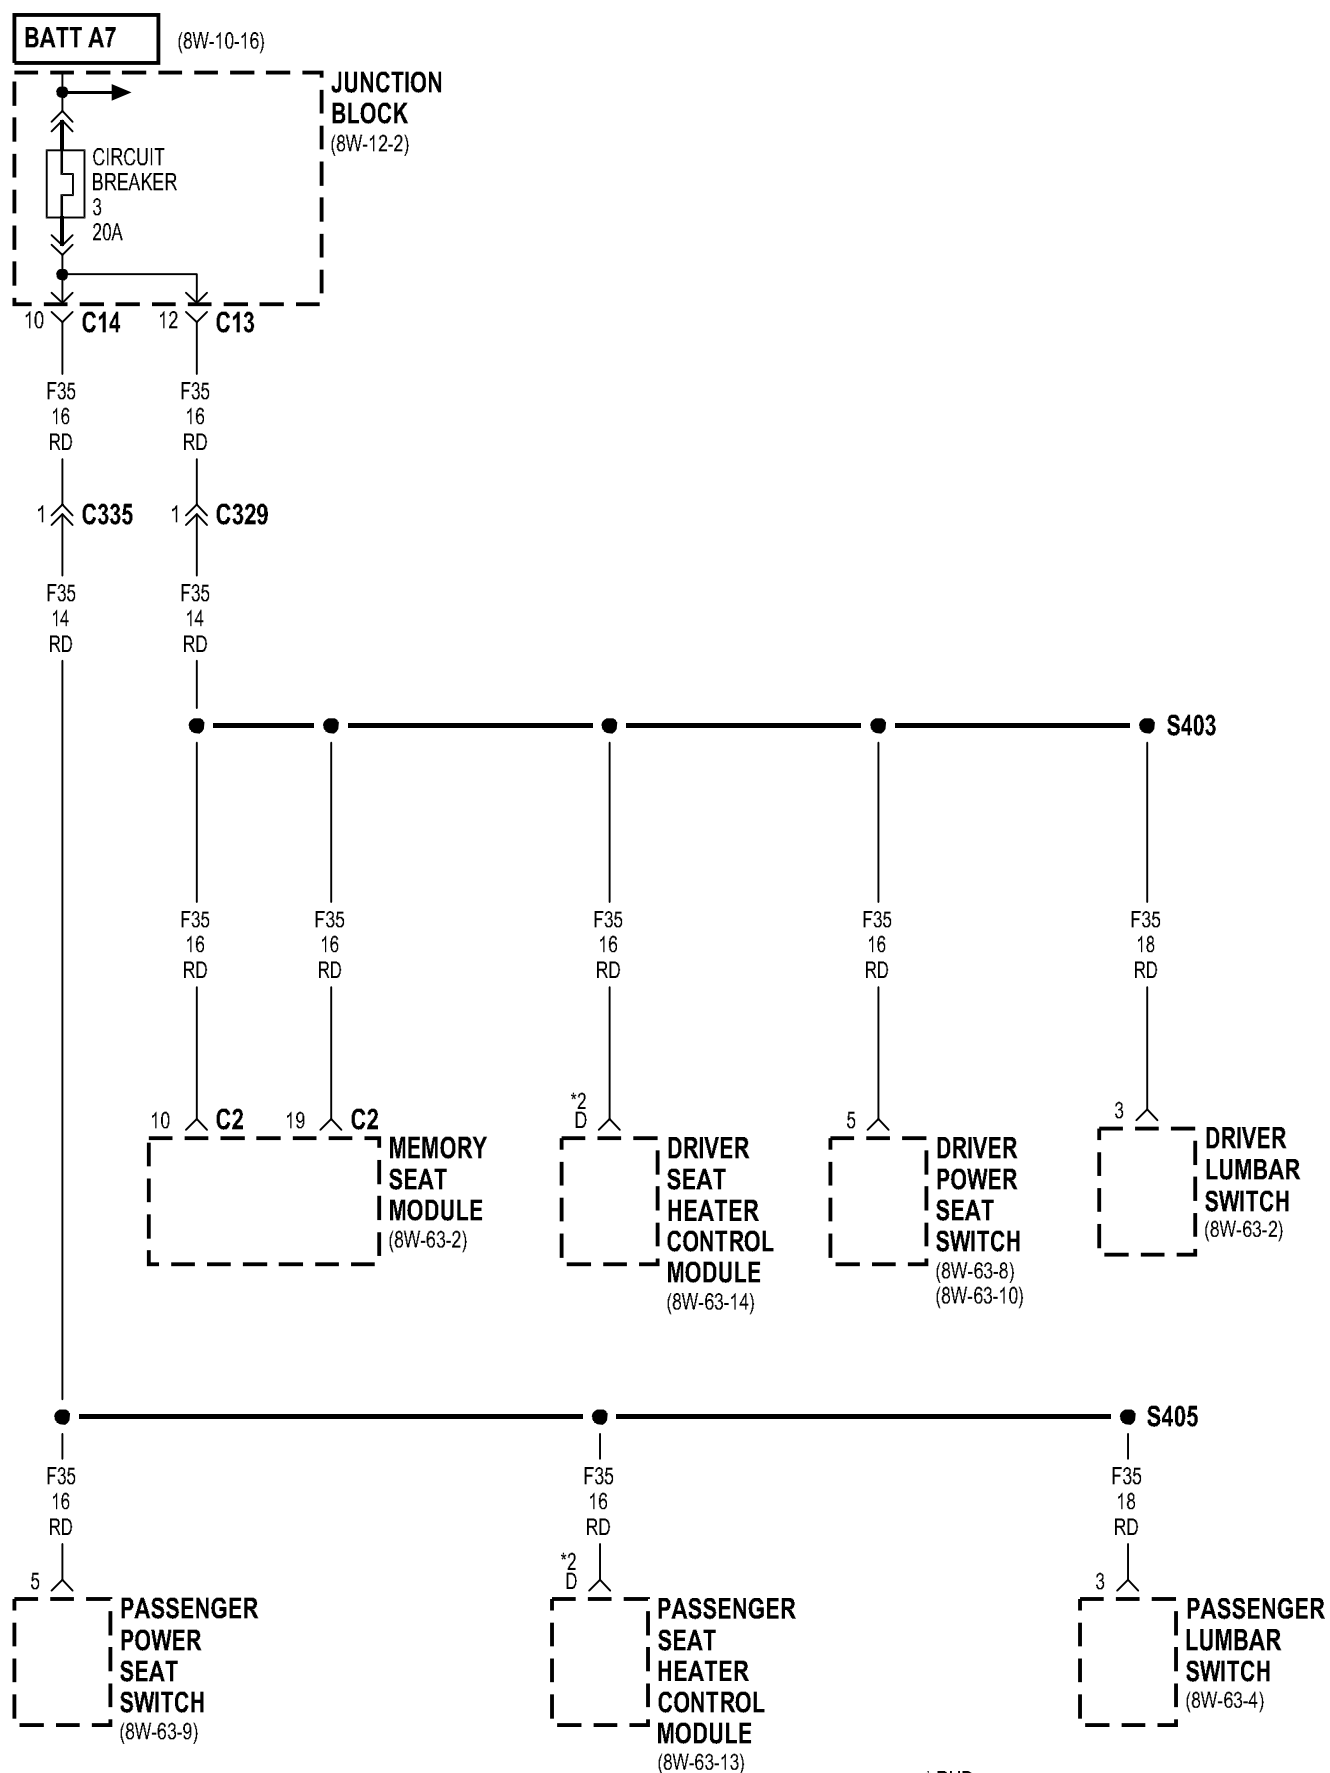



* RHD

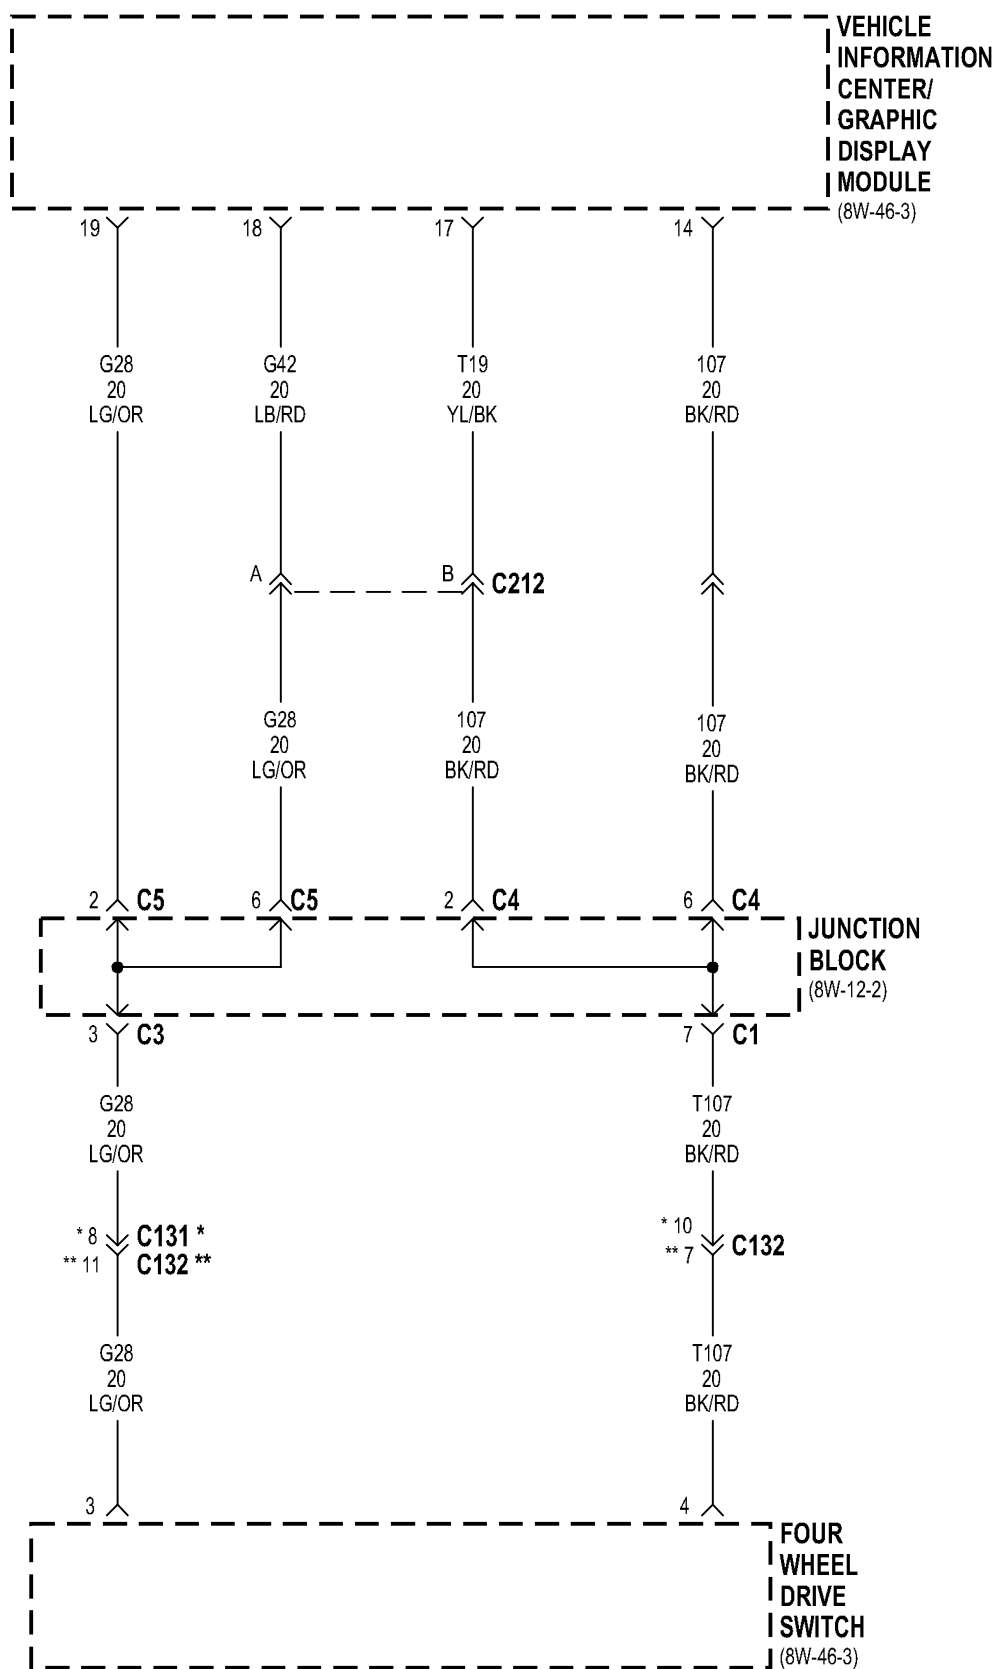

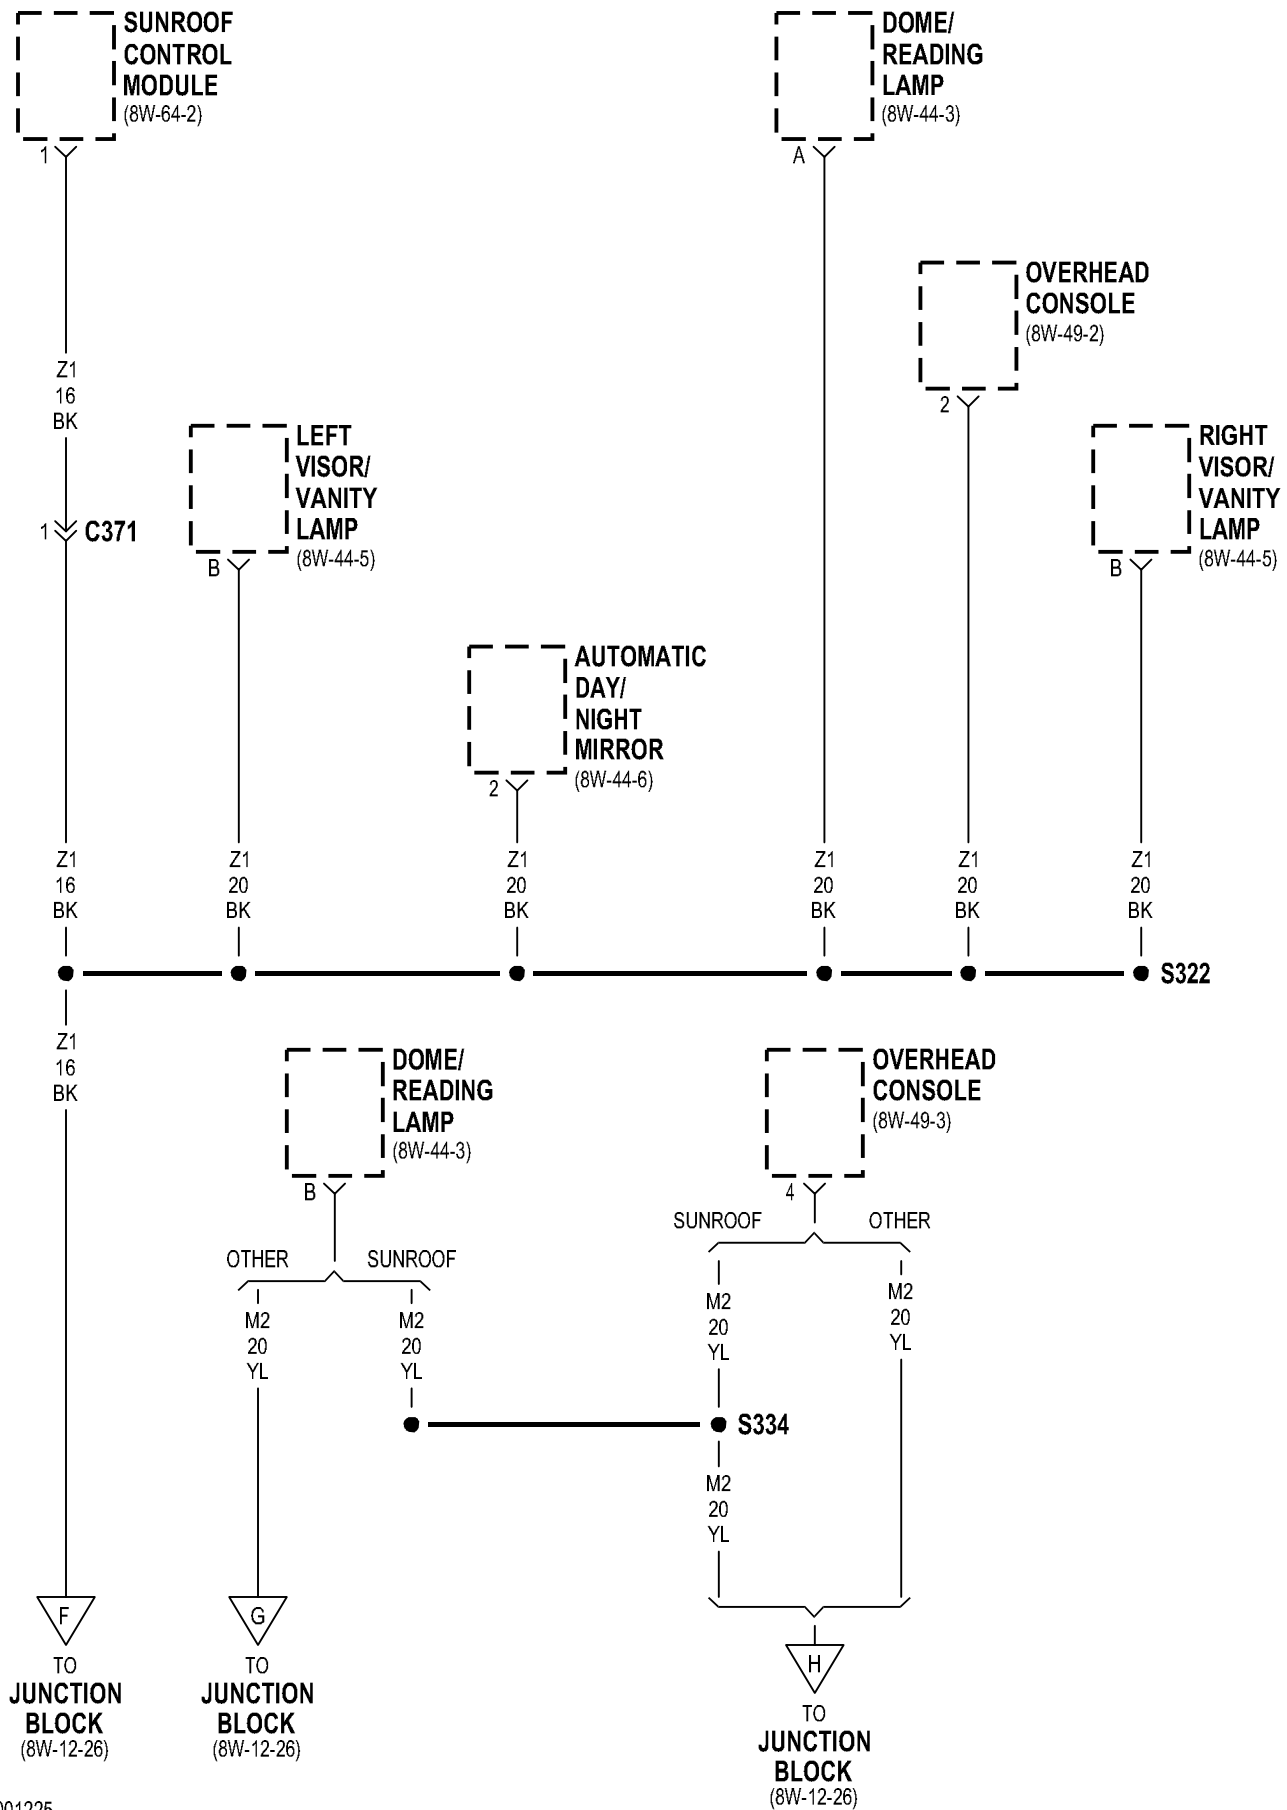

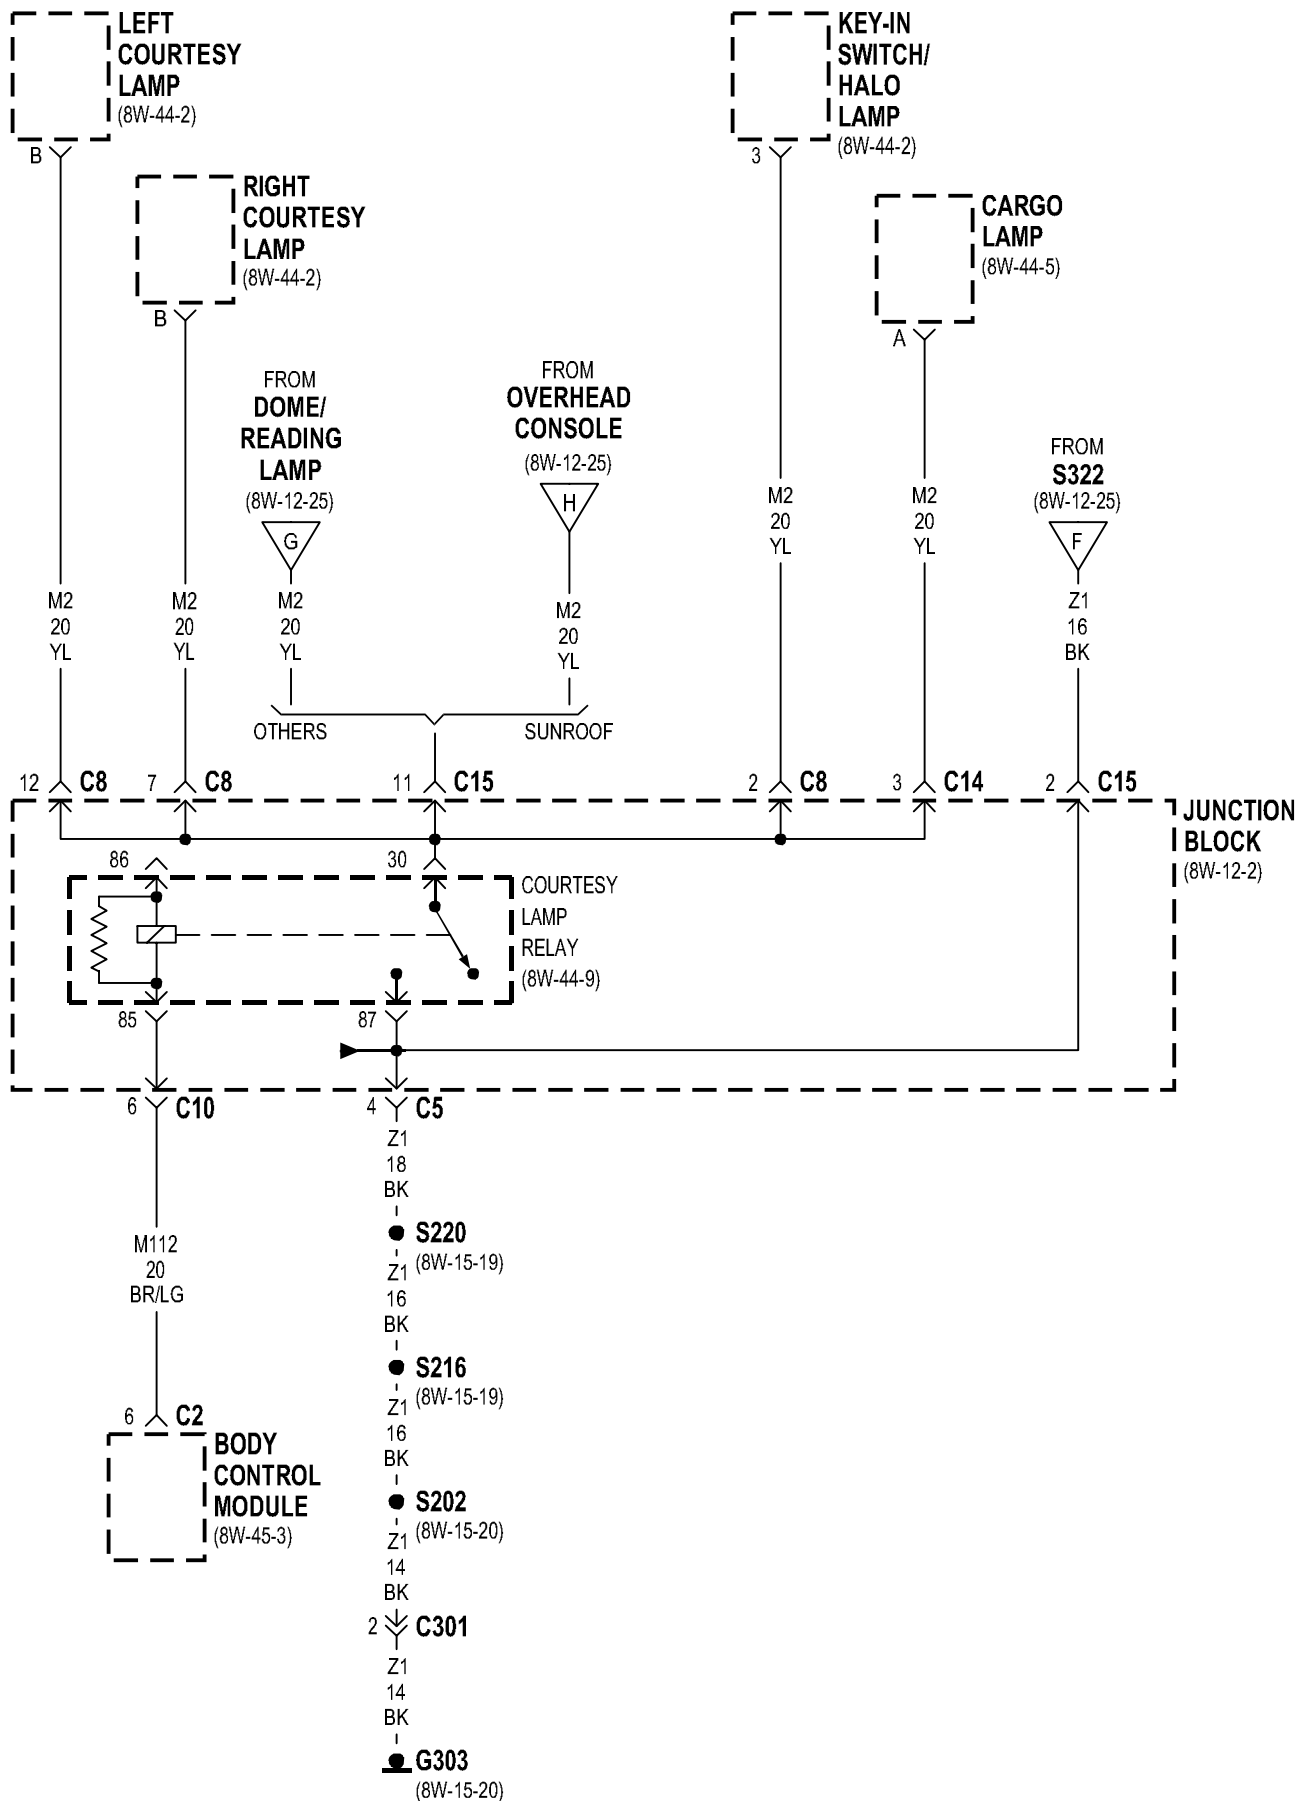


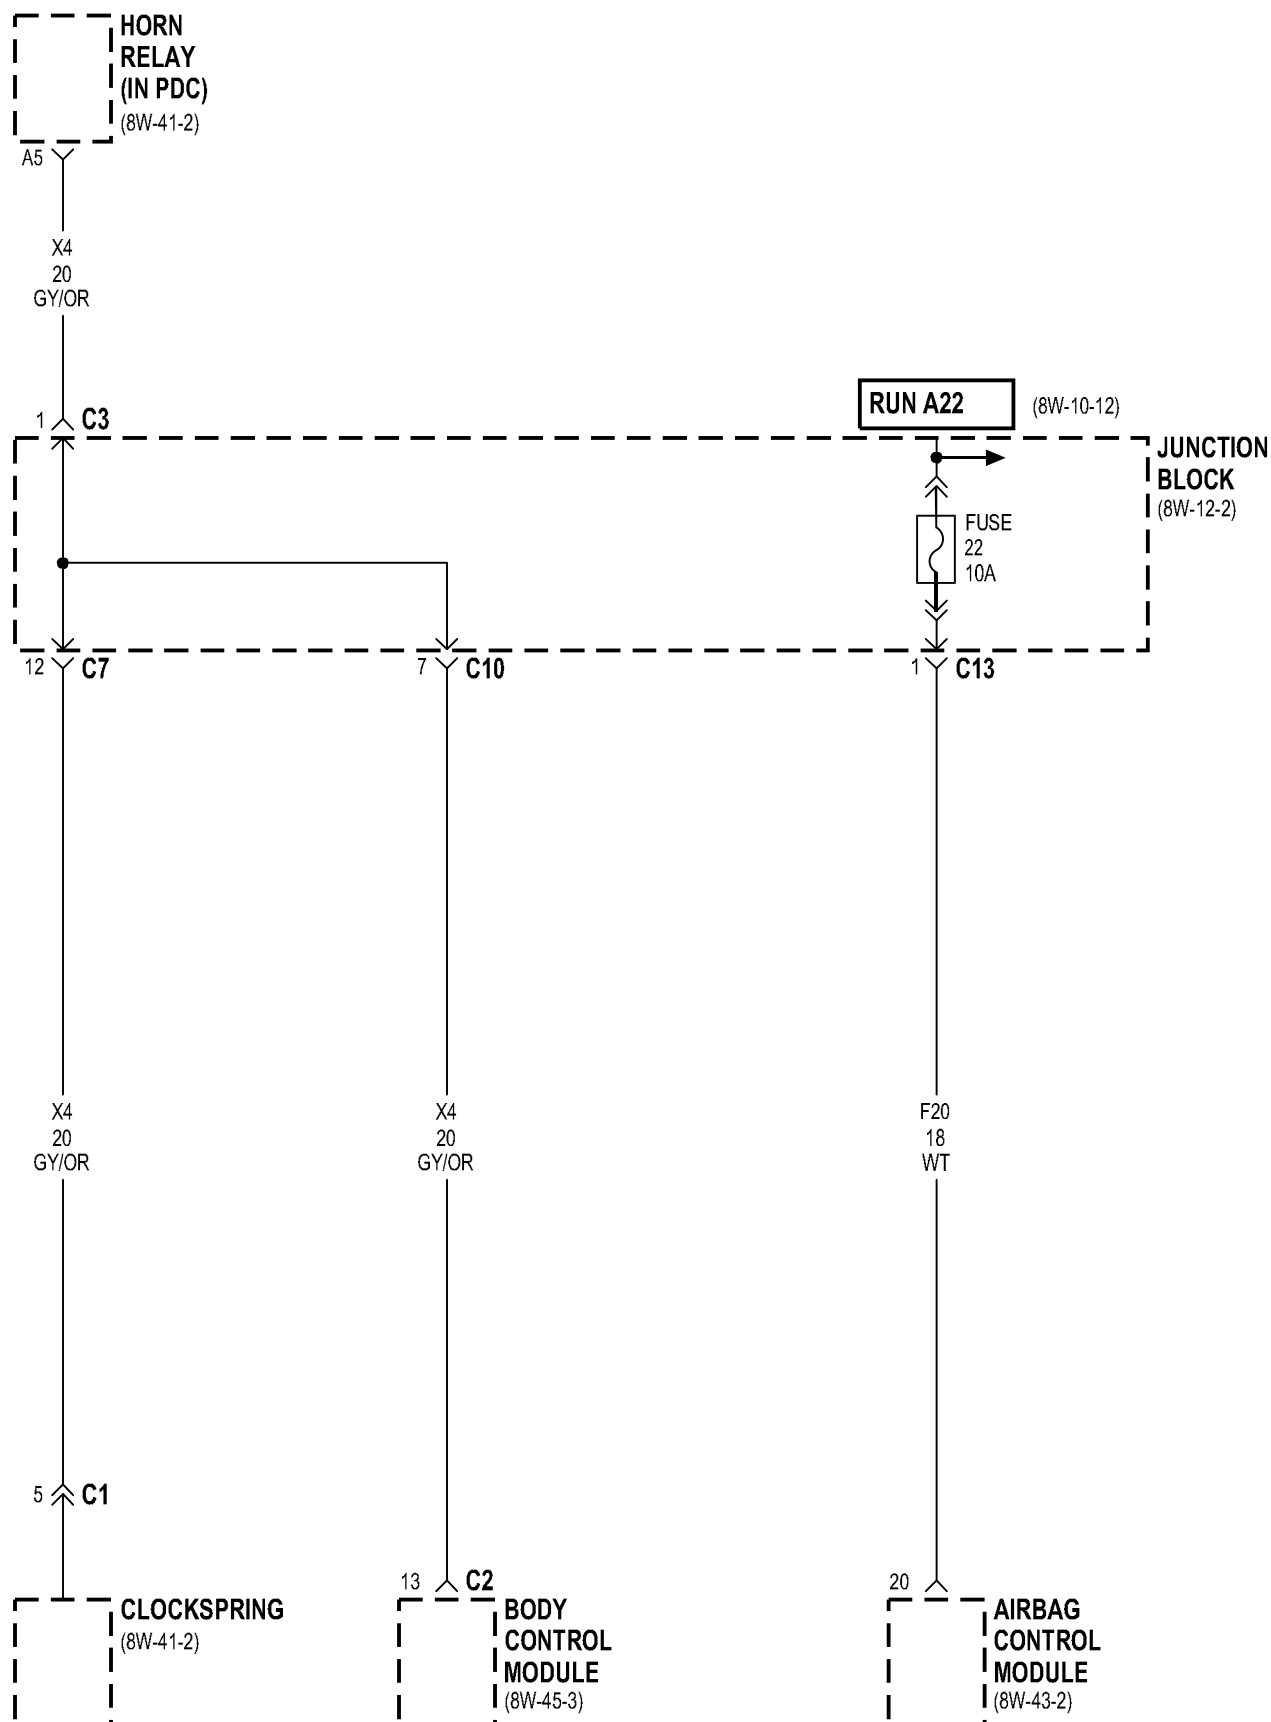


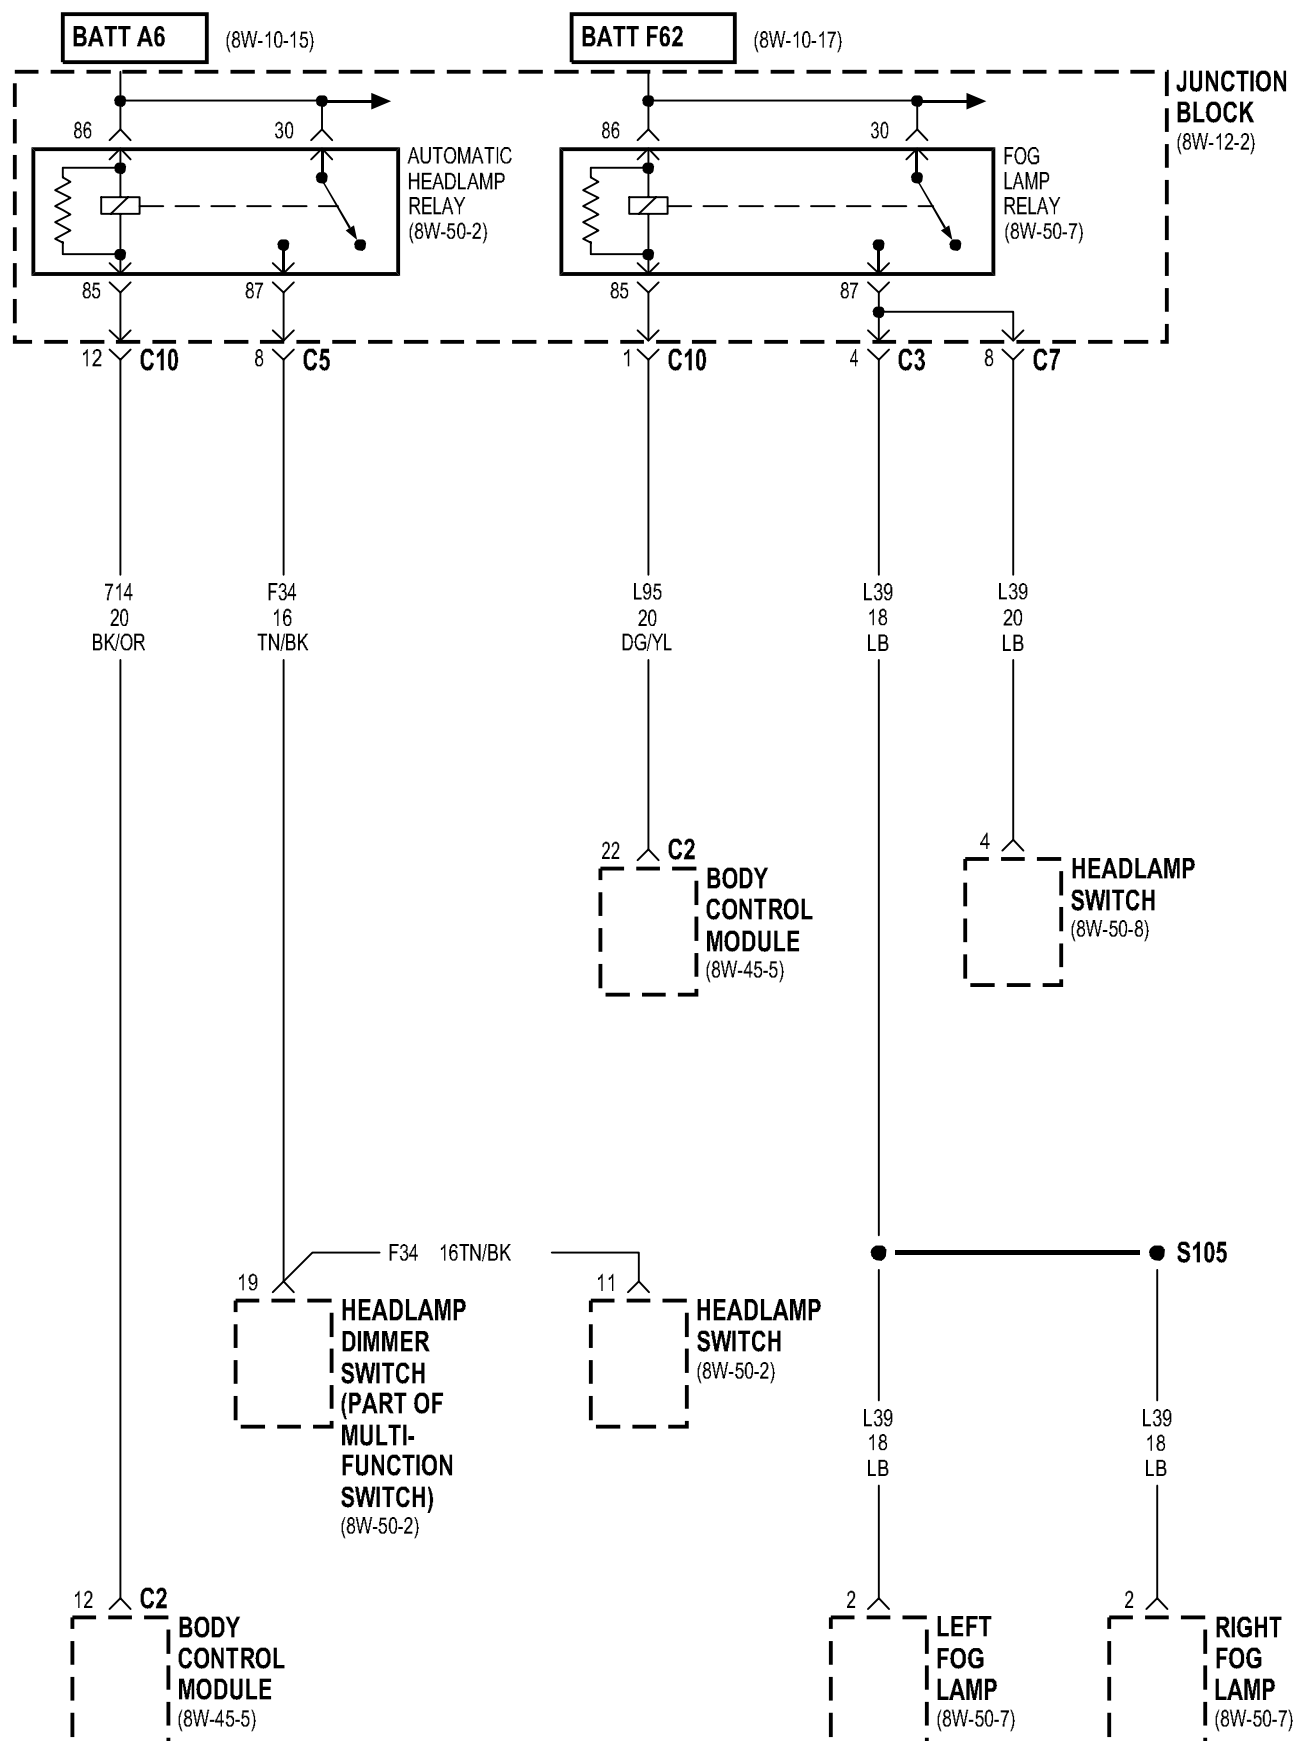



8W-15 GROUND DISTRIBUTION


Component	Page	Component	Page
A/C Compressor Clutch	8W-15-3, 4, 5	Junction Block	8W-15-18, 19
A/C Heater Control	8W-15-6, 7, 19	Key-In Switch/Halo Lamp	8W-15-19
A/C High Pressure Switch	8W-15-4	Lamp Outage Module	8W-15-16
Airbag Control Module	8W-15-20	Left Back-Up Lamp	8W-15-11
Ash Receiver Lamp	8W-15-19	Left Fog Lamp	8W-15-8, 9
Automatic Day/Night Mirror	8W-15-18	Left Front Park Lamp	8W-15-8, 9
Automatic Temperature Control Module	8W-15-6, 7	Left Front Side Marker Lamp	8W-15-8, 9
Battery	8W-15-2, 3	Left Front Turn Signal Lamp	8W-15-8, 9
Blend Door Actuator	8W-15-19	Left Headlamp	8W-15-8, 9
Blower Power Module	8W-15-6, 7	Left License Lamp	8W-15-12
Body Control Module	8W-15-20	Left Rear Fog Lamp	8W-15-11
Brake Pressure Switch	8W-15-6, 7	Left Rear Side Marker Lamp	8W-15-11
Center High Mounted Stop Lamp No. 1	8W-15-11	Left Rear Turn Signal Lamp	8W-15-11
Center High Mounted Stop Lamp No. 2	8W-15-11	Left Side Repeater	8W-15-8, 9
Center High Mounted Stop Lamp No. 3	8W-15-11	Left Tail/Stop Lamp	8W-15-11
Cigar Lighter	8W-15-19	Left Visor/Vanity Lamp	8W-15-18
Cigar Lighter Relay	8W-15-19	Liftgate Ajar Switch	8W-15-12
Cigar Lighter/Power Outlet	8W-15-19	Liftgate Cylinder Lock Switch	8W-15-12
Clockspring	8W-15-20	Liftglass Ajar Switch	8W-15-12
Controller Anti-Lock Brake	8W-15-6, 7	Liftglass Release Solenoid	8W-15-12
Coolant Level Sensor	8W-15-4	Lower Hose Coolant Switch	8W-15-10
Cooling Fan Motor	8W-15-10	Mass Air Flow Module	8W-15-5
Courtesy Lamp Relay	8W-15-18	Memory Seat Module	8W-15-17
Data Link Connector	8W-15-2, 3	MSA Controller	8W-15-3
Daytime Running Lamp Module	8W-15-6	Overhead Console	8W-15-18
Diagnostic Connector	8W-15-10	Passenger Door Courtesy Lamp	8W-15-14
Dome/Reading Lamp	8W-15-18	Passenger Door Module	8W-15-14
Downstream Heated Oxygen Sensor	8W-15-4	Passenger Front Cylinder Lock Switch	8W-15-14
Driver Door Courtesy Lamp	8W-15-16	Passenger Heated Seat Back	8W-15-15
Driver Door Module	8W-15-16	Passenger Heated Seat Cushion	8W-15-15
Driver Front Cylinder Lock Switch	8W-15-16	Passenger Lumbar Switch	8W-15-15
Driver Heated Seat Back	8W-15-17	Passenger Power Seat Switch	8W-15-15
Driver Heated Seat Cushion	8W-15-17	Passenger Rear Power Window Switch	8W-15-14
Driver Lumbar Switch	8W-15-17	Passenger Seat Heater Control Module	8W-15-15
Driver Power Seat Switch	8W-15-17	Power Amplifier	8W-15-17
Driver Rear Power Window Switch	8W-15-15	Power Outlet	8W-15-19
Driver Seat Heater Control Module	8W-15-17	Powertrain Control Module	8W-15-2, 3
Electronic Flasher	8W-15-18	Radio	8W-15-17
Electronic Vacuum Modulator	8W-15-5	Rear Washer Pump Motor	8W-15-8, 9
Engine Starter Motor Relay	8W-15-7	Rear Window Defogger	8W-15-12
Factory Trailer Tow Connector	8W-15-11	Rear Wiper Module	8W-15-12
Floor Console Lamps	8W-15-15	Right Back-Up Lamp	8W-15-13
Four Wheel Drive Switch	8W-15-4, 5	Right Fog Lamp	8W-15-4, 5
Fuel Heater	8W-15-5	Right Front Park Lamp	8W-15-4, 5
Fuel Heater Relay	8W-15-7	Right Front Side Marker Lamp	8W-15-4, 5
Fuel Pump Module	8W-15-14	Right Front Turn Signal Lamp	8W-15-4, 5
Fuel Sender Unit	8W-15-15	Right Headlamp	8W-15-4, 5
G100	8W-15-2, 3	Right License Lamp	8W-15-12
G101	8W-15-2, 3	Right Rear Fog Lamp	8W-15-13
G104	8W-15-2, 3	Right Rear Side Marker Lamp	8W-15-13
G105	8W-15-4	Right Rear Turn Signal Lamp	8W-15-13
G106	8W-15-4, 5	Right Side Repeater	8W-15-4, 5
G107	8W-15-6, 7	Right Tail/Stop Lamp	8W-15-13
G108	8W-15-6, 7	Right Visor/Vanity Lamp	8W-15-18
G109	8W-15-8, 9	Seat Belt Switch	8W-15-15
G110	8W-15-10	Stop Lamp Switch	8W-15-9, 20
G111	8W-15-7	Sunroof Control Module	8W-15-18
G300	8W-15-13	Switch Pod	8W-15-19
G301	8W-15-14	Trailer Tow Left Turn Relay	8W-15-11
G302	8W-15-15, 26	Trailer Tow Right Turn Relay	8W-15-11
G303	8W-15-20	Trailer Tow Stop Lamp Relay	8W-15-11
Generator	8W-15-2	Underhood Lamp	8W-15-6, 7, 9
Glove Box Lamp	8W-15-19	Upper Hose Coolant Switch	8W-15-10
Headlamp Leveling Switch	8W-15-20	Upstream Heated Oxygen Sensor	8W-15-4
Headlamp Switch	8W-15-20	Vehicle Information Center/ Graphic Display Module	8W-15-16, 19, 20
High Pressure Cut-Out Switch	8W-15-10	Vehicle Speed Control Servo	8W-15-6, 7
High Speed Cooling Fan Relay	8W-15-10	Windshield Washer Pump Motor	8W-15-8, 9
Horn No. 1	8W-15-4, 5	Windshield Wiper Motor	8W-15-8, 9
Horn No. 2	8W-15-4, 5	Wiper Fluid Level Sensor	8W-15-8, 9
Instrument Cluster	8W-15-19, 20		

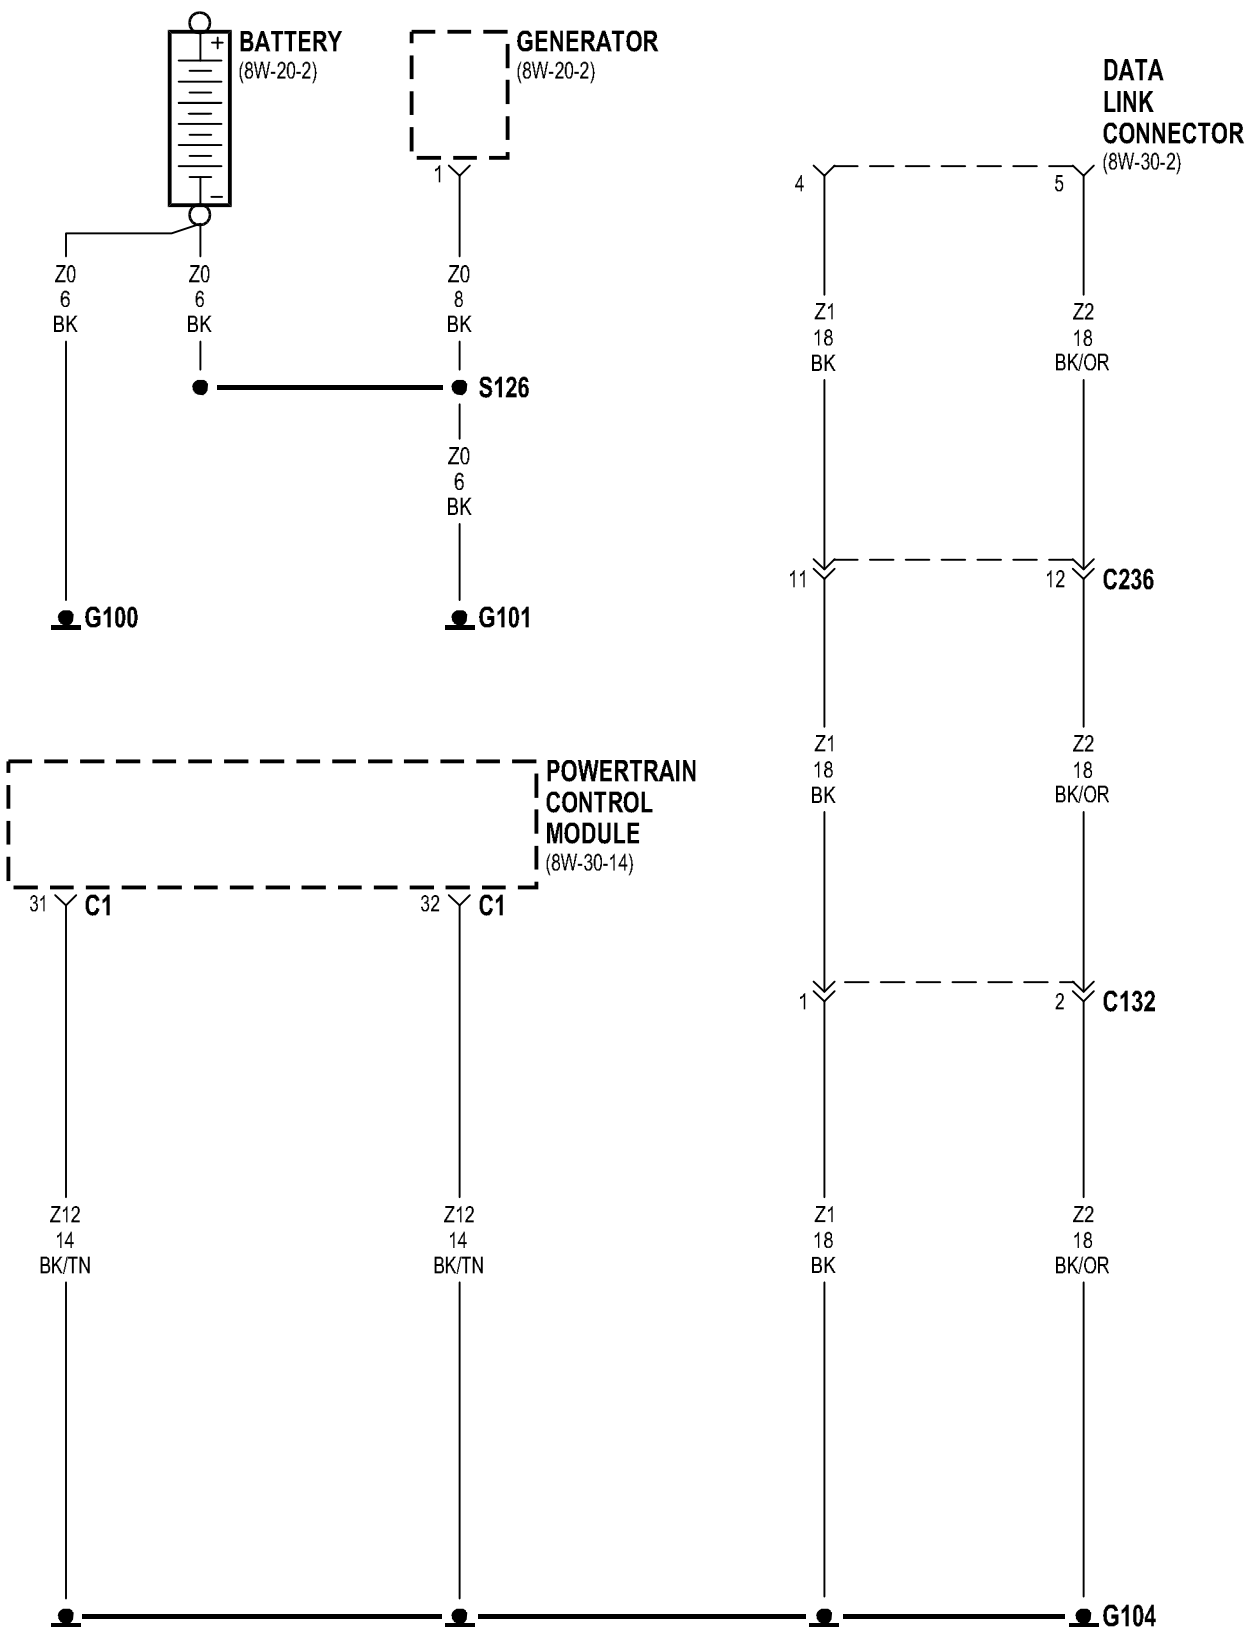


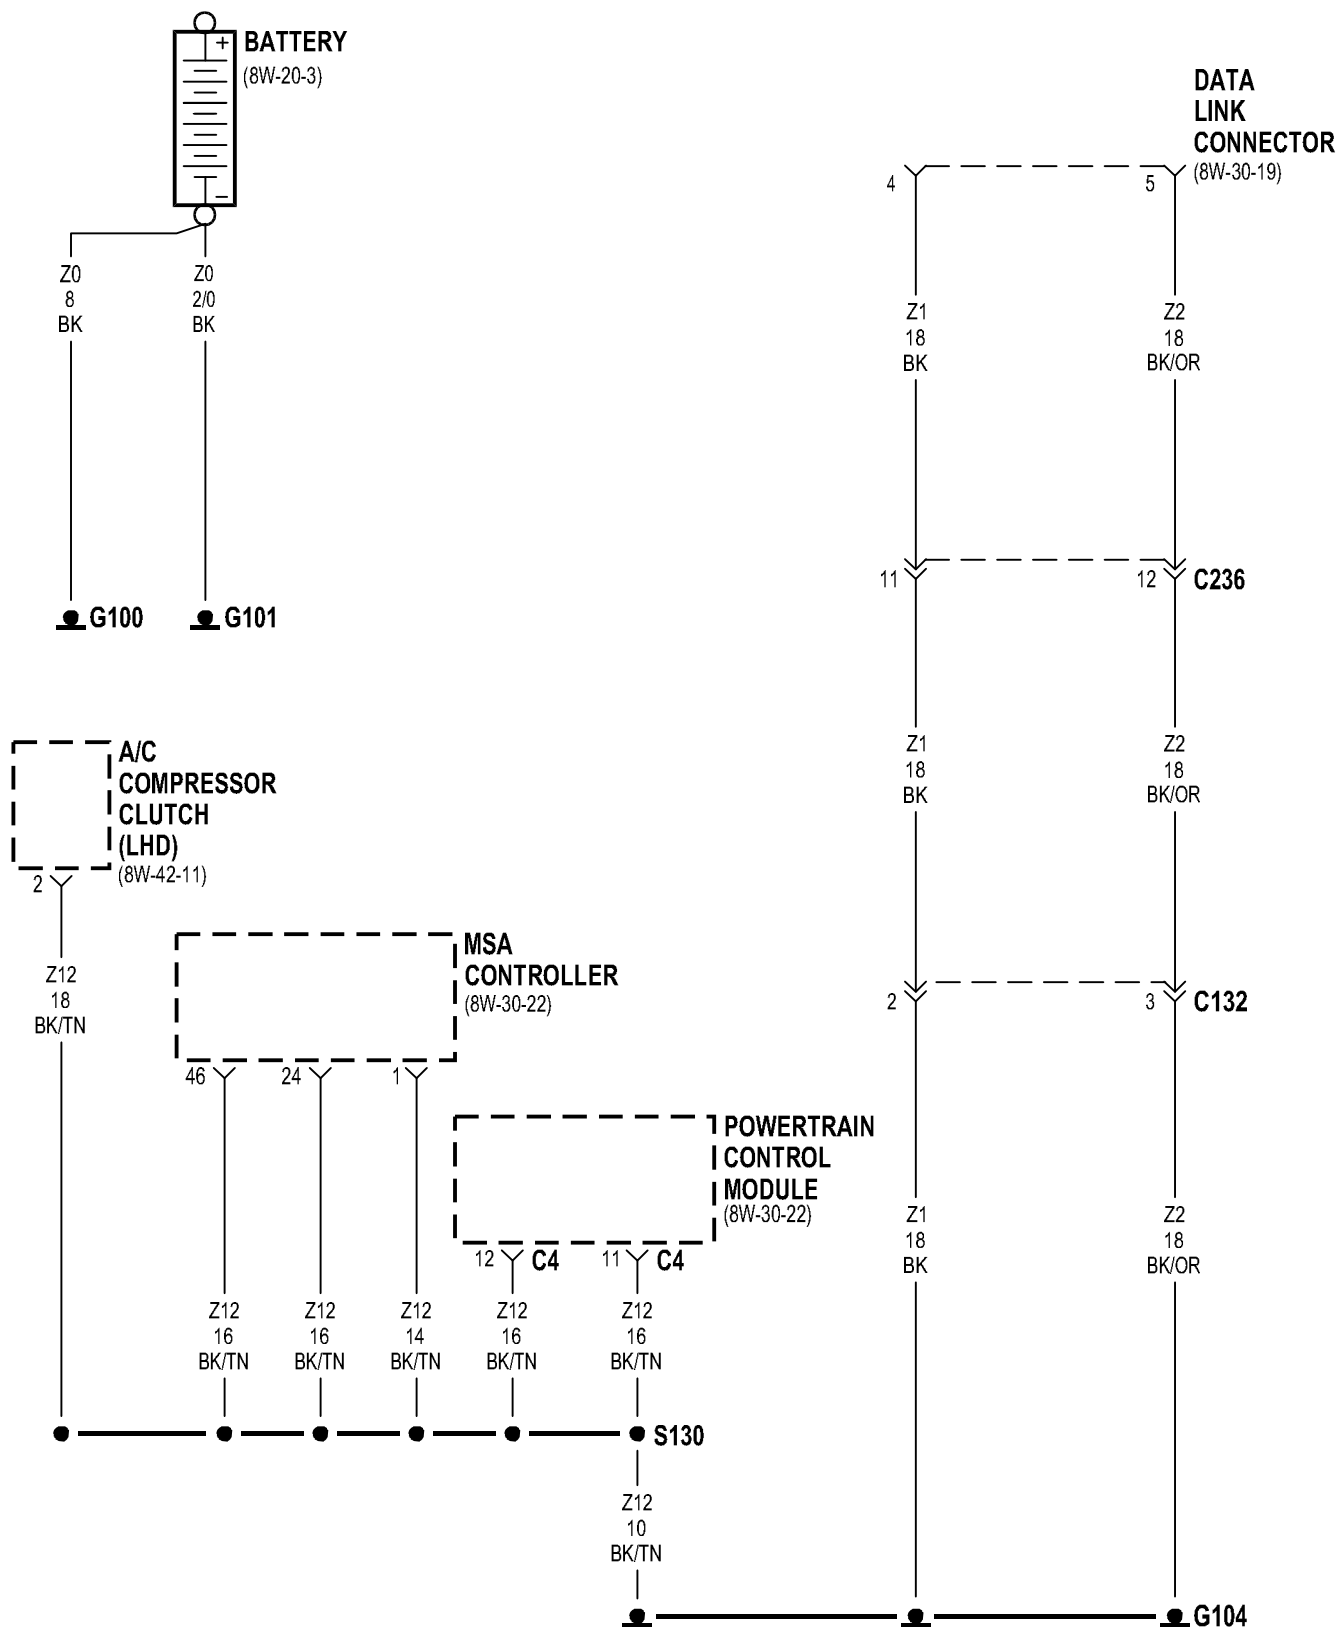


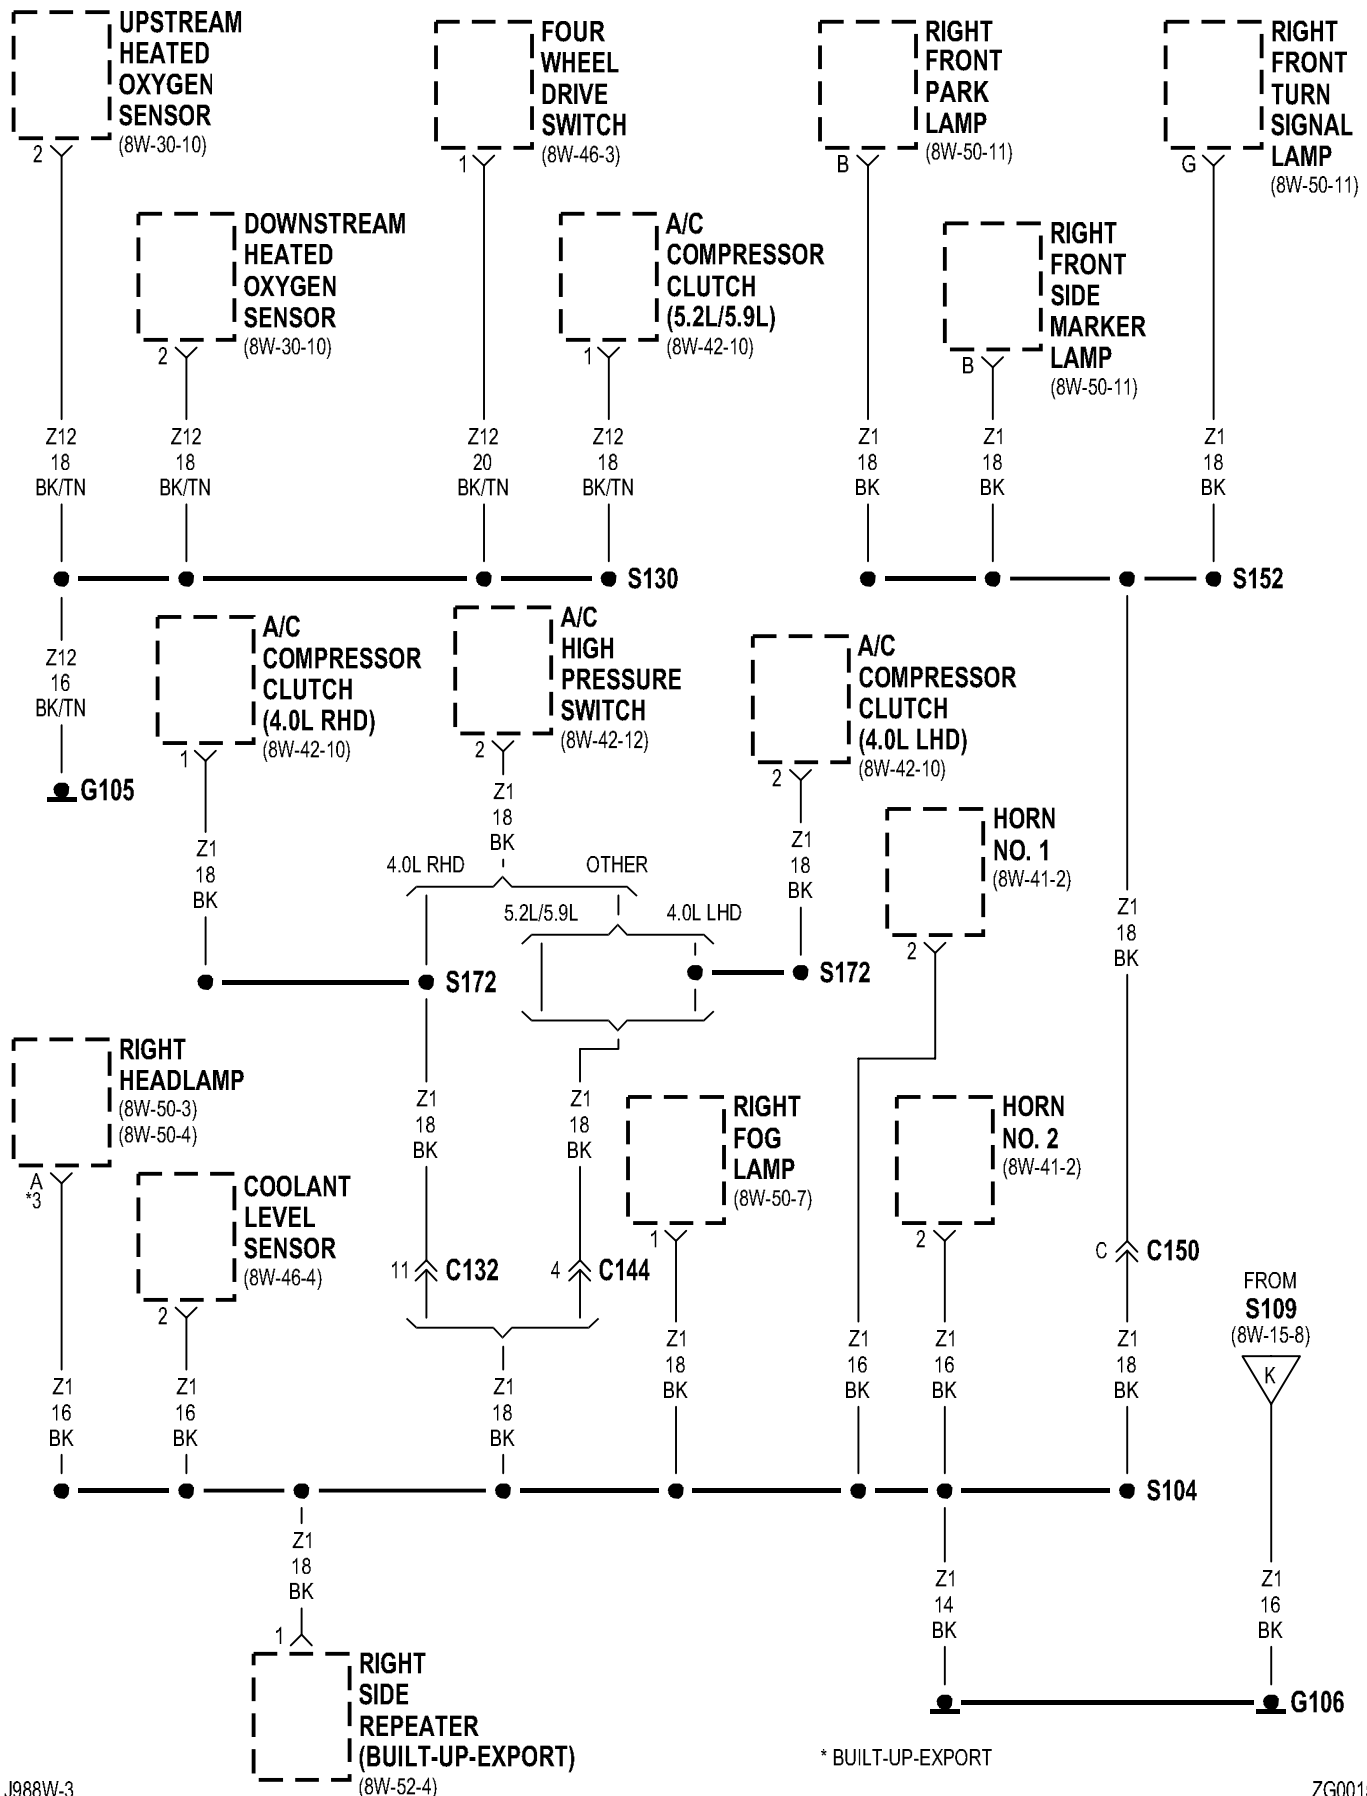

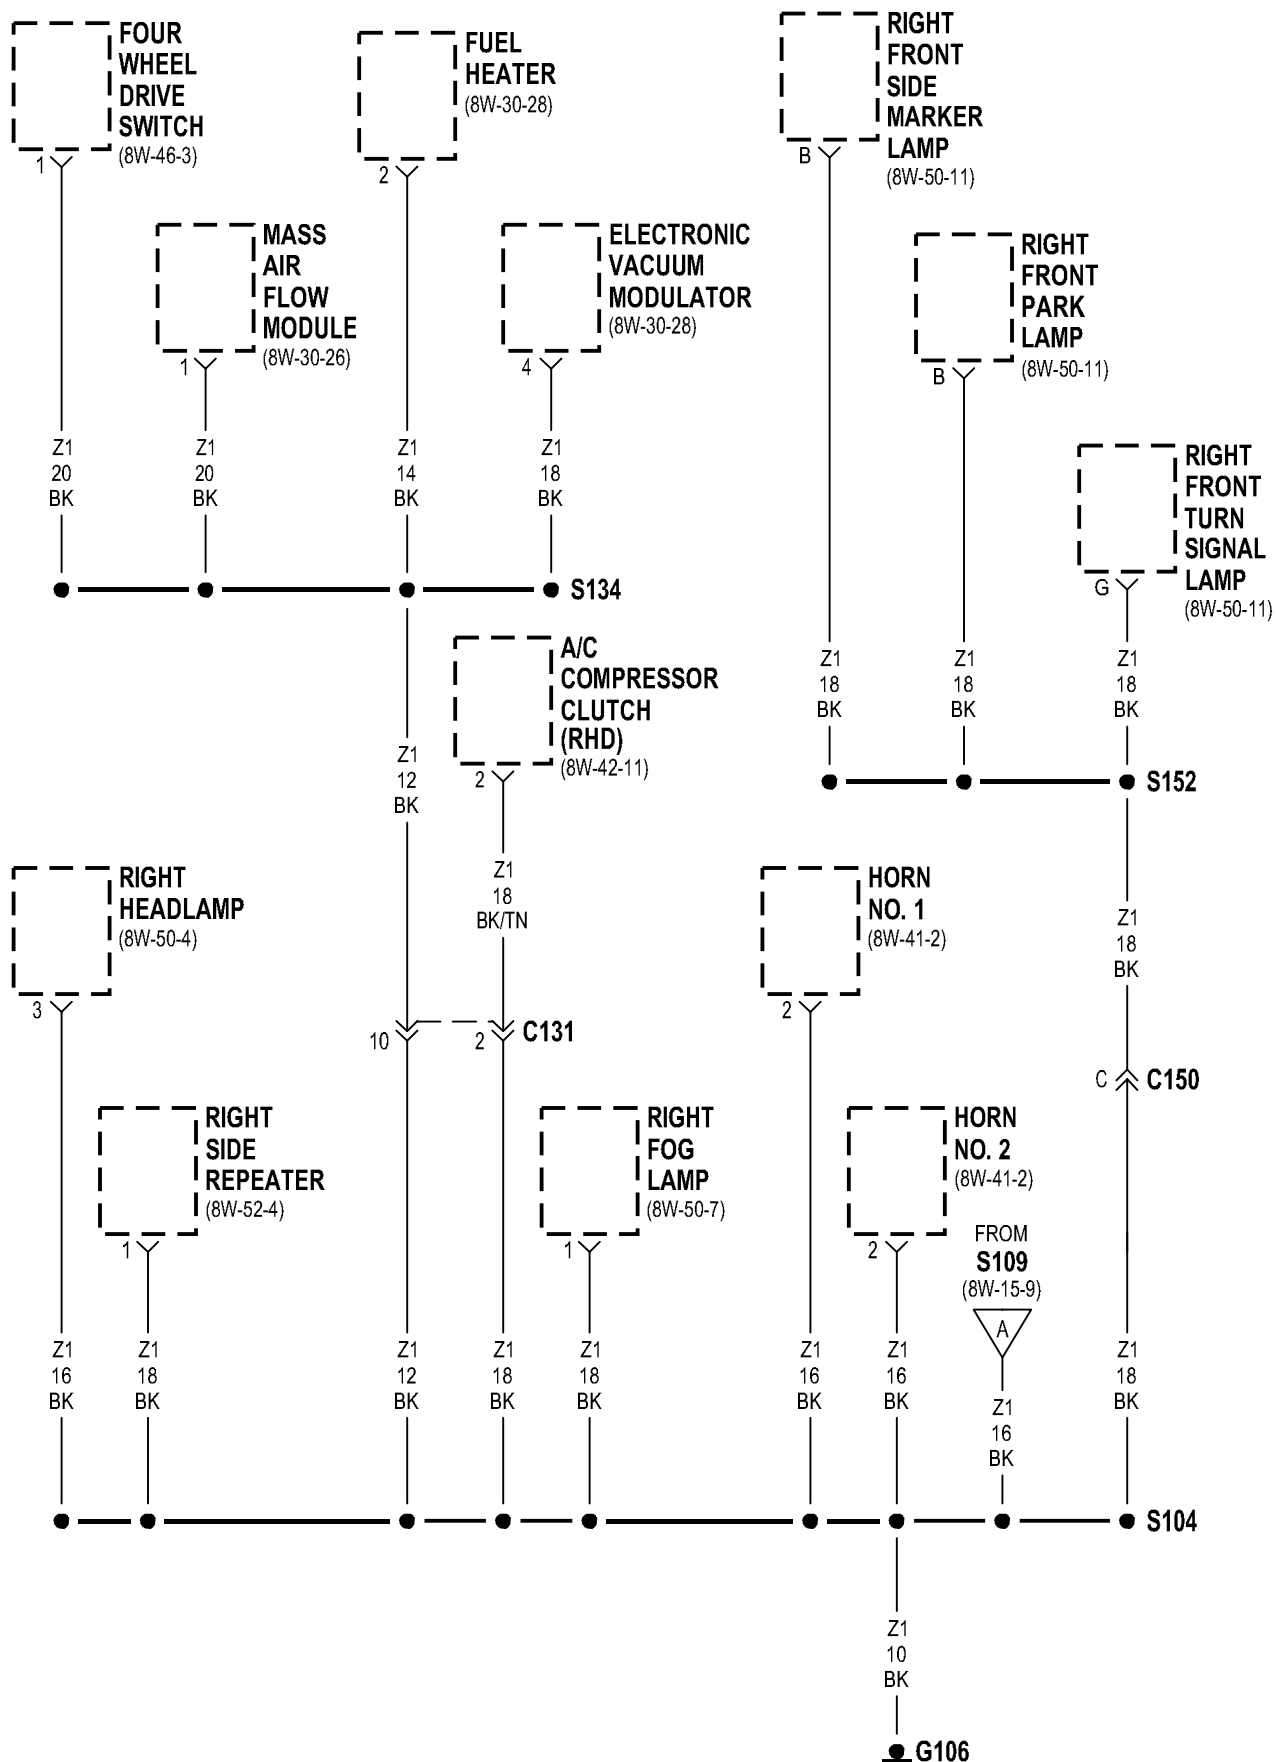


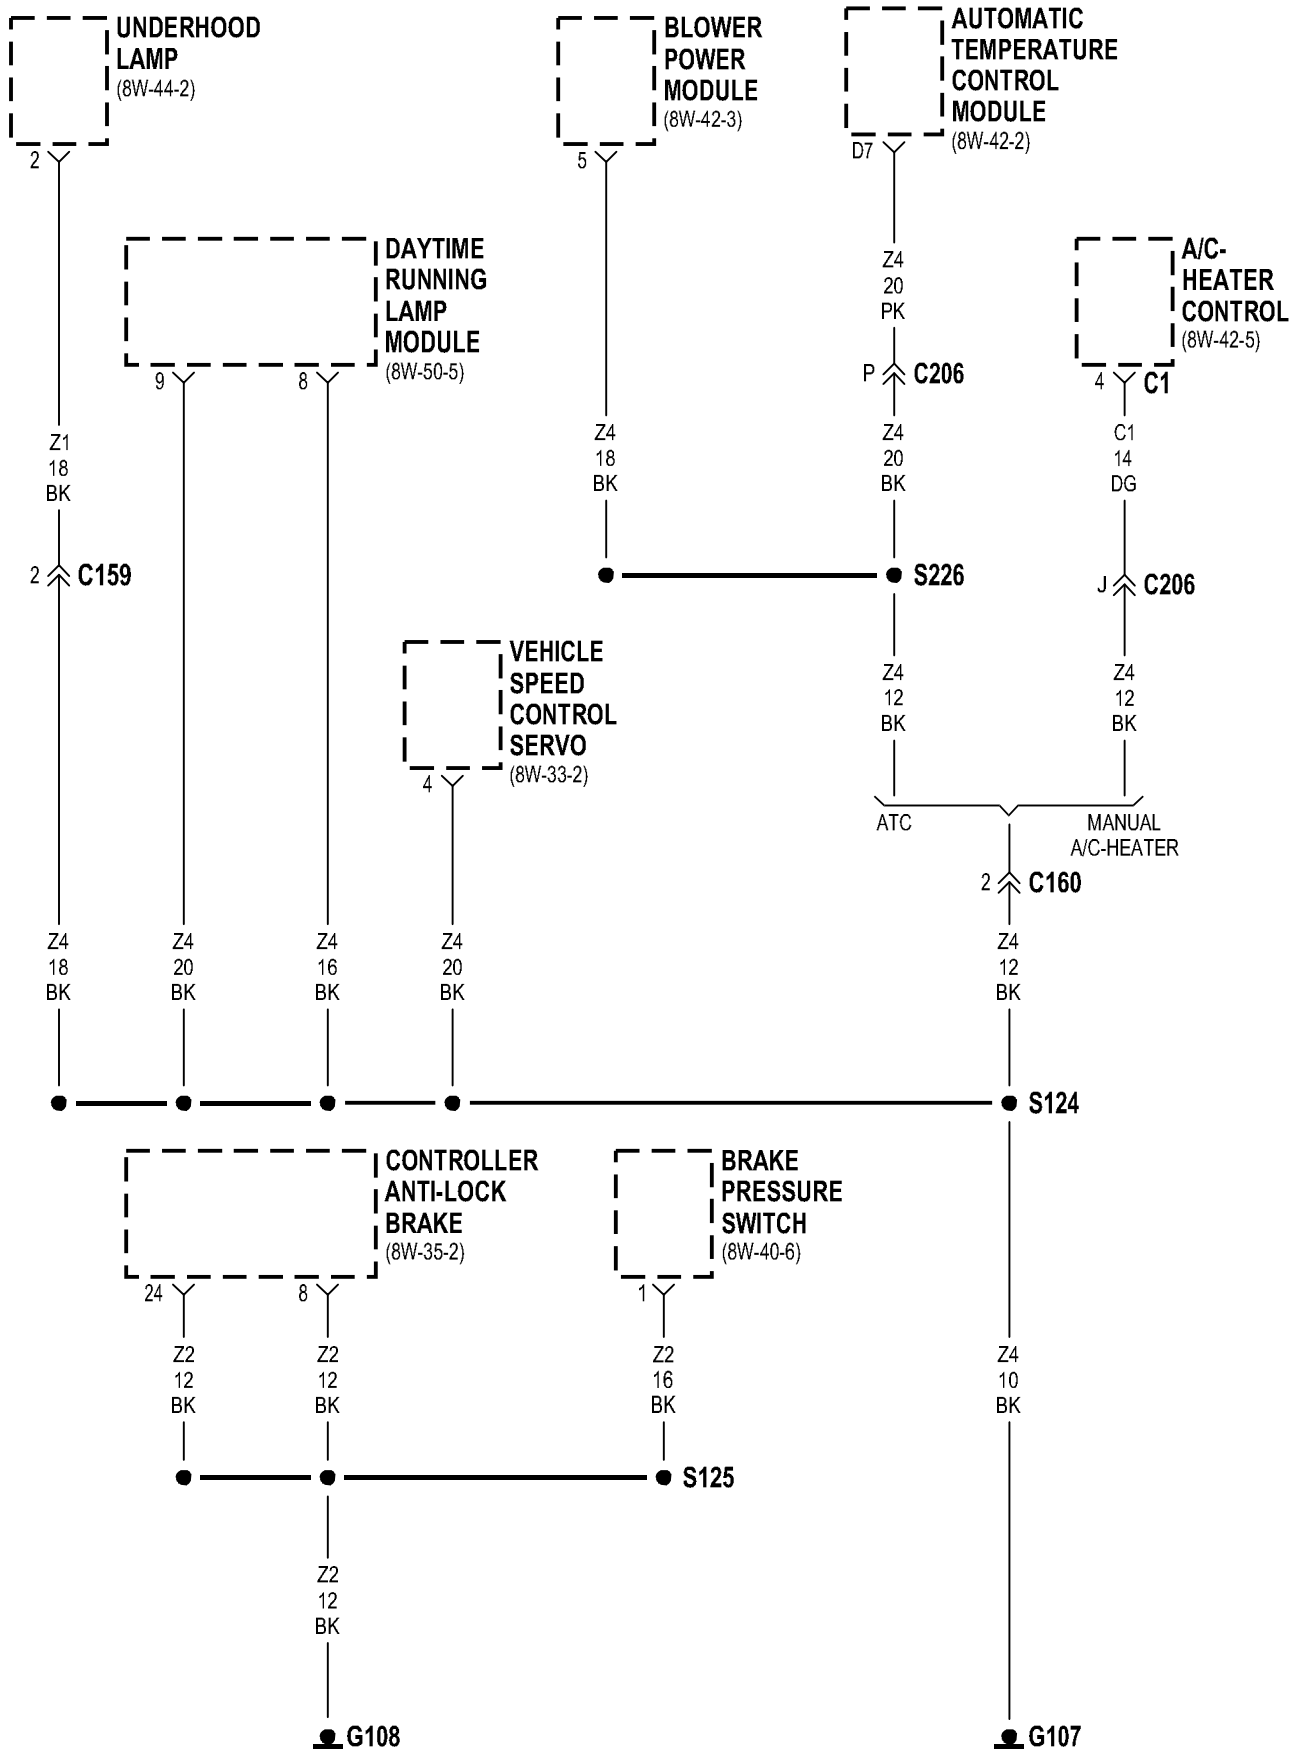


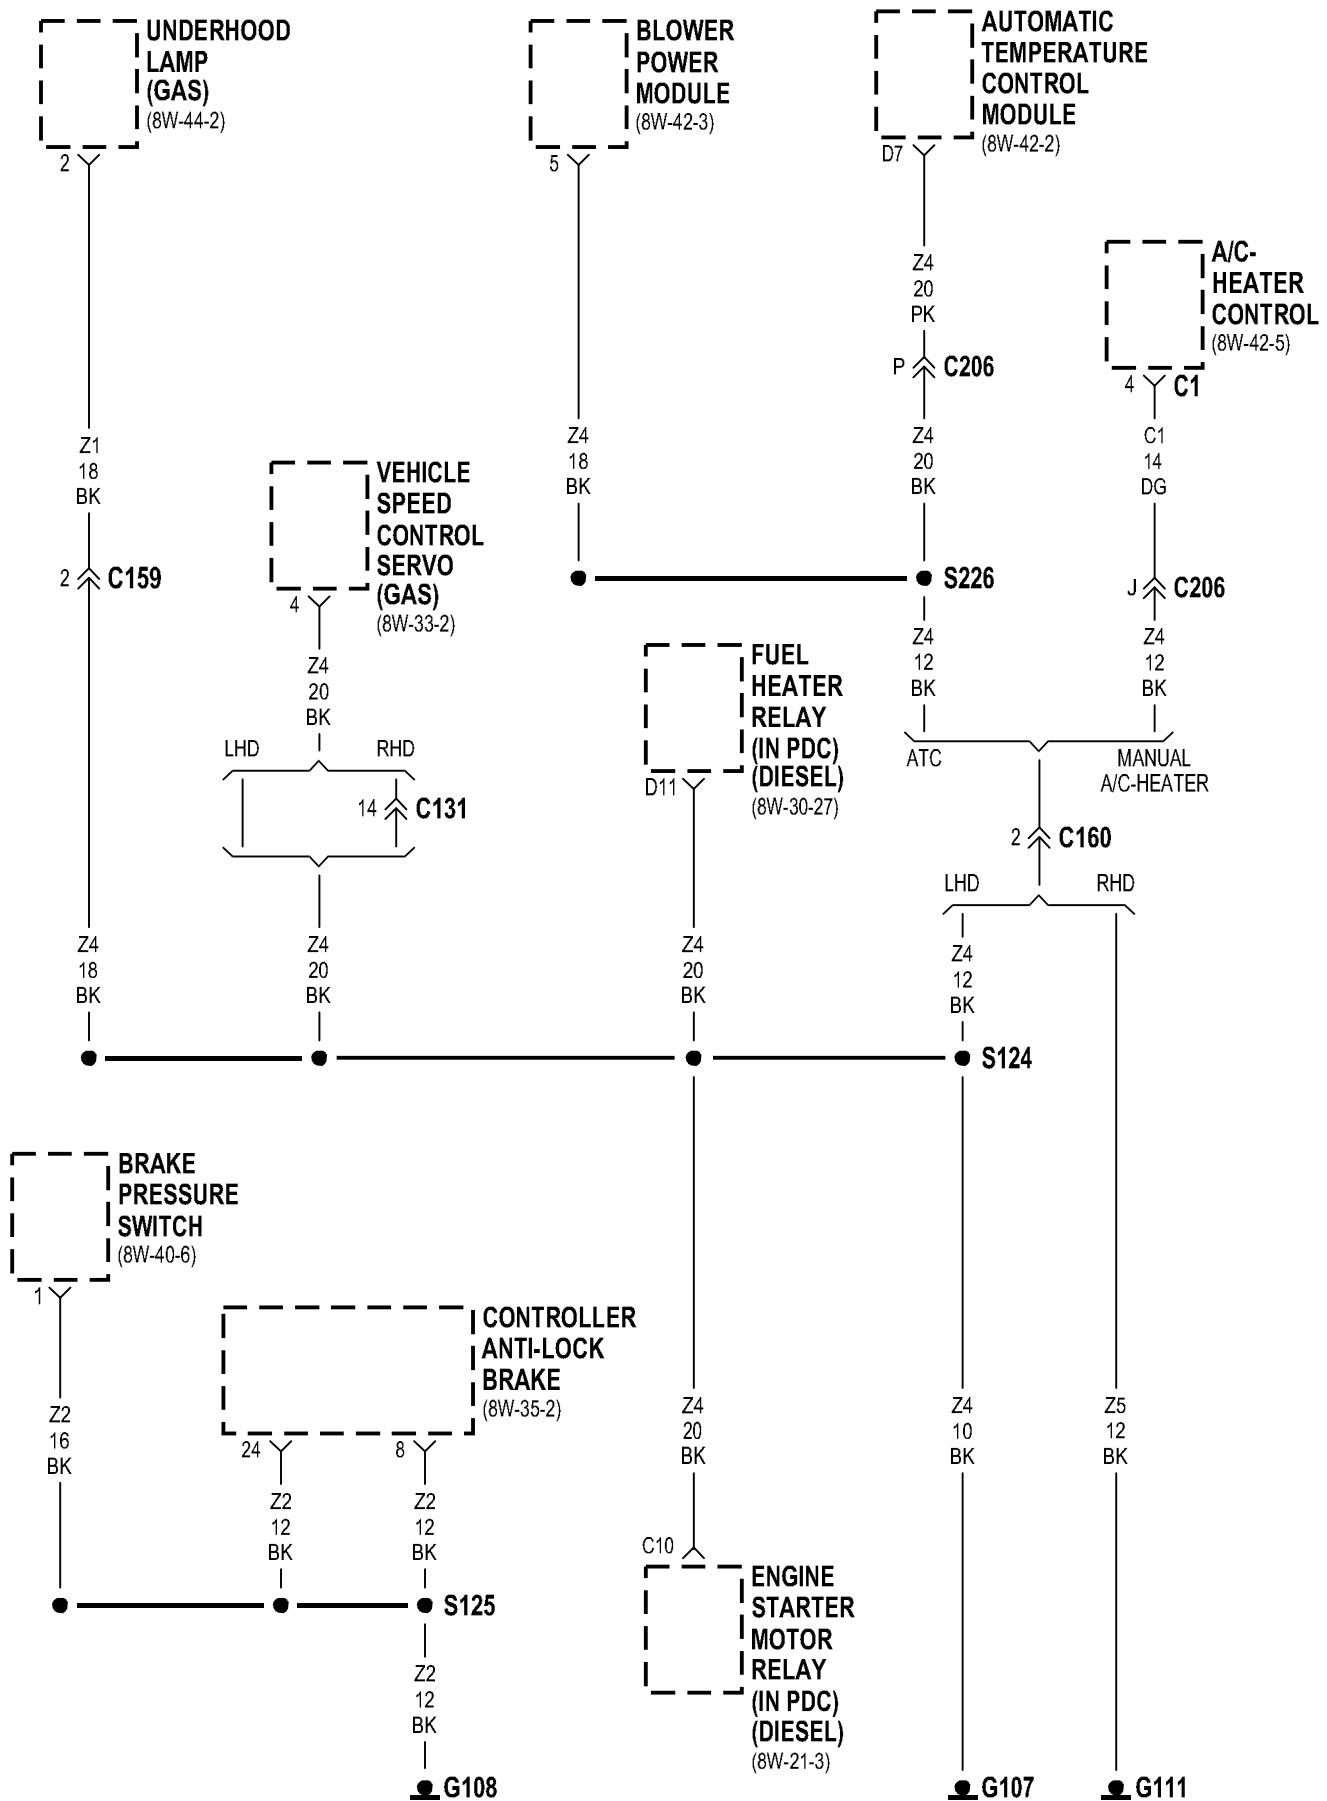

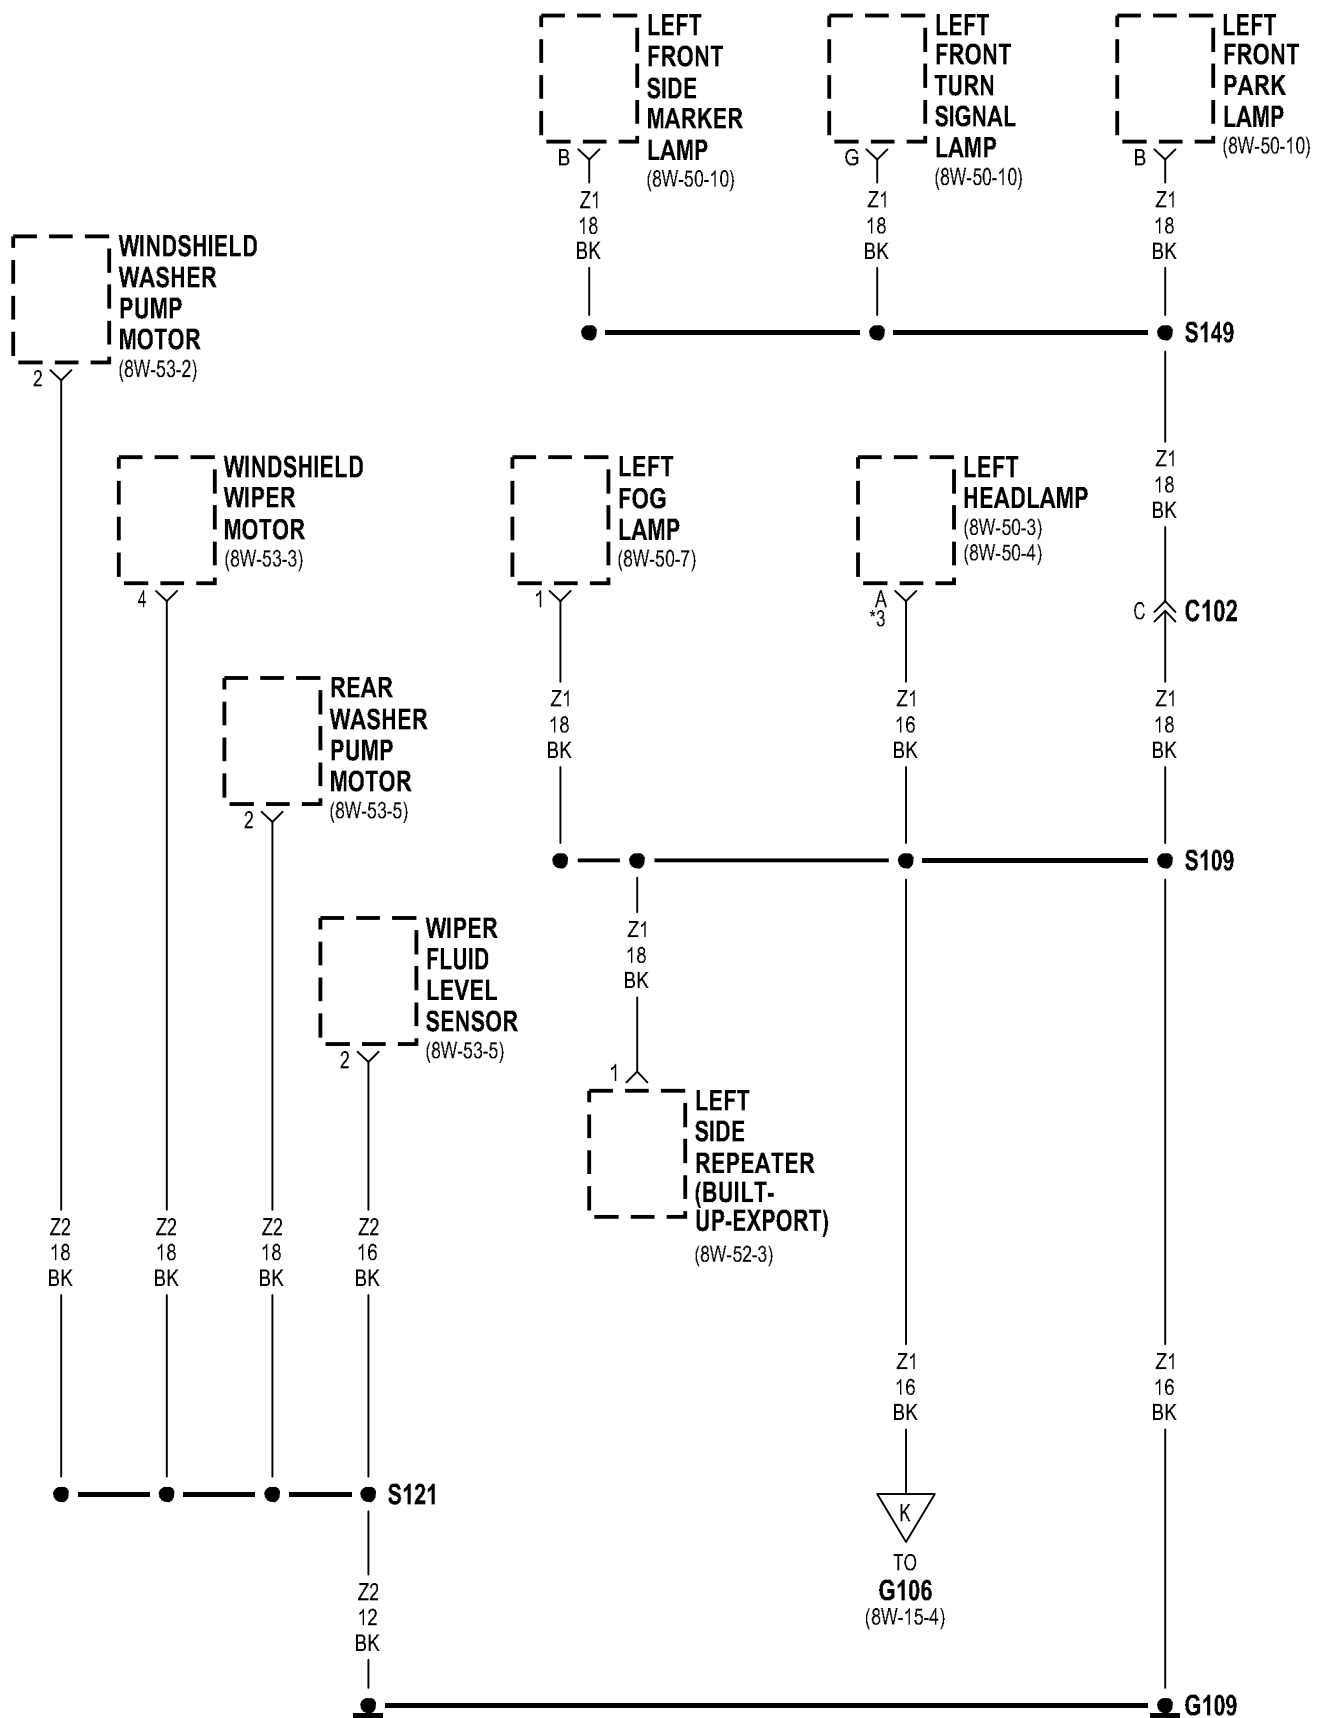



* BUILT-UP-EXPORT

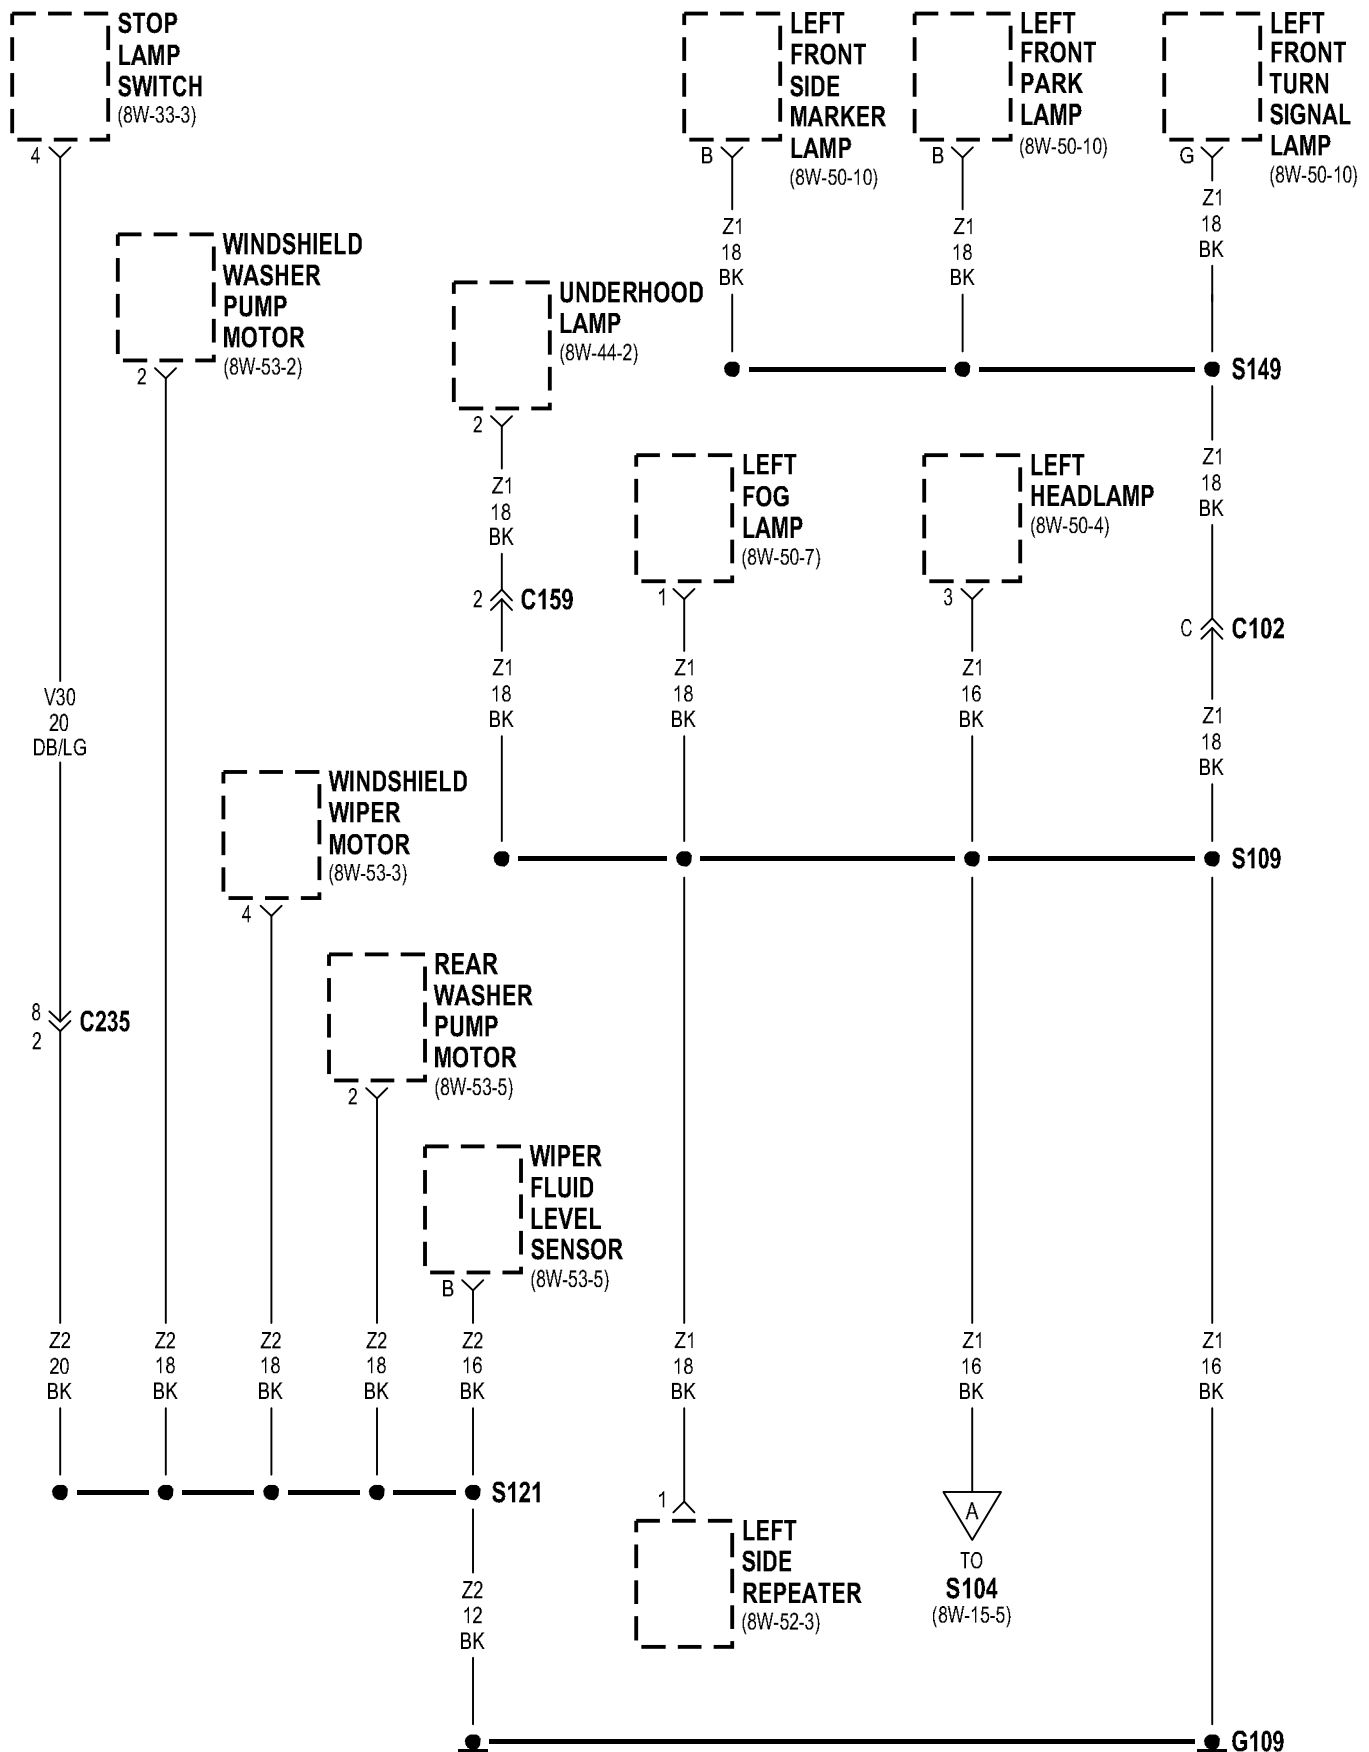


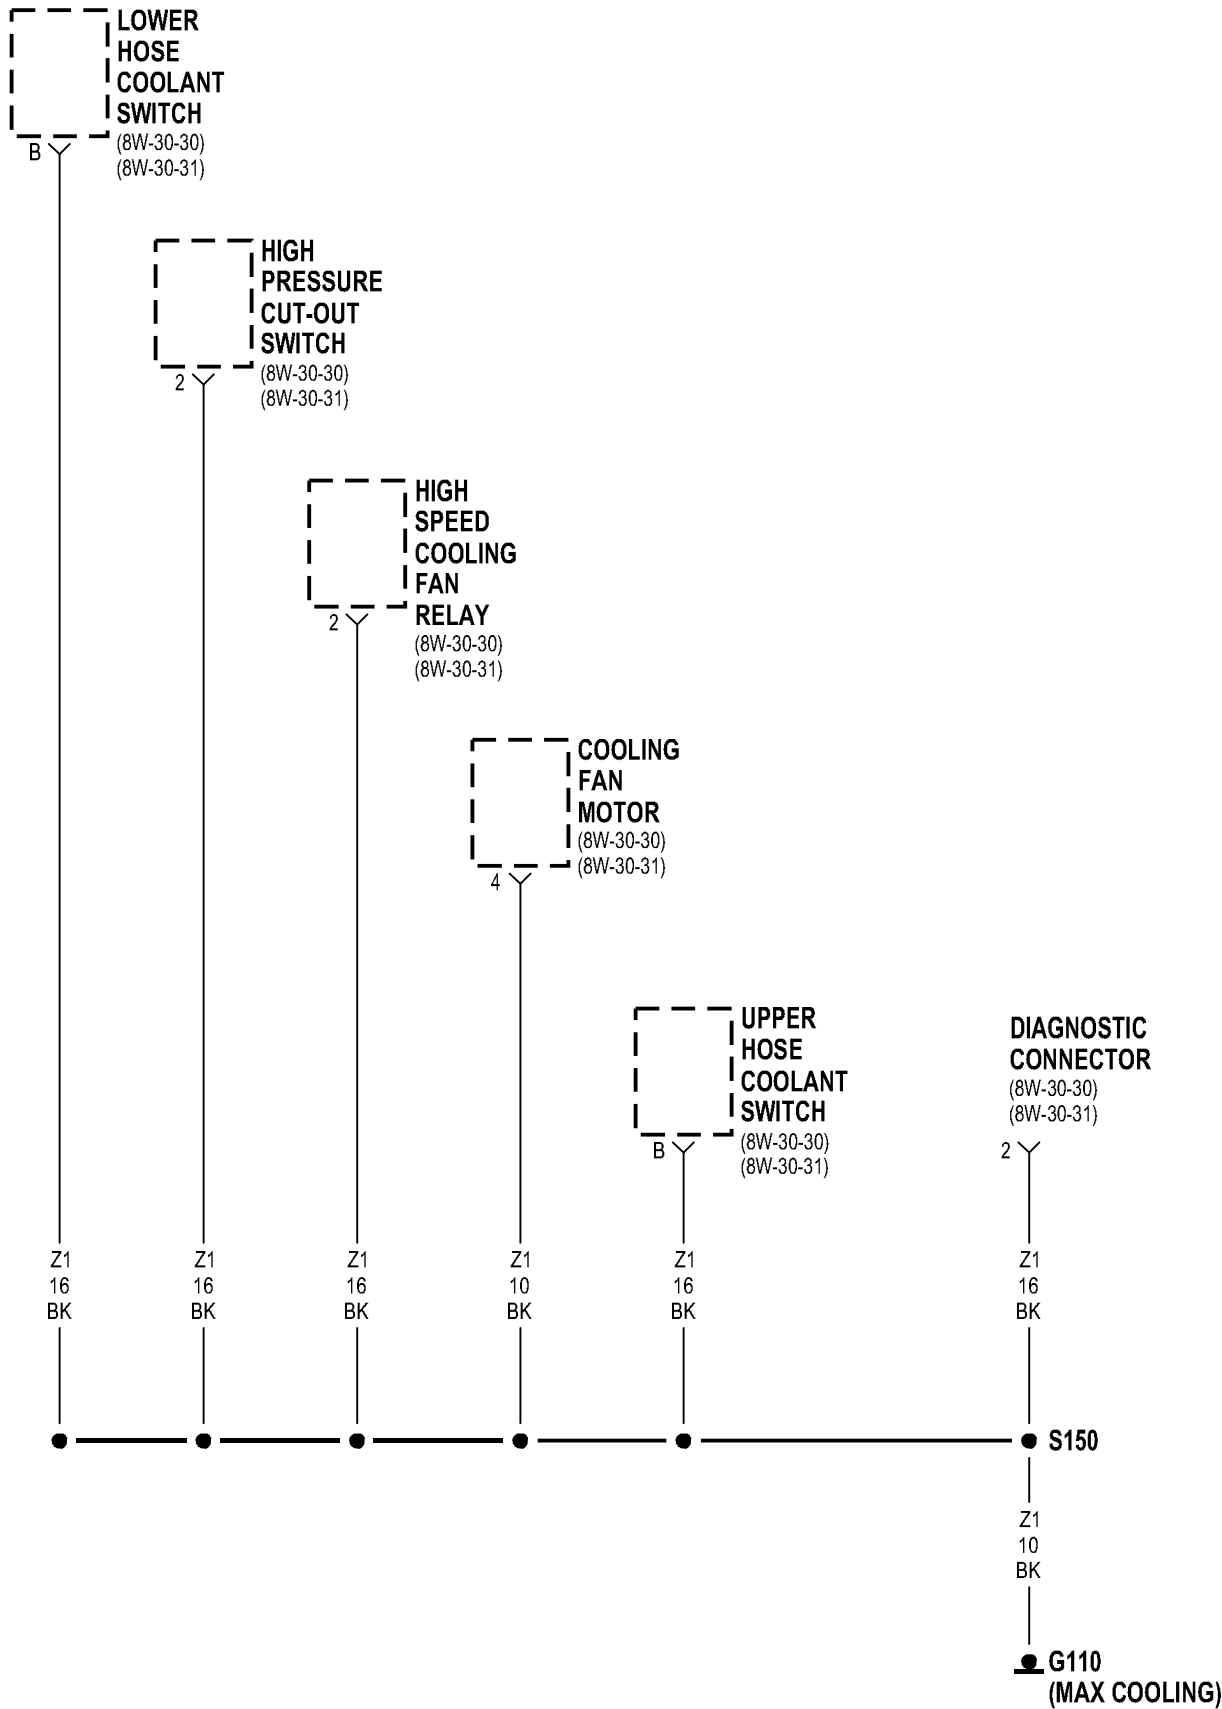




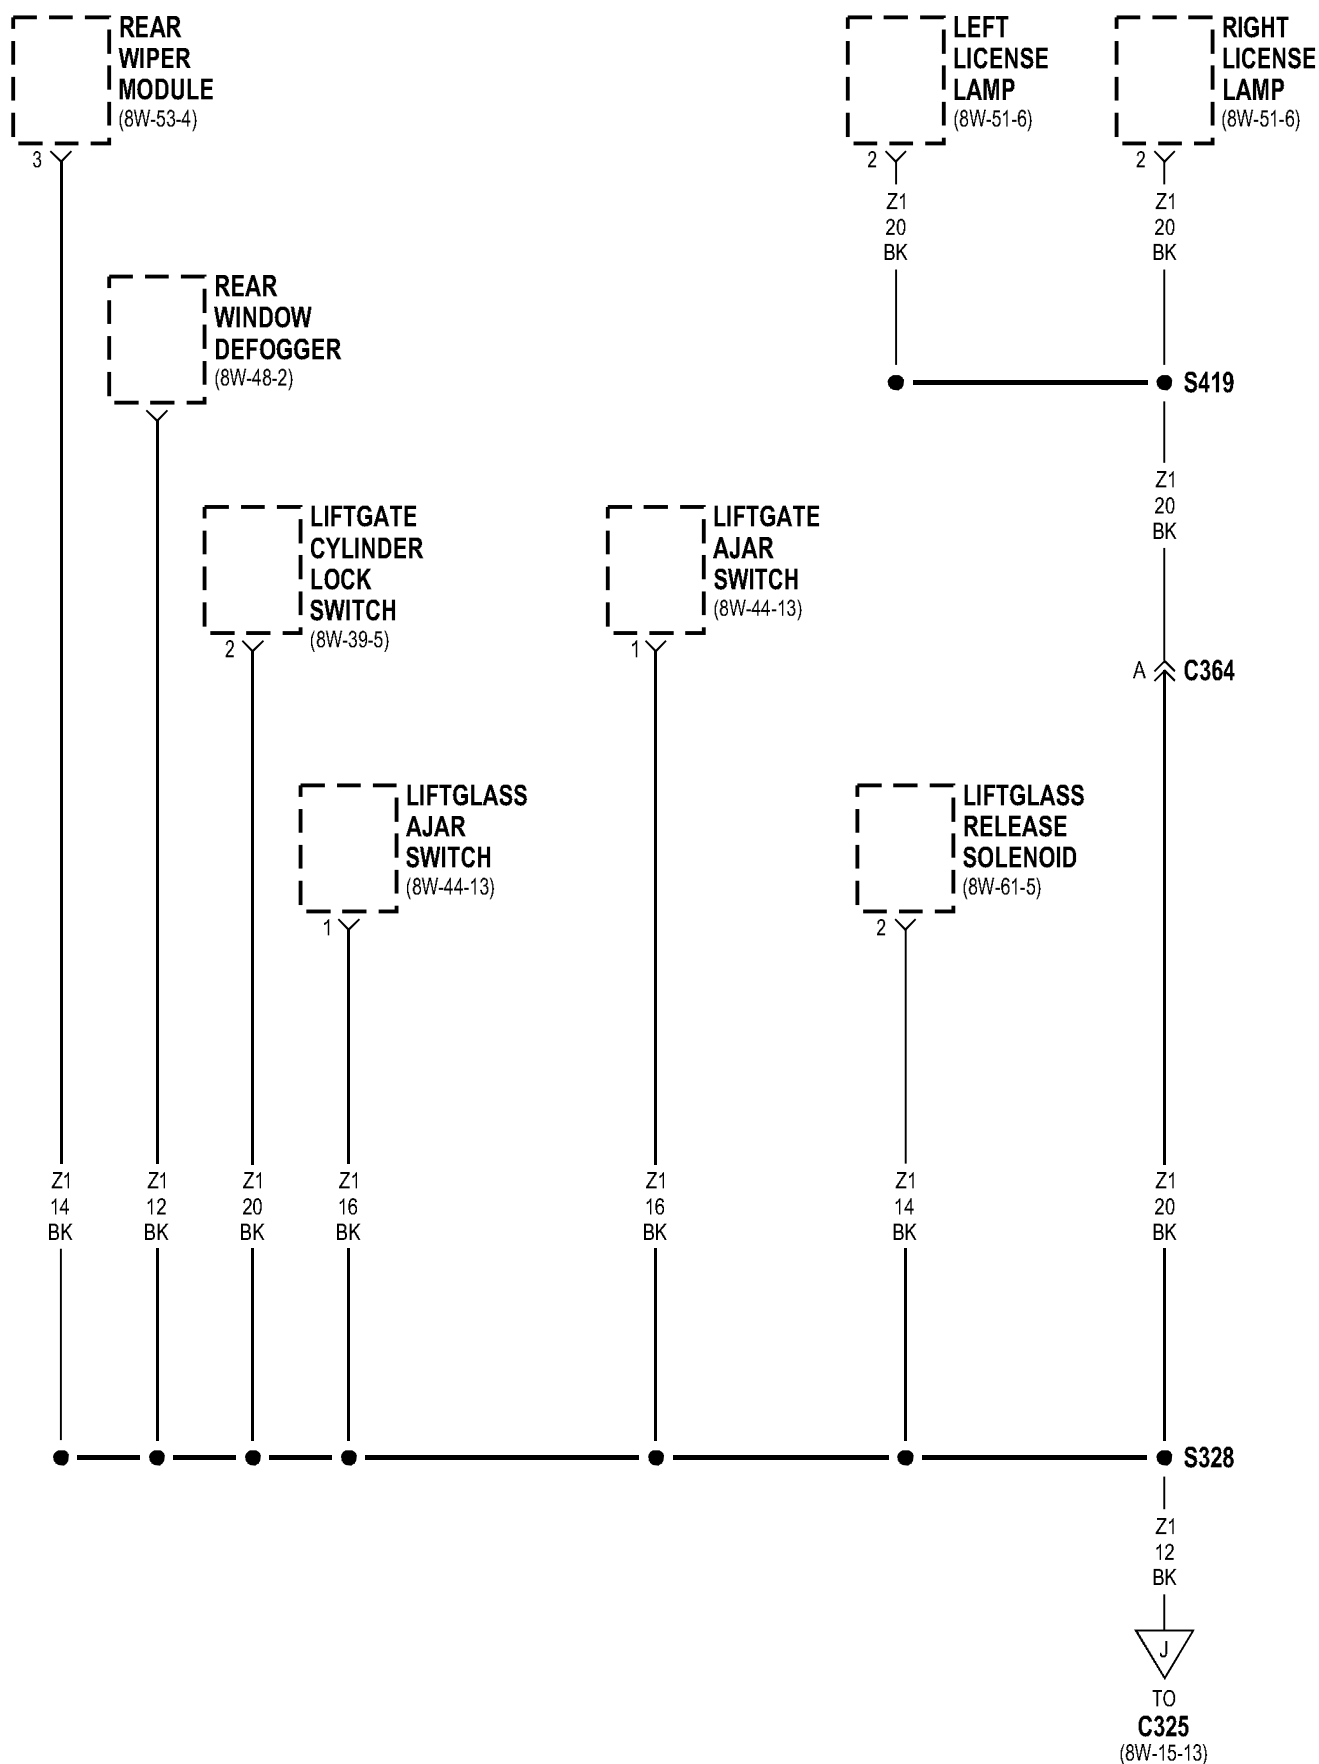


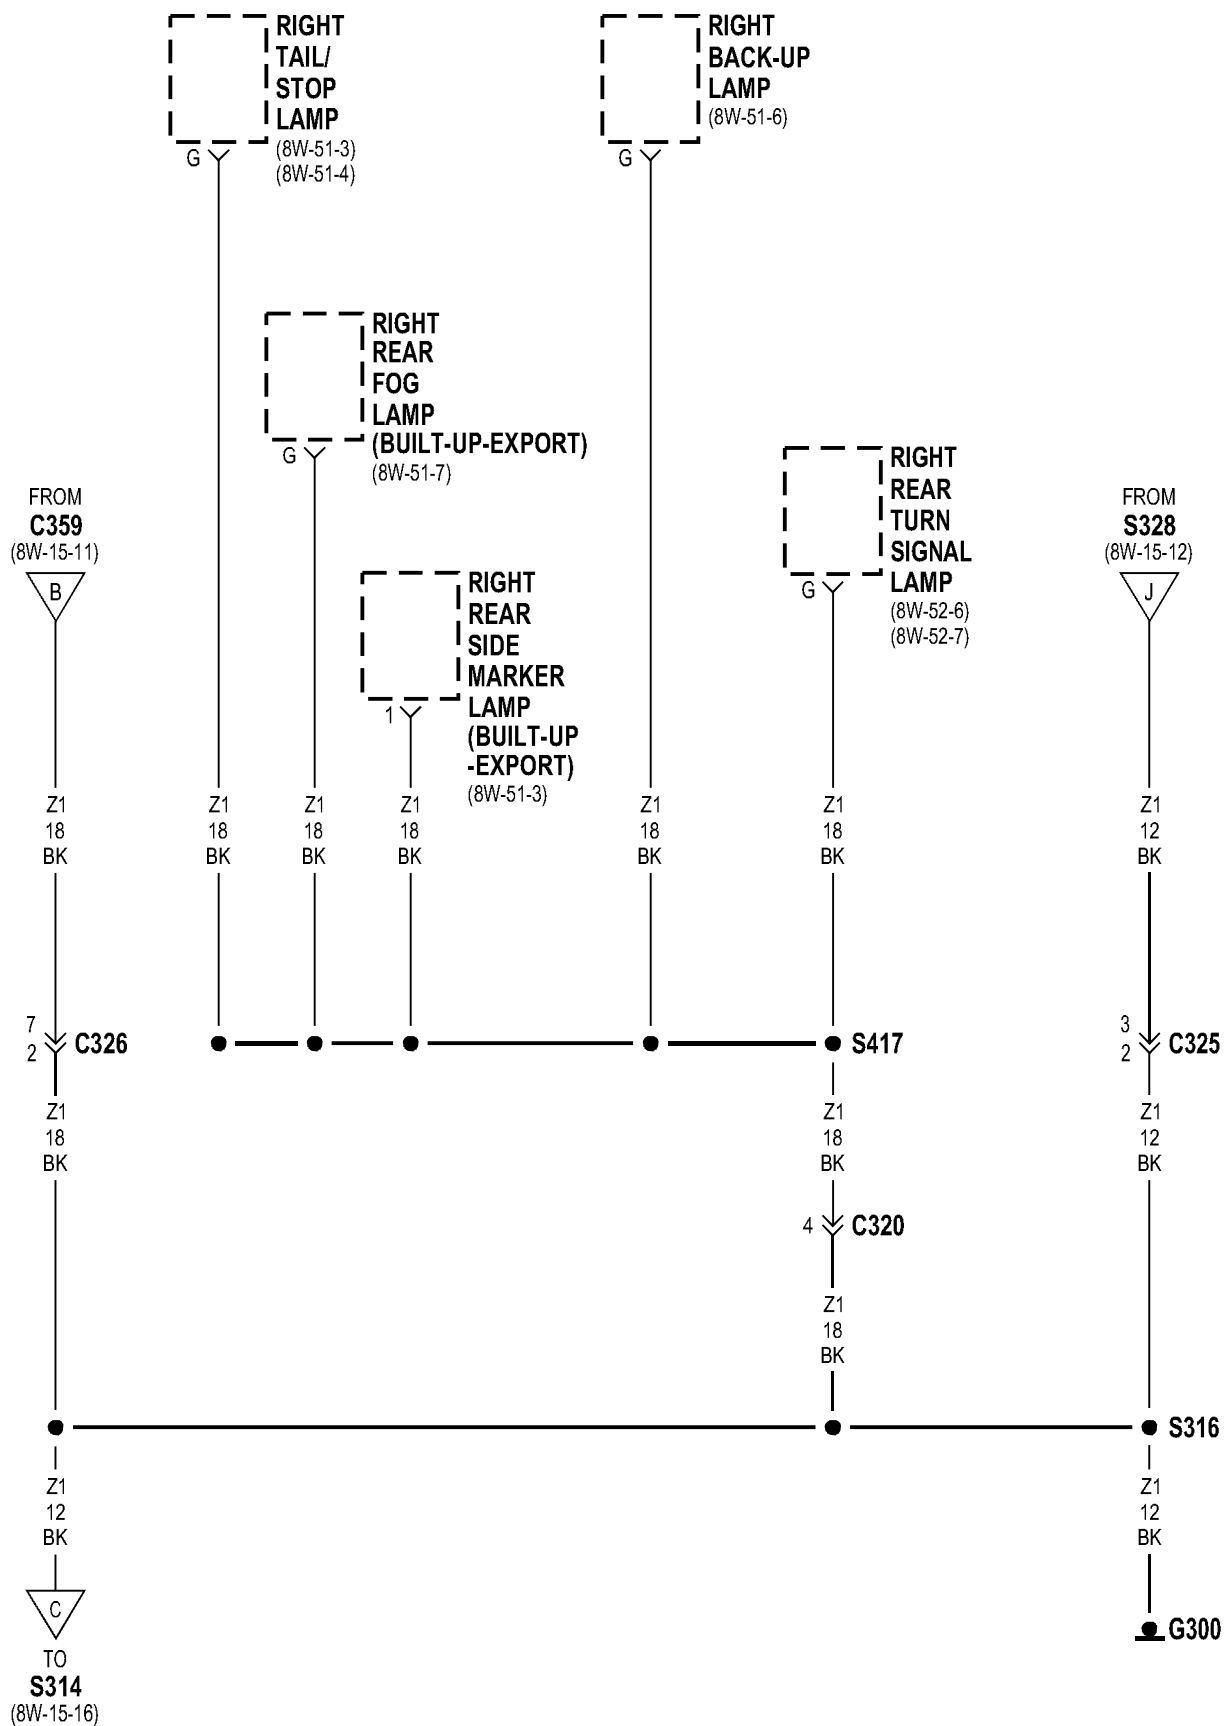


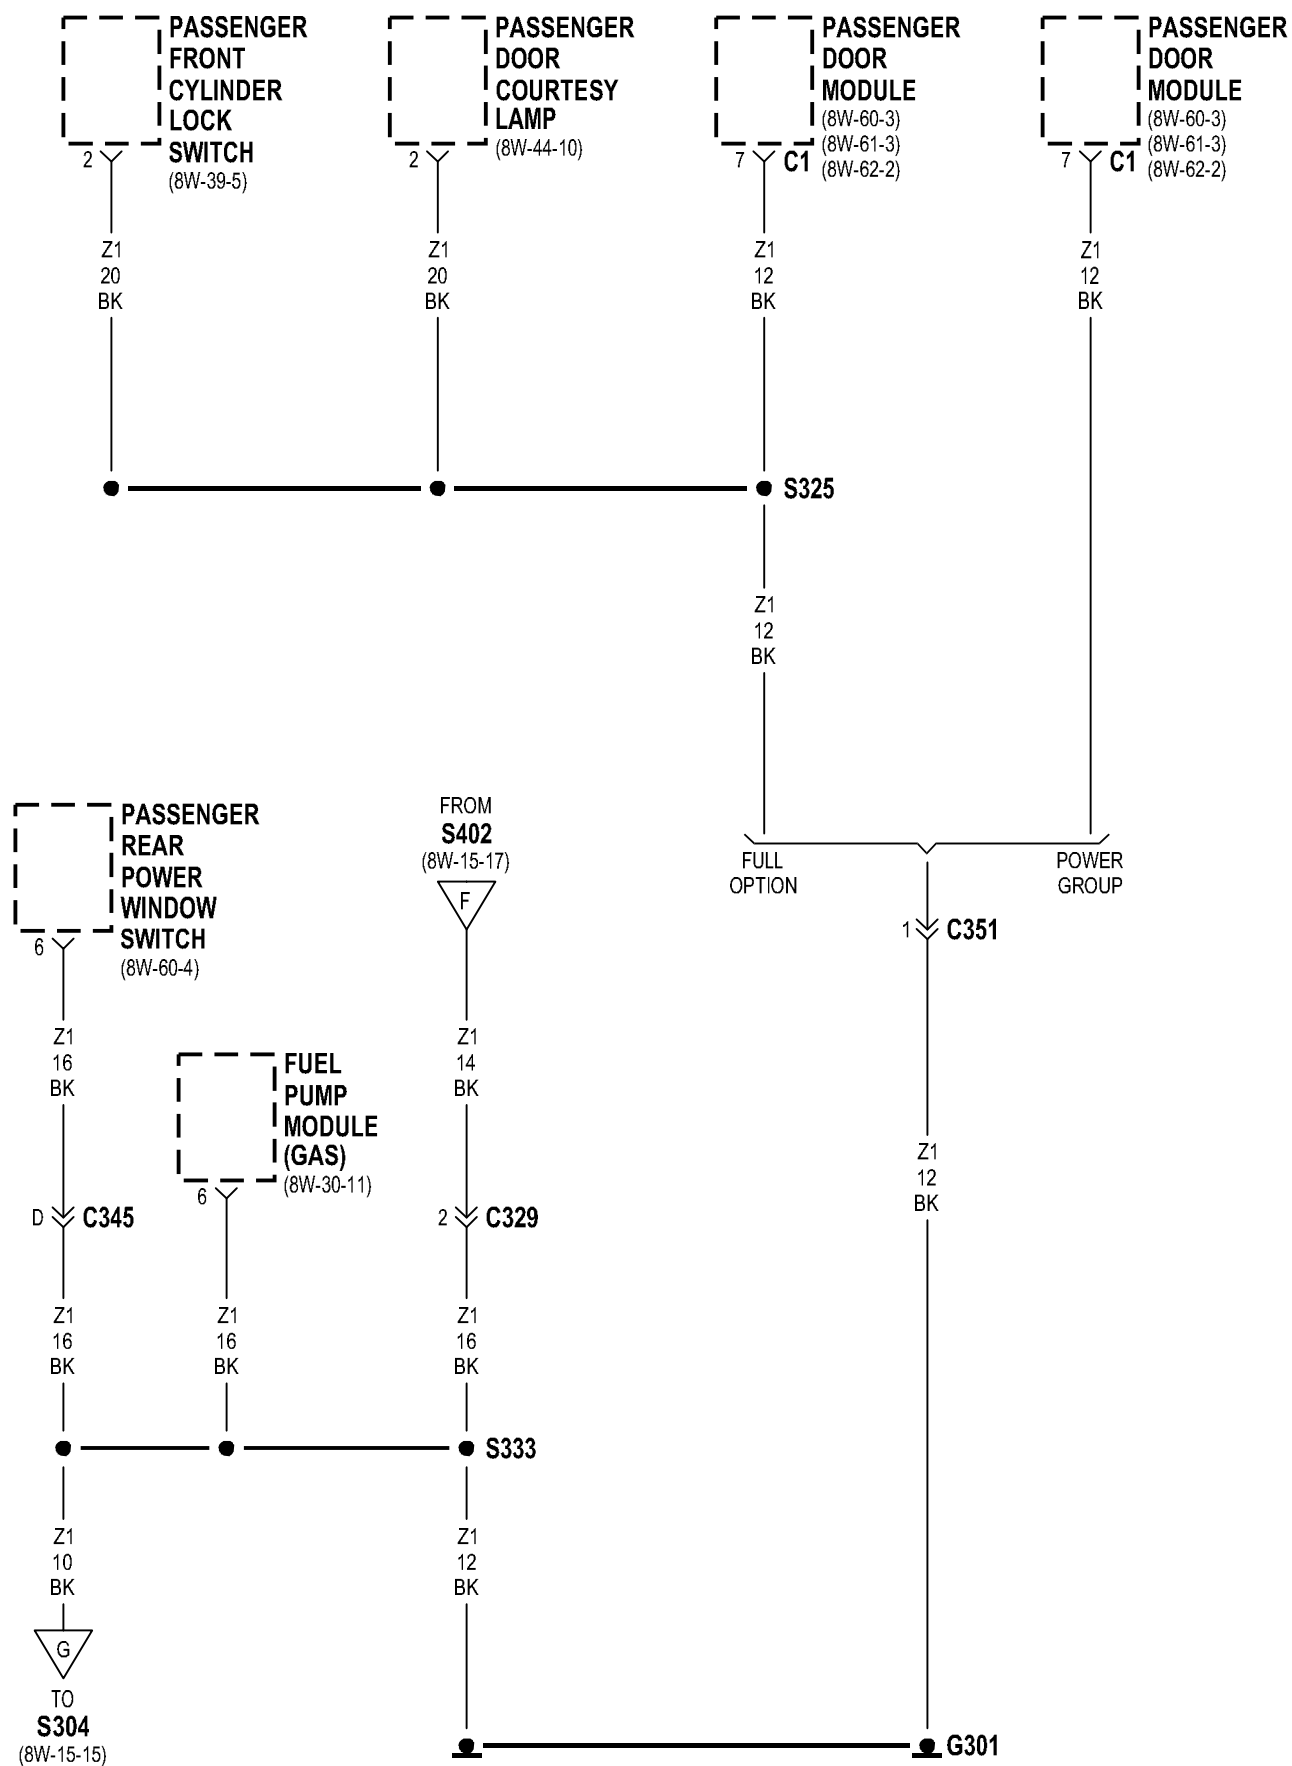


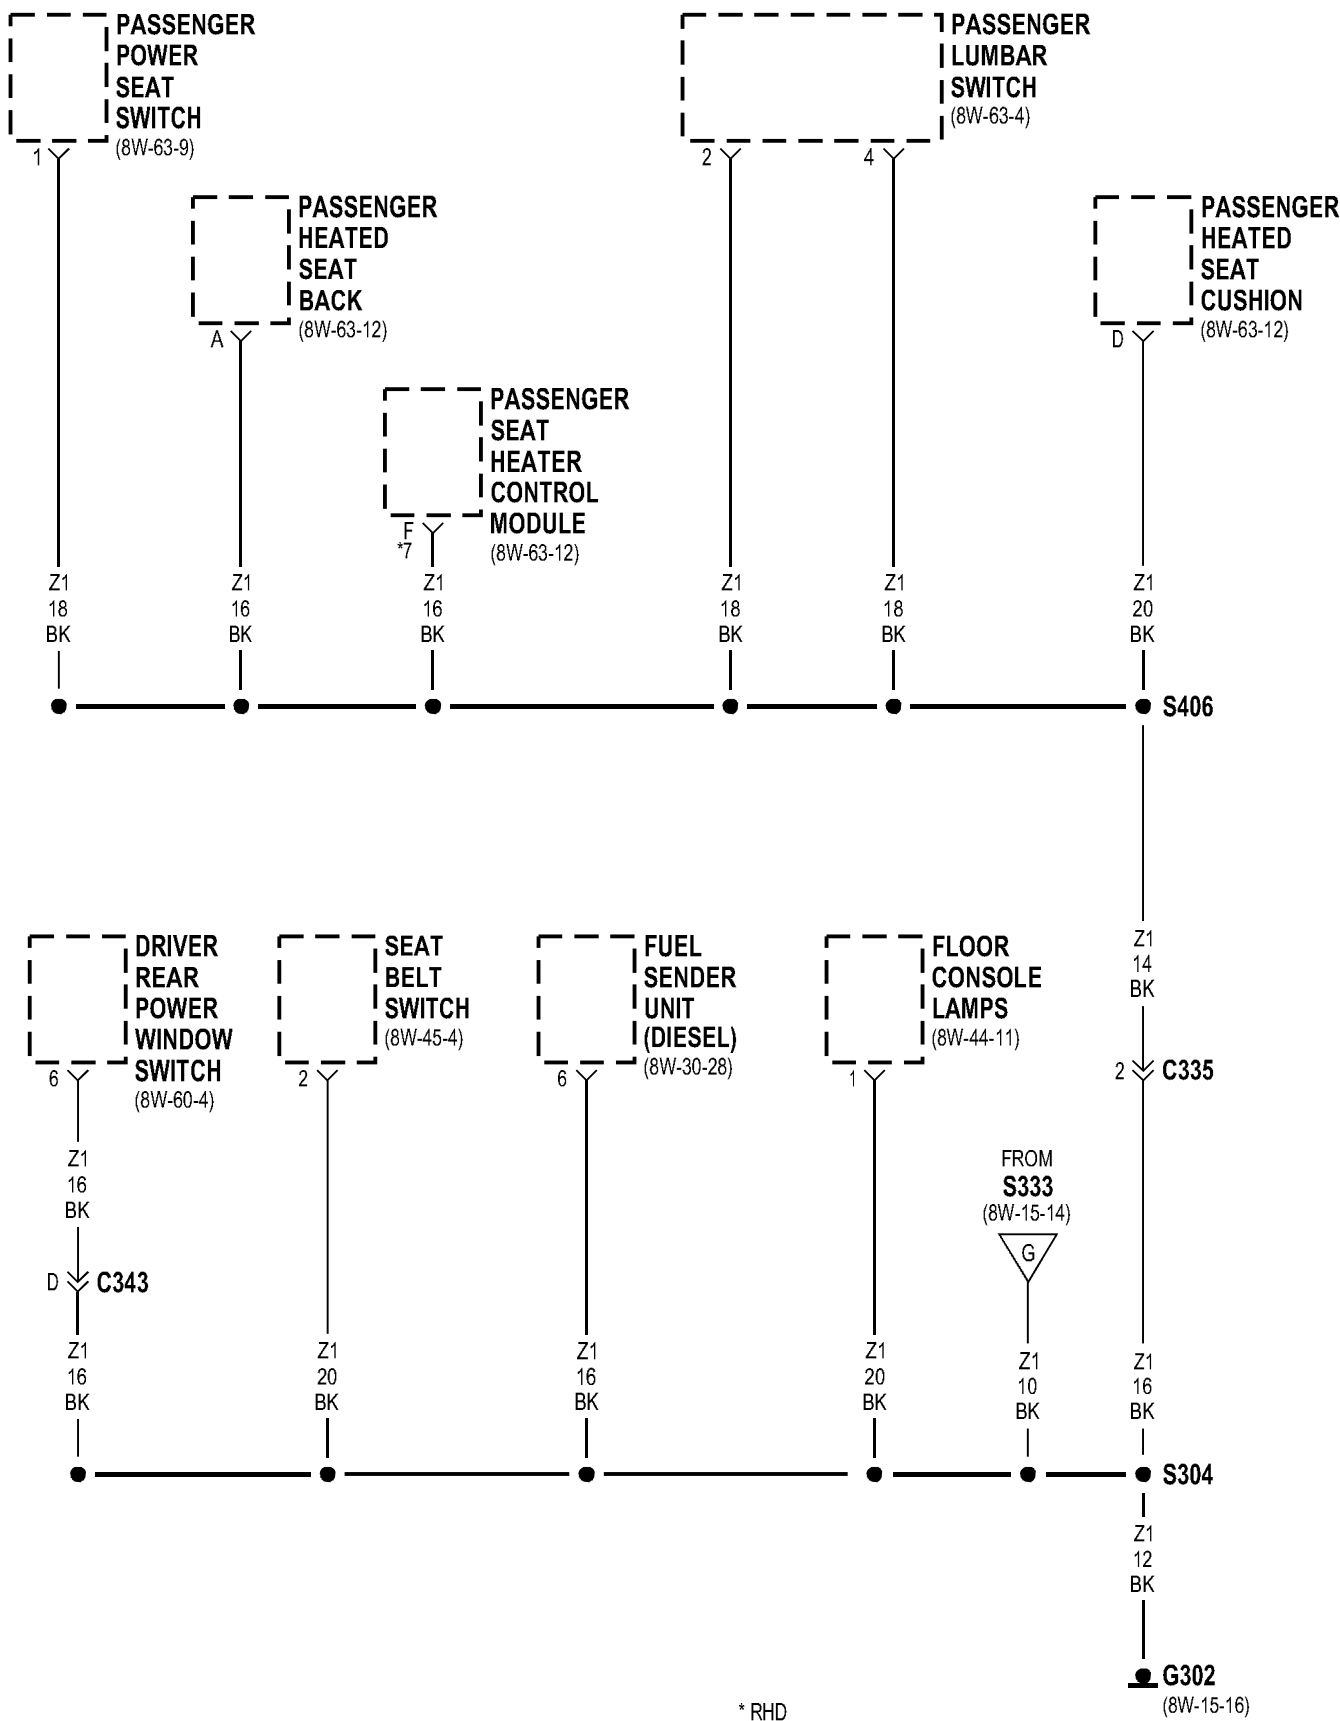



* RHD

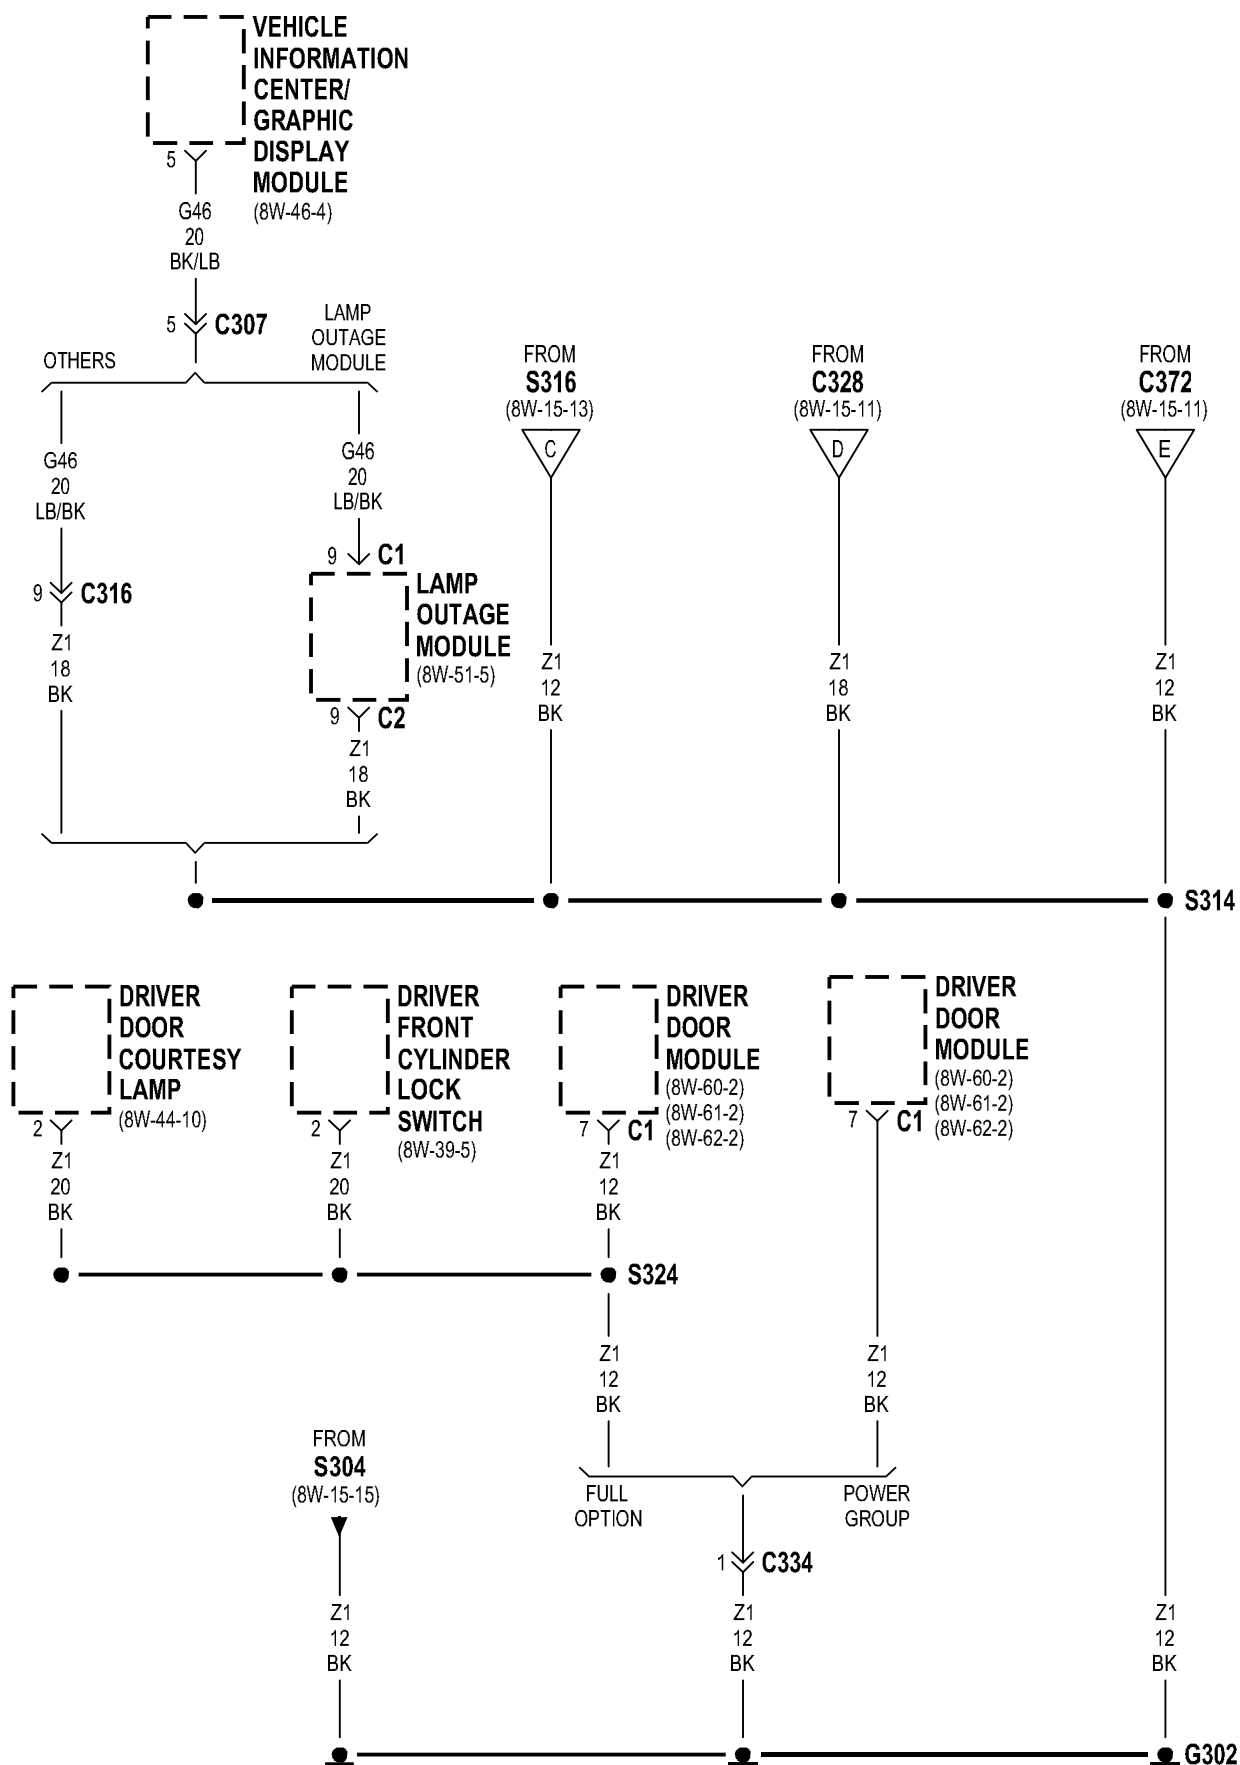

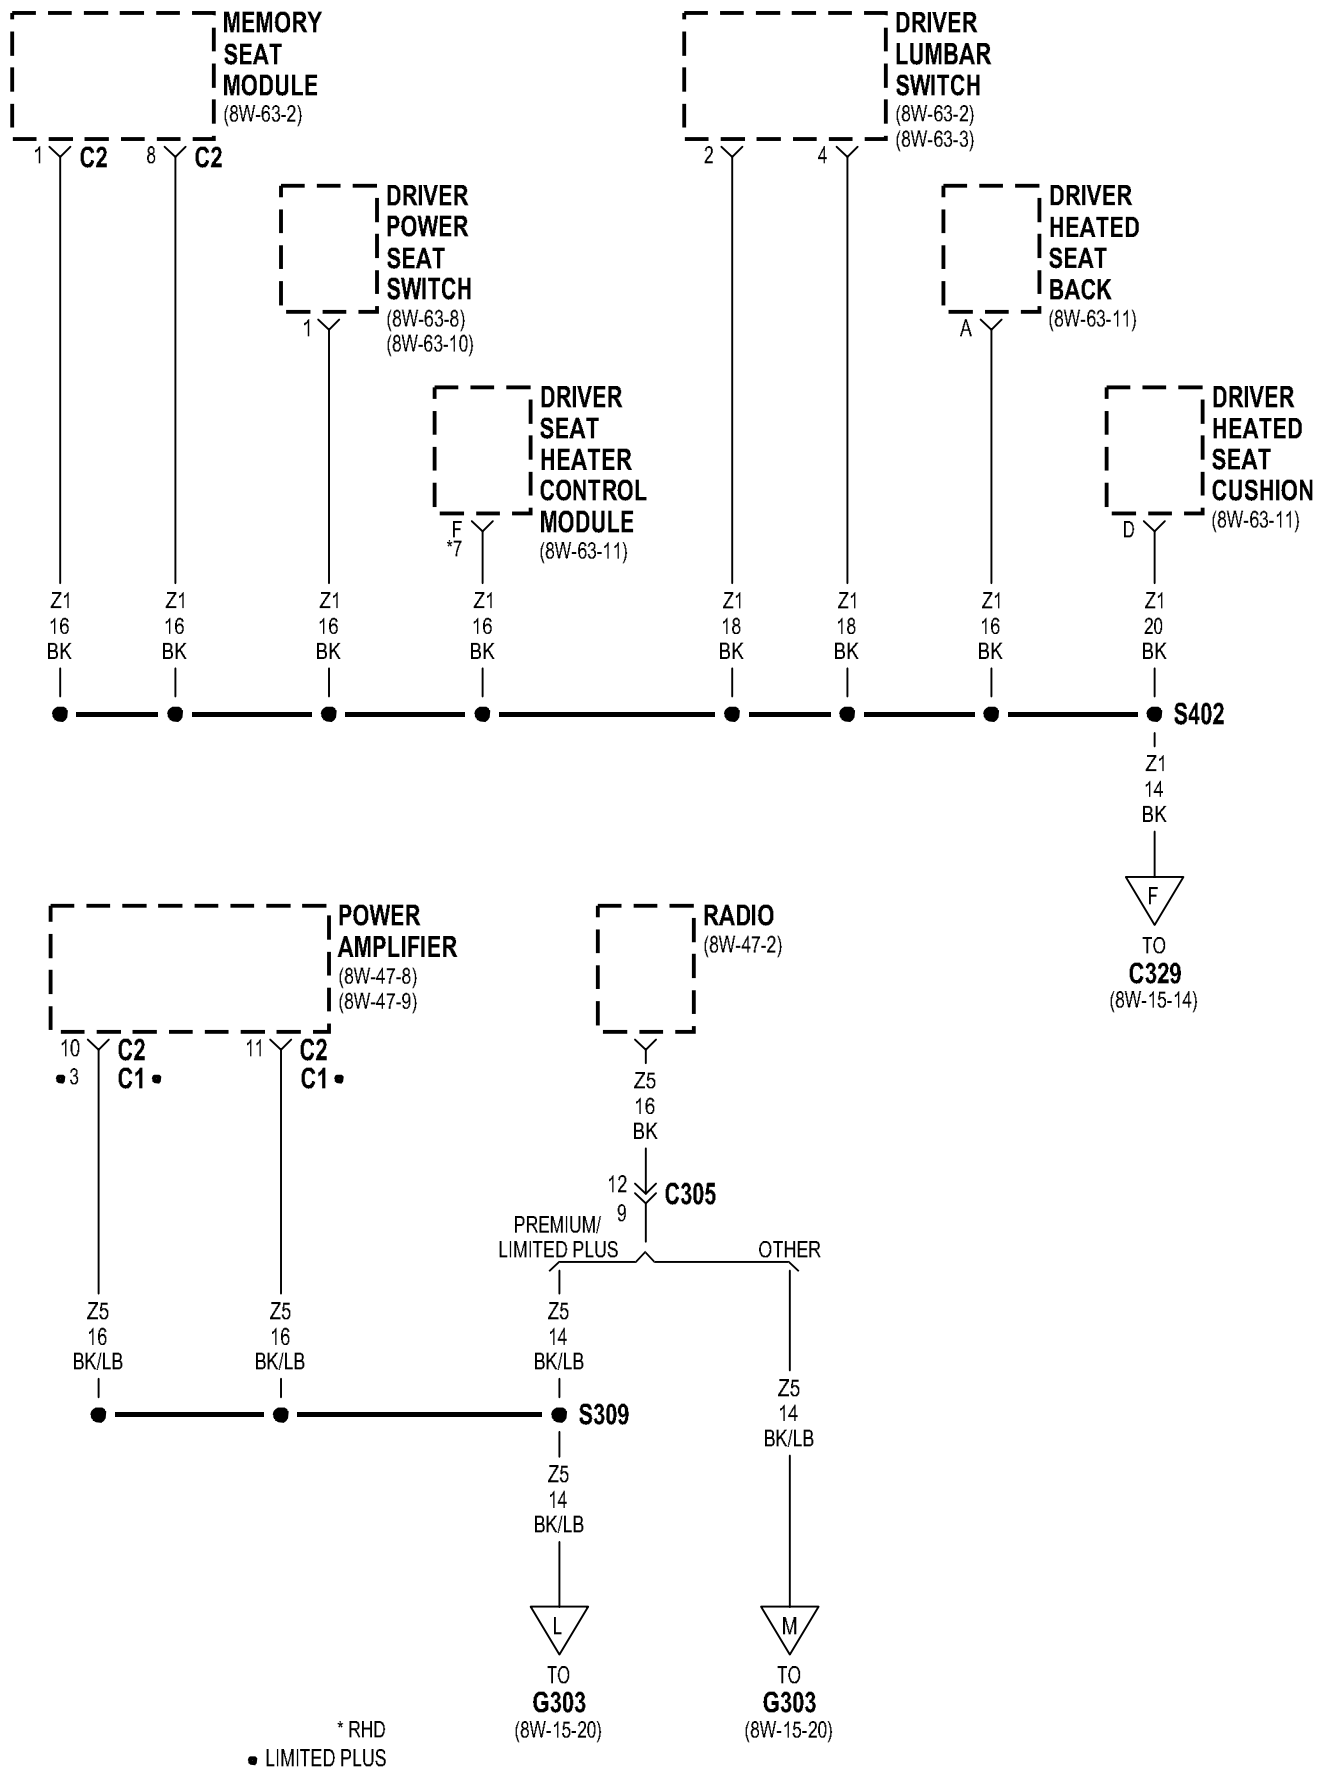

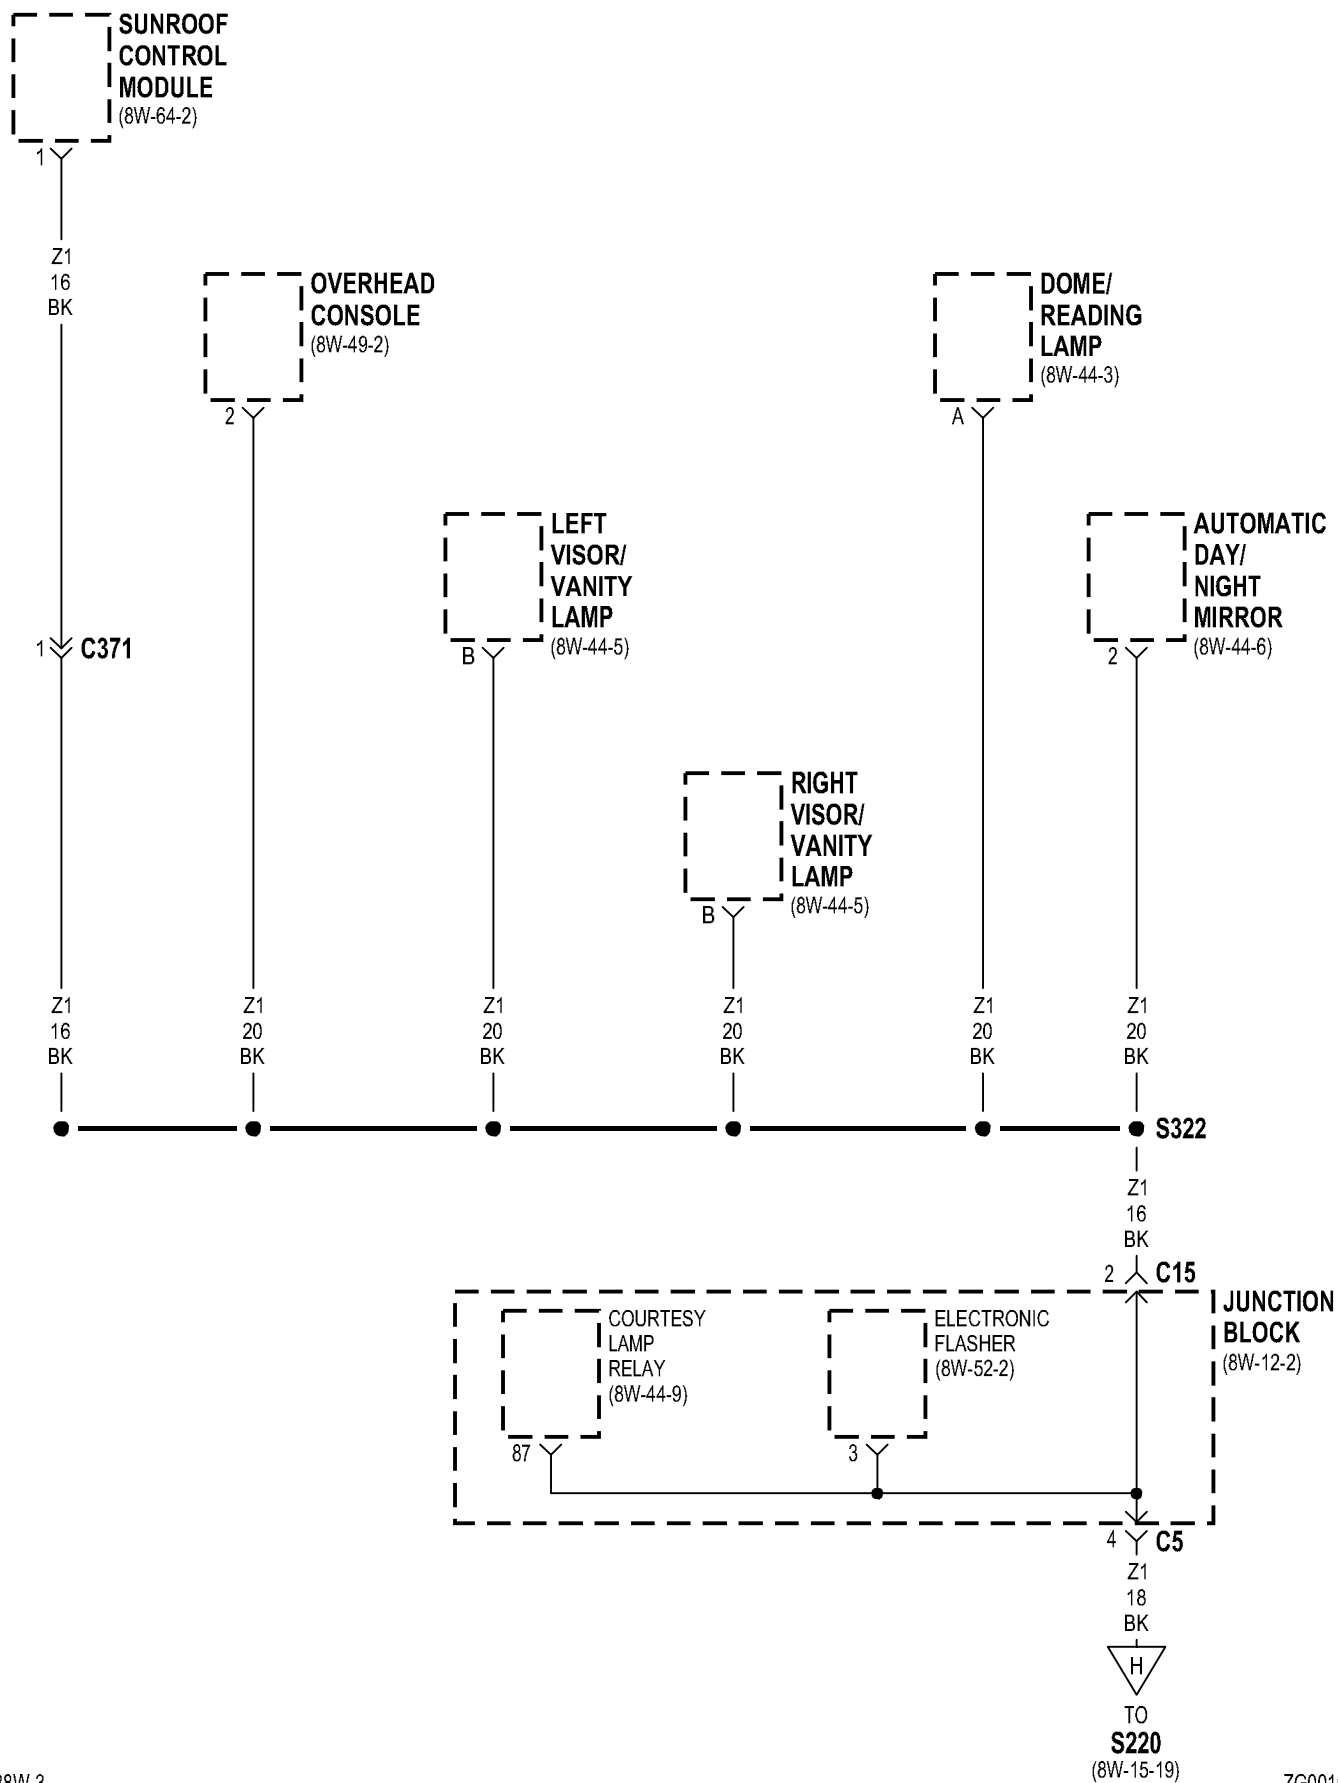


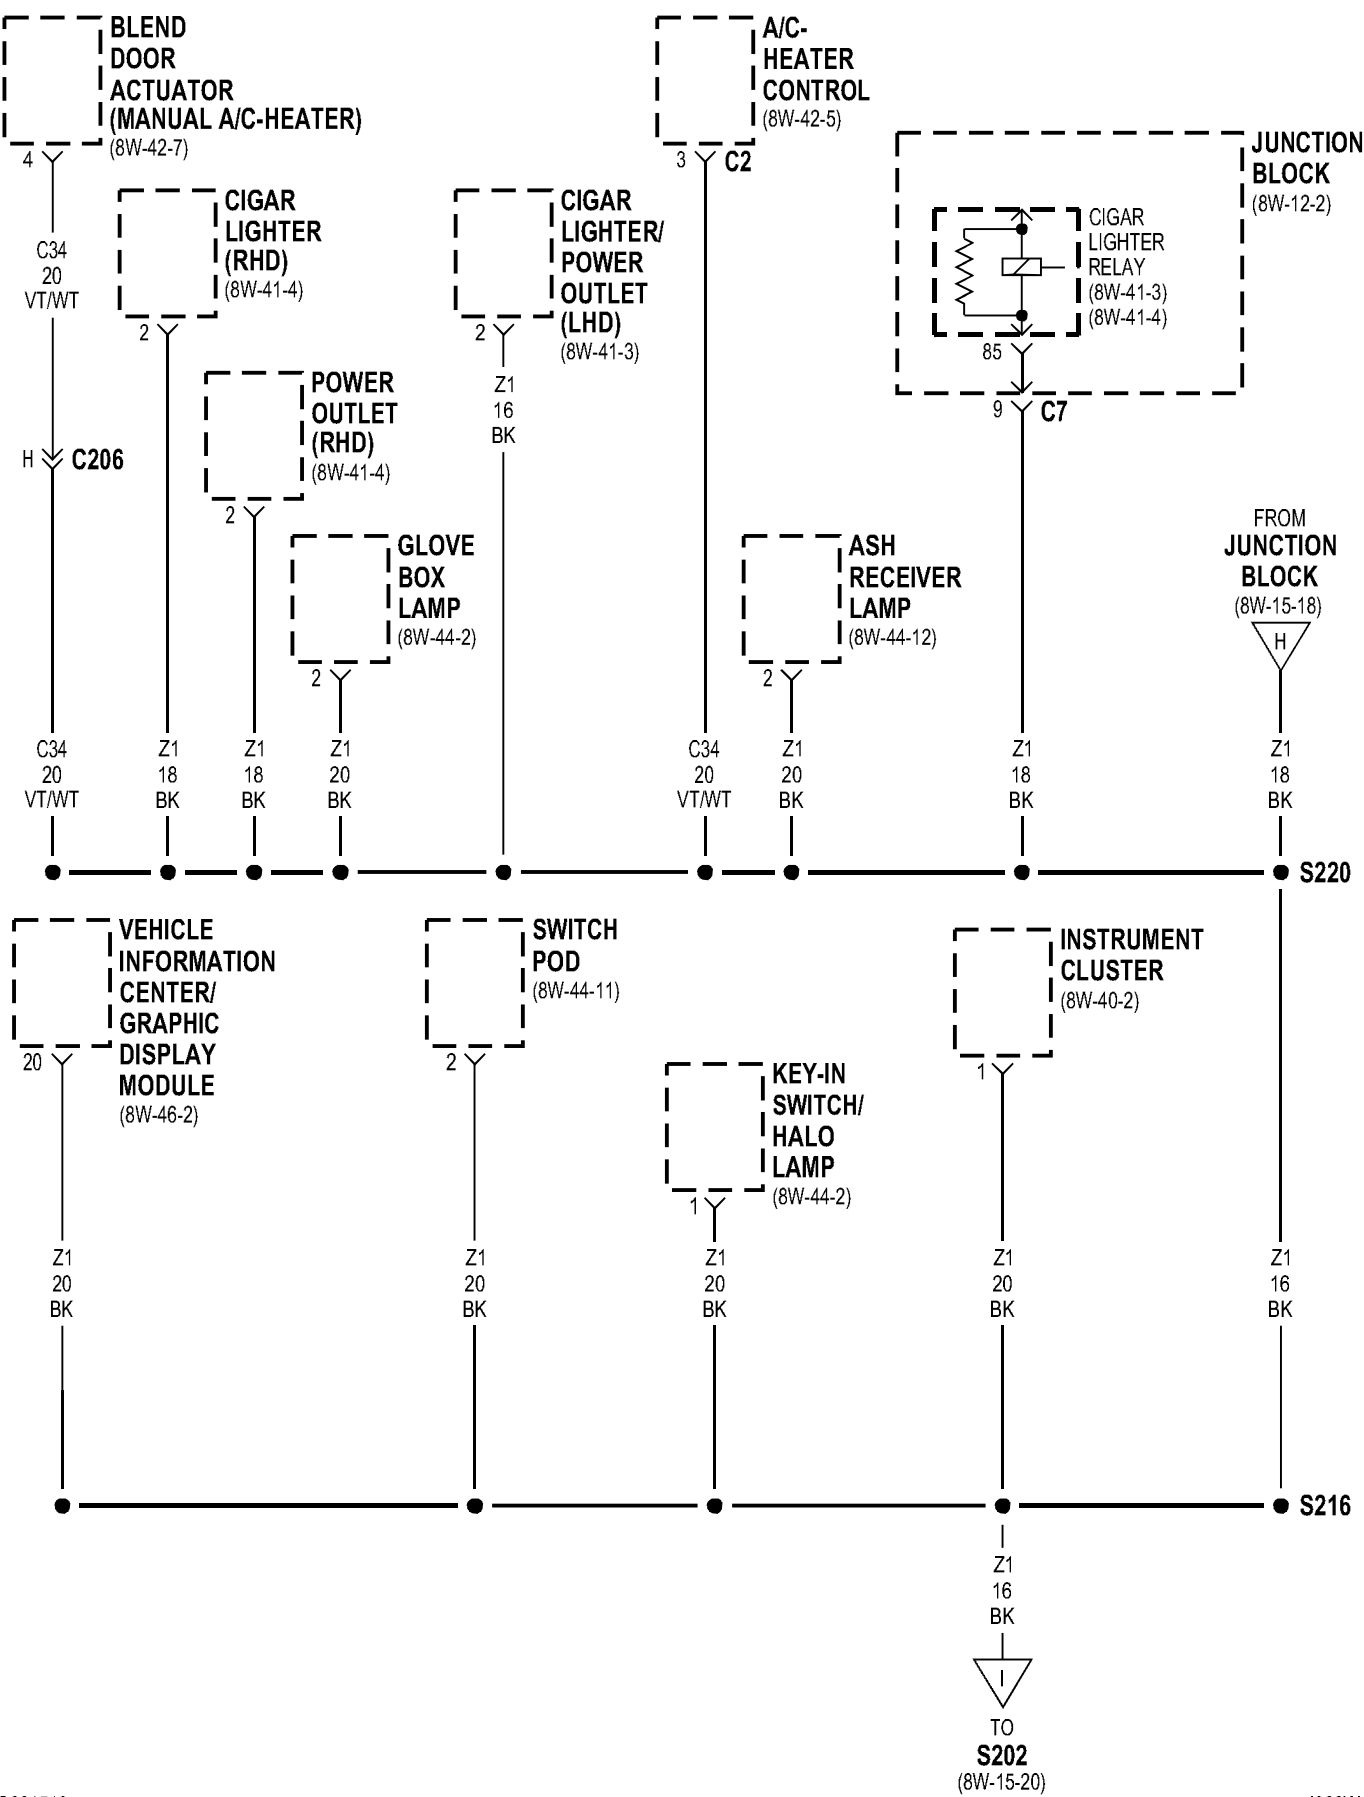


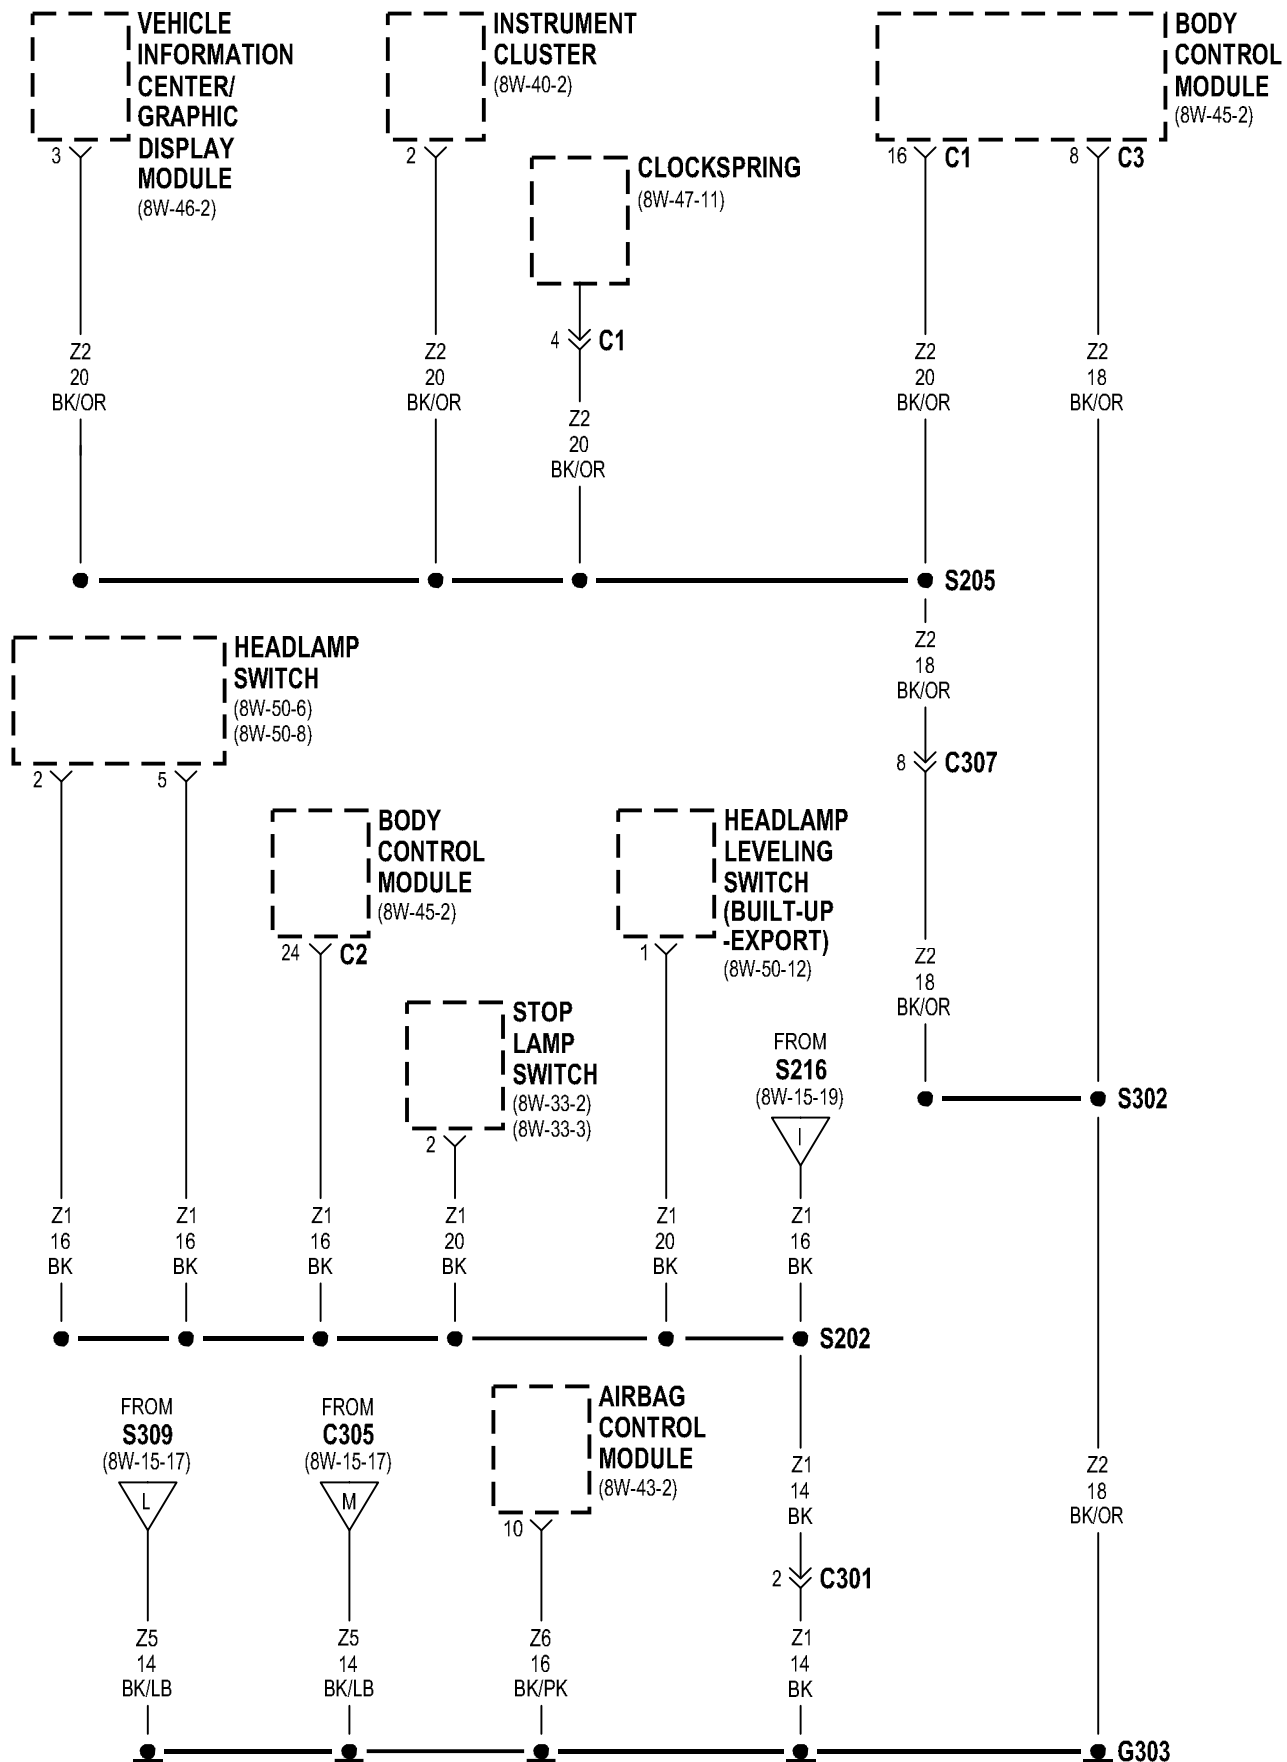

8W-20 CHARGING SYSTEM

Component	Page	Component	Page
Automatic Shutdown Relay	8W-20-3	Generator	8W-20-, 3
Battery	8W-20-2, 3	Glow Plug Relay	8W-20-3
Engine Starter Motor	8W-20-2, 3	Power Distribution Center	8W-20-2, 3
Fusible Link	8W-20-2, 3	Powertrain Control Module	8W-20-2, 3
G100	8W-20-2, 3	Transmission Control Relay	8W-20-2
G101	8W-20-2, 3		

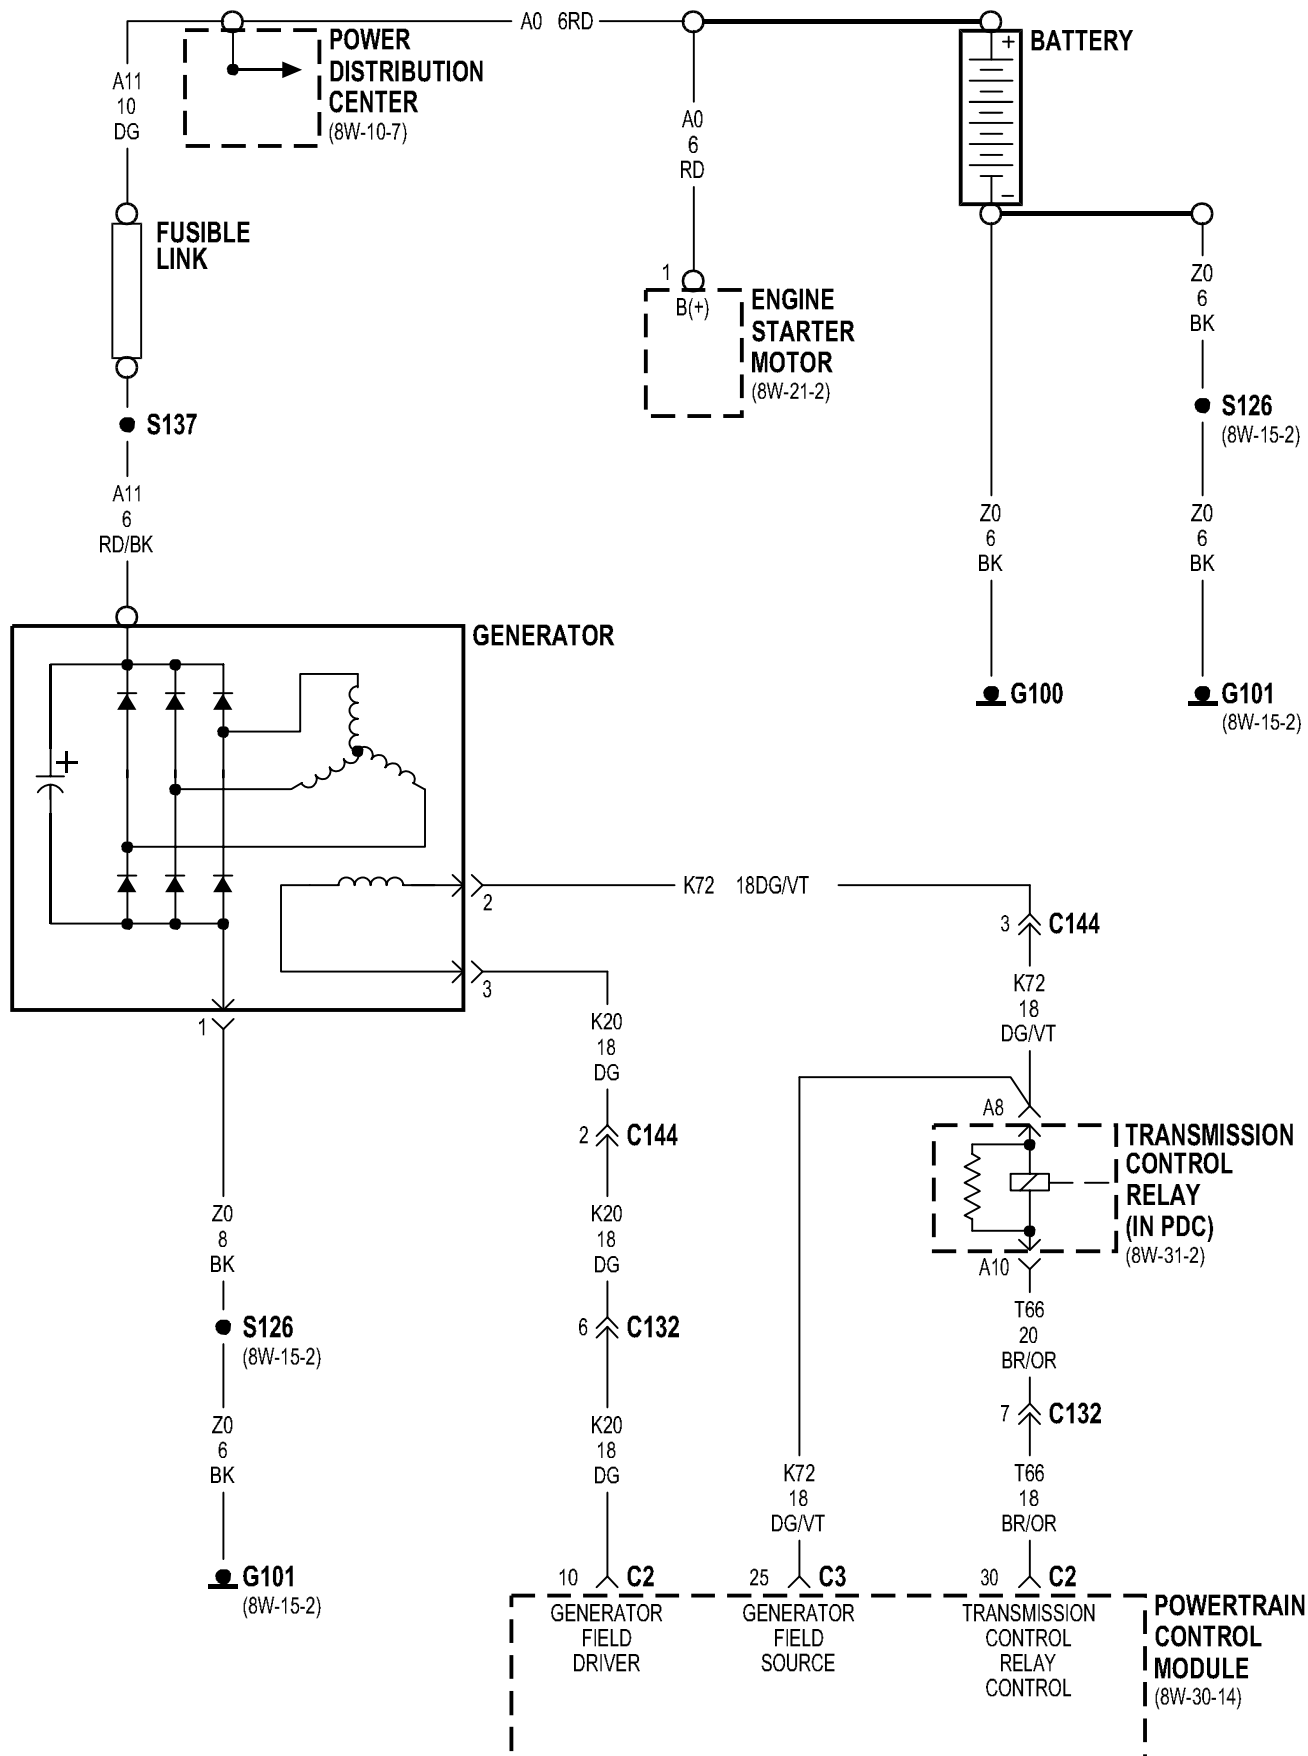


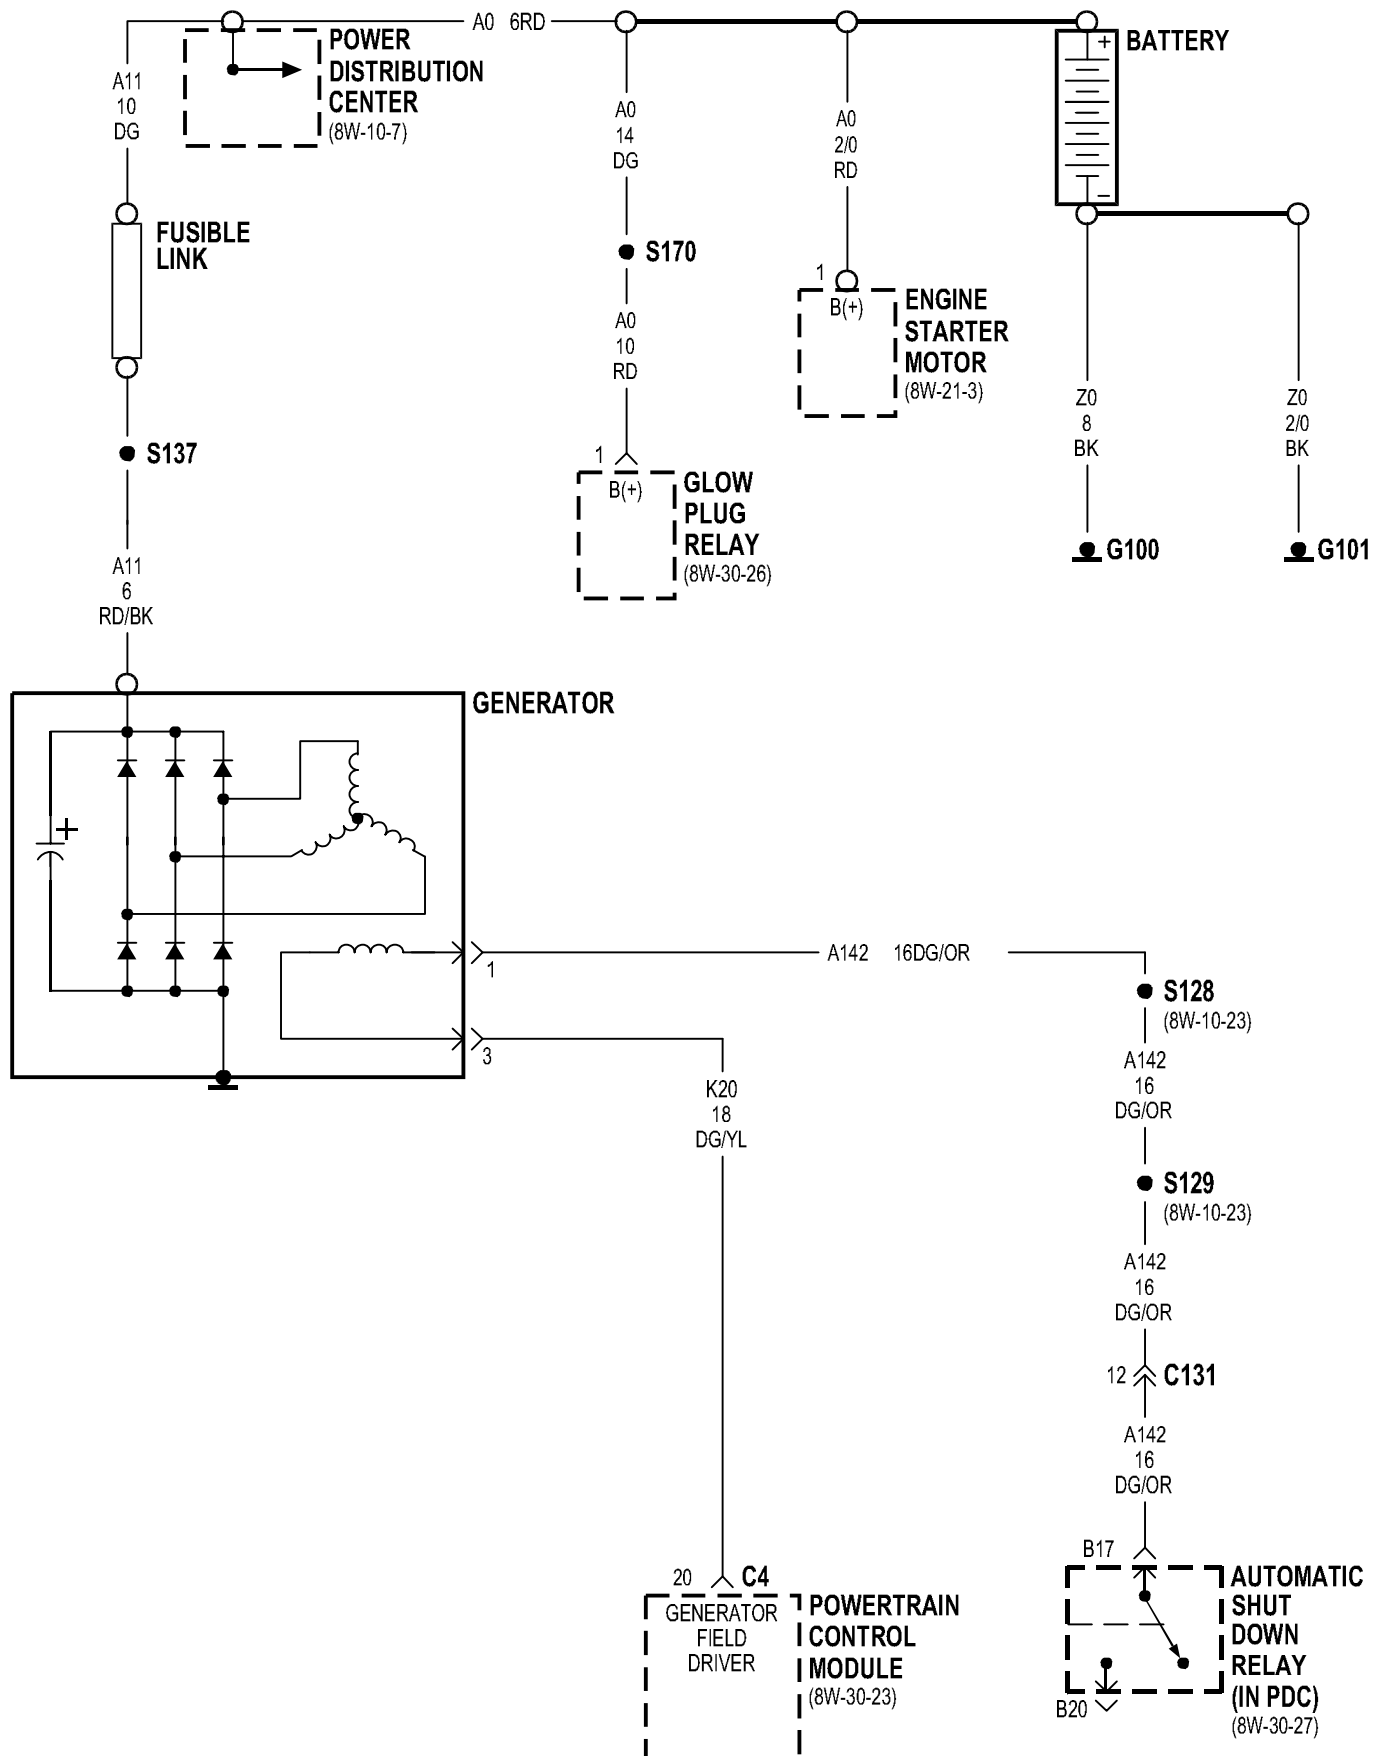


8W-21 STARTING SYSTEM

Component	Page	Component	Page
Battery	.8W-21-2, 3	G107	.8W-21-3
Clutch Interlock Switch	.8W-21-2, 3	Ignition Switch	.8W-21-2, 3
Clutch Interlock Switch Jumper	.8W-21-2	Park/Neutral Position Switch	.8W-21-2
Engine Starter Motor	.8W-21-2, 3	Power Distribution Center	.8W-21-2, 3
Engine Starter Motor Relay	.8W-21-2, 3	Powertrain Control Module.	.8W-21-2
Fuse 8 (PDC)	.8W-21-2, 3		

GAS

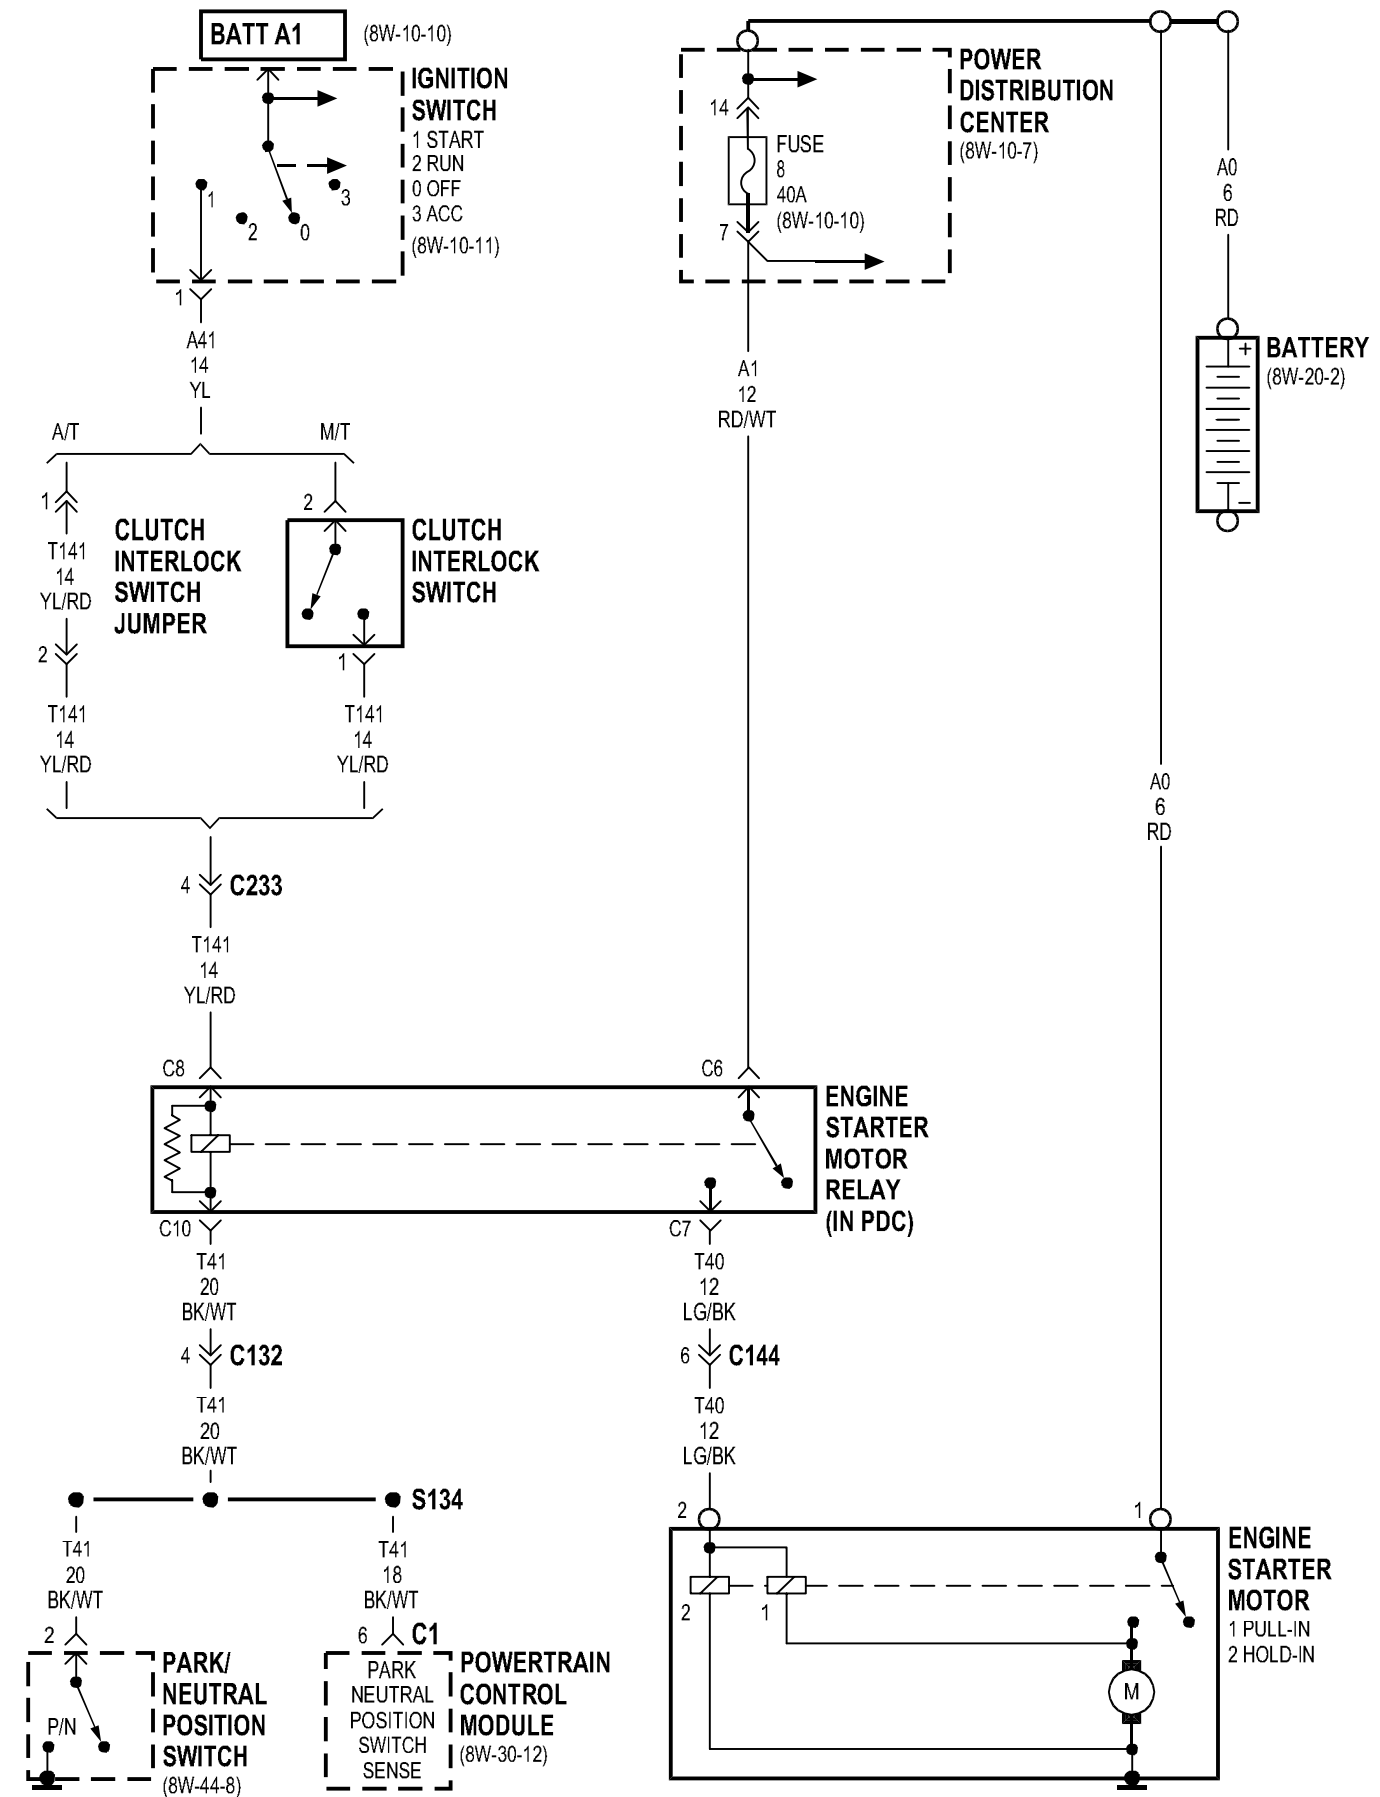

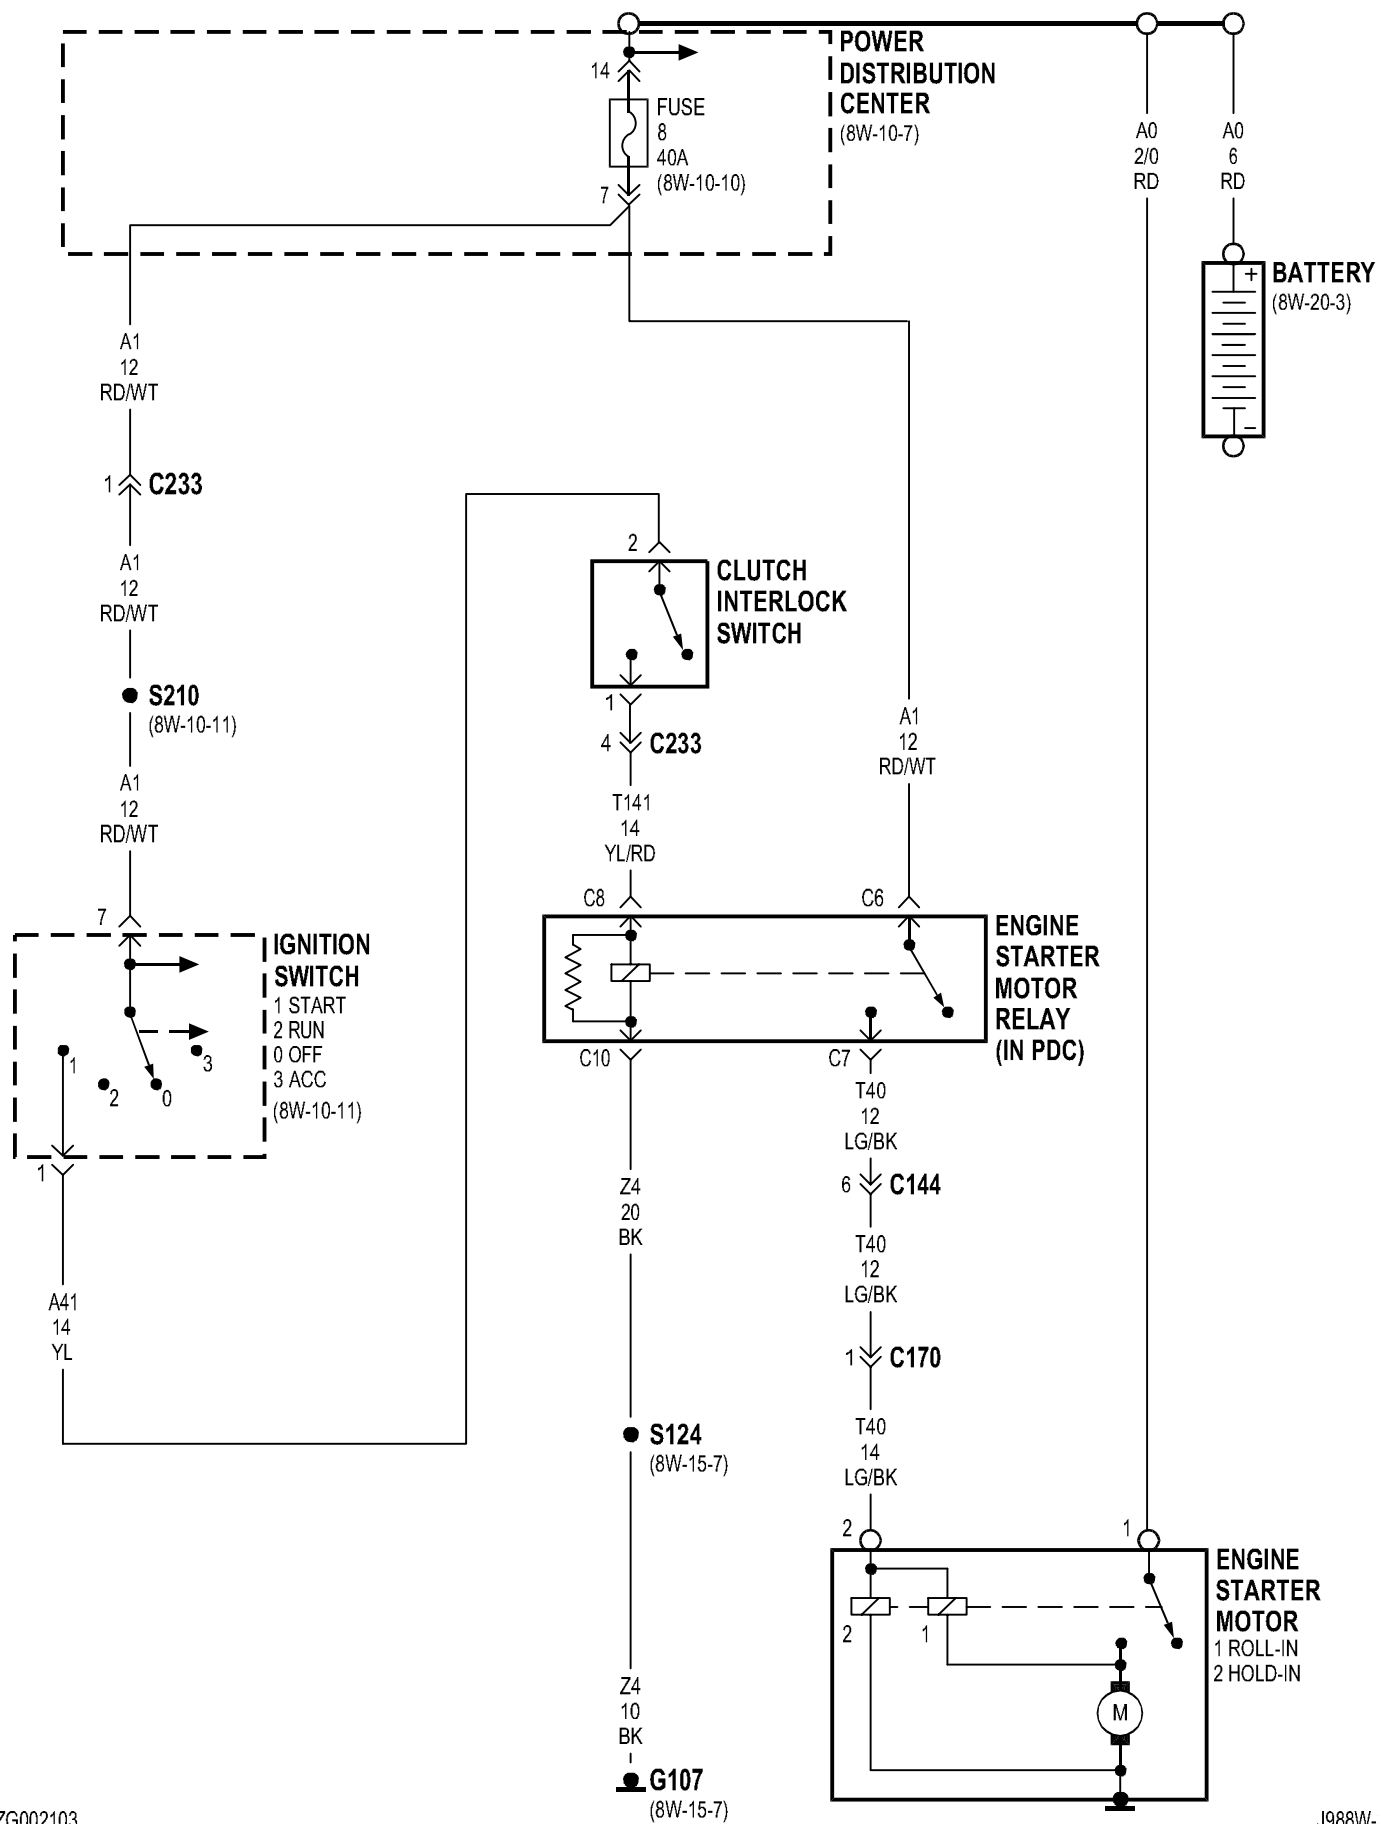



8W-30 FUEL/IGNITION SYSTEMS


Component	Page
A/C Compressor Clutch Relay	8W-30-15, 27
A/C Low Pressure Switch	8W-30-15, 22
Airbag Control Module	8W-30-3, 4, 20, 21
Automatic Shutdown	
Relay	8W-30-6, 10, 16, 17, 18, 27
Automatic Temperature Control	
Module	8W-30-3, 4, 20, 21
Battery	8W-30-26
Battery Temperature Sensor	8W-30-11
Body Control Module	8W-30-3, 4, 20, 21
Camshaft Position Sensor	8W-30-7
Clockspring	8W-30-11, 13, 24
Controller Anti-Lock Brake	8W-30-2, 19
Coolant Level Sensor	8W-30-29
Cooling Fan Motor	8W-30-30, 31
Crankshaft Position Sensor	8W-30-7, 24
Cruise Switch No. 1	8W-30-13
Cruise Switch No. 2	8W-30-13
Data Link Connector	8W-30-2, 3, 4, 19, 20, 21
Diagnostic Connector	8W-30-30, 31
Downstream Heated Oxygen Sensor	8W-30-10
Driver Door Module	8W-30-3, 4, 20, 21
Duty Cycle Evap/Purge Solenoid	8W-30-5
Electronic Vacuum Modulator	8W-30-28
Engine Coolant Temperature Sensor	8W-30-8, 29
Fuel Heater	8W-30-28
Fuel Heater Relay	8W-30-27
Fuel Injector No. 1	8W-30-16, 17
Fuel Injector No. 2	8W-30-16, 18
Fuel Injector No. 3	8W-30-16, 17
Fuel Injector No. 4	8W-30-16, 18
Fuel Injector No. 5	8W-30-16, 17
Fuel Injector No. 6	8W-30-16, 18
Fuel Injector No. 7	8W-30-17
Fuel Injector No. 8	8W-30-18
Fuel Pump Module	8W-30-11, 25, 26
Fuel Pump Relay	8W-30-11
Fuel Sender Unit	8W-30-28
Fuse 2 (PDC)	8W-30-30, 31
Fuse 4 (PDC)	8W-30-27
Fuse 7 (JB)	8W-30-2, 19
Fuse 16 (PDC)	8W-30-11, 22
Fuse 17 (PDC)	8W-30-14
Fuse 18 (PDC)	8W-30-5, 6, 11, 22, 27, 30, 31
Fuse 20 (PDC)	8W-30-5, 6, 27
G104	8W-30-2, 14, 19, 22
G105	8W-30-10
G106	8W-30-26, 28
G107	8W-30-27
G110	8W-30-30, 31
G118	8W-30-28


Component	Page
G123	8W-30-24
G301	8W-30-11
G302	8W-30-28
G303	8W-30-12
Generator	8W-30-14, 23
Glow Plug	8W-30-26
Glow Plug Relay	8W-30-26
High Pressure Cut-Out Switch	8W-30-30, 31
High Speed Cooling Fan Relay	8W-30-30, 31
Idle Air Control Motor	8W-30-9
Ignition Coil	8W-30-6
Ignition Relay	8W-30-30, 31
Instrument Cluster	8W-30-3, 4, 20, 21
Intake Air Temperature Sensor	8W-30-8
Junction Block	8W-30-2, 19
Leak Detection Pump	8W-30-5
Low Speed Cooling Fan Relay	8W-30-30, 31
Lower Hose Coolant Switch	8W-30-30, 31
Manifold Absolute Pressure Sensor	8W-30-7, 8
Mass Air Flow Module	8W-30-26
Memory Seat Module	8W-30-3, 4, 20, 21
MSA Controller	8W-30-19, 22, 23, 24, 25, 26, 27, 29
Needle Sensor	8W-30-24
Oil Pressure Sensor	8W-30-12, 29
Output Shaft Speed Sensor	8W-30-12
Overdrive Pressure Switch	8W-30-5
Overhead Console	8W-30-3, 4, 20, 21
Park/Neutral Position Switch	8W-30-12
Passenger Door Module	8W-30-3, 4, 20, 21
Pedal Position Sensor	8W-30-23
Power Distribution Center	8W-30-5, 6, 10, 11, 14, 16, 17, 18, 22, 27, 30, 31
Powertrain Control Module	8W-30-2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 27, 28, 29
Radio	8W-30-3, 4, 20, 21
Stop Lamp Switch	8W-30-12, 29
Throttle Position Sensor	8W-30-7, 8
Transmission Control Relay	8W-30-14
Transmission Solenoid Assembly	8W-30-14, 15
Upper Hose Coolant Switch	8W-30-30, 31
Upstream Heated Oxygen Sensor	8W-30-10
Vehicle Information Center/Graphic Display Module	8W-30-3, 4, 20, 21, 28
Vehicle Speed Control Servo	8W-30-5, 12
Vehicle Speed Sensor	8W-30-13, 24
Water In Fuel Sensor	8W-30-24

GAS

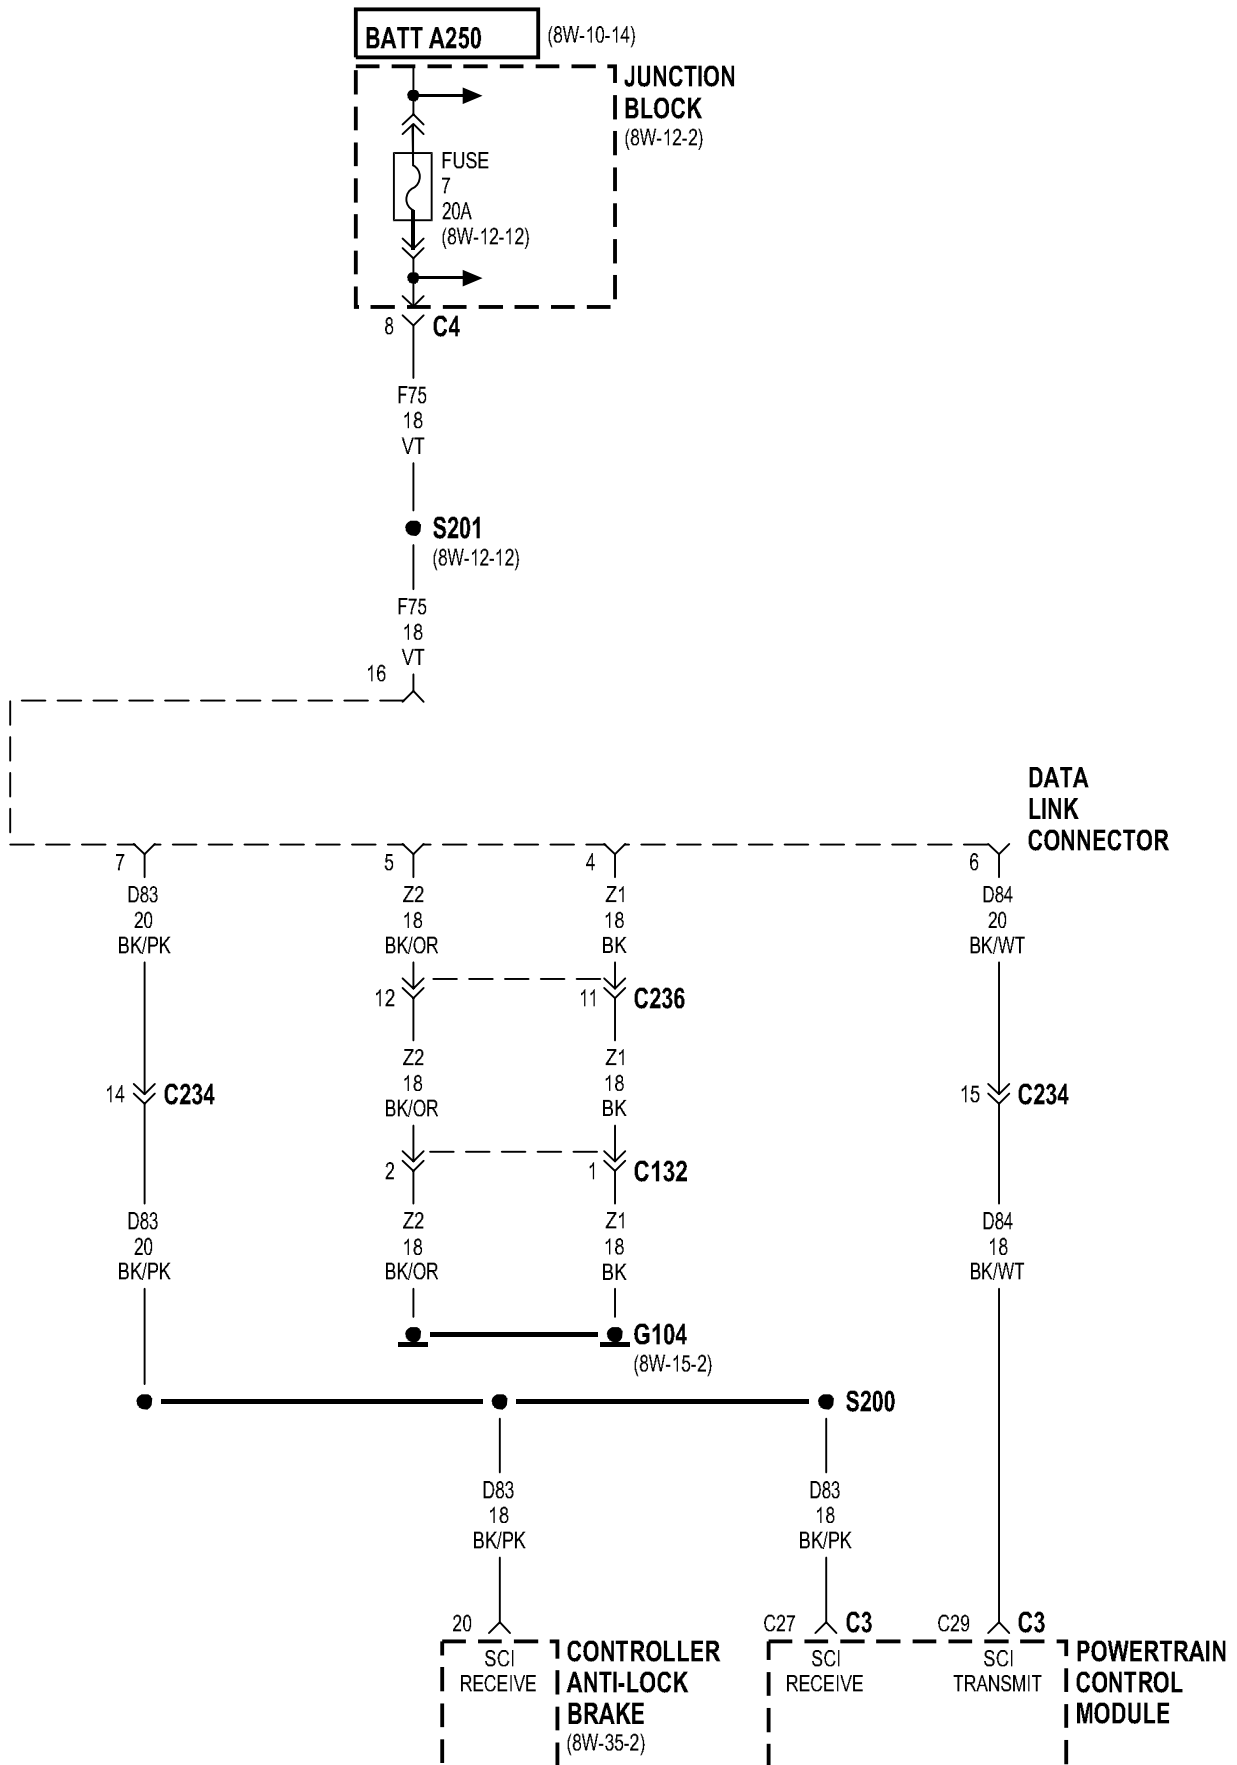


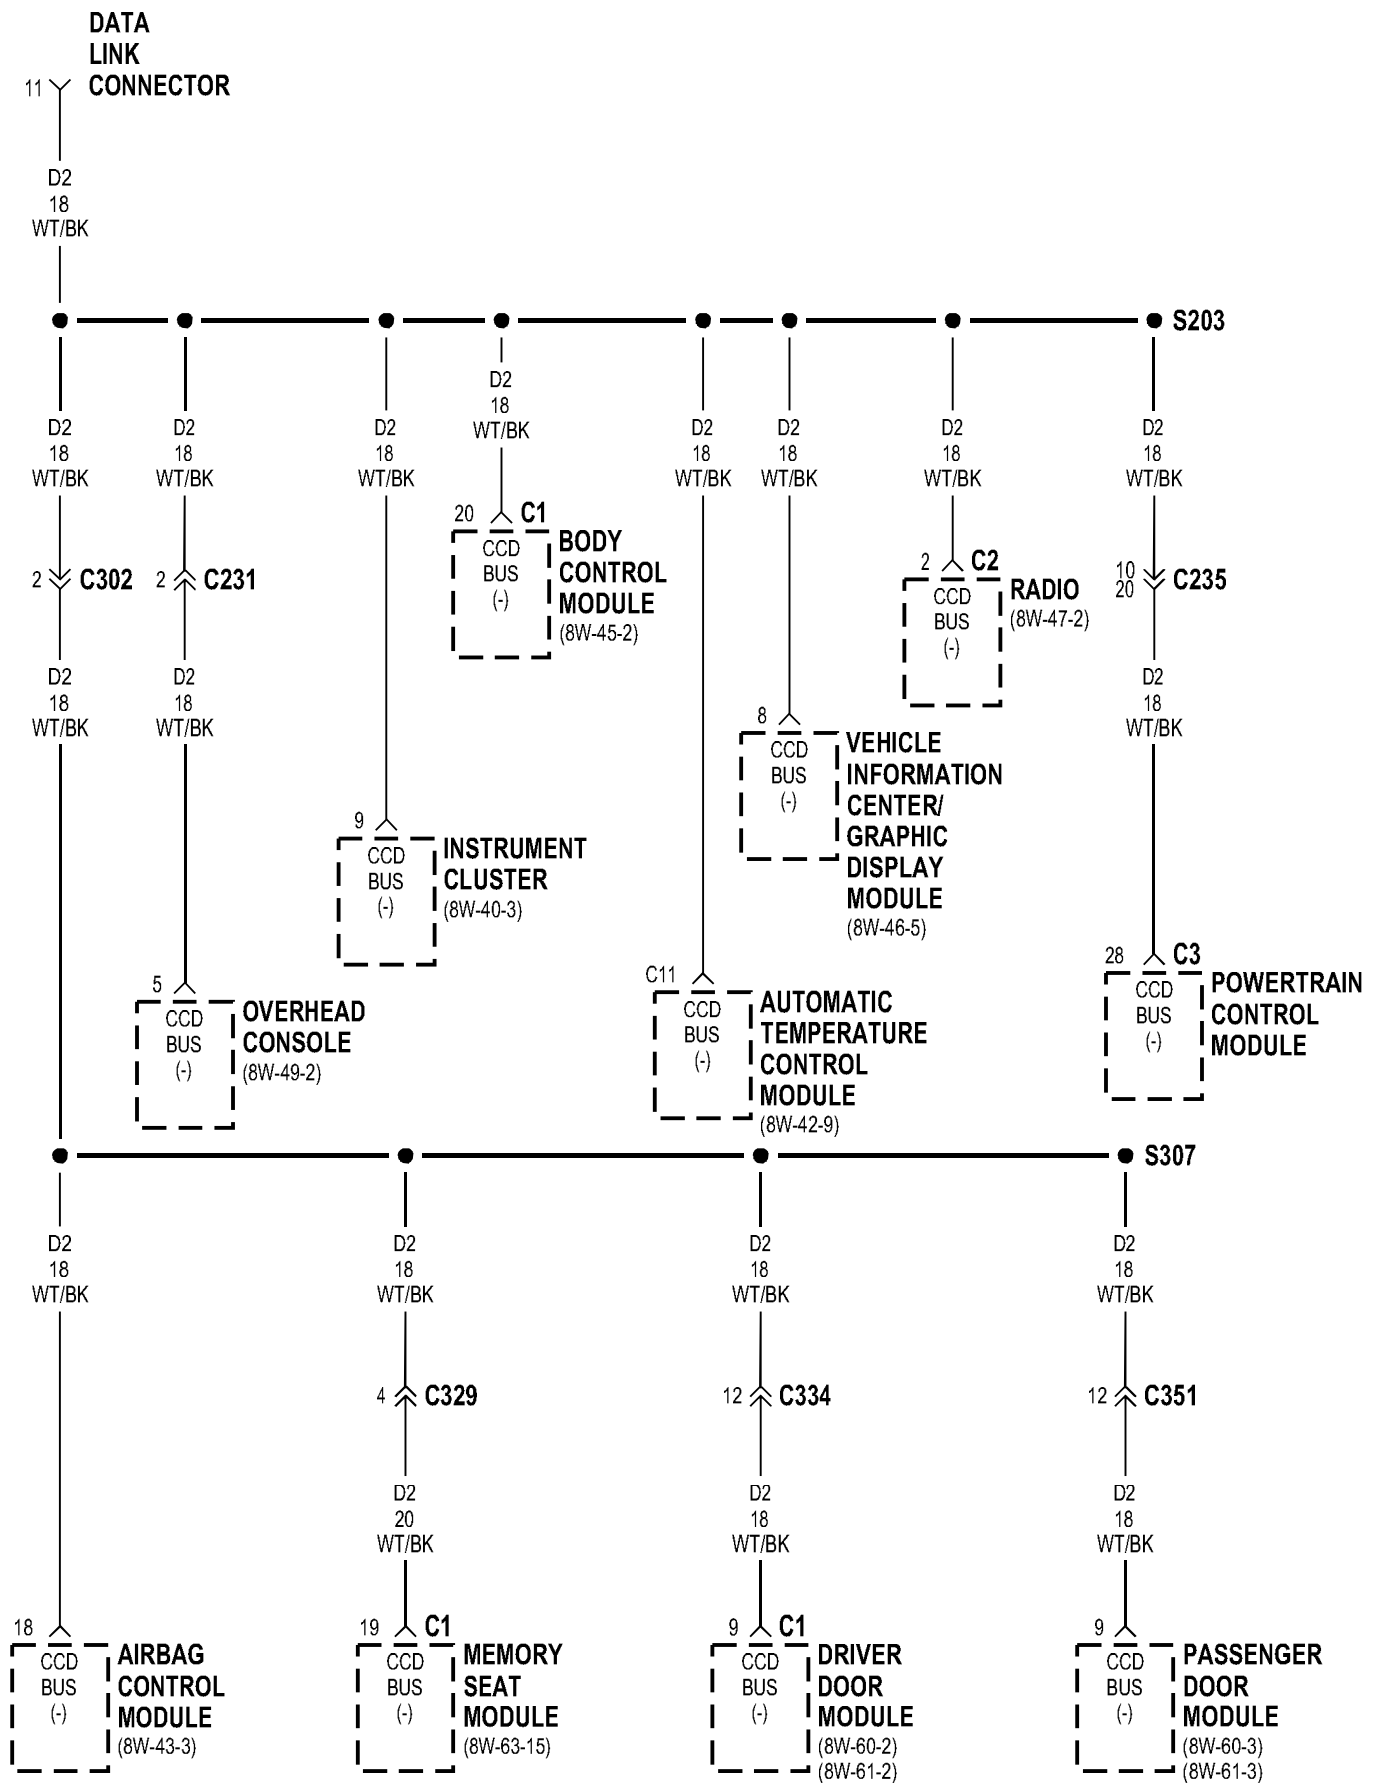

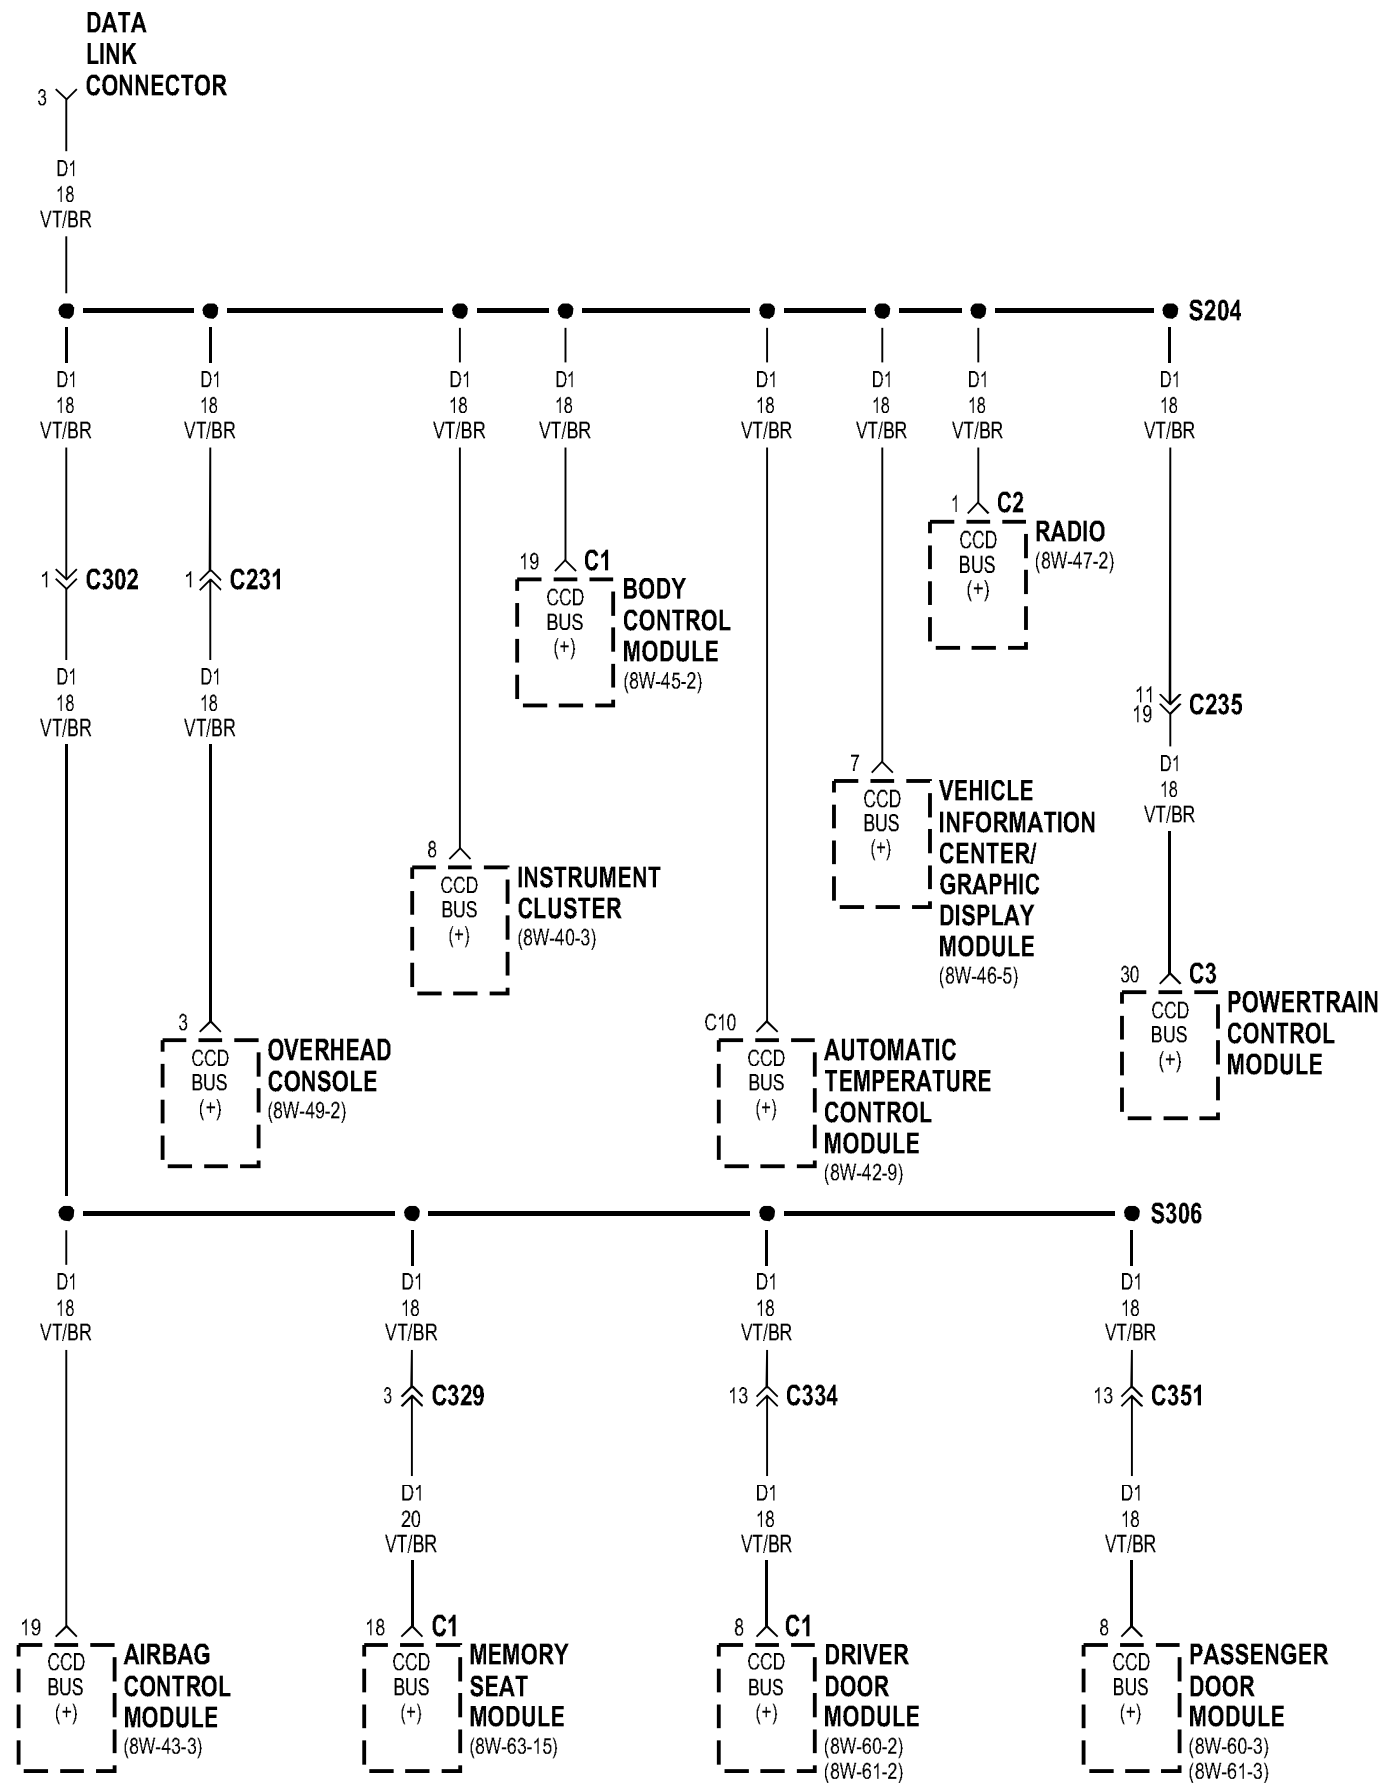


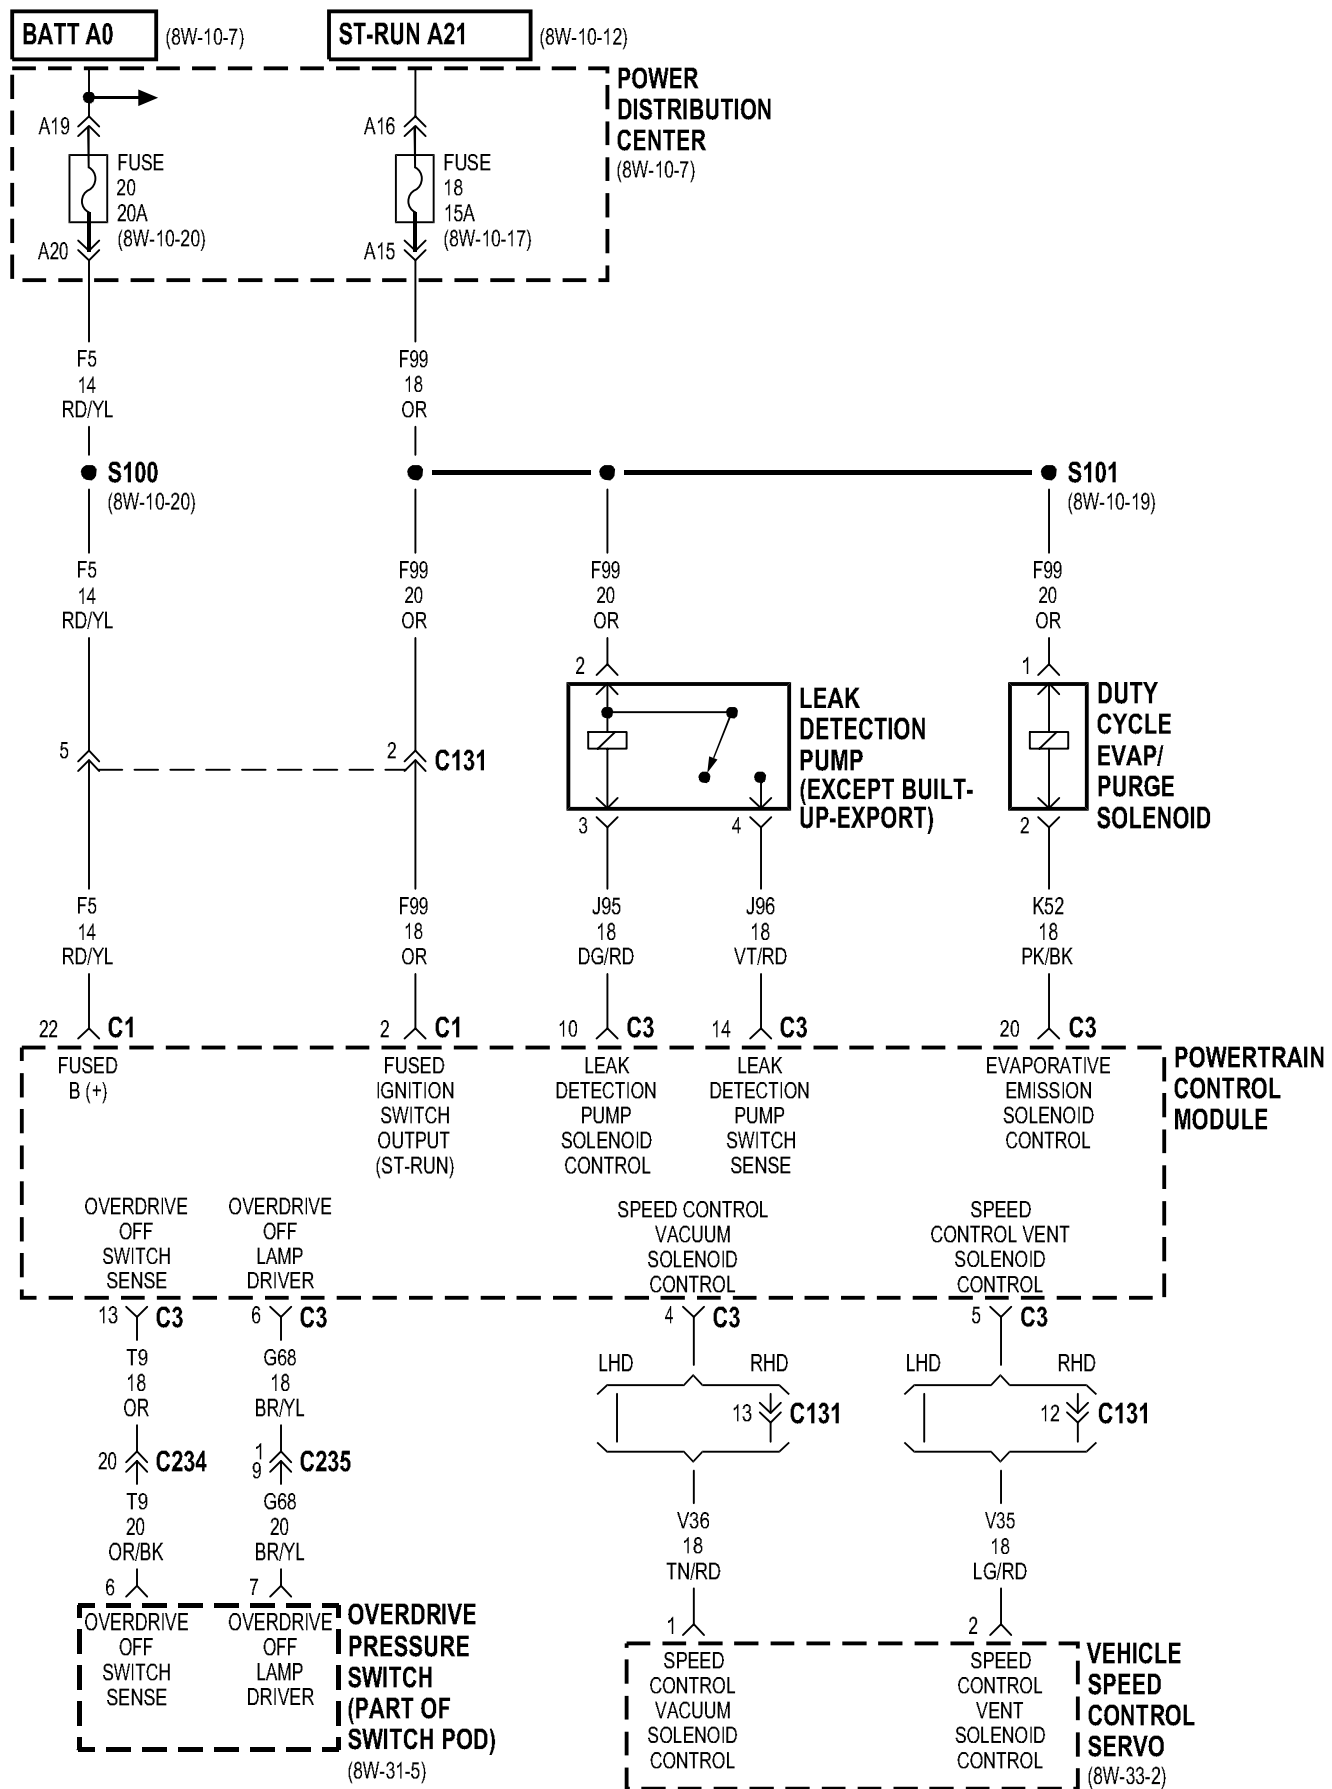



GAS

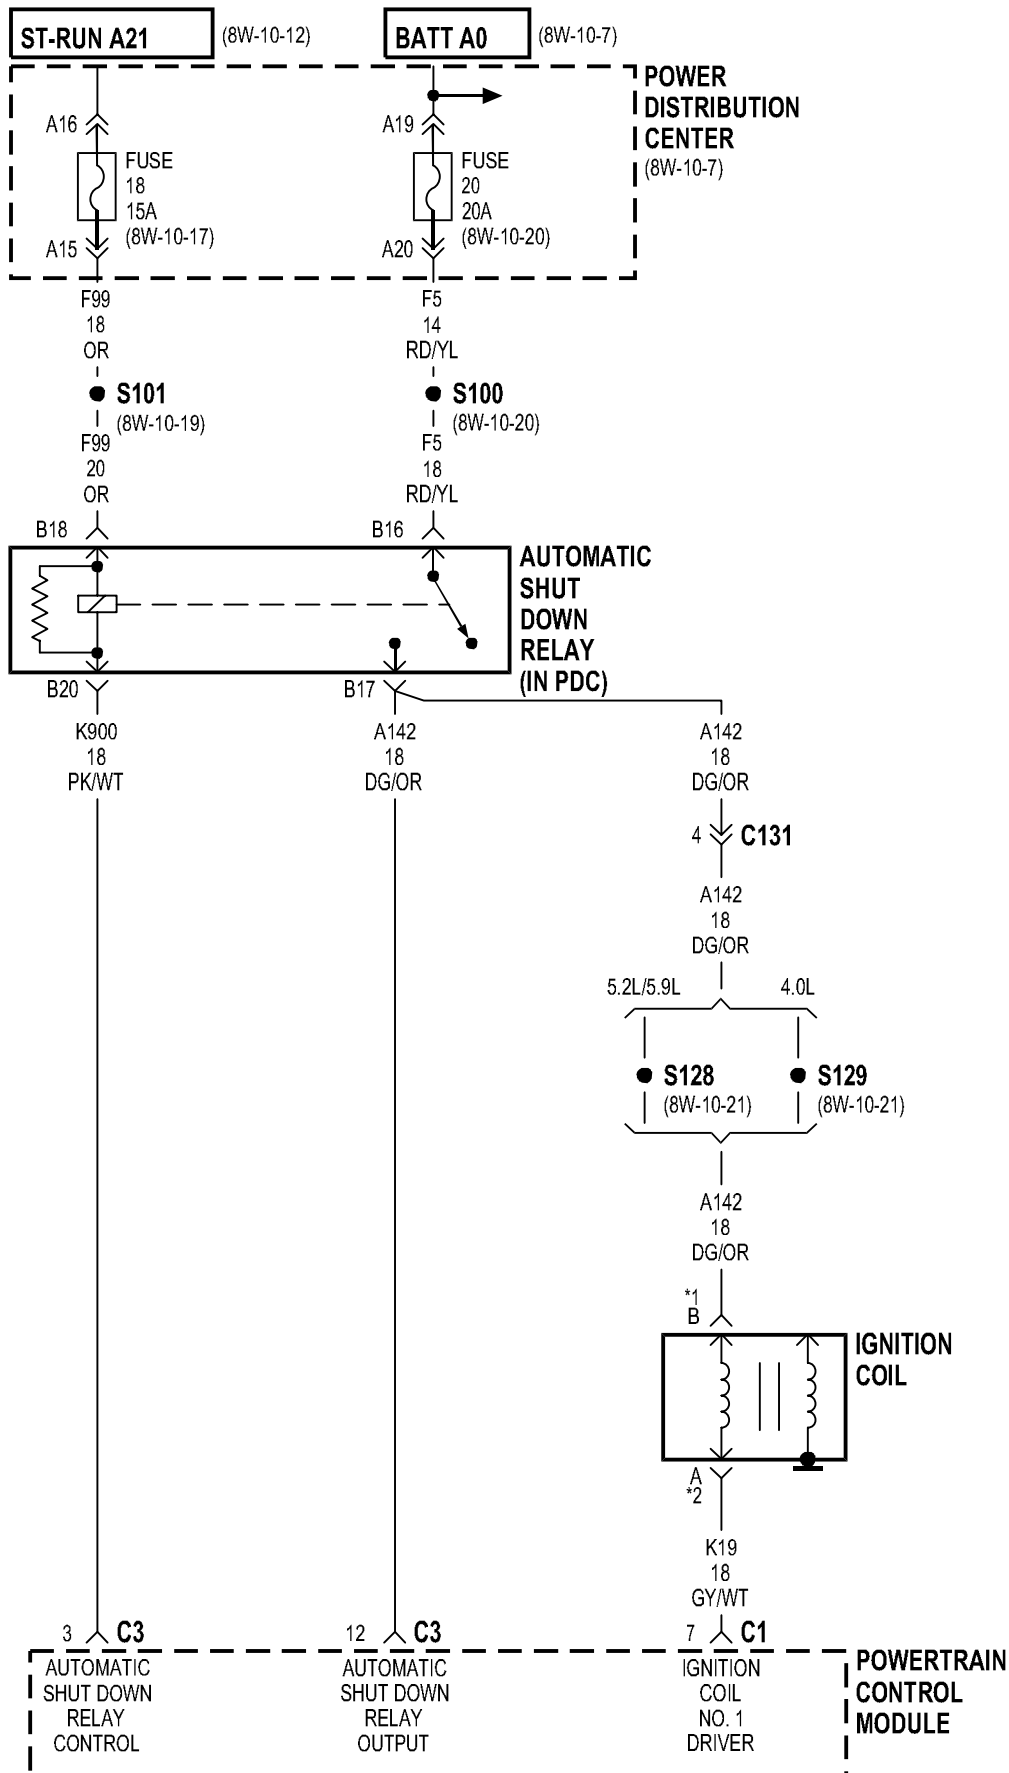

* 4.0L RHD

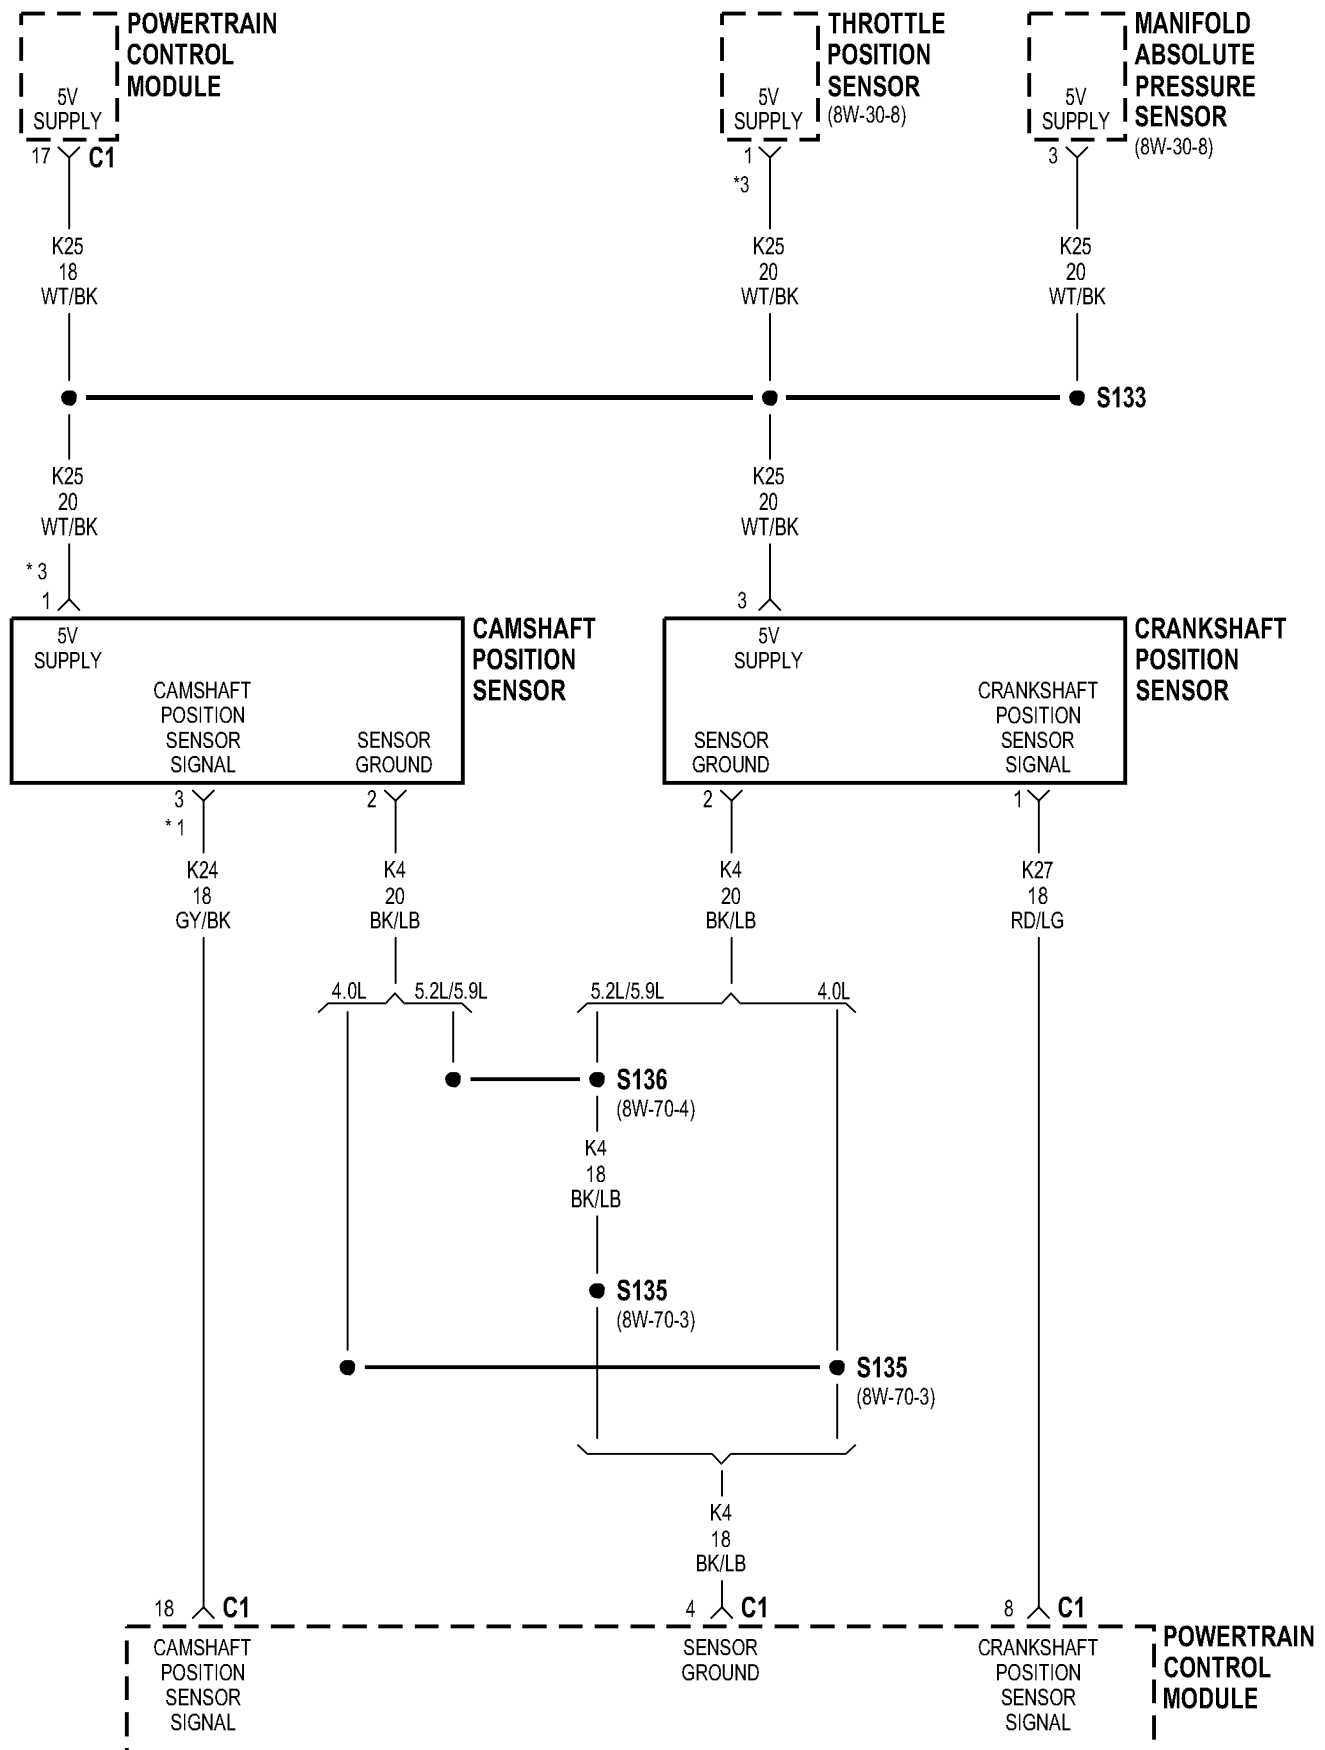


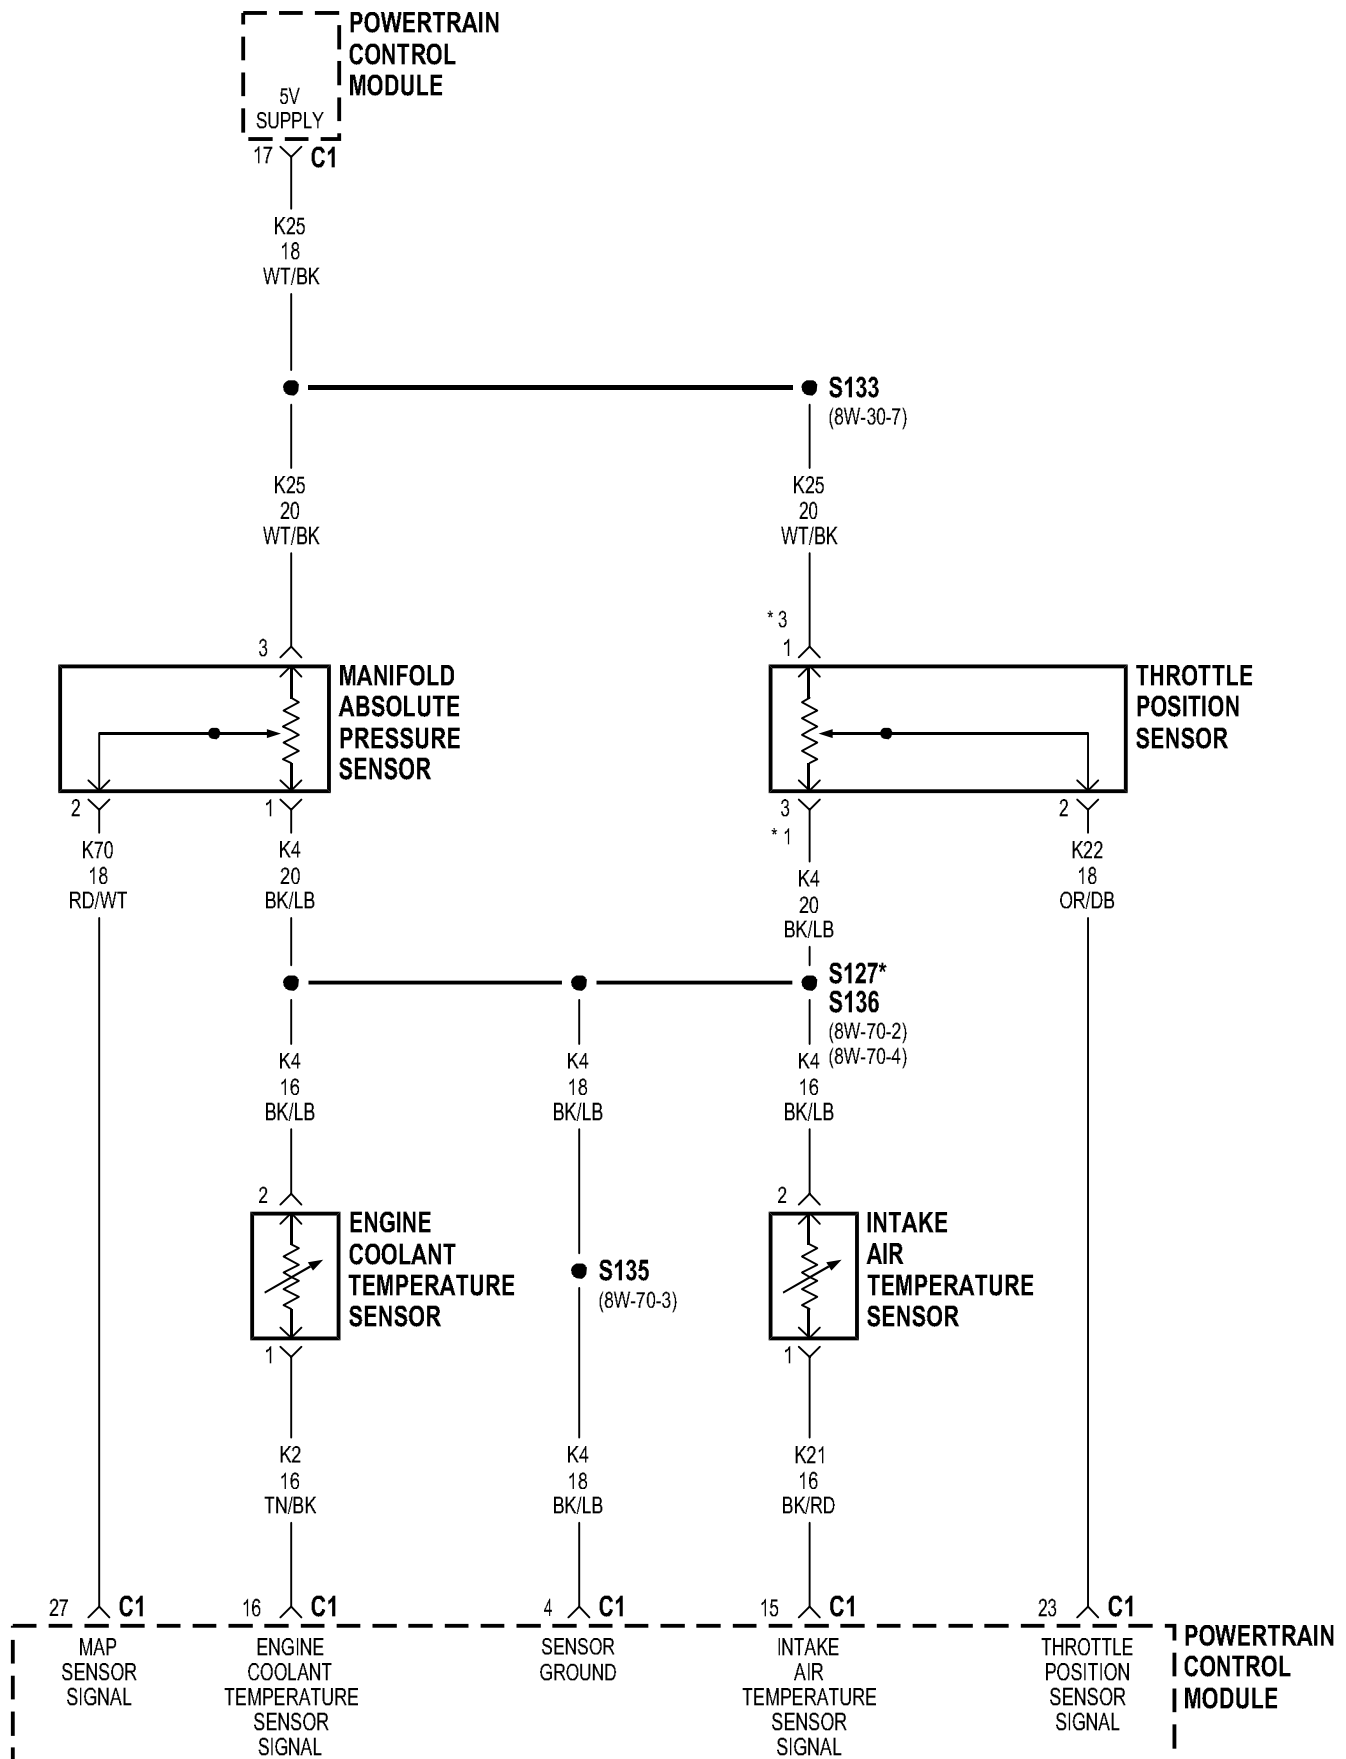


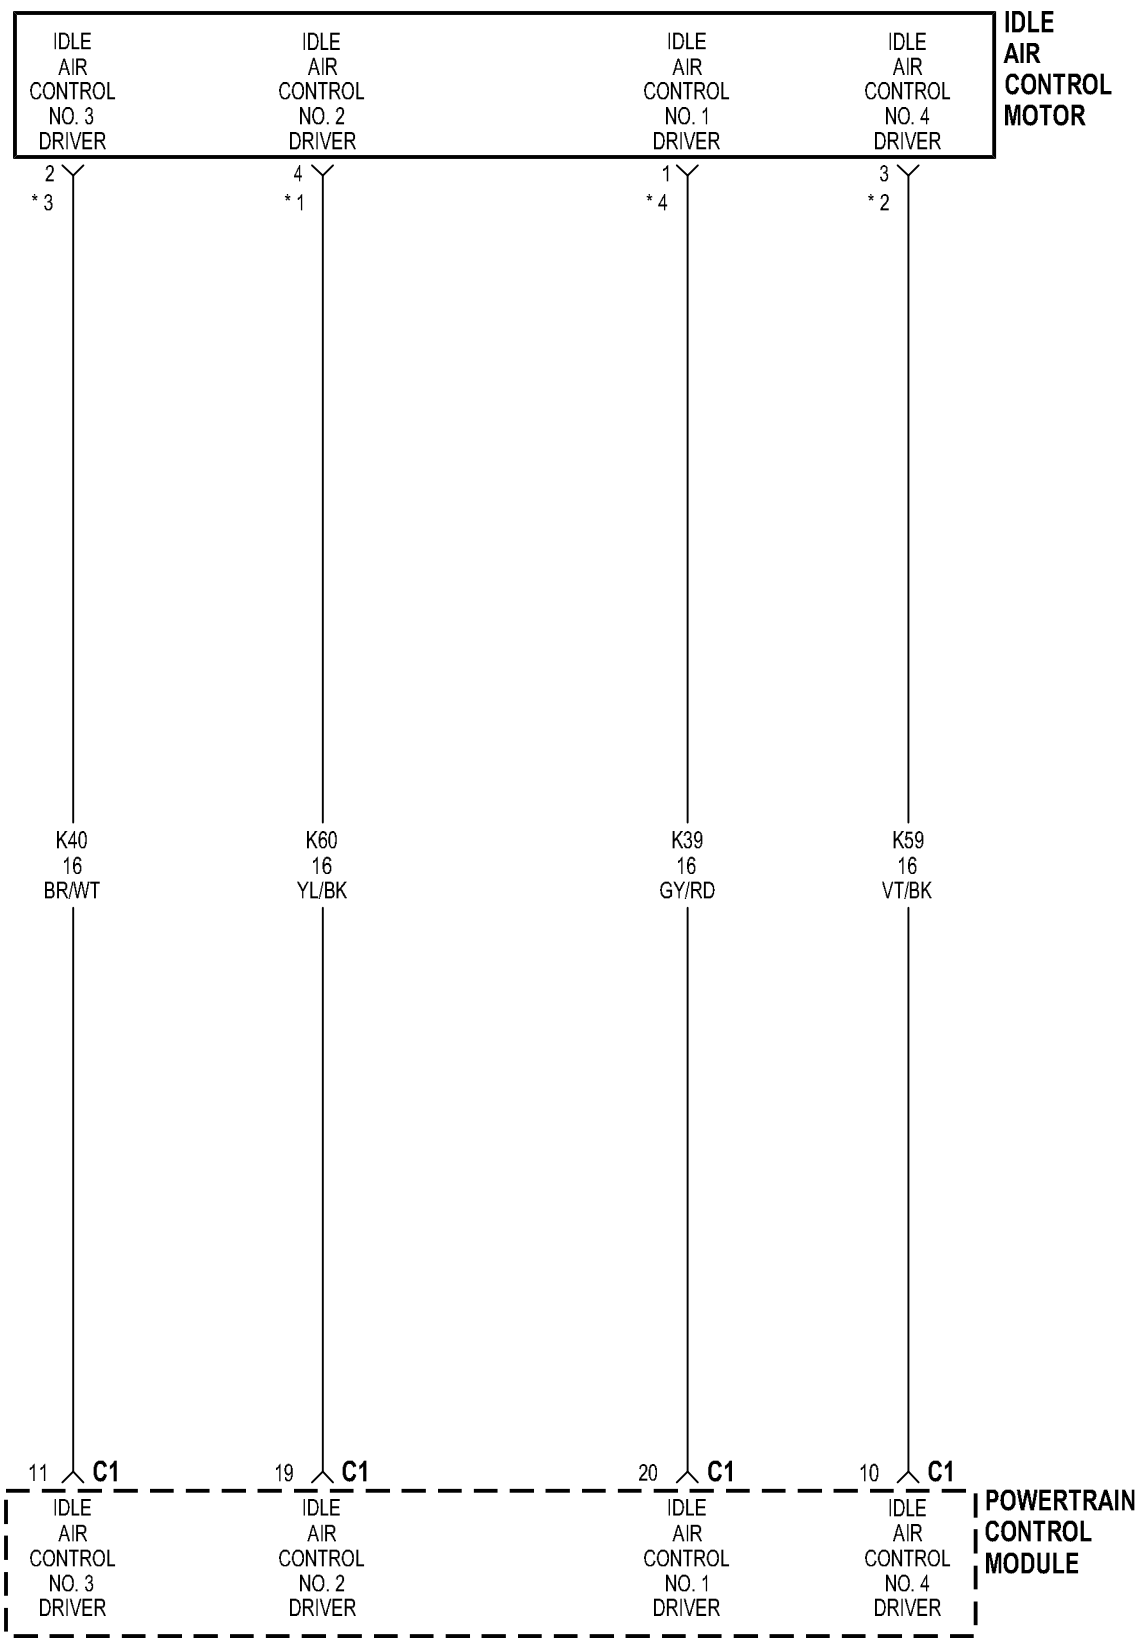


* 4.0L


GAS

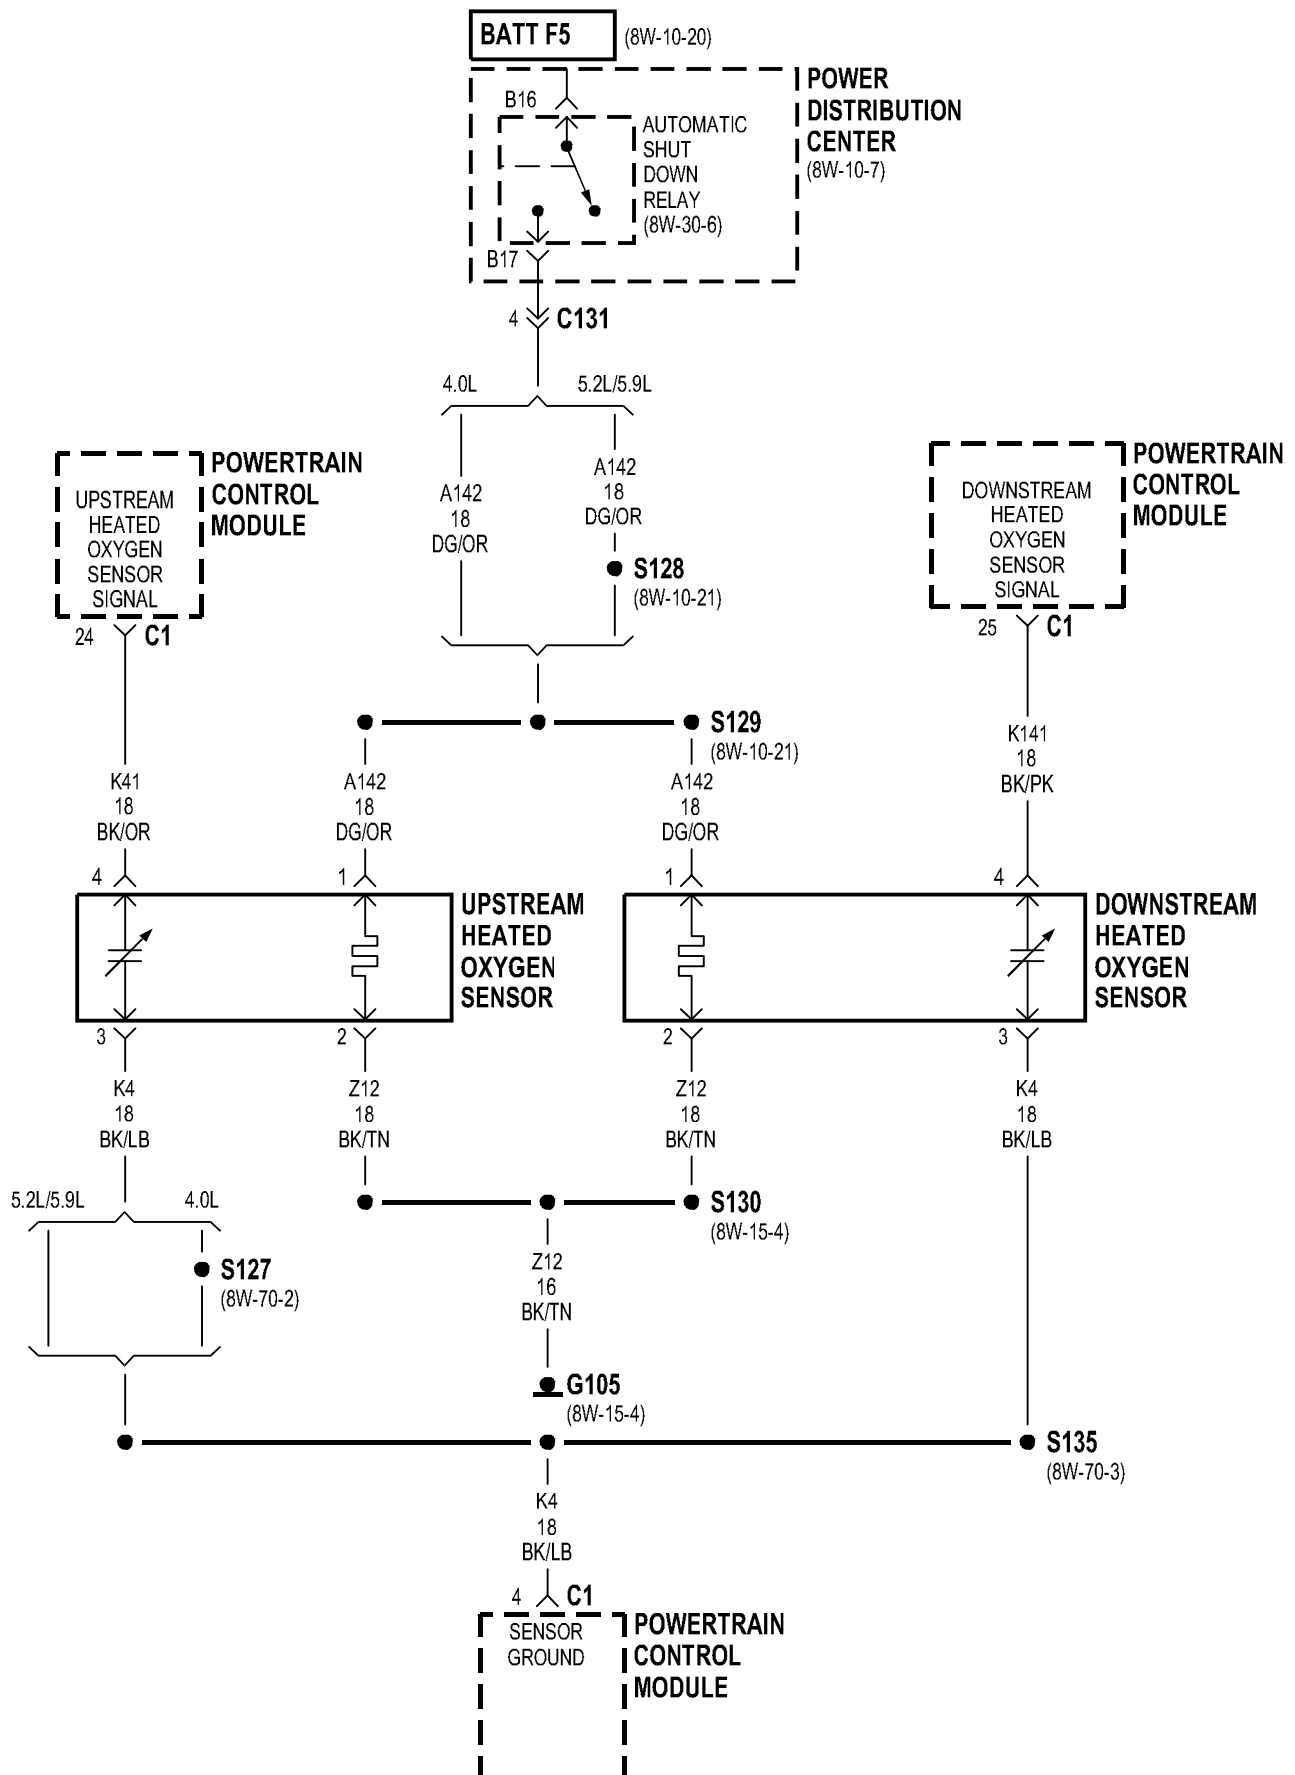


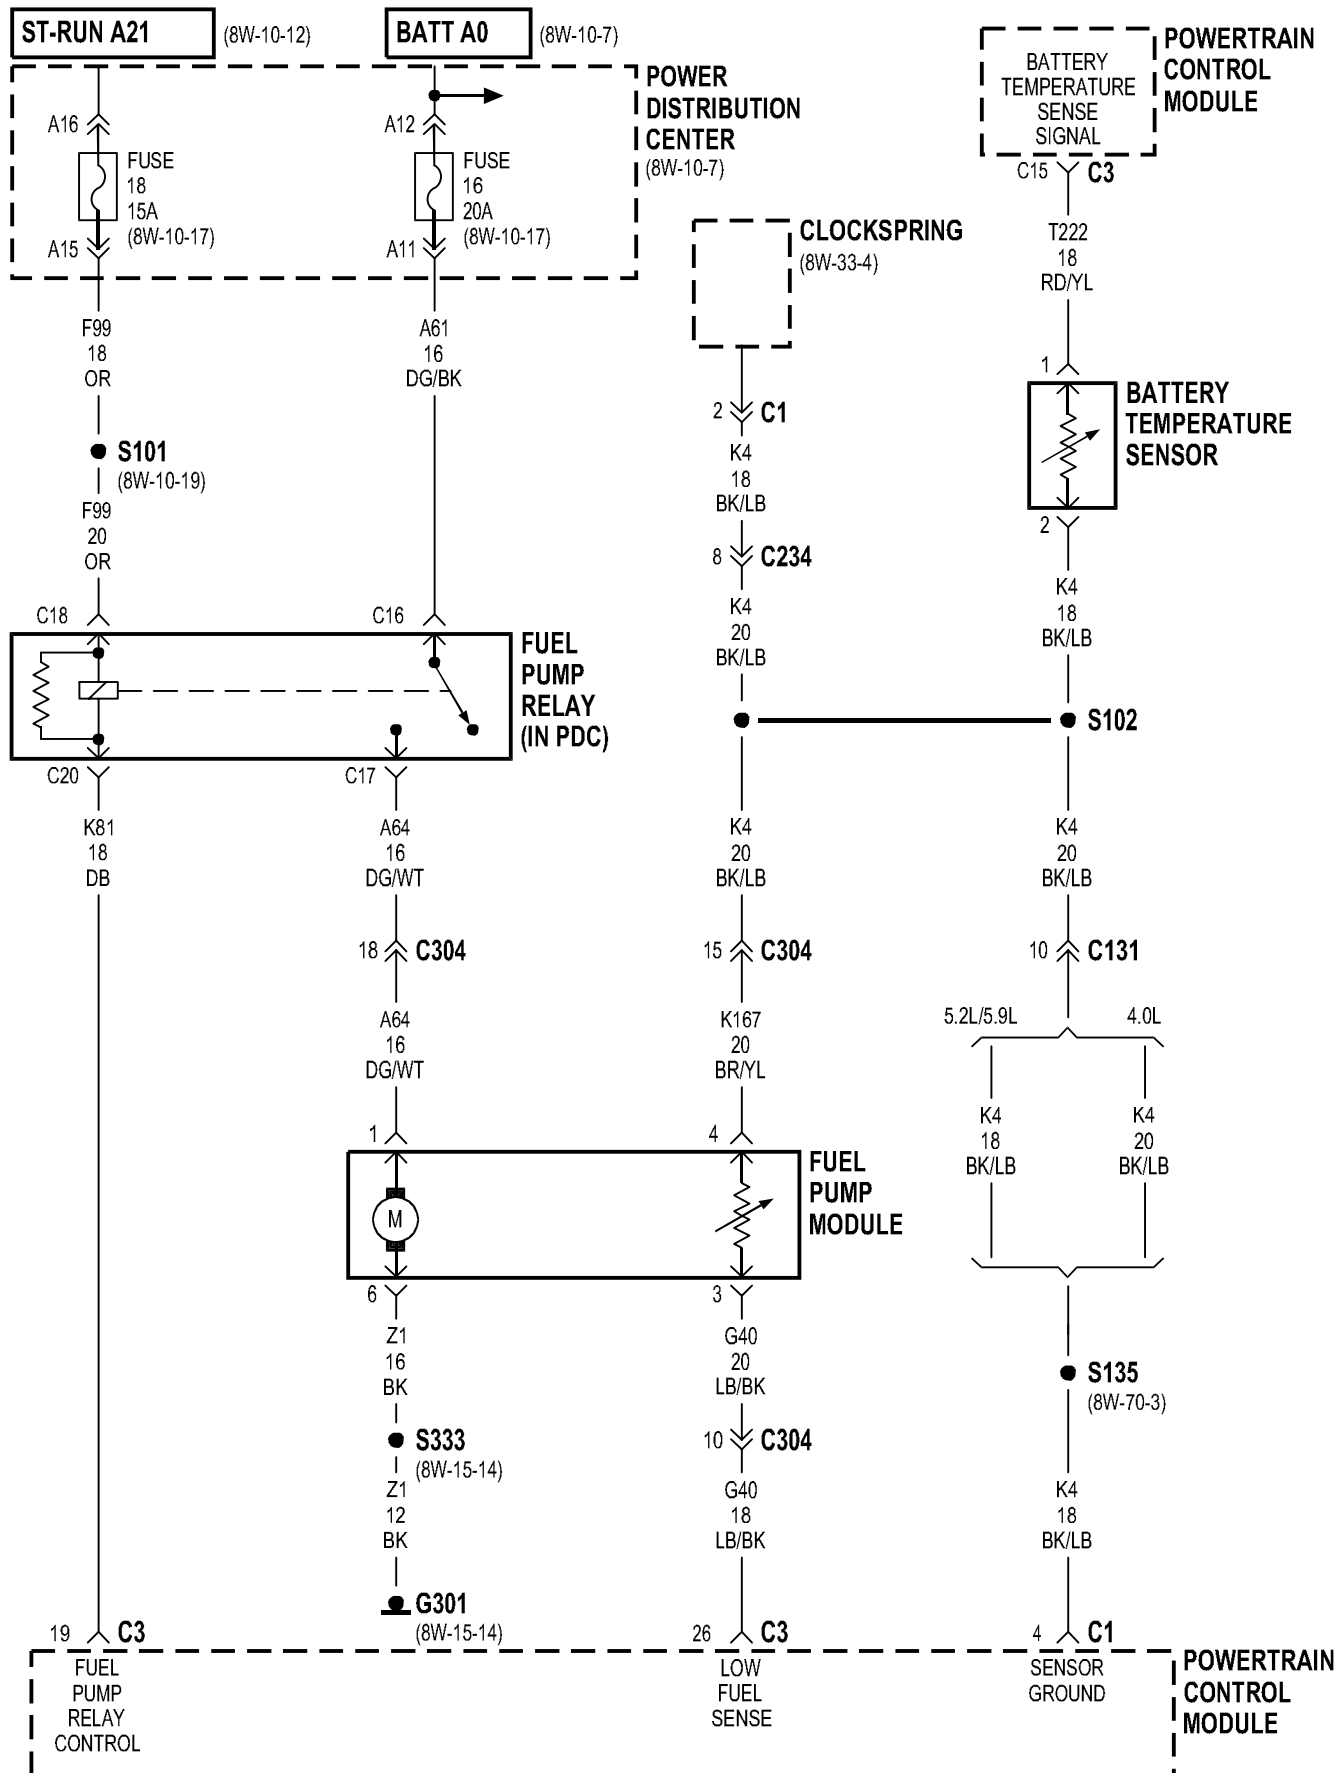


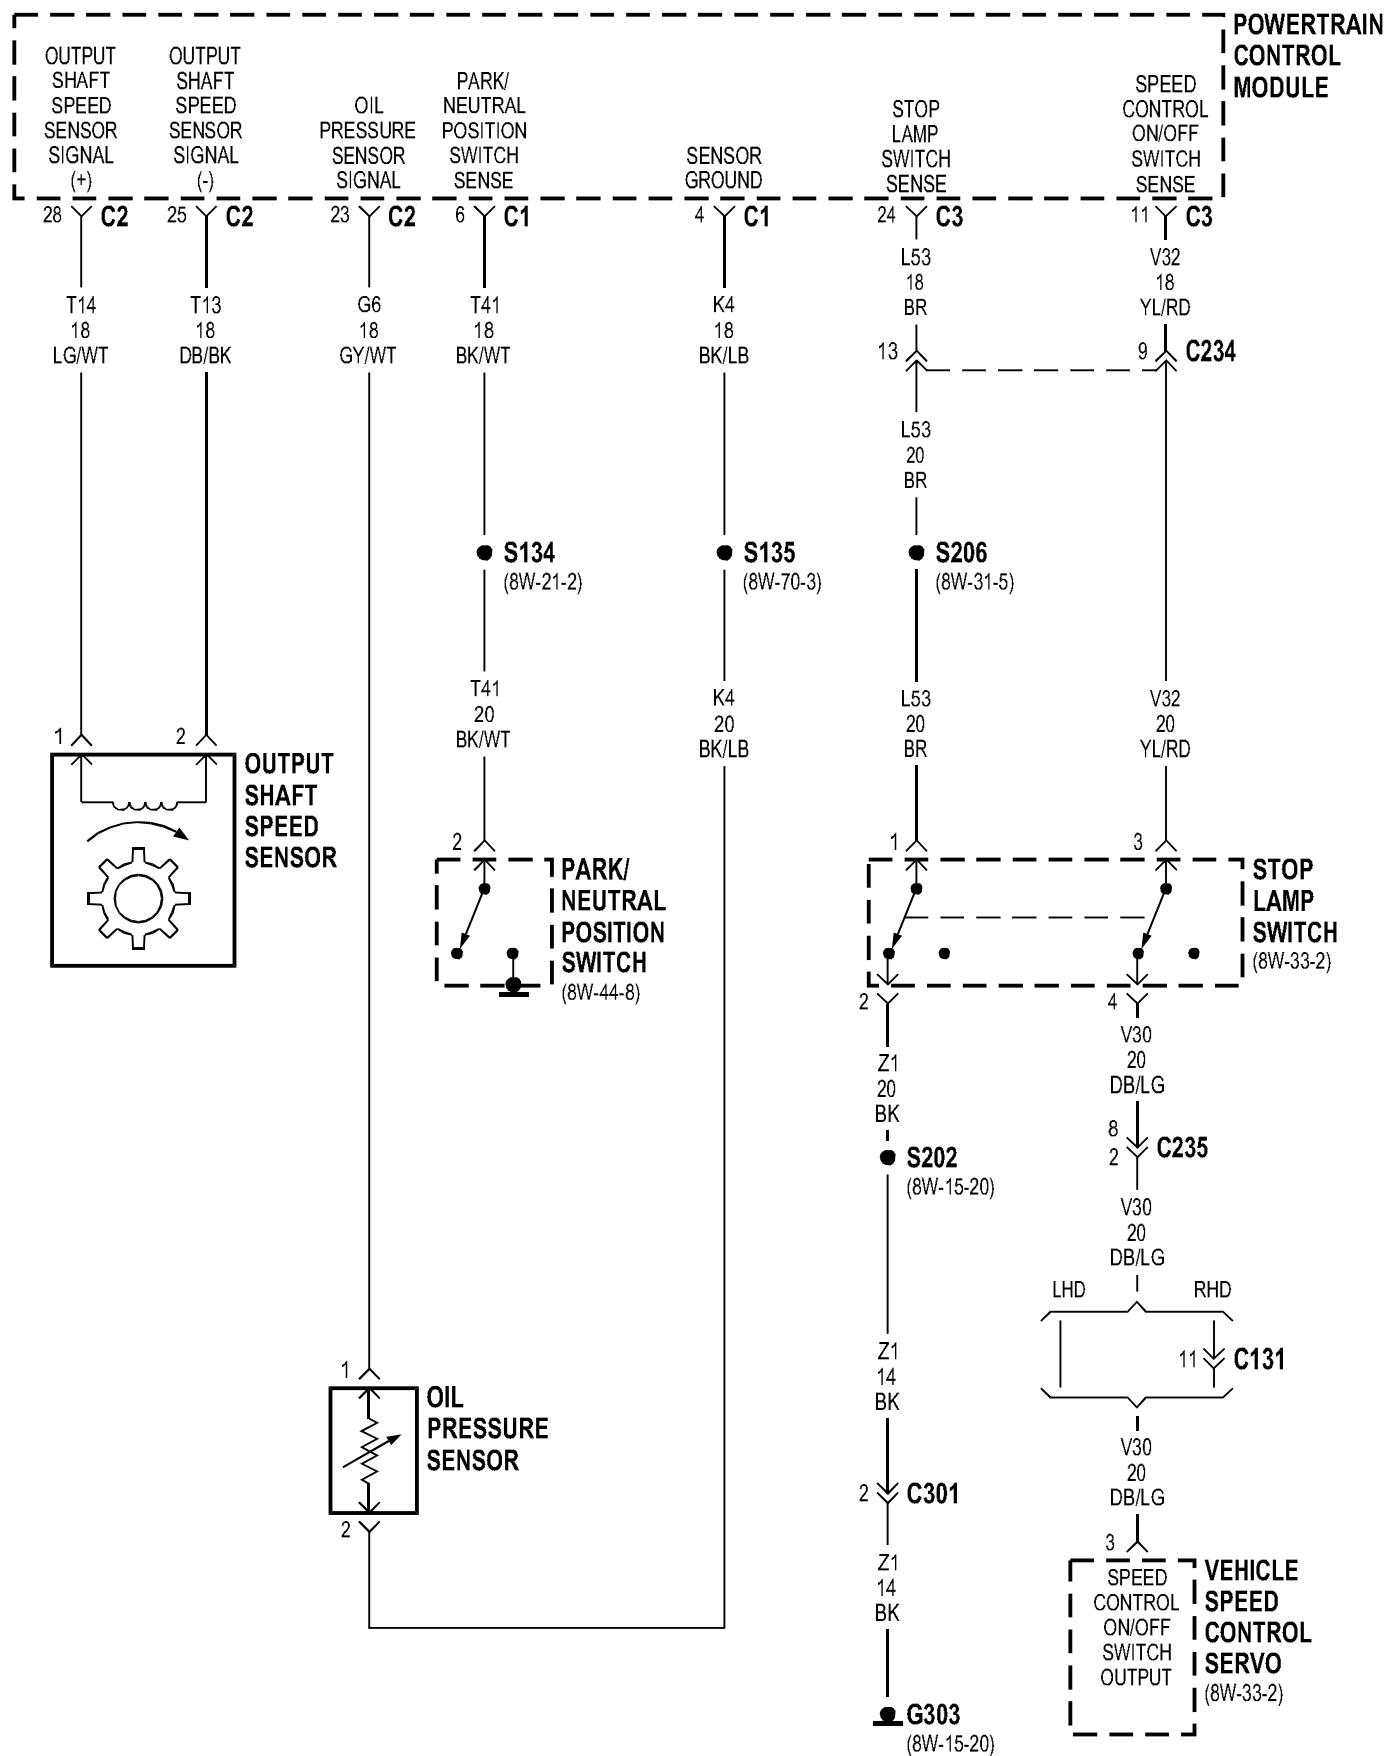

GAS

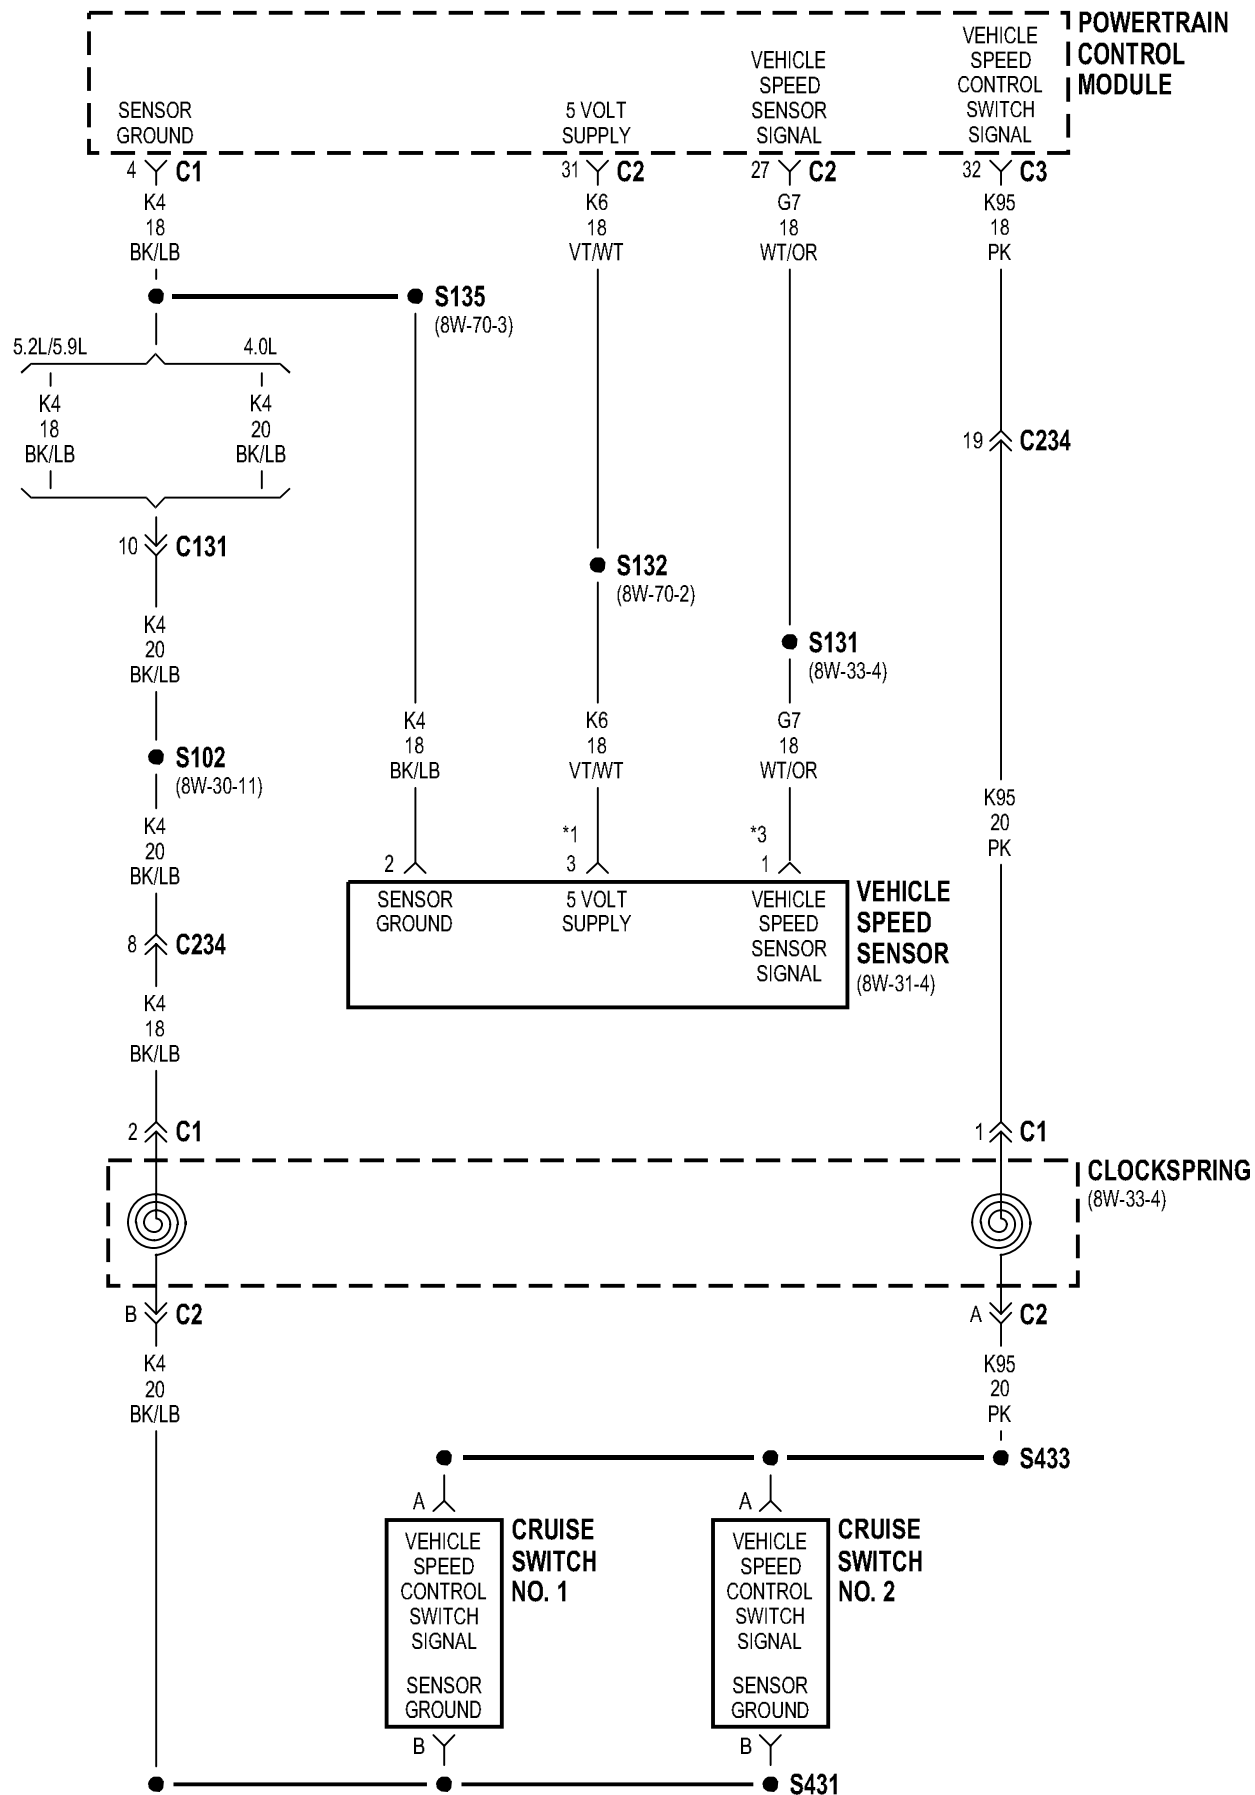

 POWERTRAIN
CONTROL
MODULE

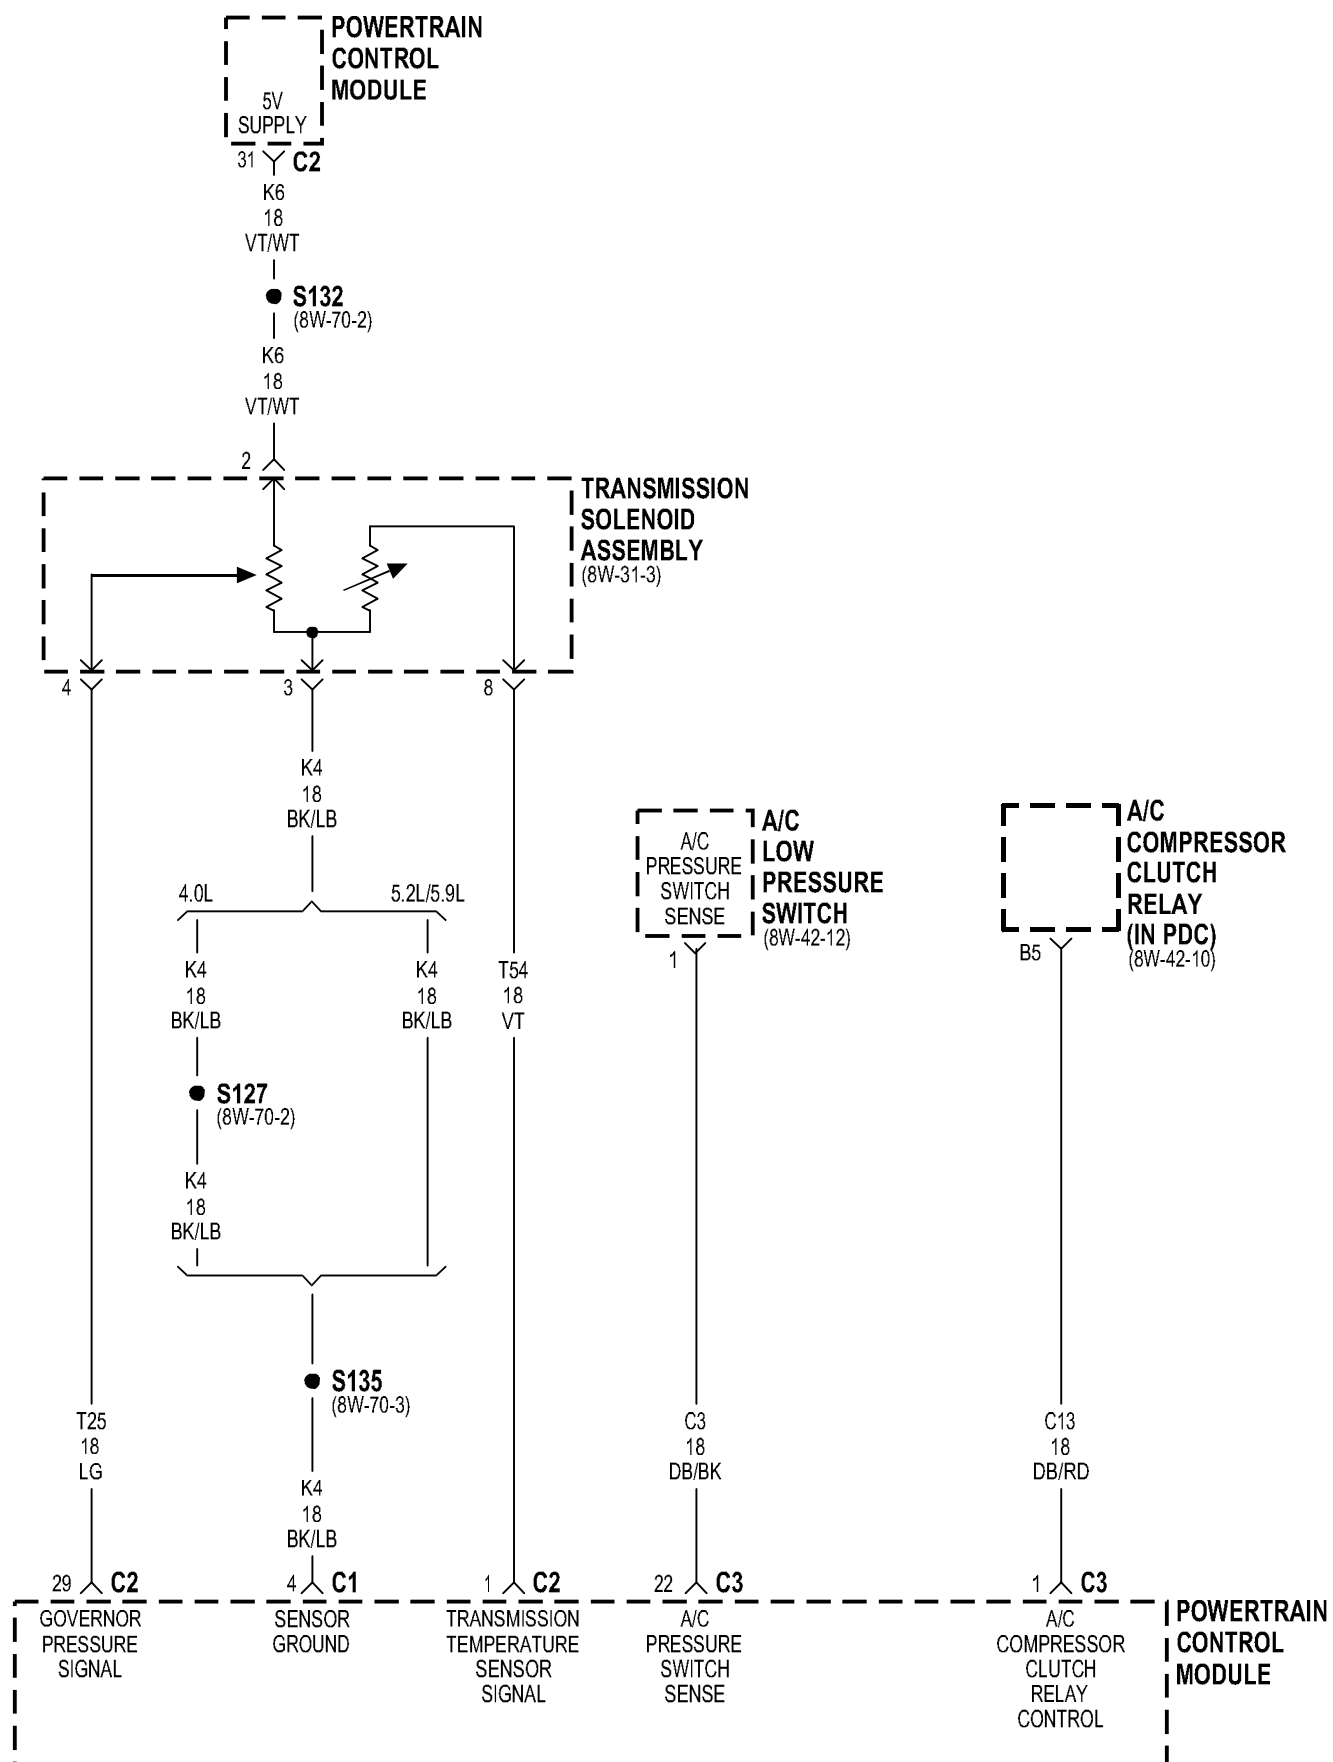

4.0L

