






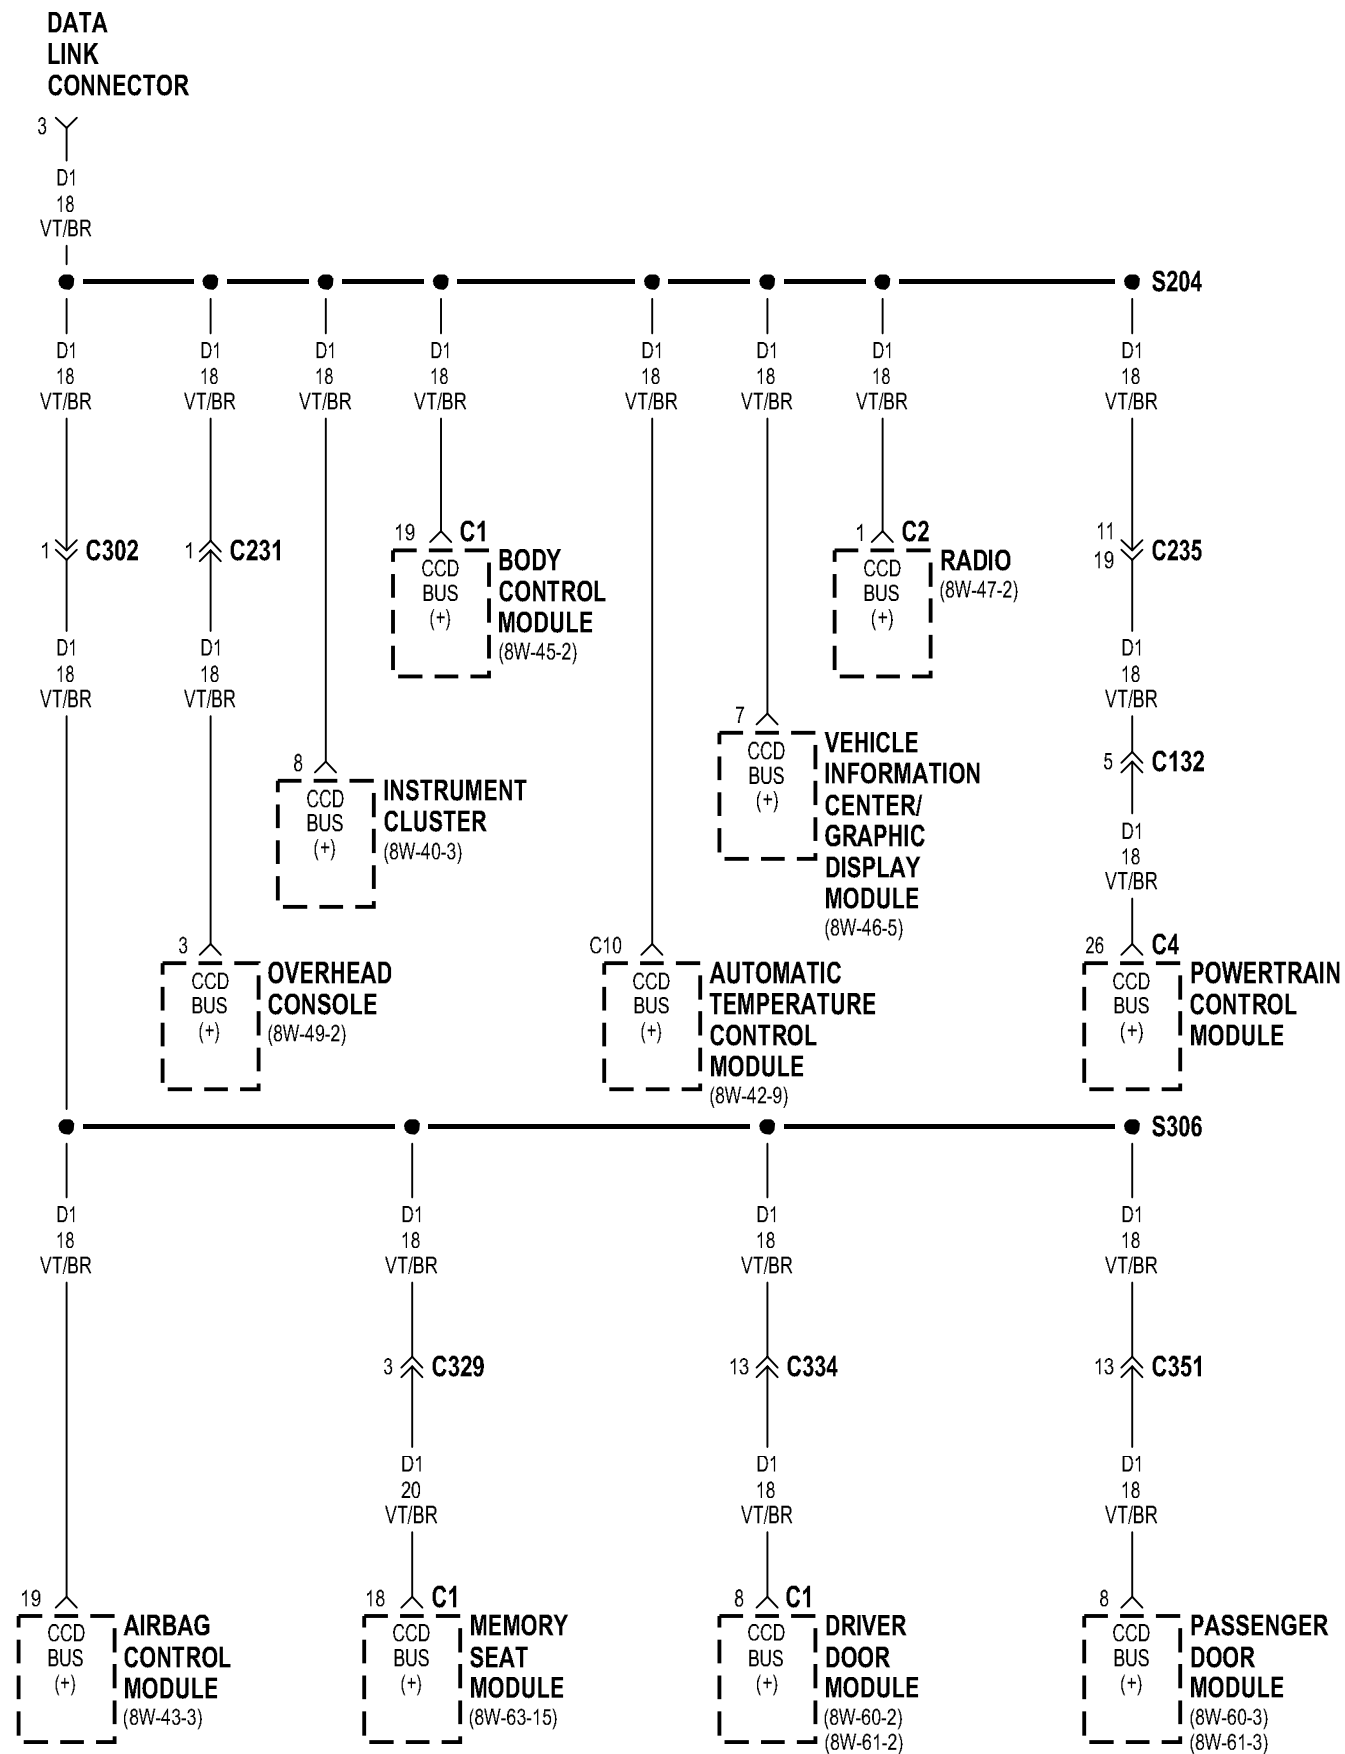


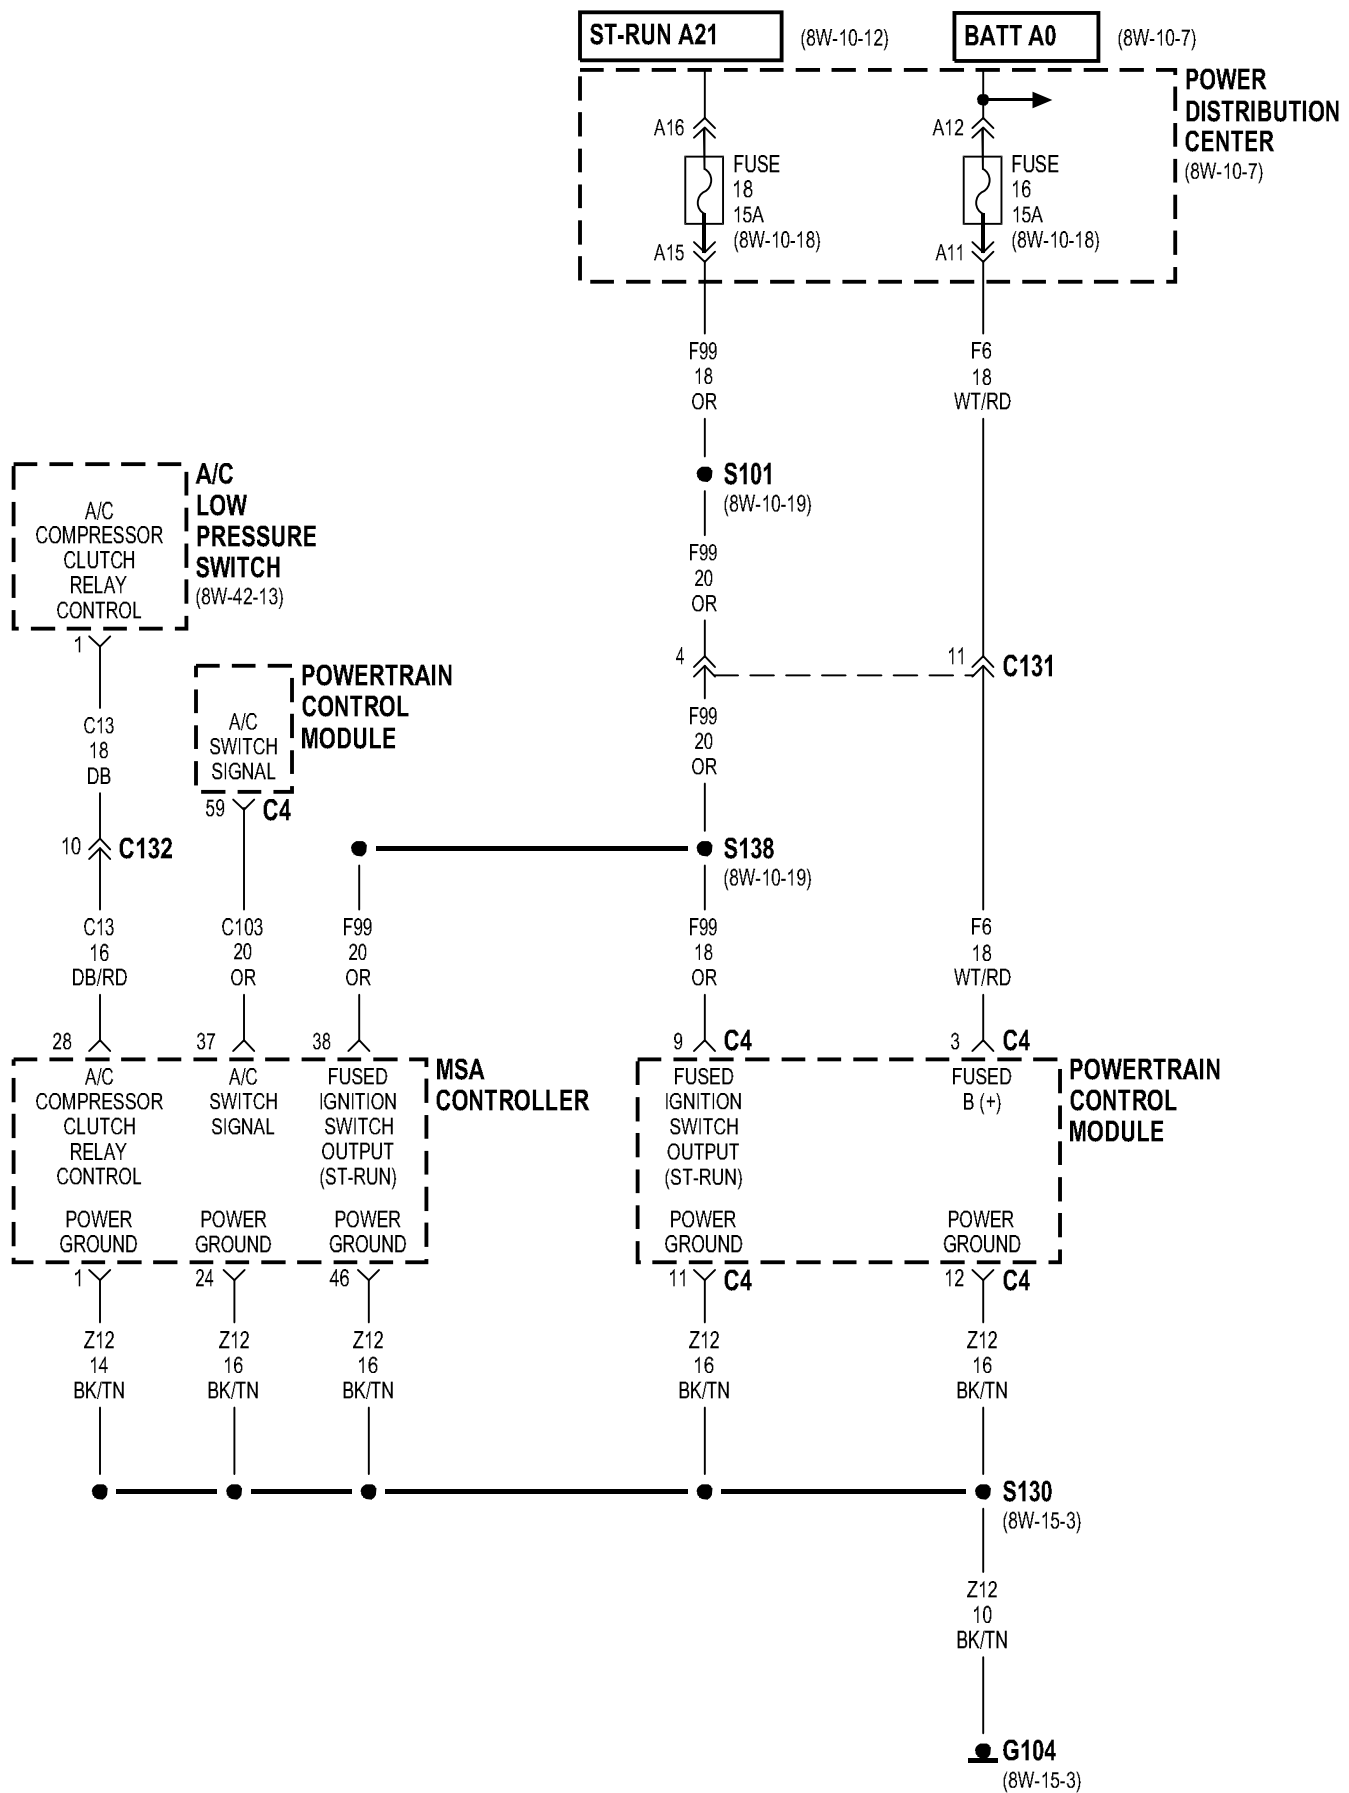


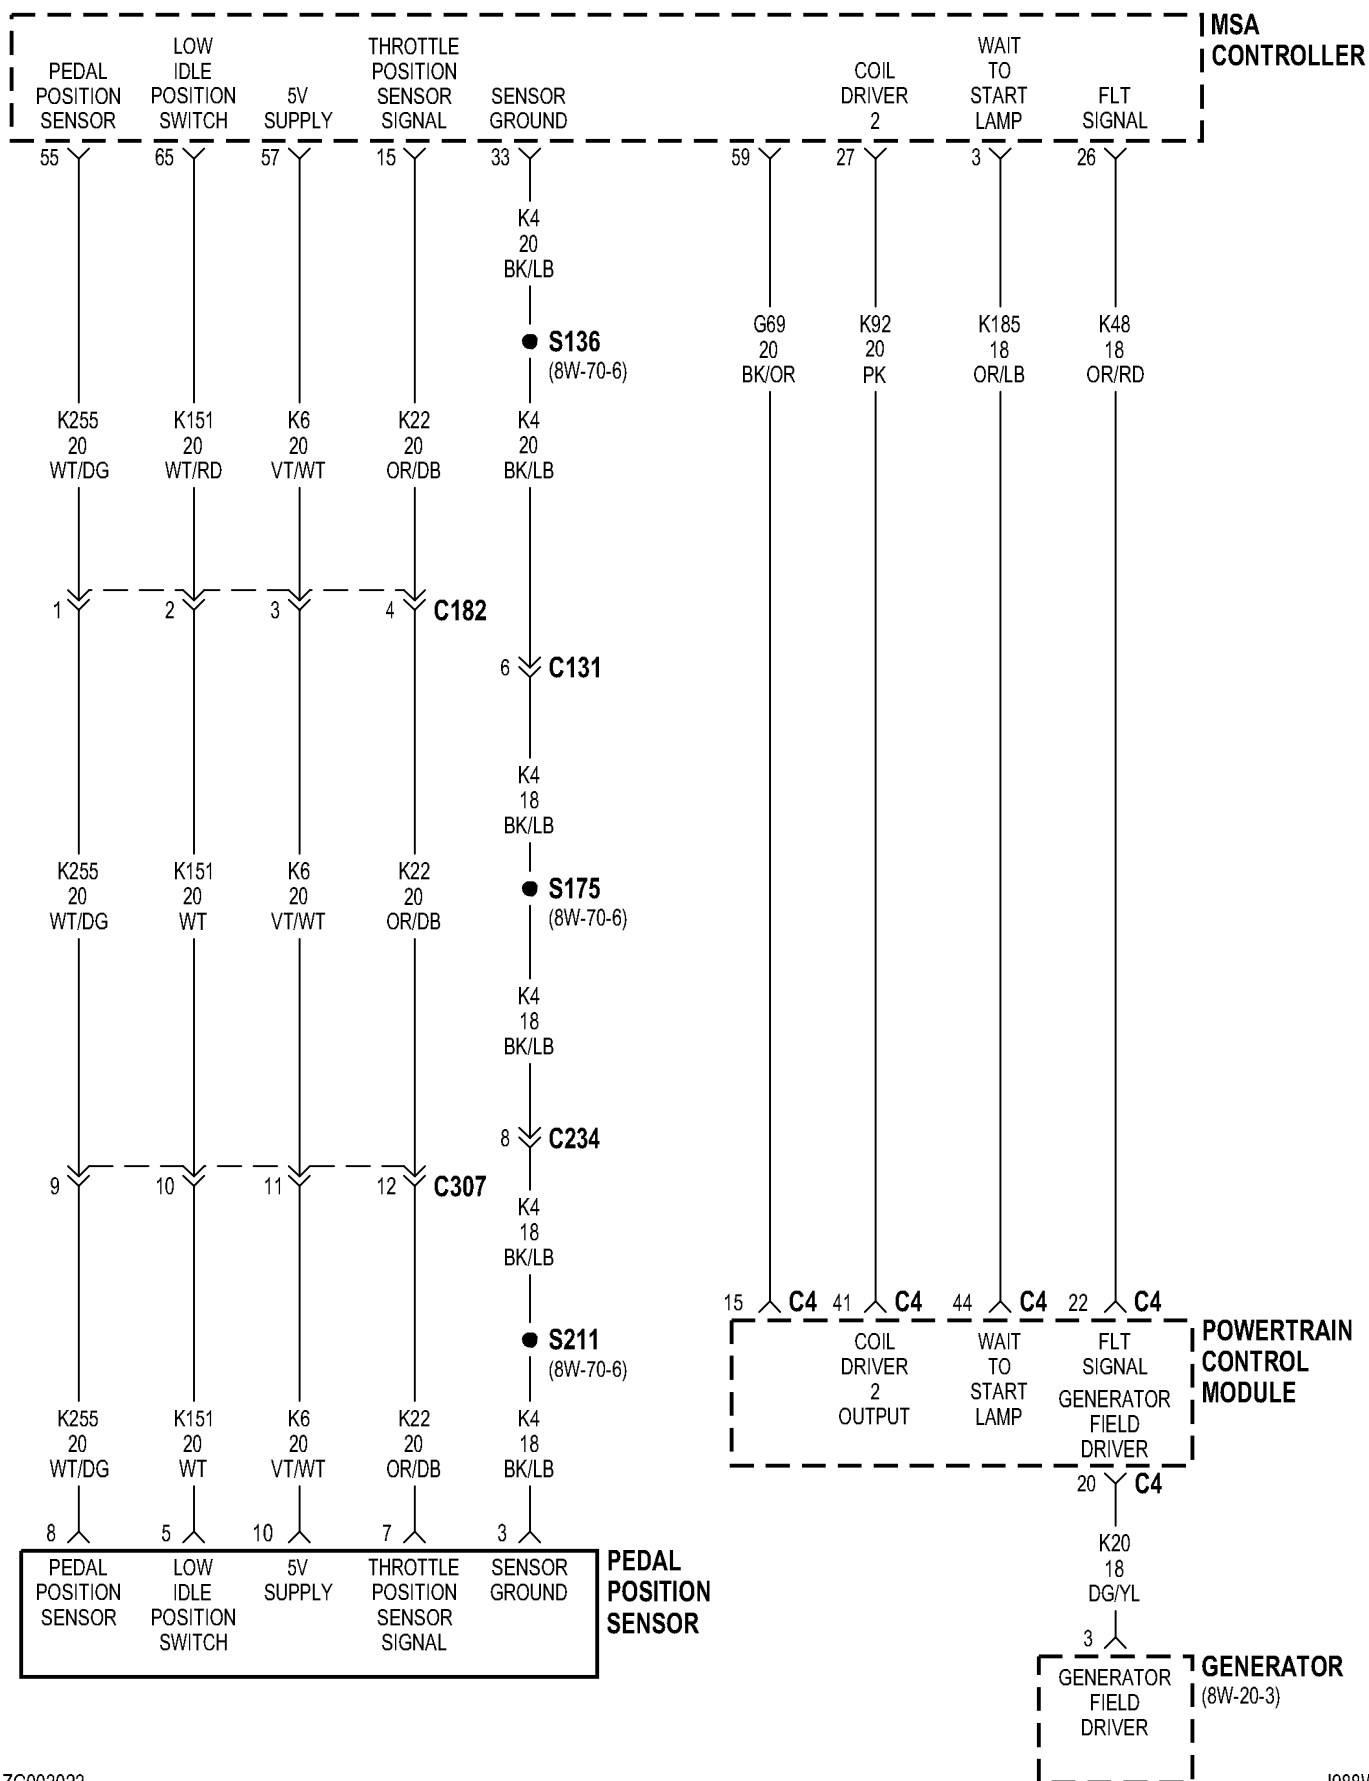


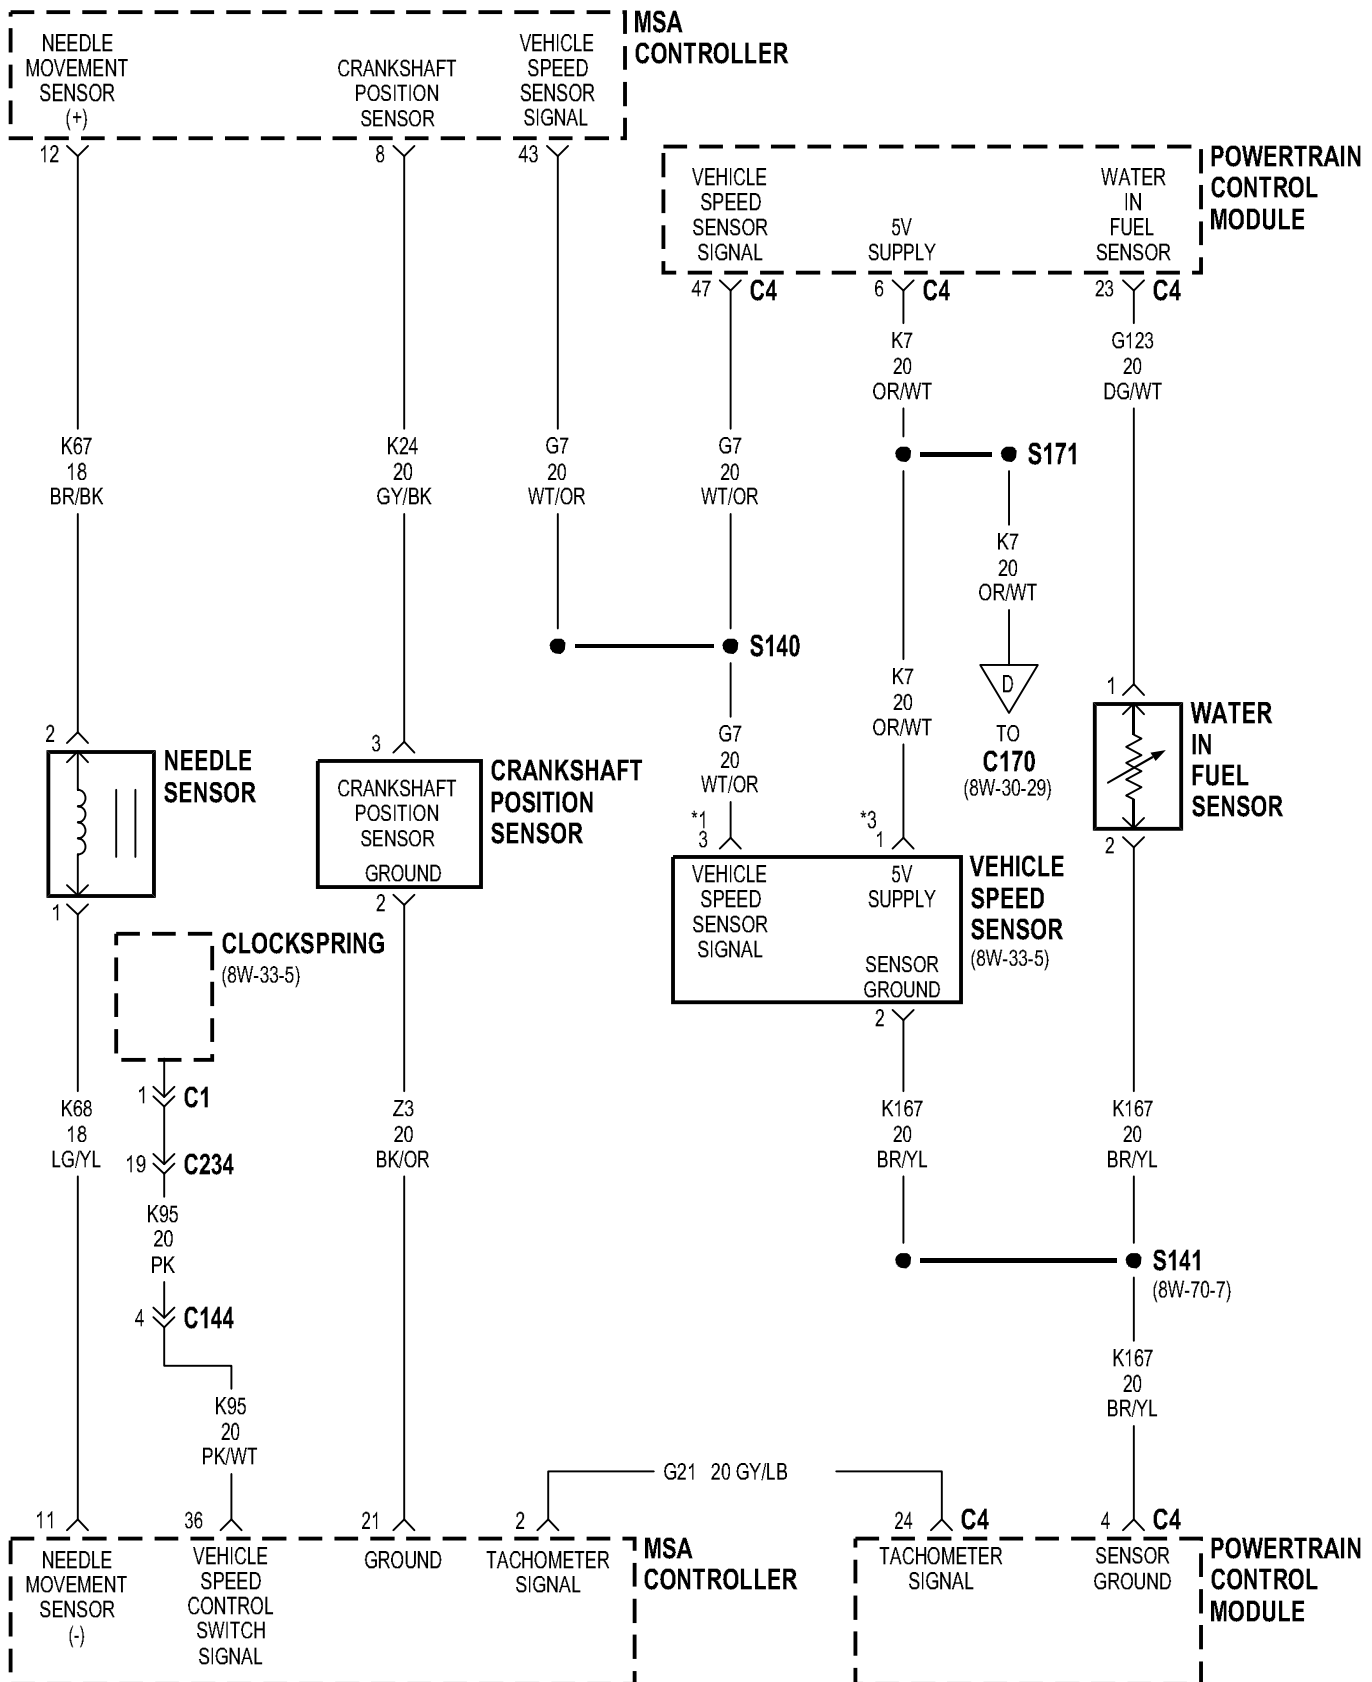

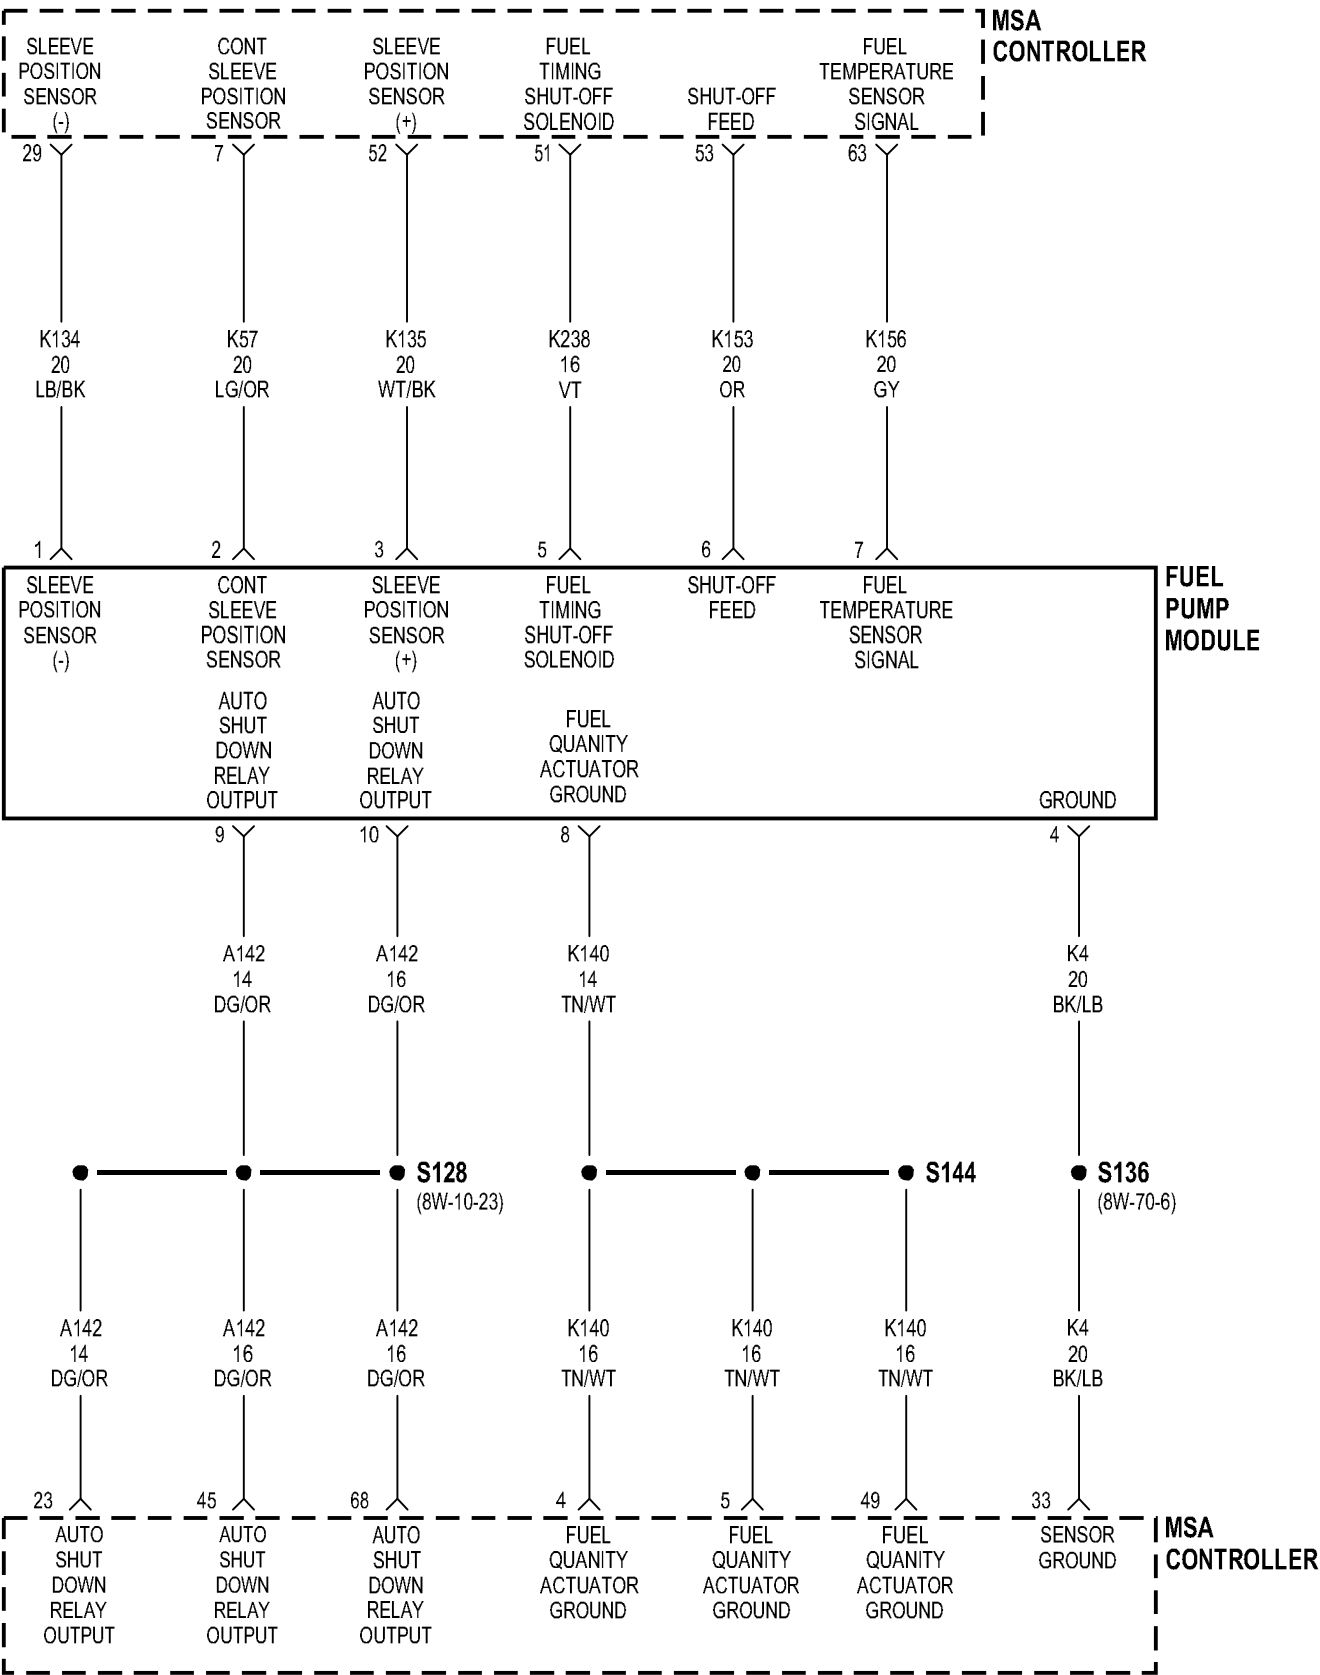


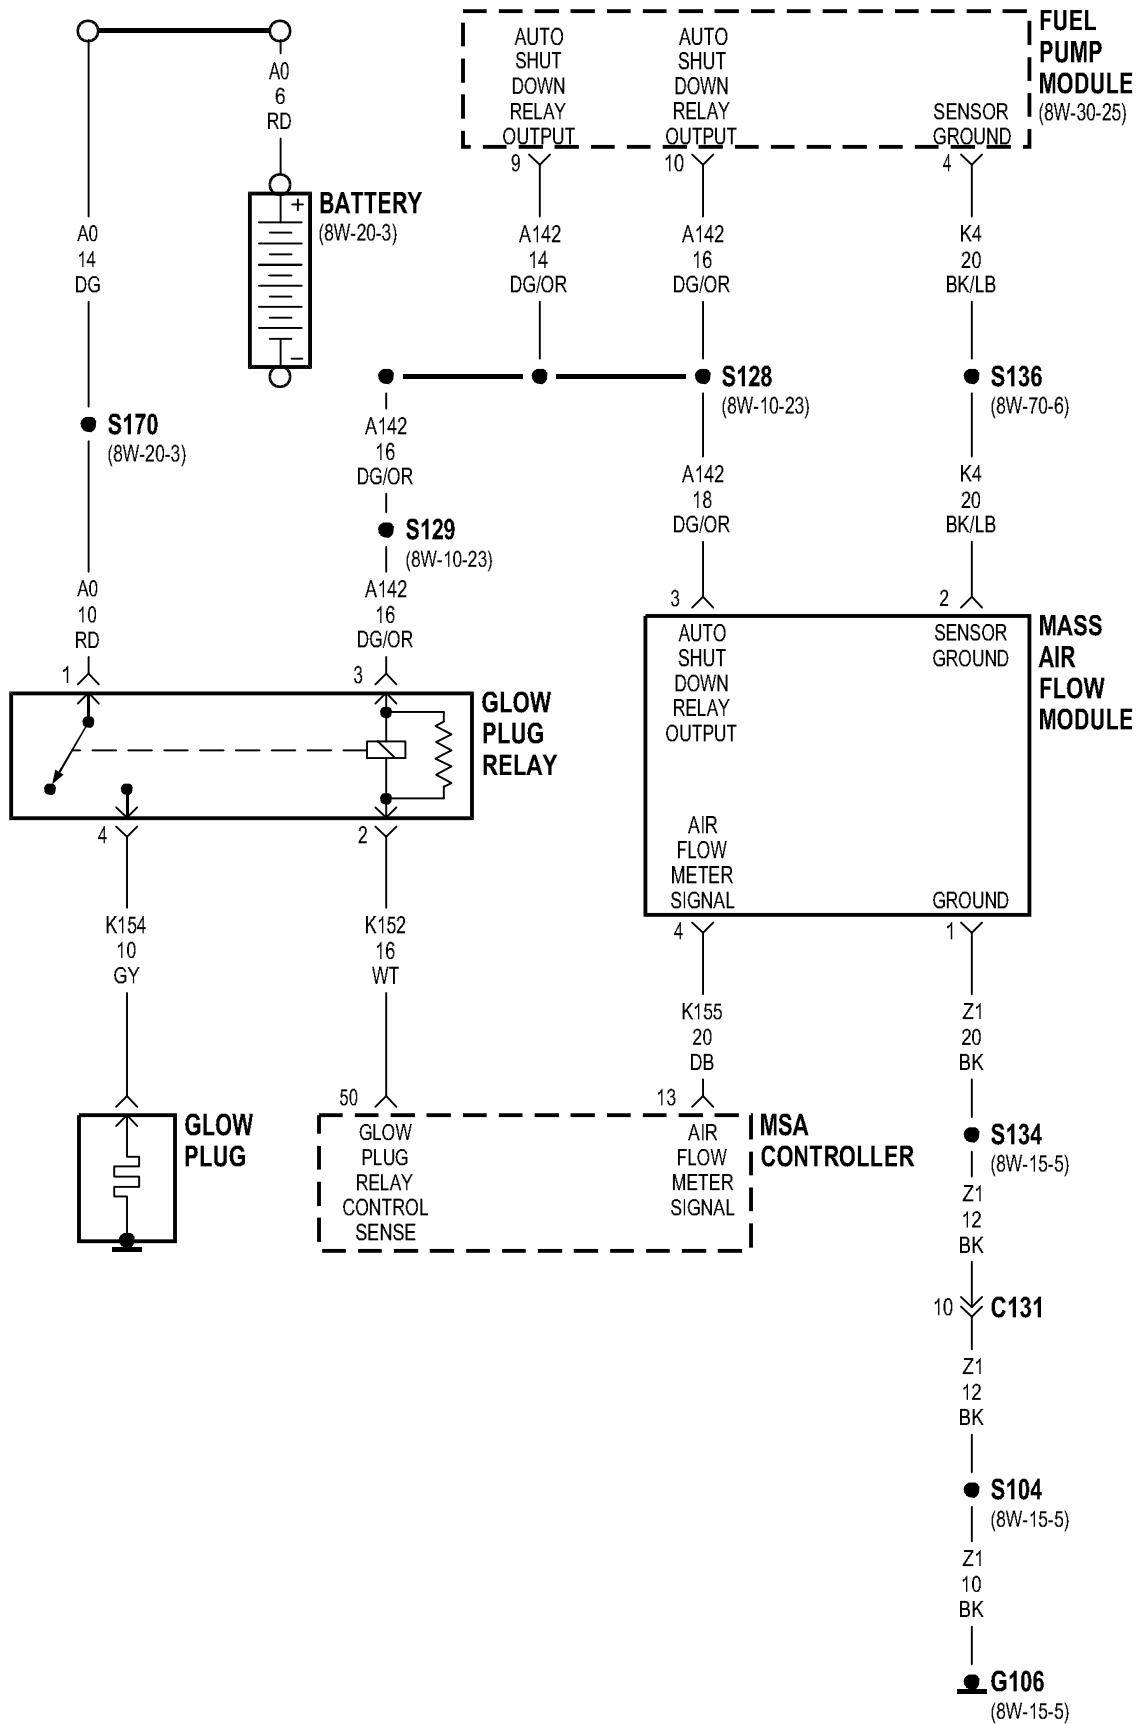


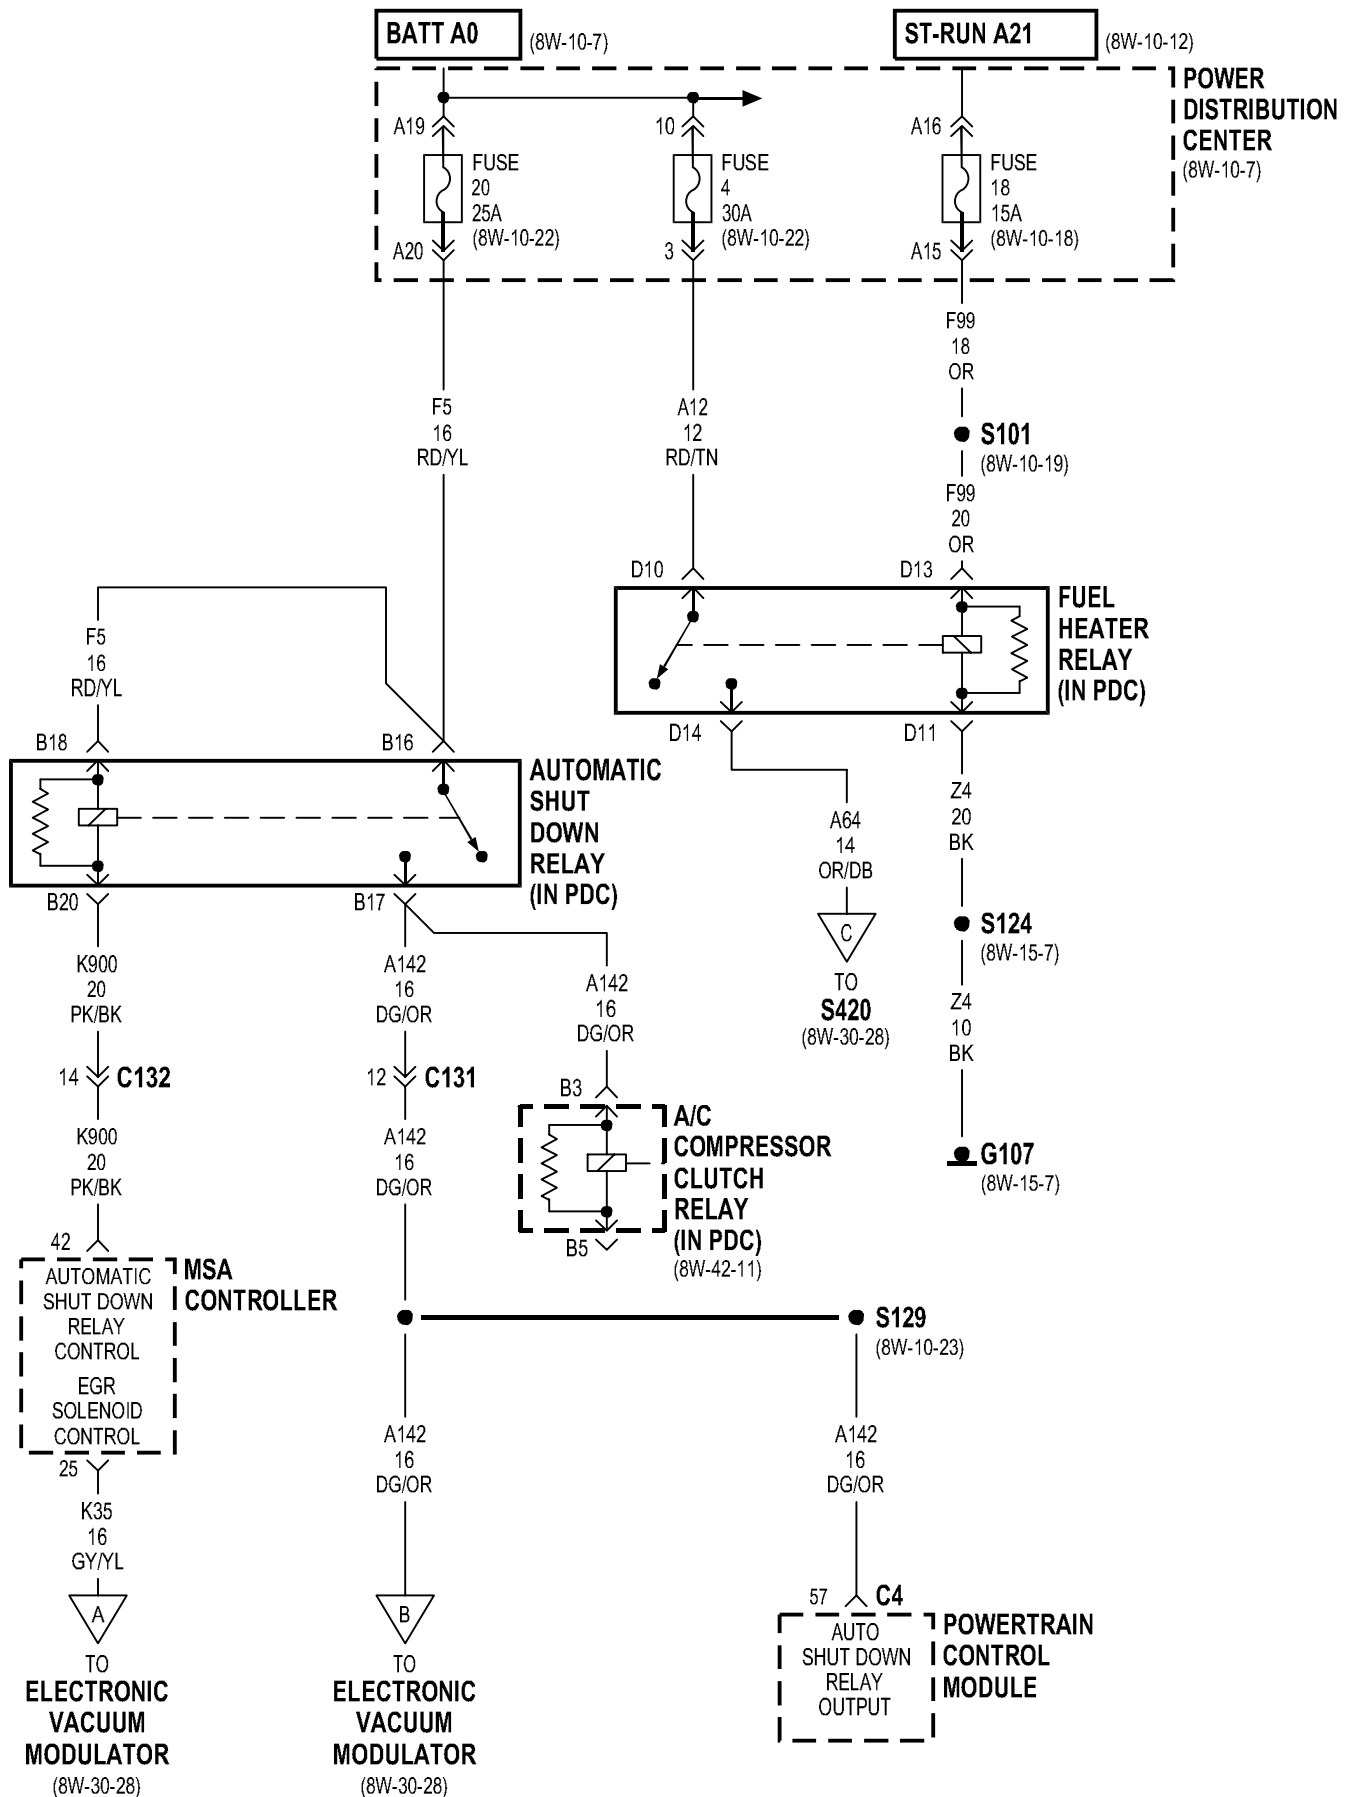


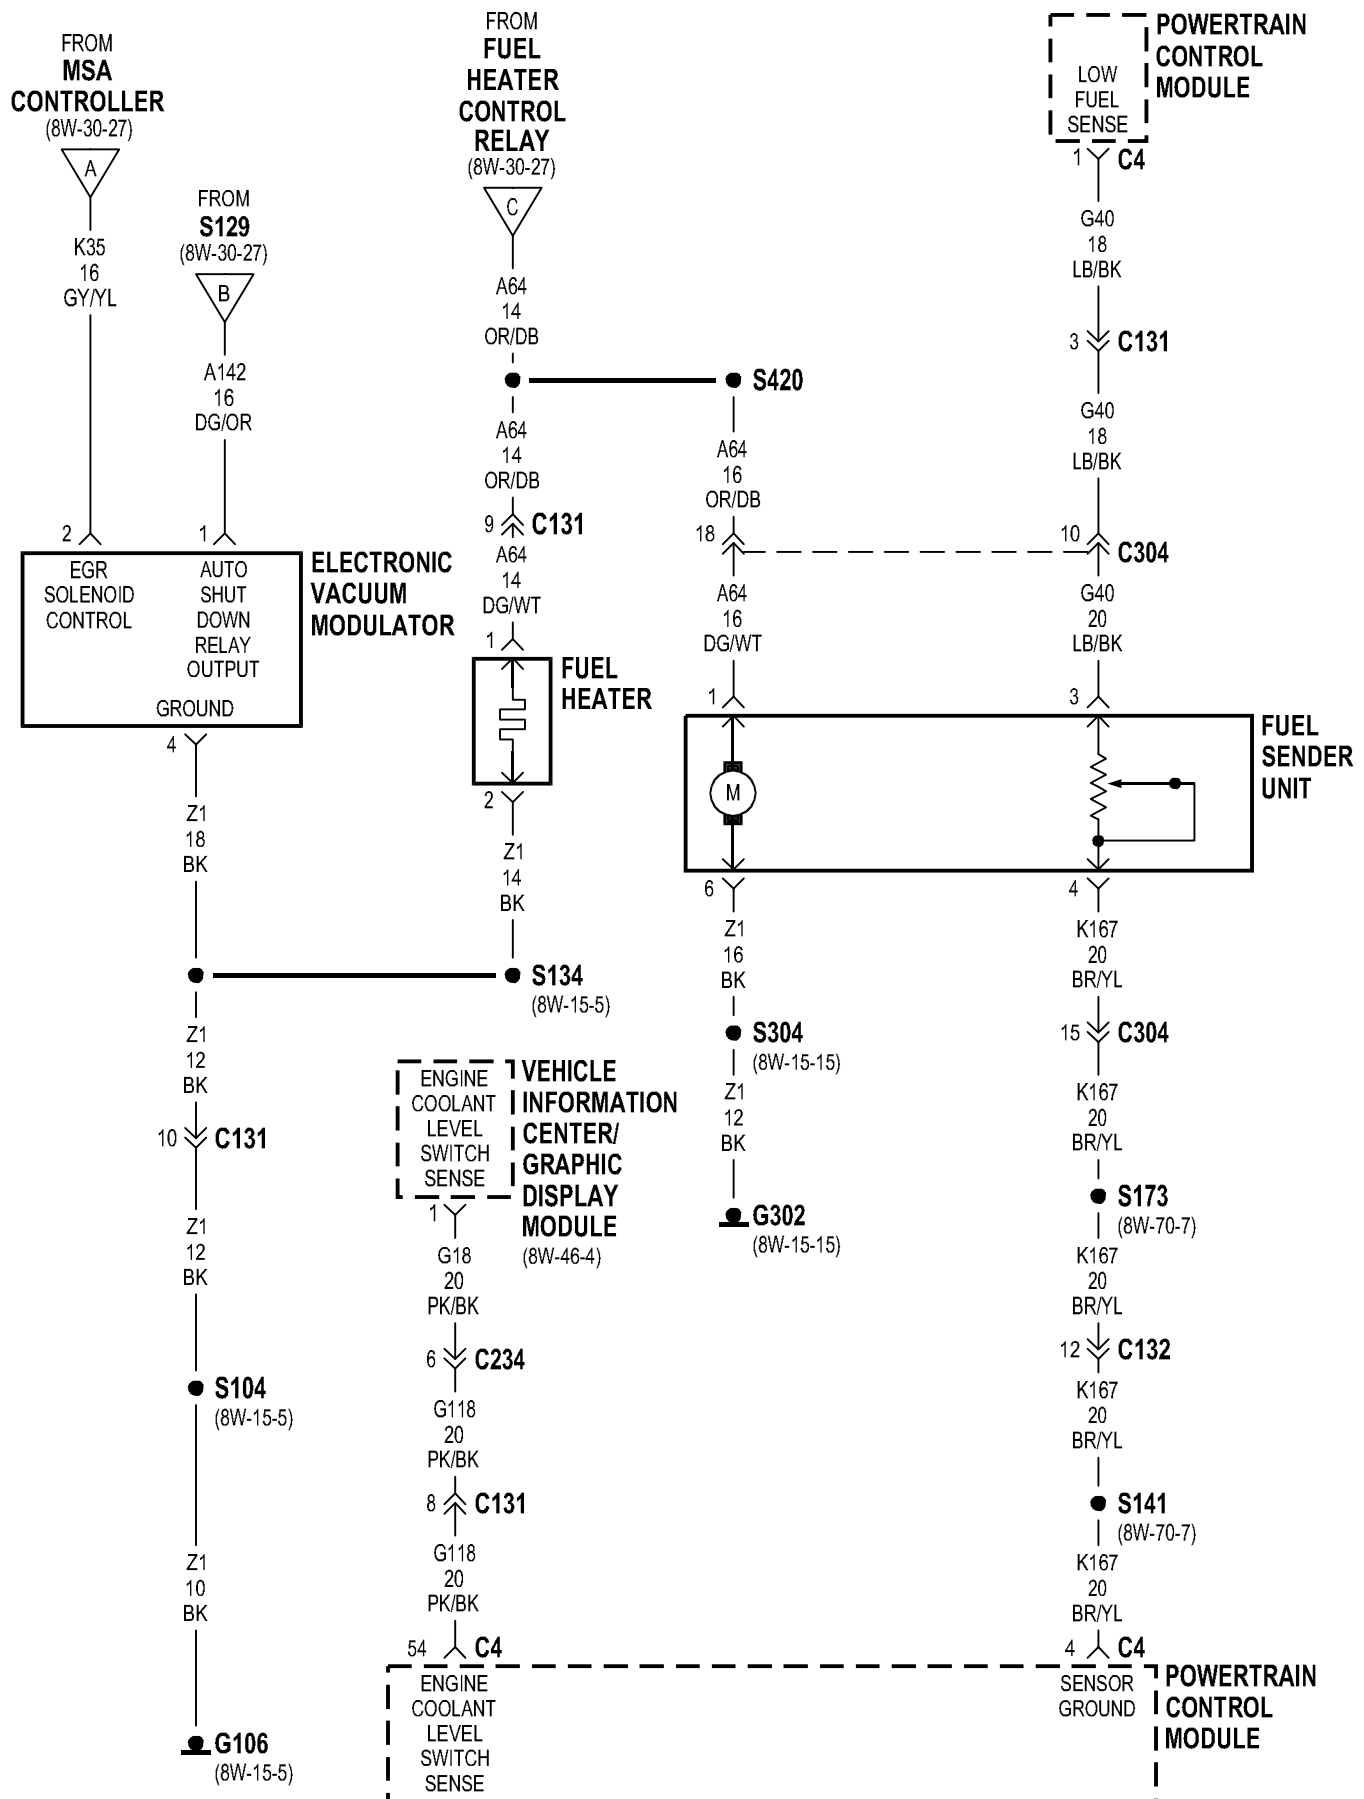

DIESEL

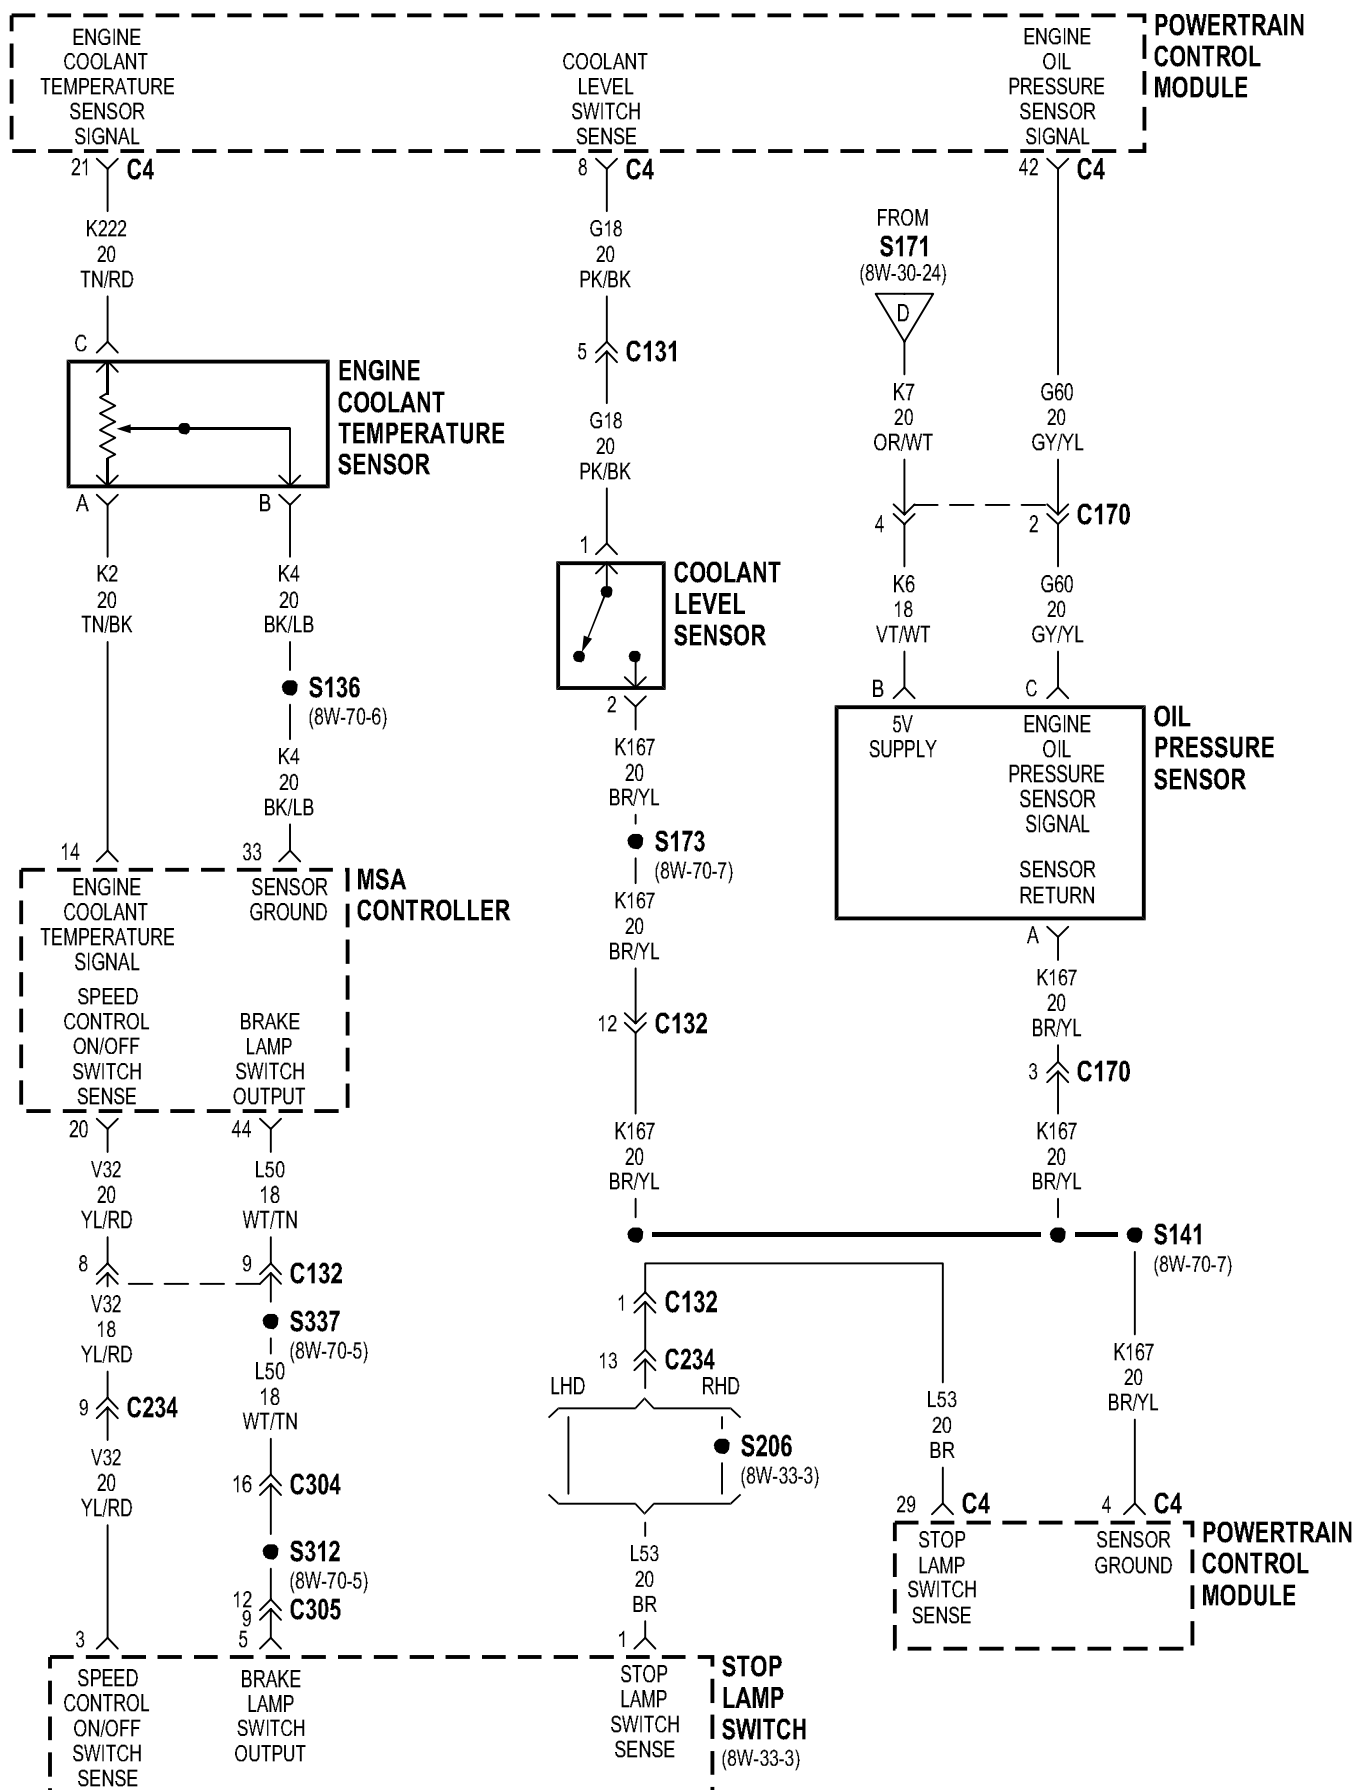


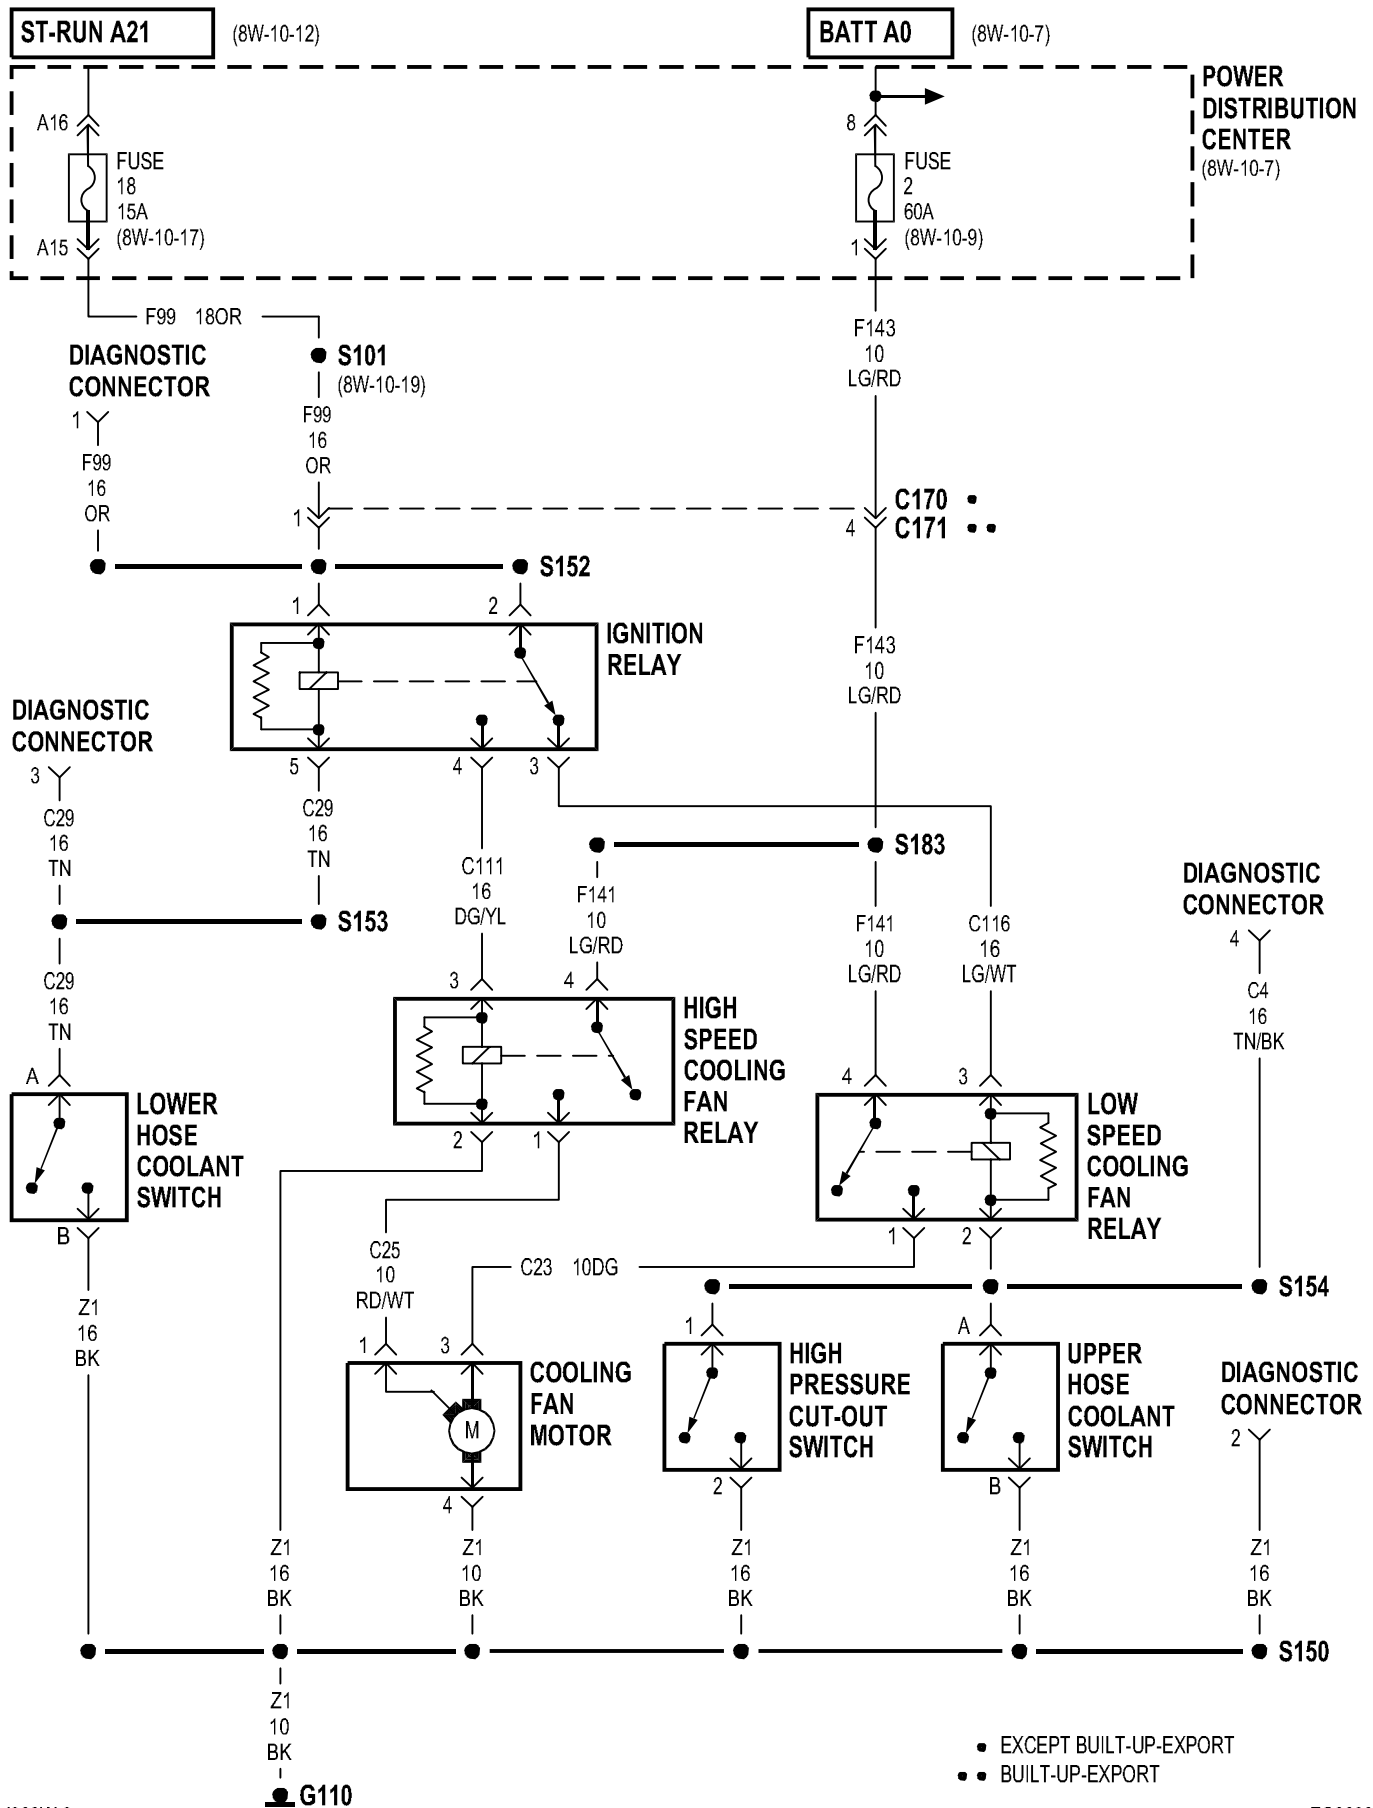


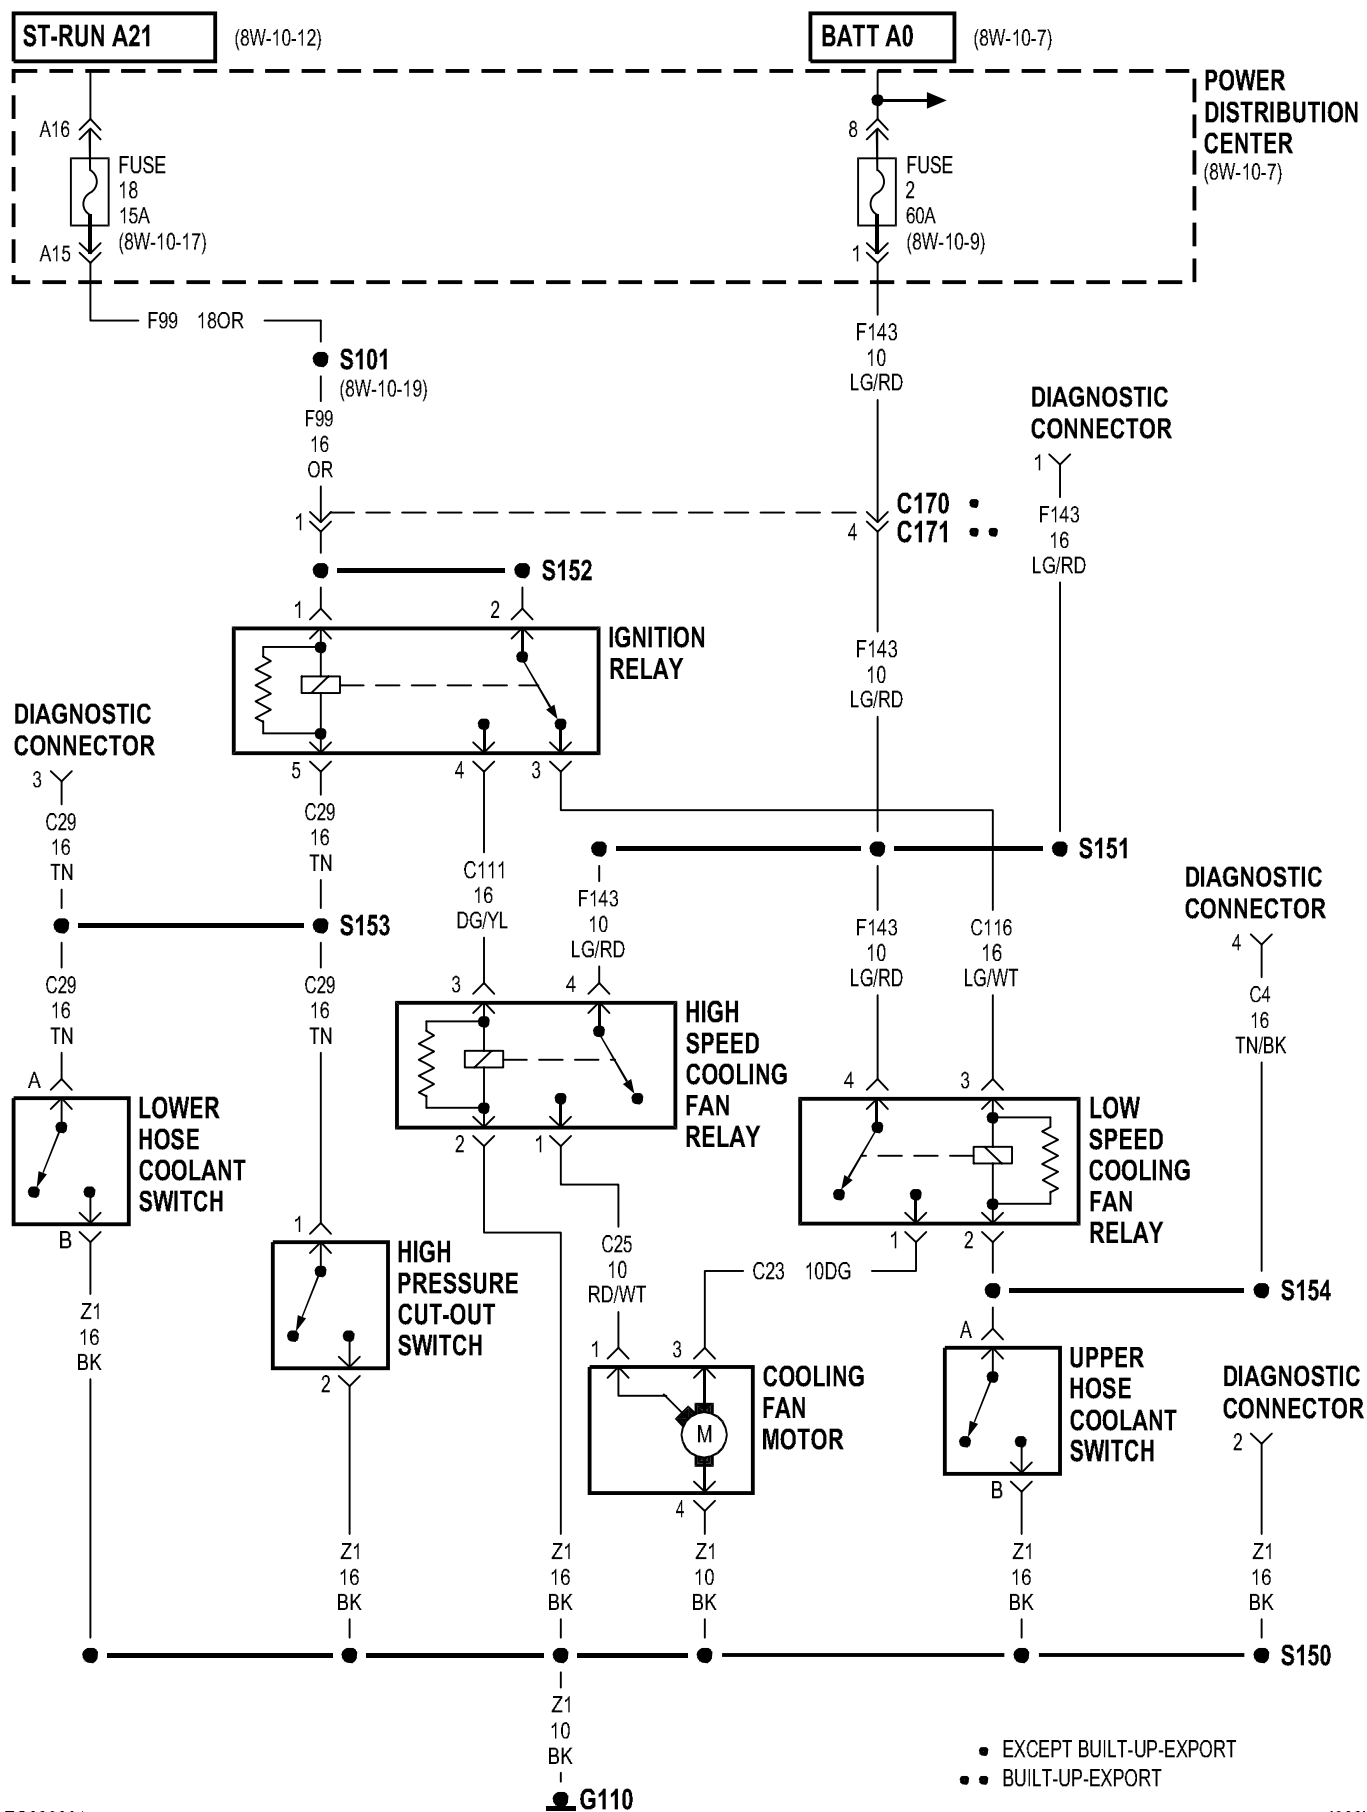


8W-31 TRANSMISSION CONTROL SYSTEM

Component	Page	Component	Page
Fuse 5 (JB)	8W-31-5	Powertrain Control Module	8W-31-2, 3, 4, 5
Fuse 12 (JB)	8W-31-5	Shift Interlock.	8W-31-5
Fuse 17 (PDC)	8W-31-2	Stop Lamp Switch.	8W-31-5
G303	8W-31-5	Throttle Position Sensor	8W-31-4
Generator	8W-31-2	Torque Converter Clutch Solenoid Control .	8W-31-2
Junction Block	8W-31-5	Transmission Control Relay	8W-31-2
Output Shaft Speed Sensor.	8W-31-4	Transmission Solenoid Assembly.	8W-31-2, 3
Overdrive Pressure Switch	8W-31-5	Underdrive Solenoid Control.	8W-31-2
Overdrive Solenoid Control.	8W-31-2	Vehicle Speed Sensor	8W-31-4
Power Distribution Center	8W-31-2		

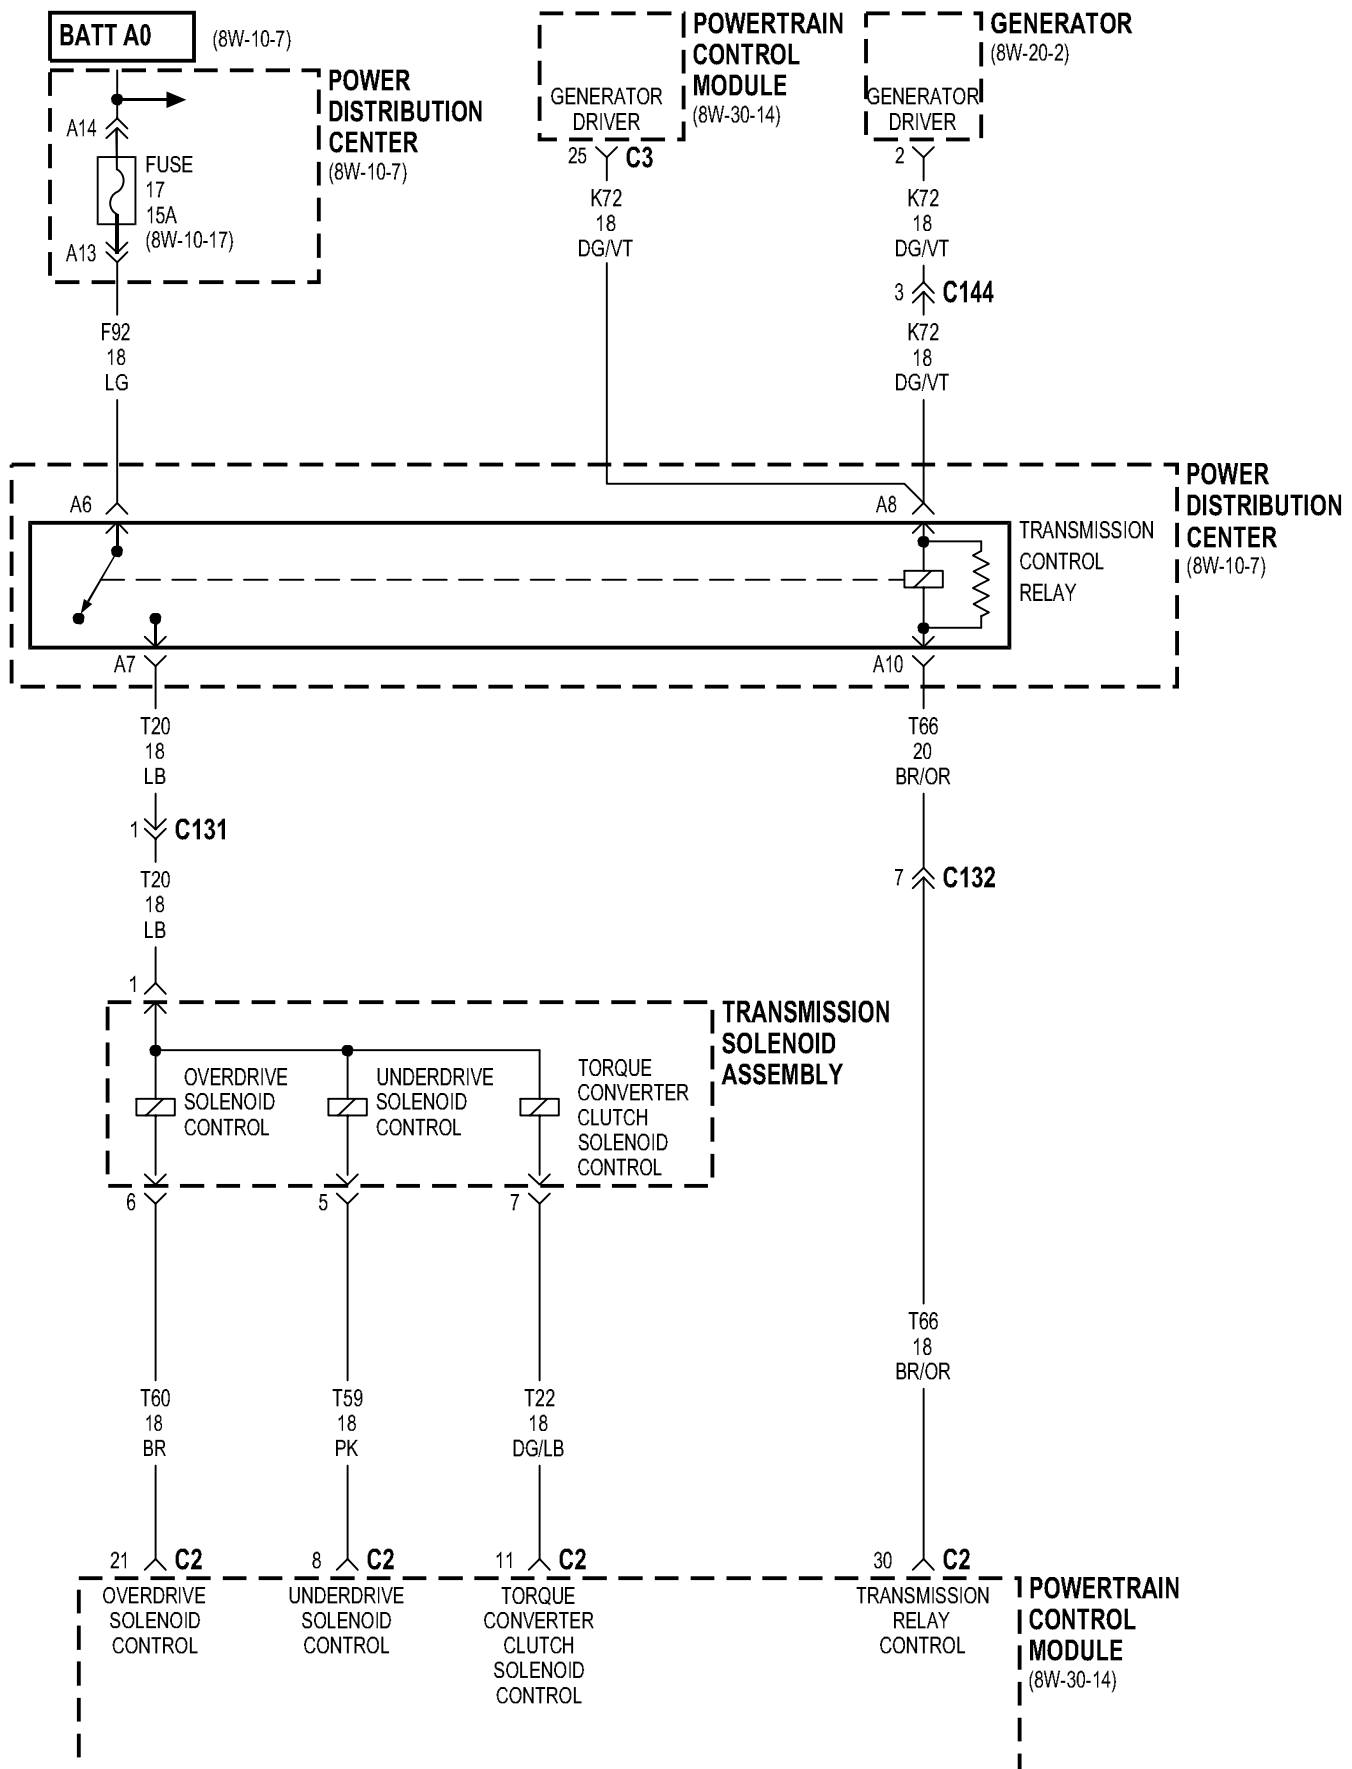

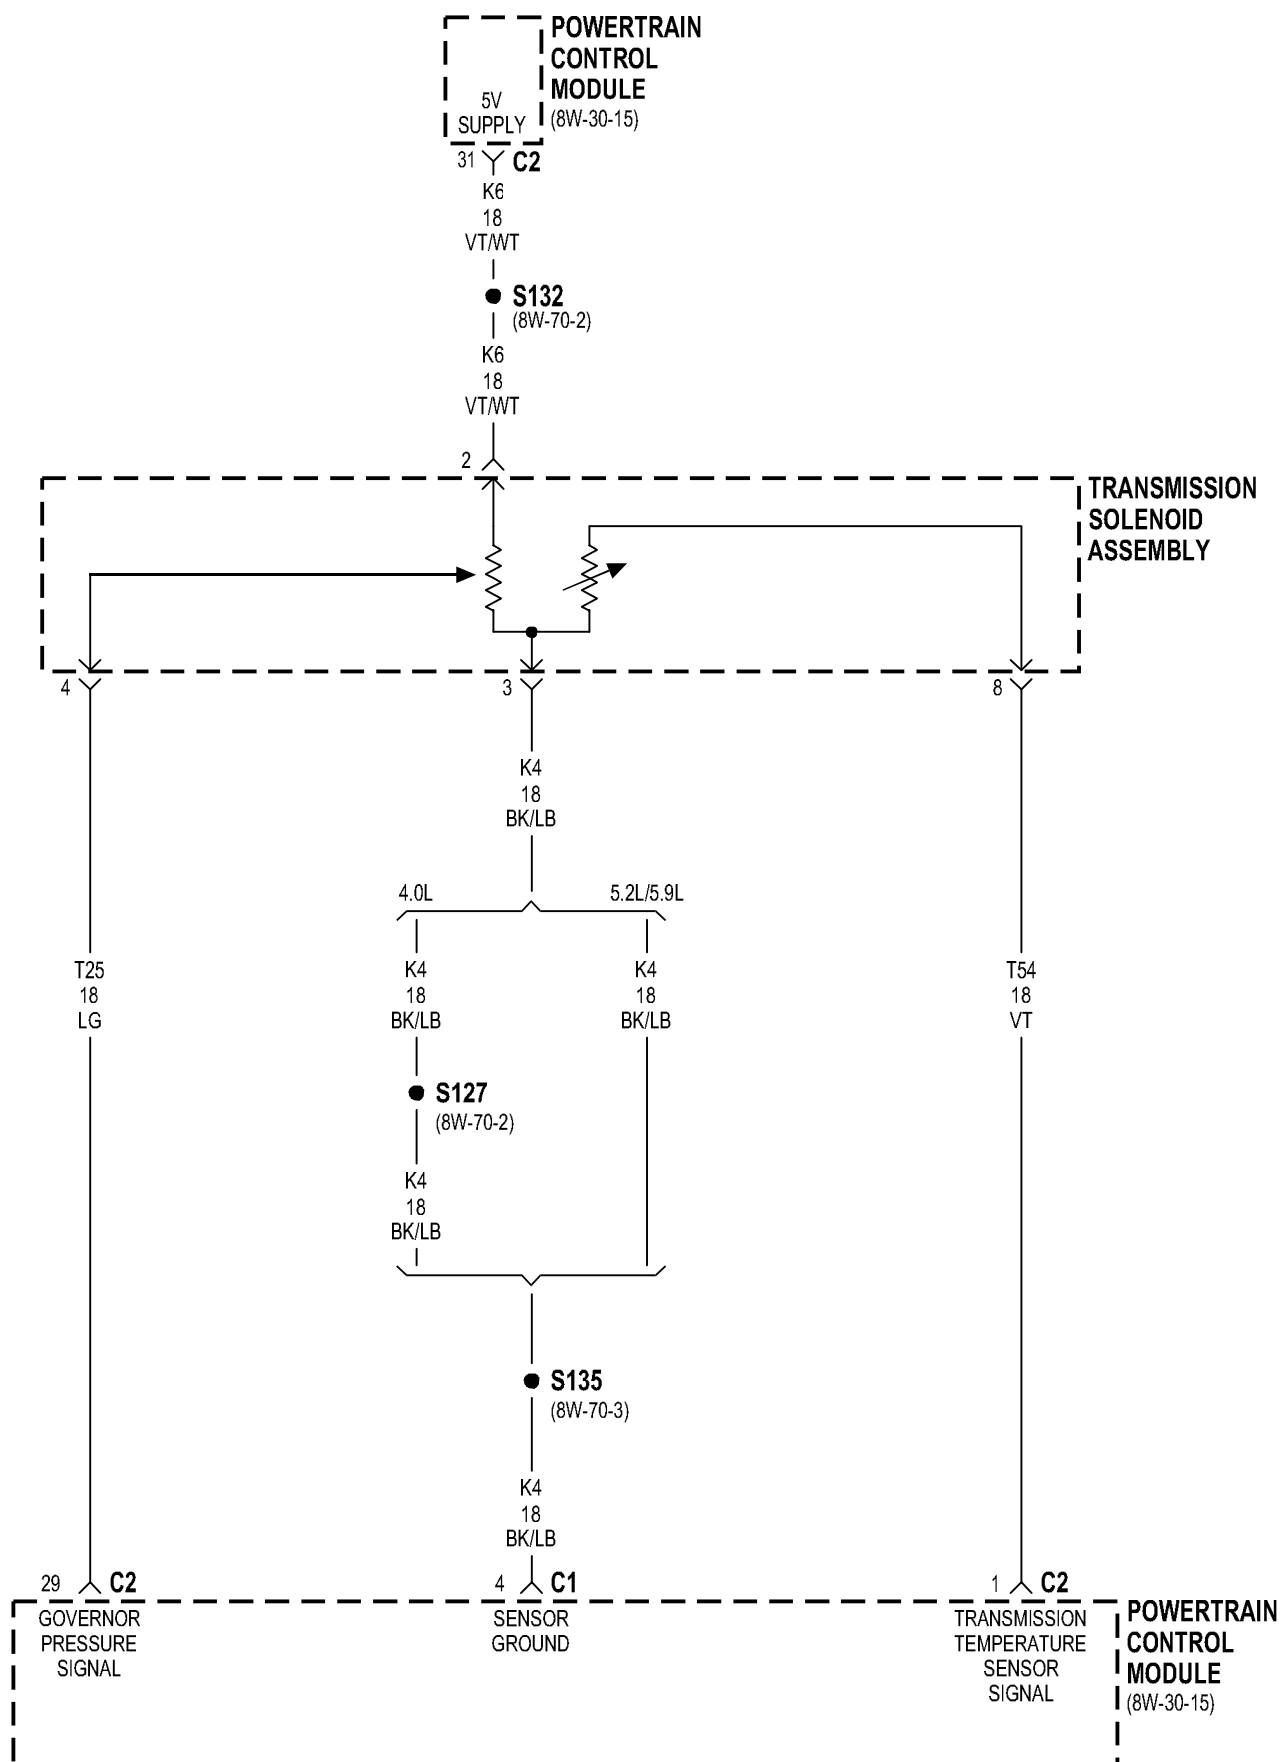


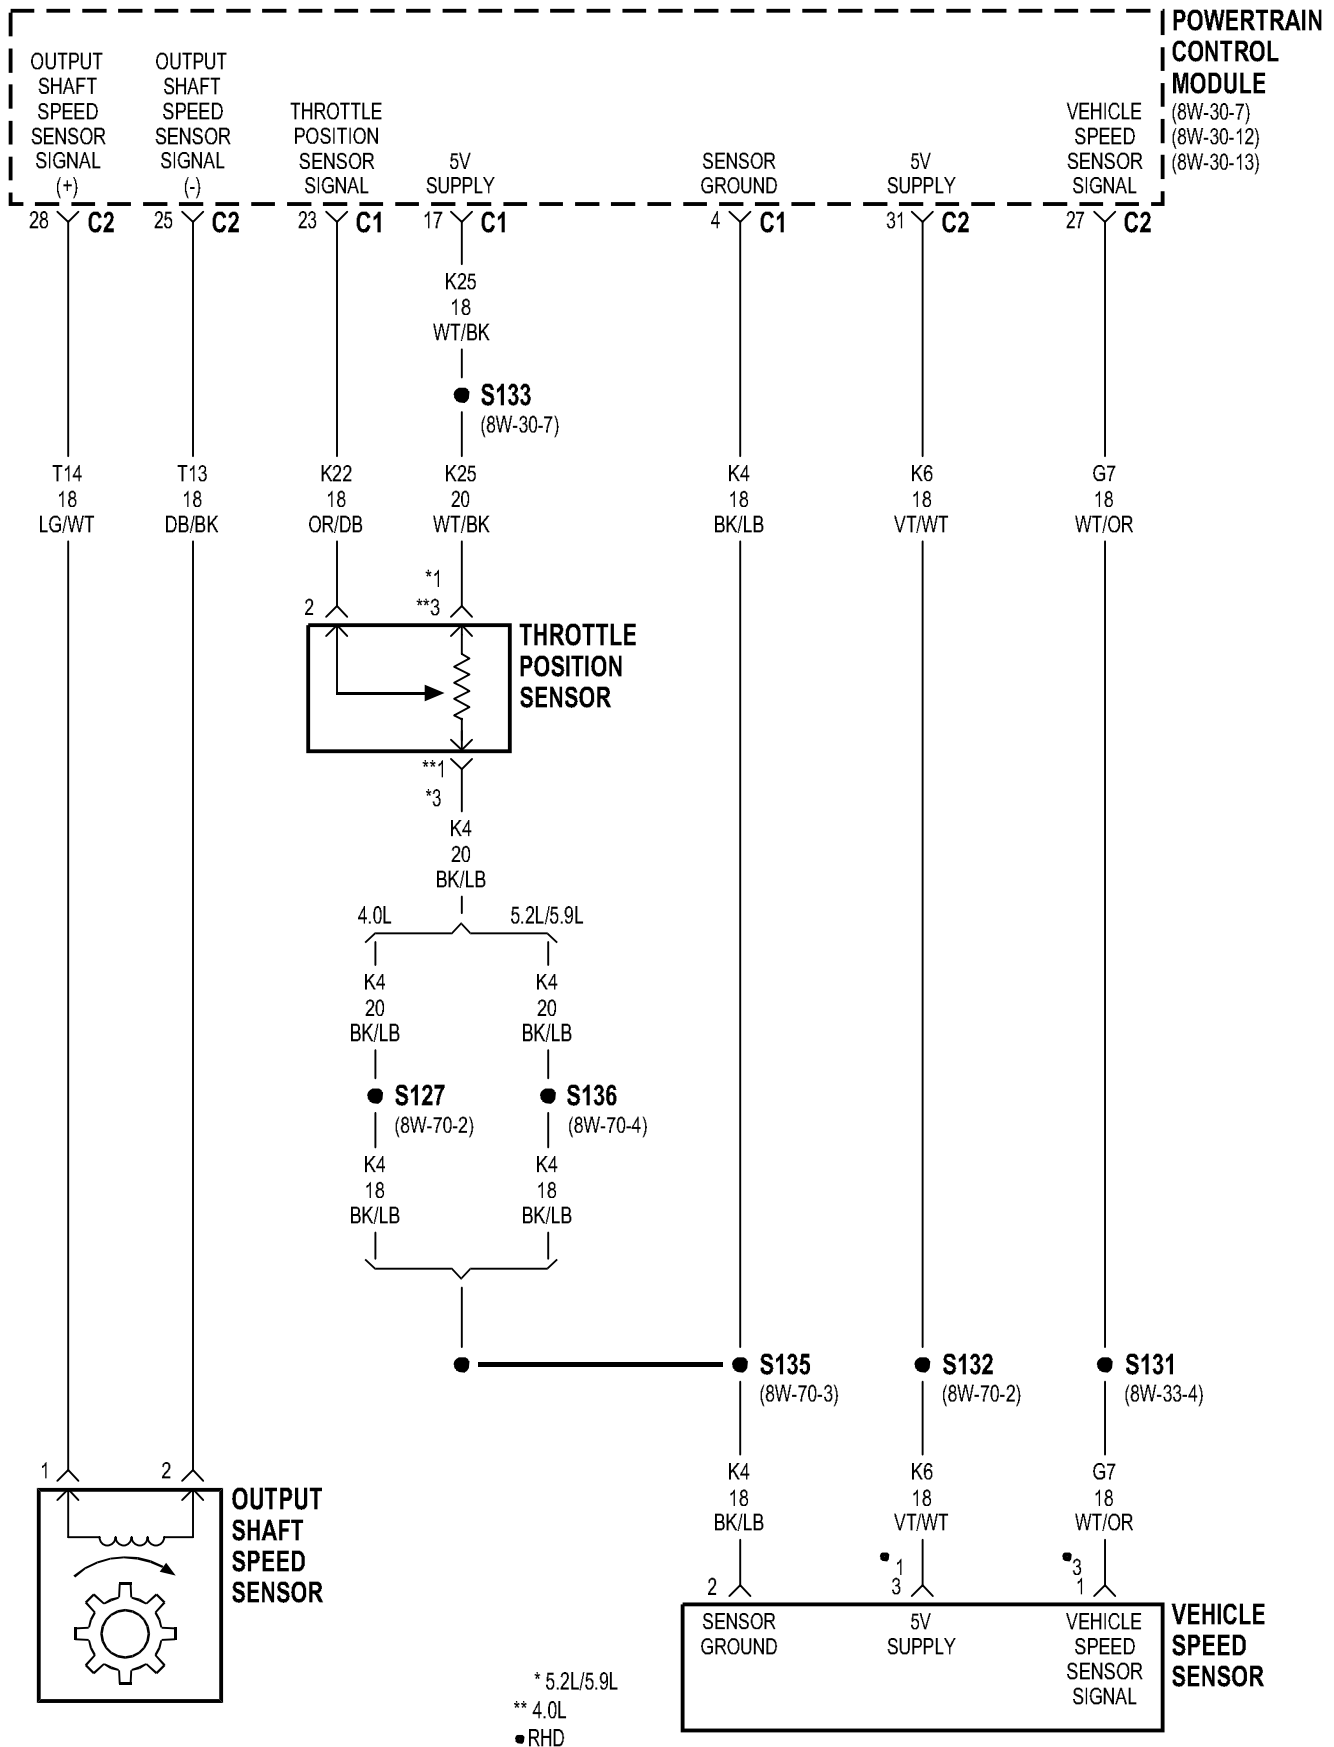



8W-33 VEHICLE SPEED CONTROL

Component	Page	Component	Page
Clockspring	.8W-33-4, 5	Junction Block	.8W-33-2, 3
Cruise Switch No. 1	.8W-33-4, 5	MSA Controller	.8W-33-3, 5
Cruise Switch No. 2	.8W-33-4, 5	Powertrain Control Module	.8W-33-2, 3, 4, 5
Fuse 5 (JB)	.8W-33-3	Shift Interlock	.8W-33-3
Fuse 9 (JB)	.8W-33-2, 3	Stop Lamp Switch	.8W-33-2, 3
G107	.8W-33-2	Vehicle Speed Control Servo	.8W-33-2
G109	.8W-33-3	Vehicle Speed Sensor	.8W-33-4, 5
G303	.8W-33-2, 3		


GAS

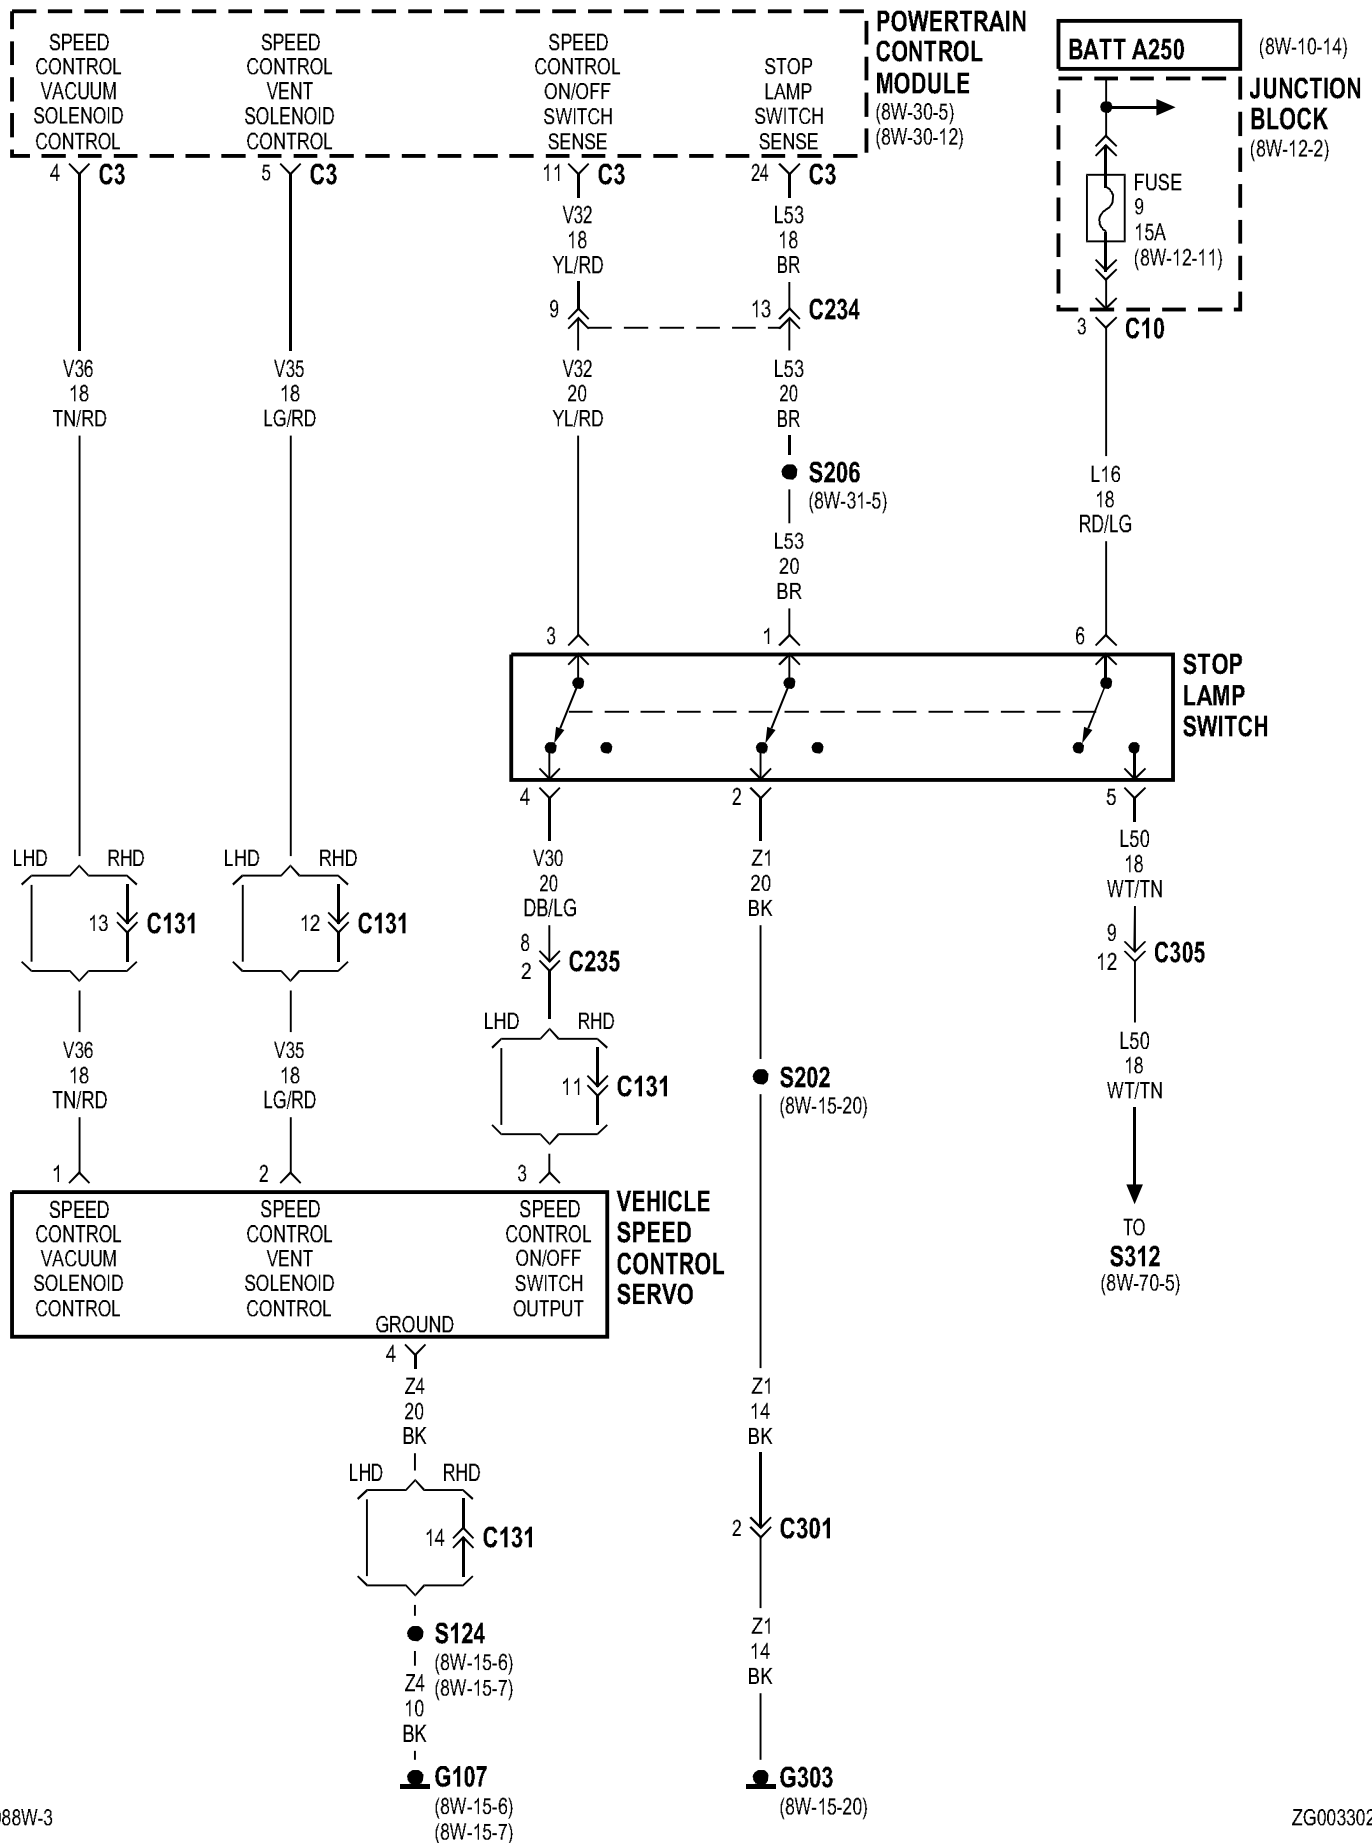

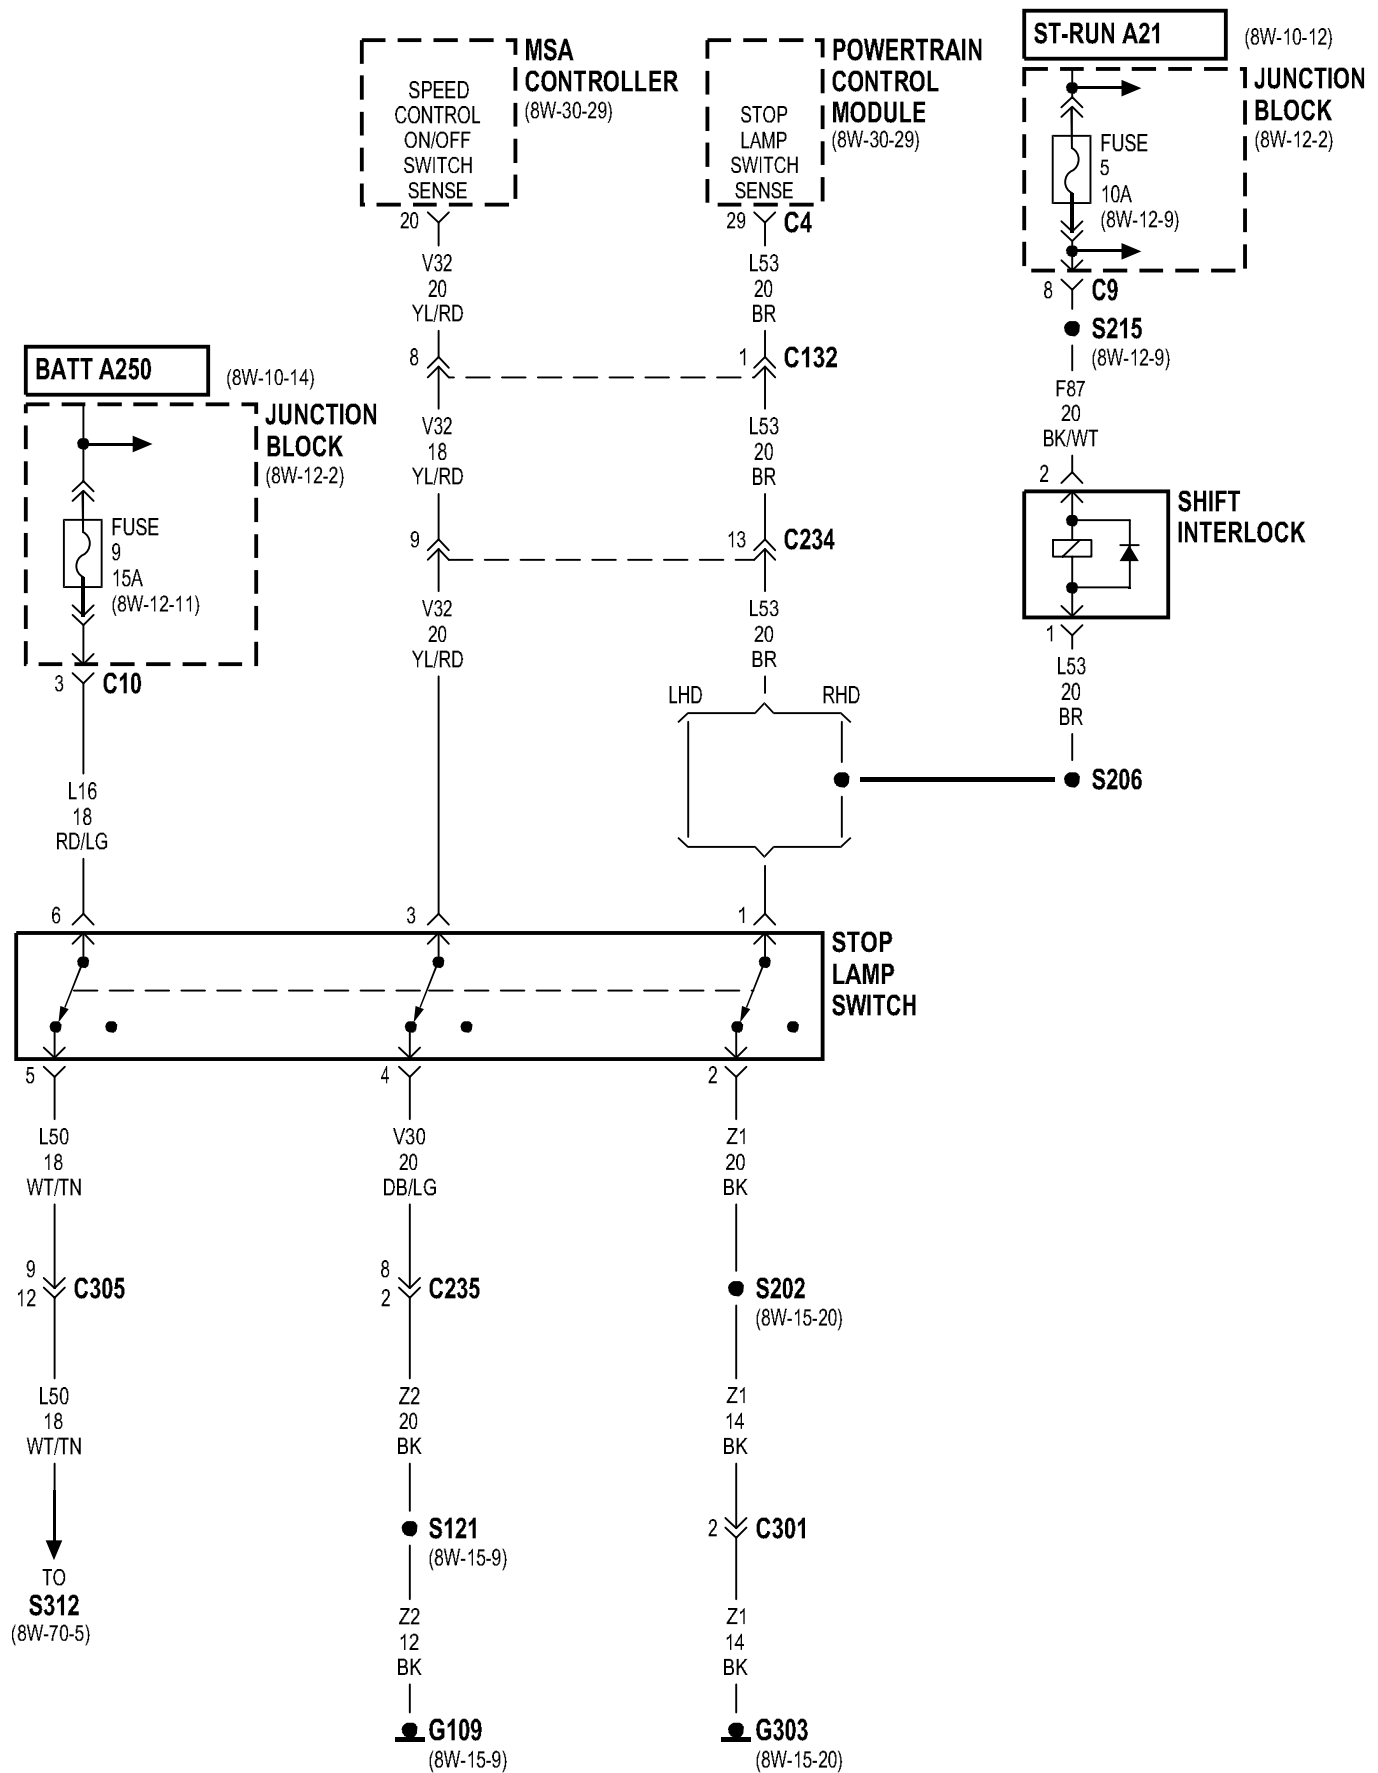

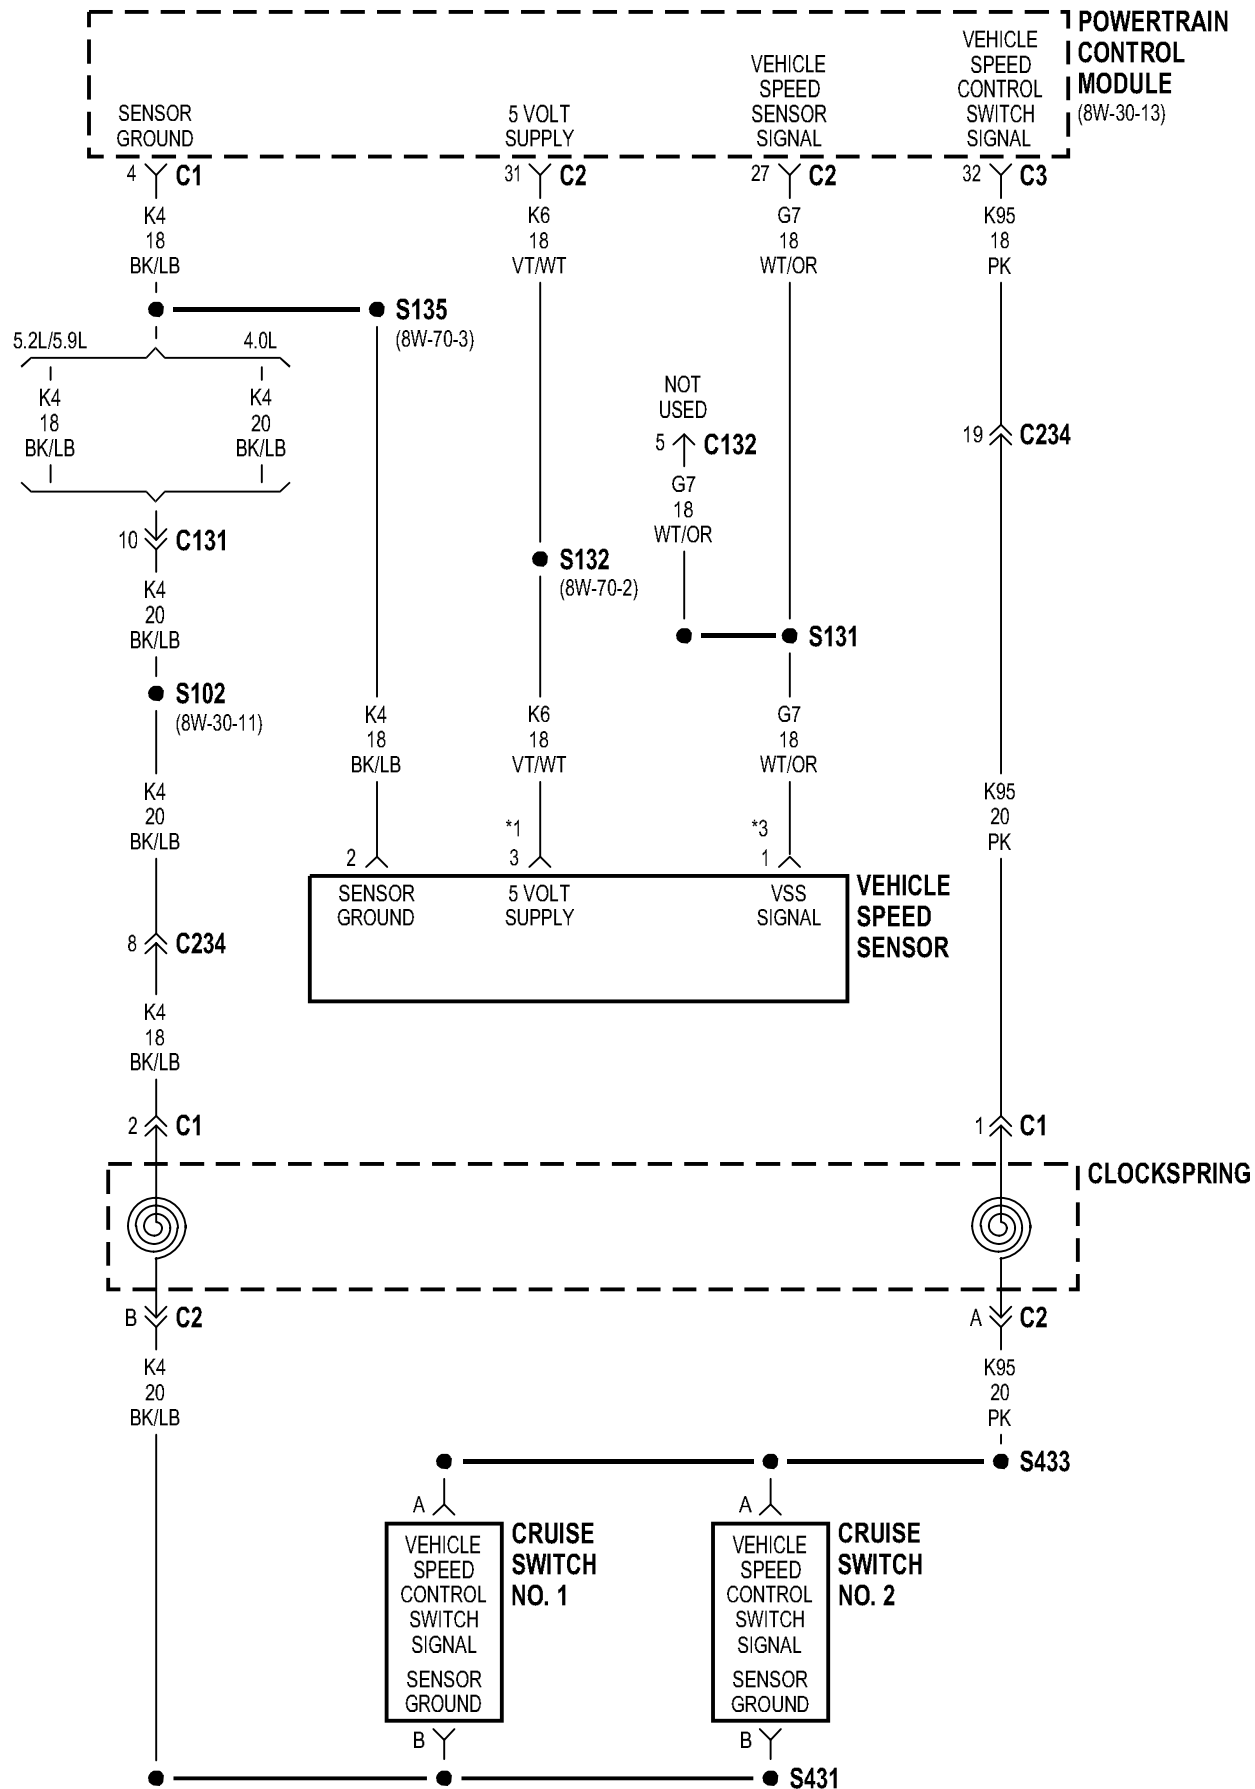



**1 POWERTRAIN
| CONTROL
| MODULE
| (8W-30-24)**

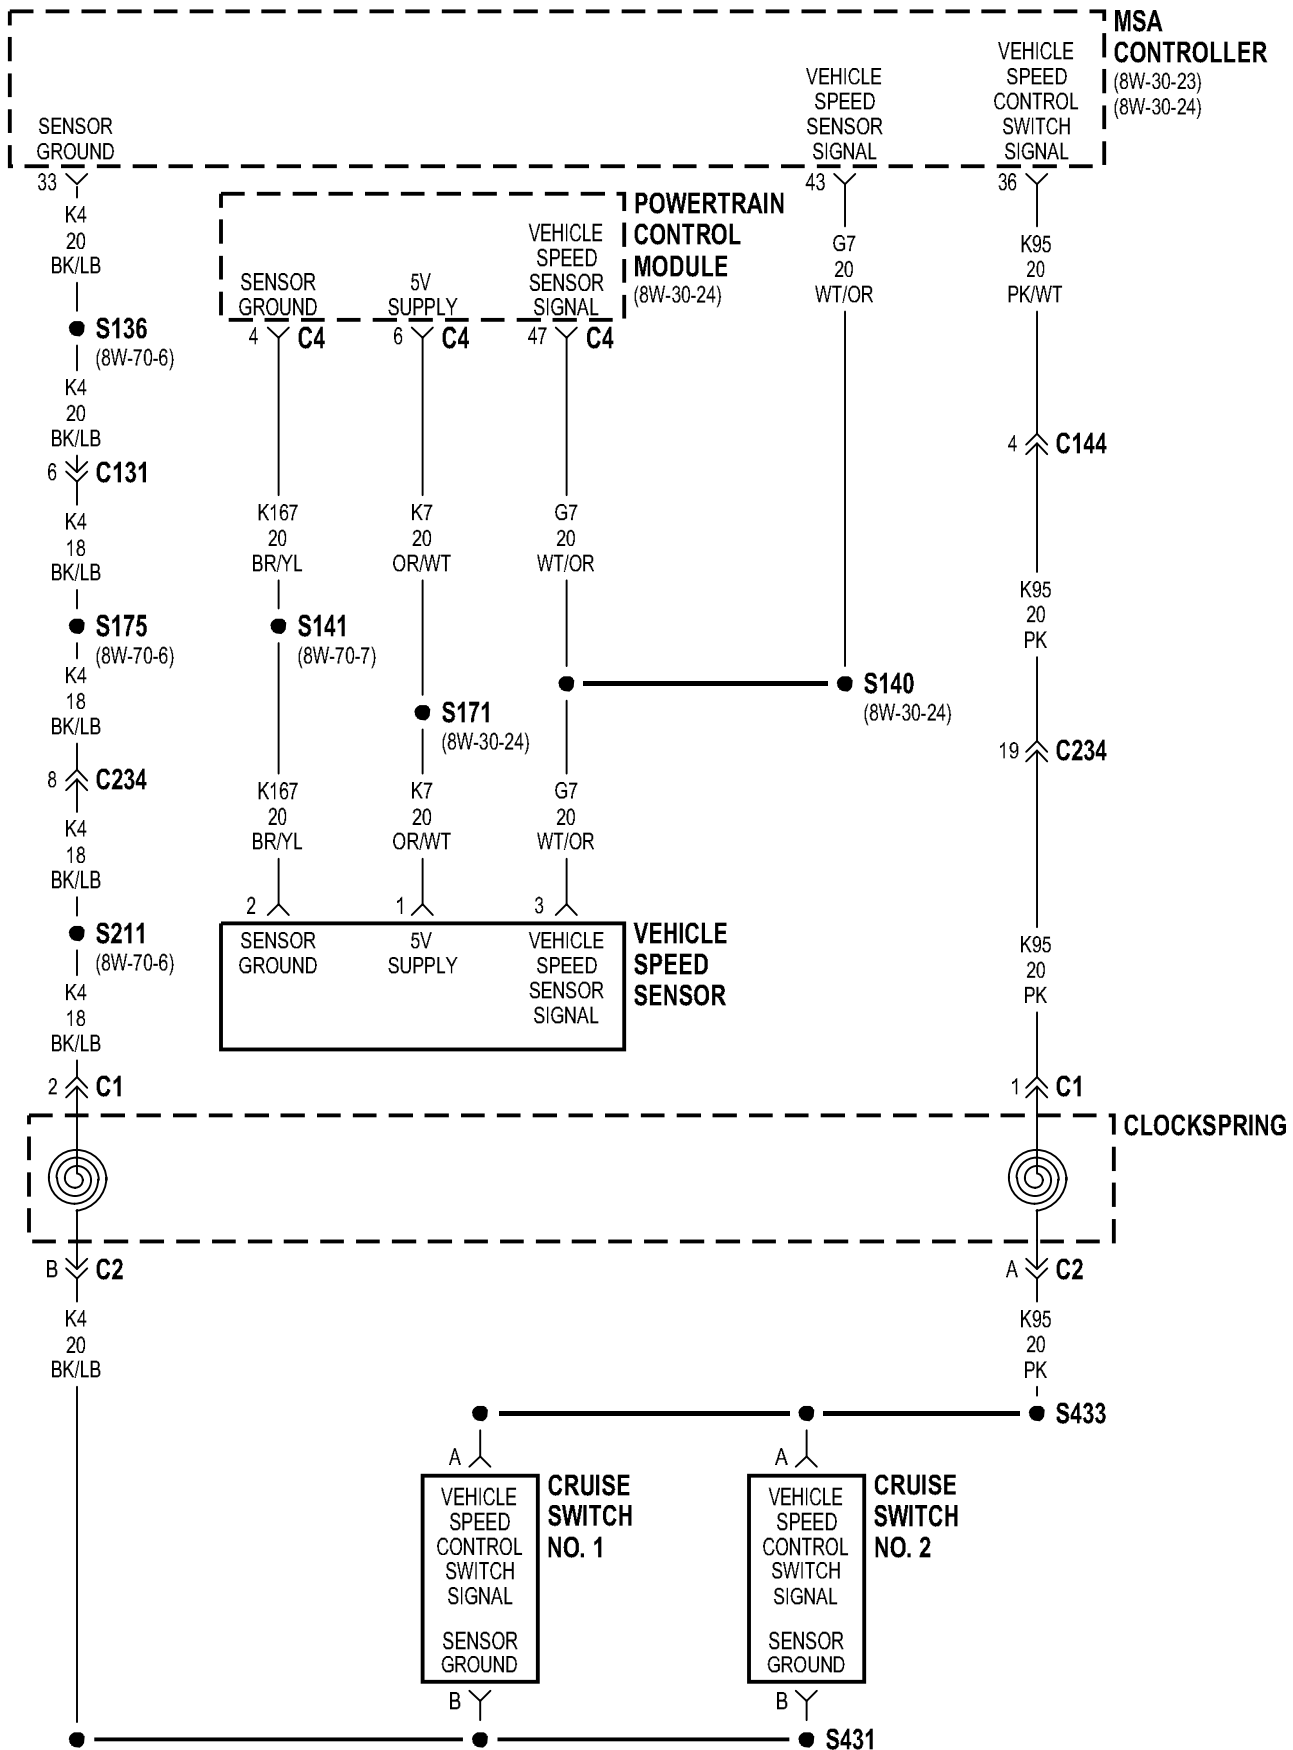


8W-35 ANTI-LOCK BRAKES

Component	Page	Component	Page
Controller Anti-Lock Brake	8W-35-2, 3, 4	Instrument Cluster	8W-35-3
Data Link Connector	8W-35-2	Junction Block	8W-35-2, 3
Fuse 5 (PDC)	8W-35-2	Left Front Wheel Speed Sensor	8W-35-4
Fuse 9 (JB)	8W-35-3	Left Rear Wheel Speed Sensor	8W-35-4
Fuse 11 (JB)	8W-35-2	Power Distribution Center	8W-35-2
Fuse 14 (PDC)	8W-35-2	Right Front Wheel Speed Sensor	8W-35-4
G Switch	8W-35-3	Right Rear Wheel Speed Sensor	8W-35-4
G108	8W-35-2	Stop Lamp Switch	8W-35-3

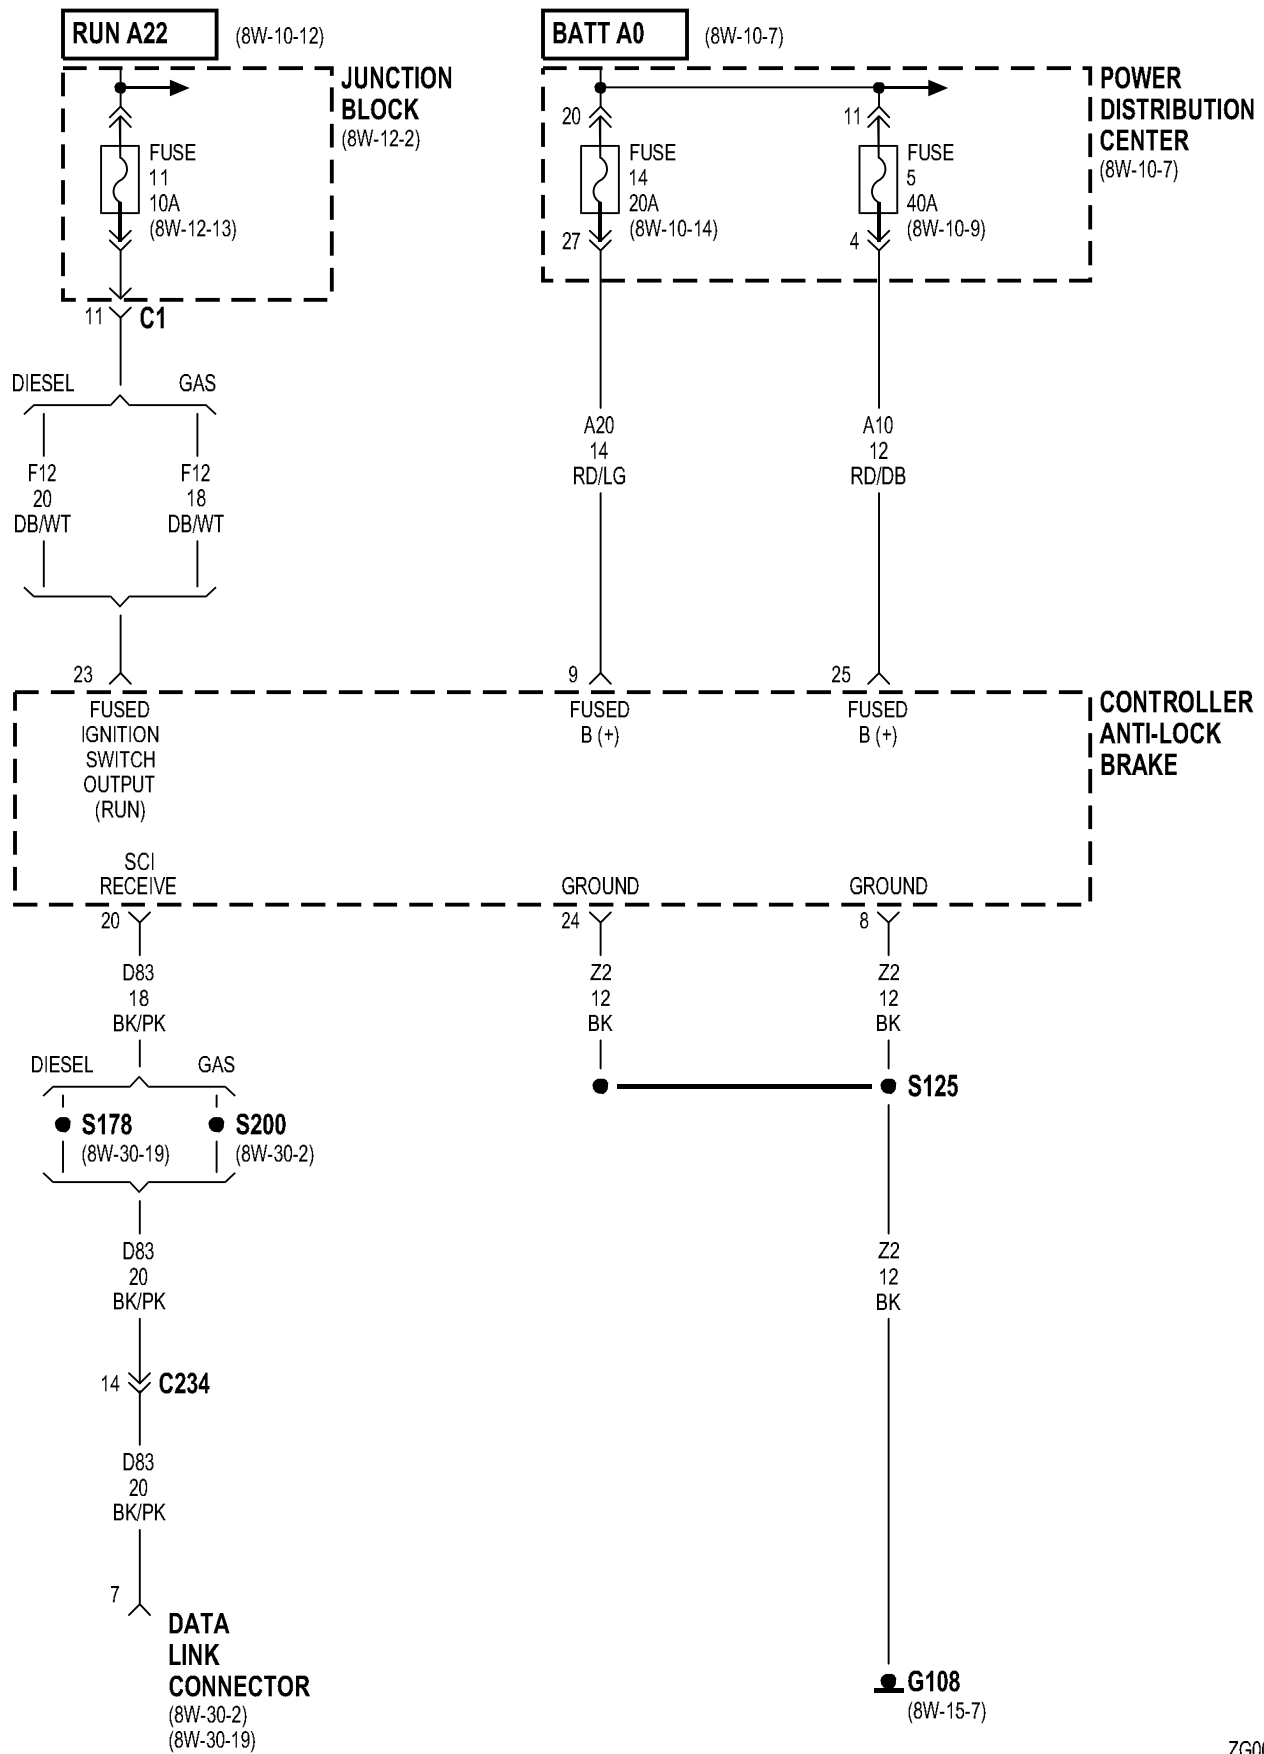


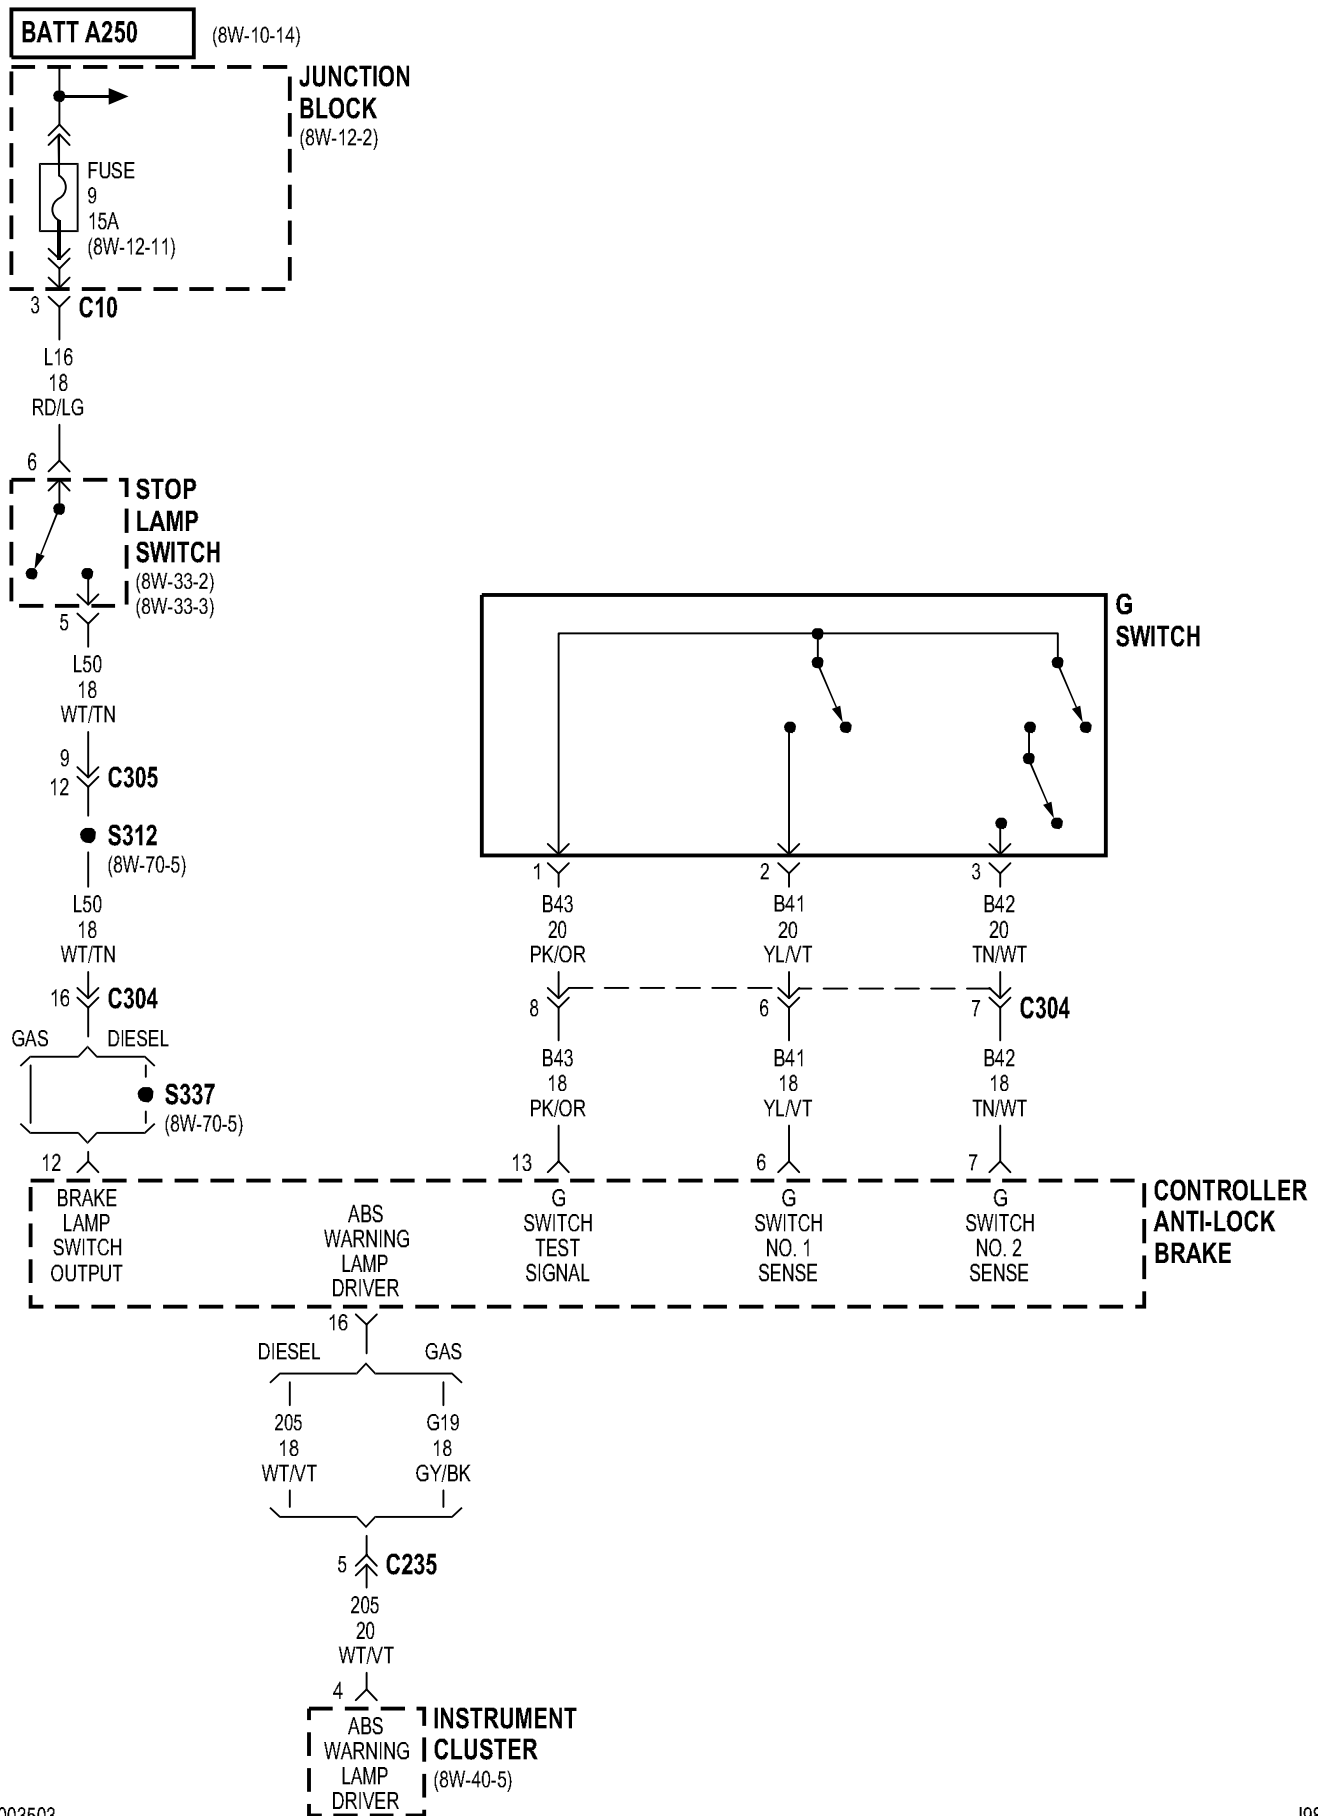


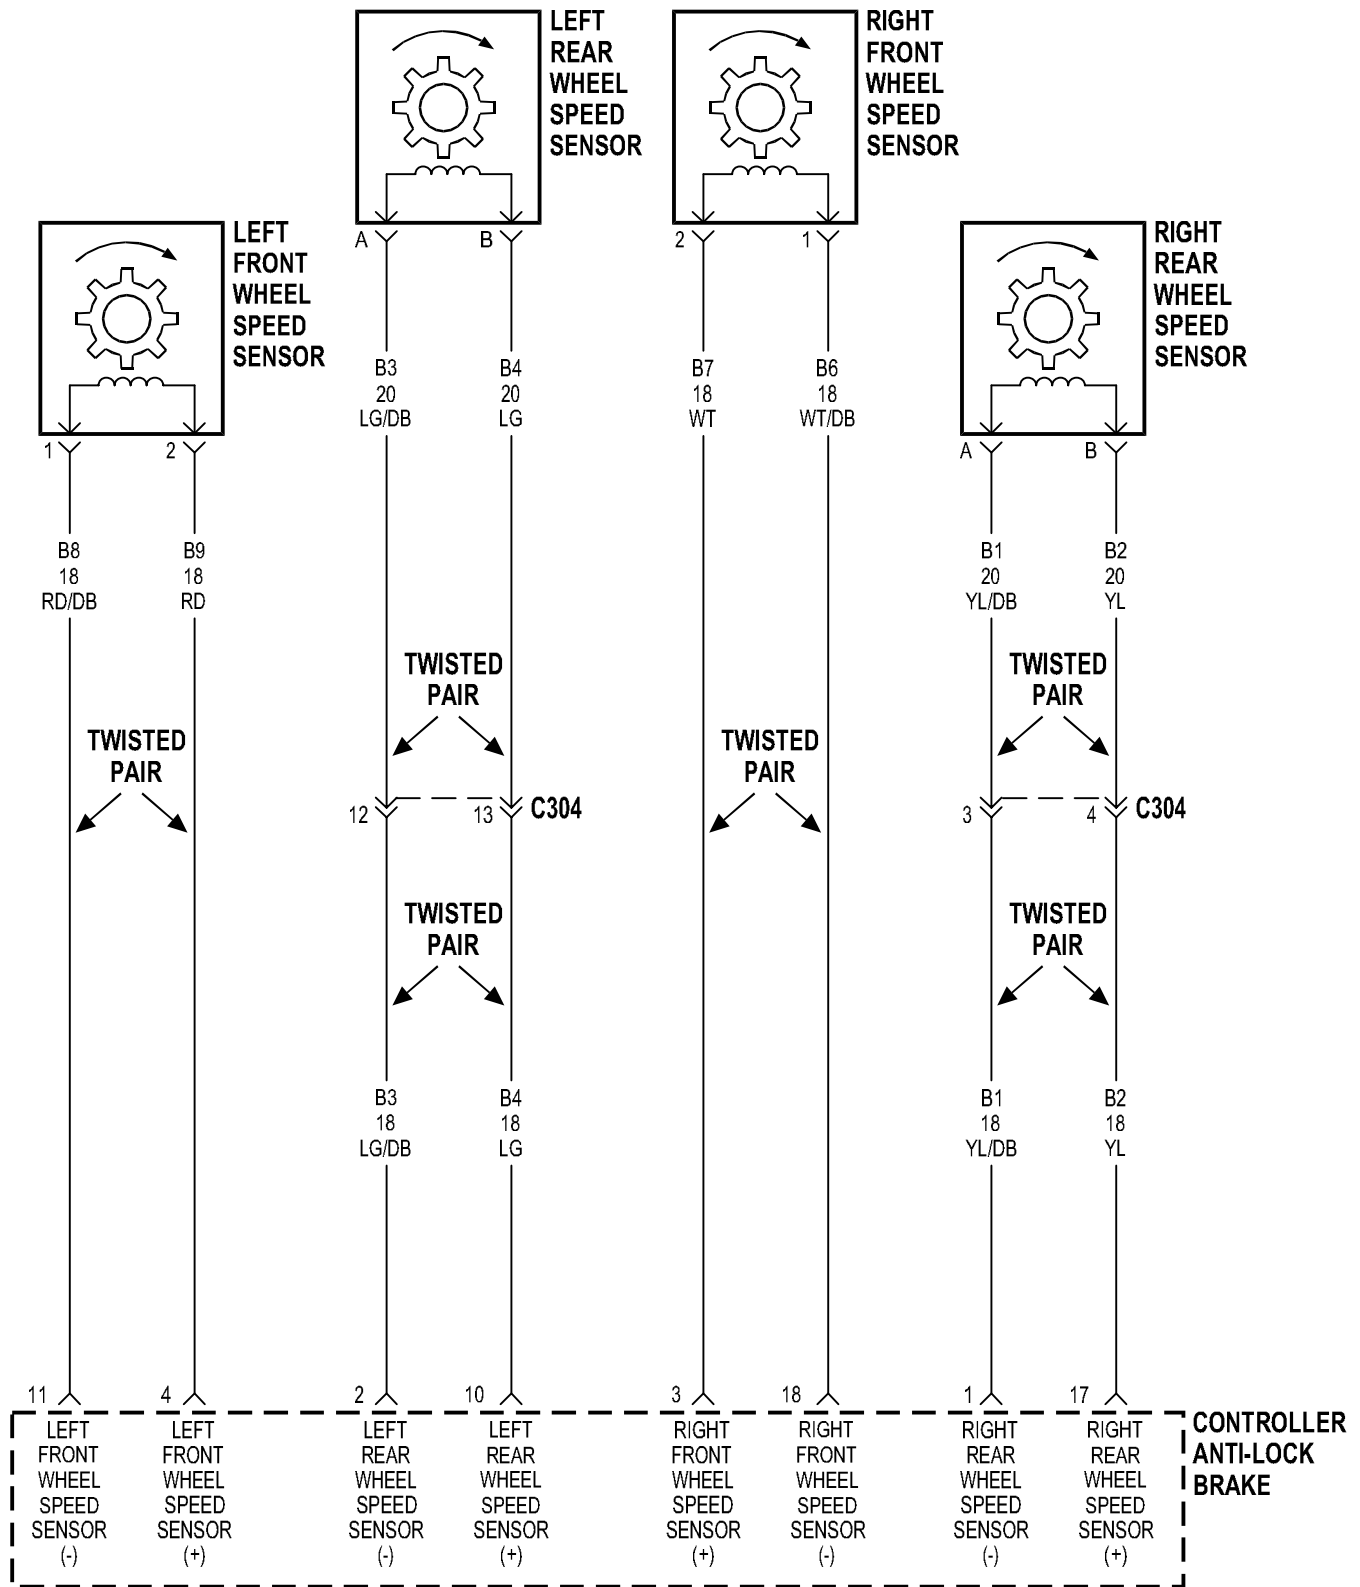



8W-39 VEHICLE THEFT SECURITY SYSTEM


Component	Page	Component	Page
Automatic Headlamp Light Sensor/ Vtss Led	.8W-39-3	G302	.8W-39-5
Body Control Module.	.8W-39-2, 3, 4, 5, 6	G303	.8W-39-4
Clockspring No. 1	.8W-39-6	Hood Switch	.8W-39-4
Driver Front Cylinder Lock Switch.	.8W-39-5	Horn No. 1	.8W-39-6
Driver Front Door Ajar Switch	.8W-39-5	Horn No. 2	.8W-39-6
Driver Rear Door Ajar Switch.	.8W-39-5	Horn Relay	.8W-39-6
Engine Starter Motor Relay	.8W-39-2	Horn Switch	.8W-39-6
Fuse 11 (PDC).	.8W-39-3	Ignition Switch	.8W-39-2
Fuse 13 (PDC)	.8W-39-3	Junction Block	.8W-39-2, 3, 6
Fuse 17 (JB)	.8W-39-3	Liftgate Ajar Switch	.8W-39-4
Fuse 18 (PDC)	.8W-39-2	Liftgate Cylinder Lock Switch	.8W-39-5
Fuse 3 (JB)	.8W-39-2	Liftglass Ajar Switch.	.8W-39-4
Fuse 6 (PDC)	.8W-39-6	Park Lamp Relay	.8W-39-3
Fuse 7 (JB)	.8W-39-3	Passenger Front Cylinder Lock Switch.	.8W-39-5
Fuse 8 (PDC)	.8W-39-2	Passenger Front Door Ajar Switch	.8W-39-5
G106	.8W-39-6	Passenger Rear Door Ajar Switch.	.8W-39-5
G300	.8W-39-4, 5	Power Distribution Center	.8W-39-2, 3, 6
G301	.8W-39-5	Vehicle Speed Control/Horn Switch.	.8W-39-6

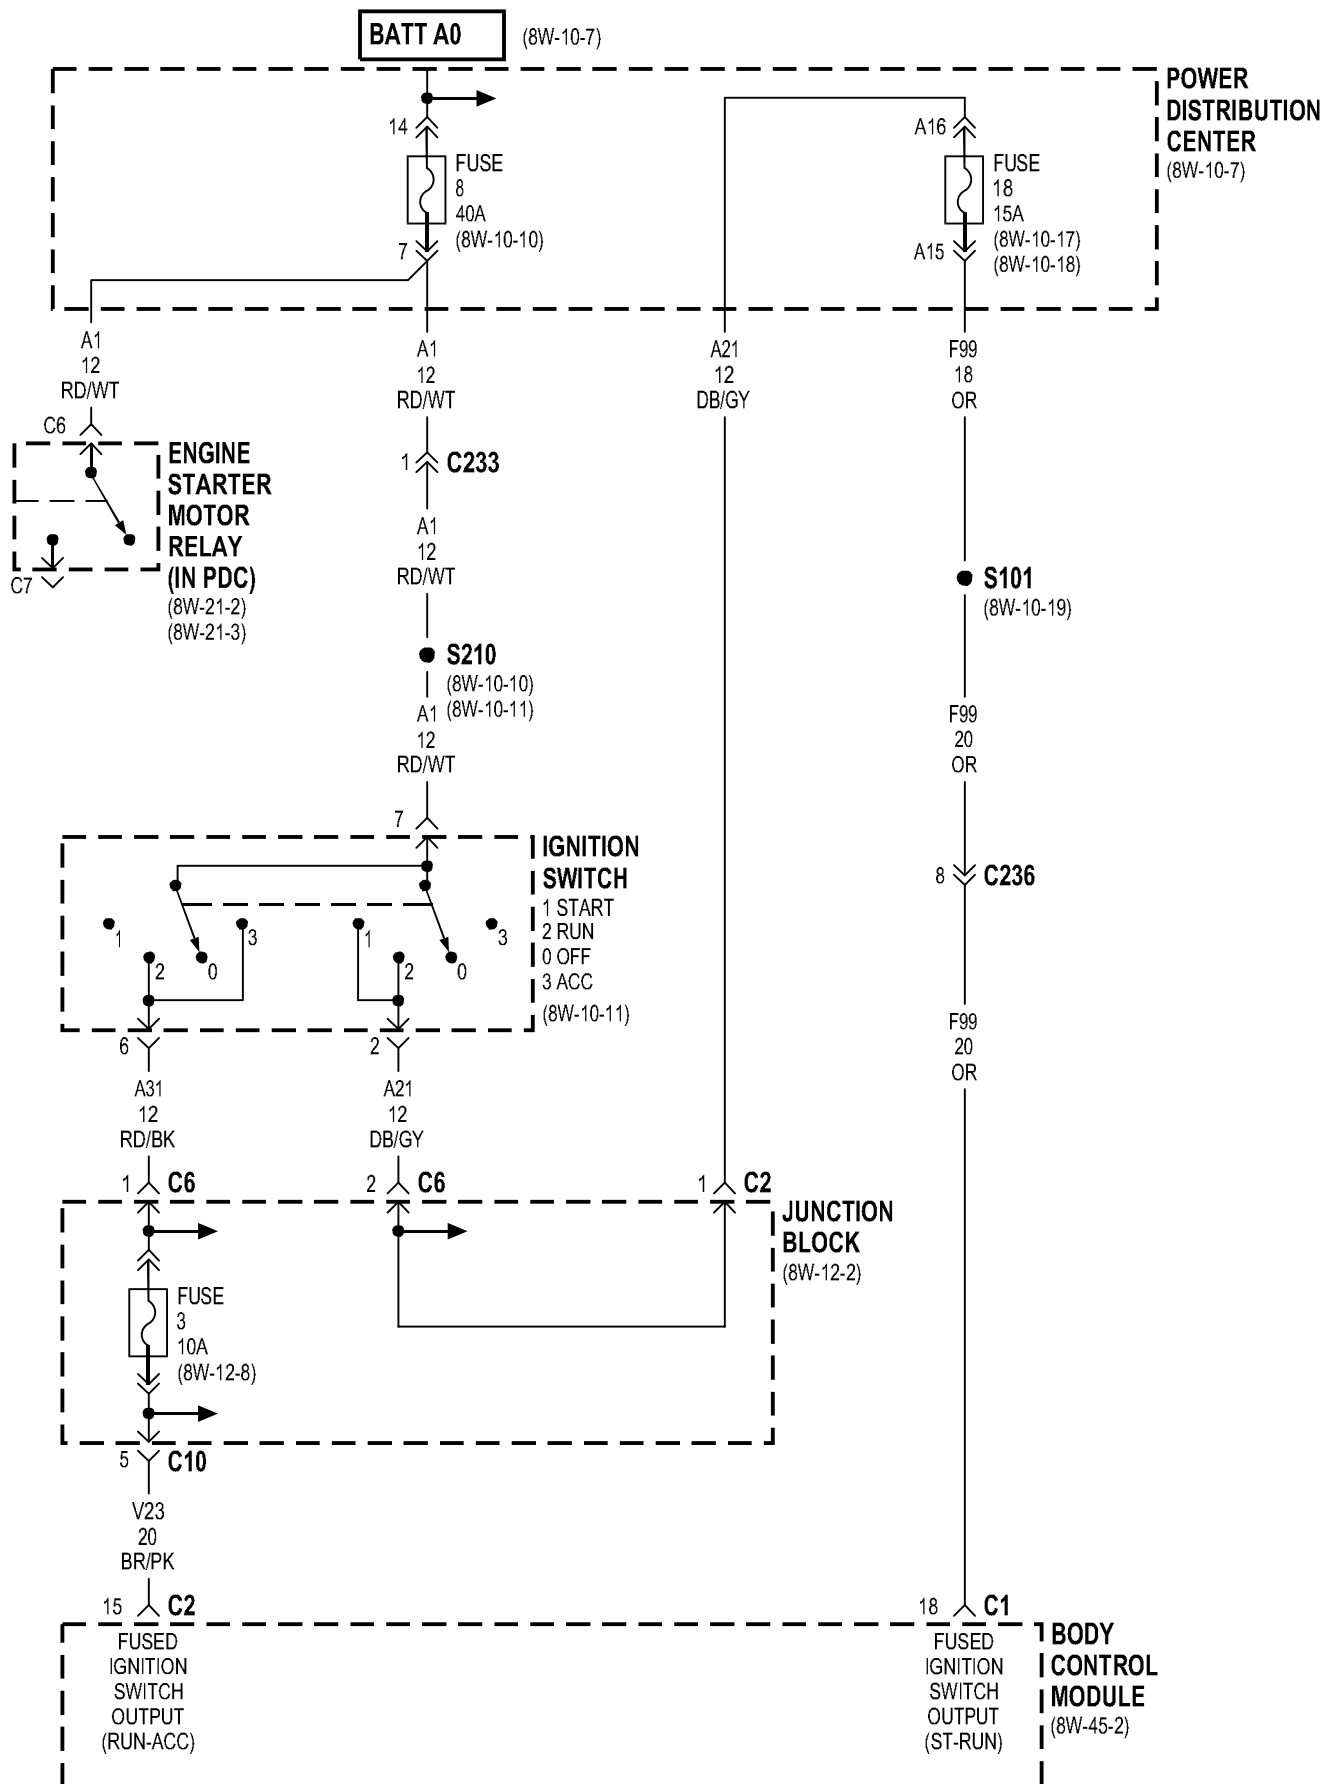

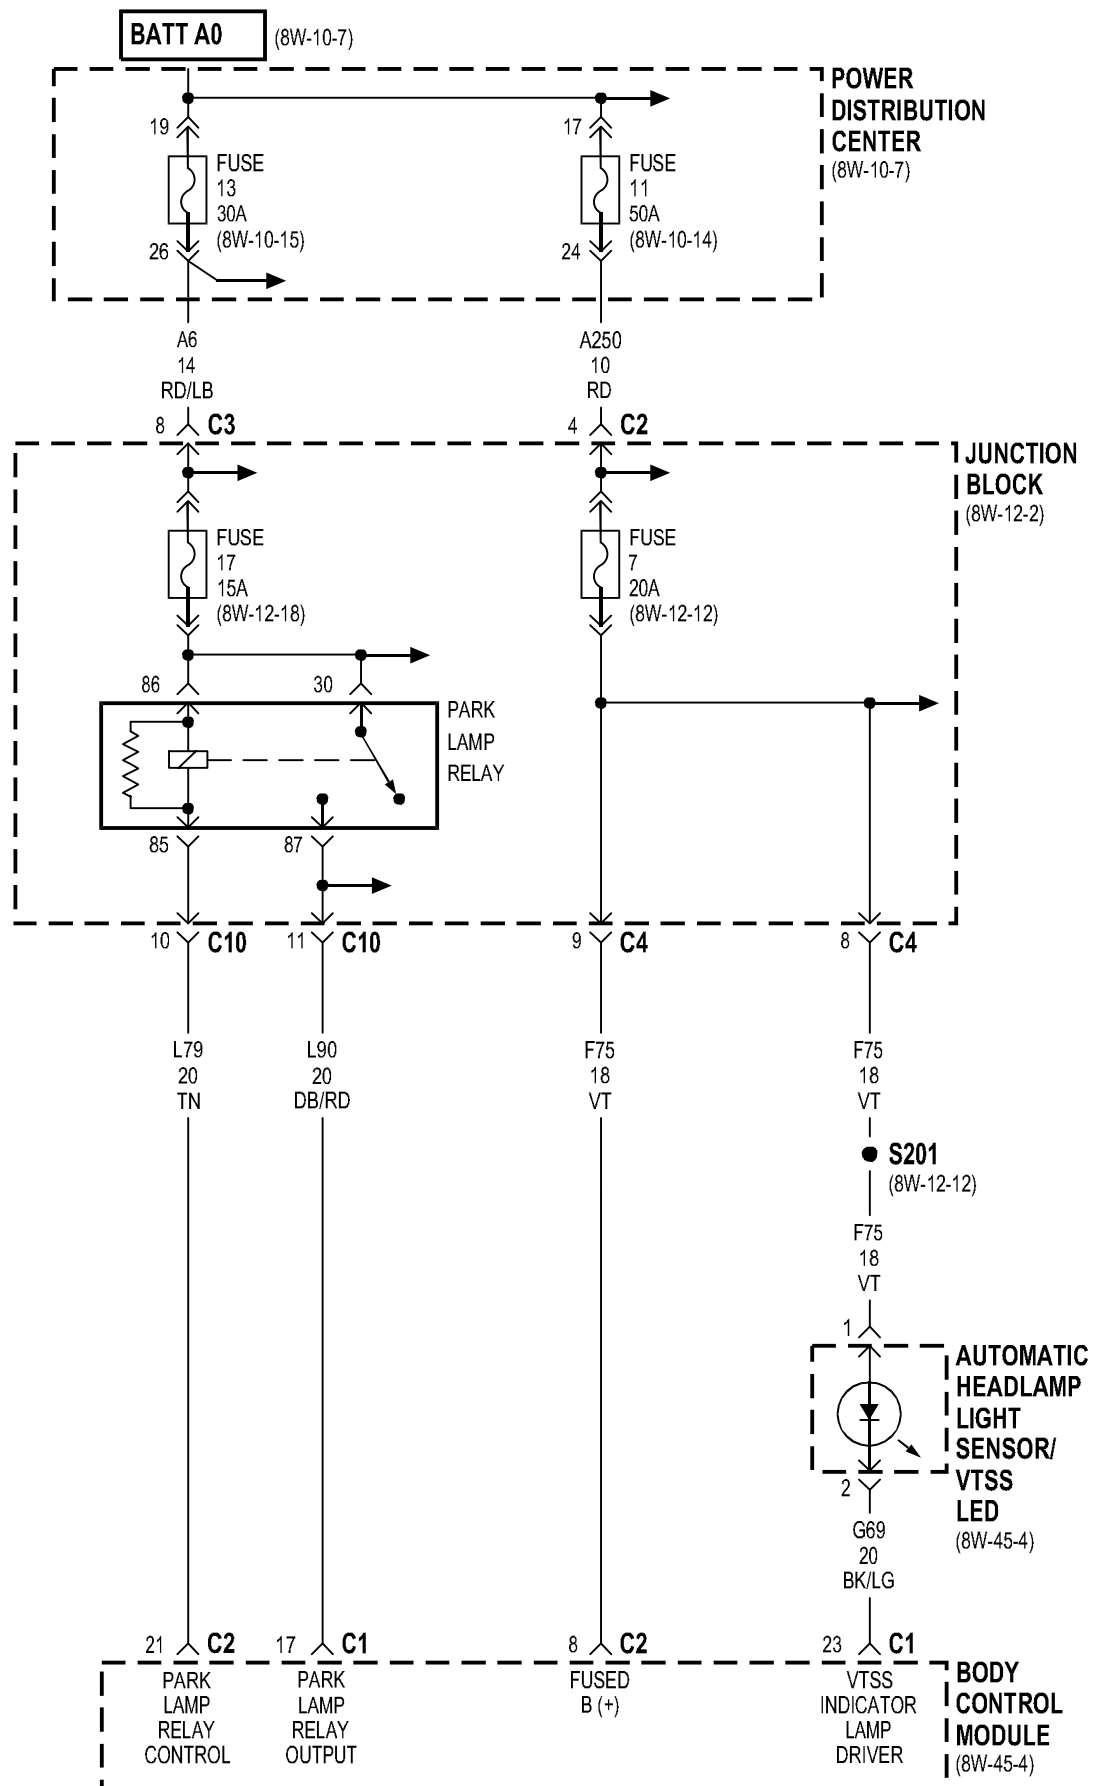

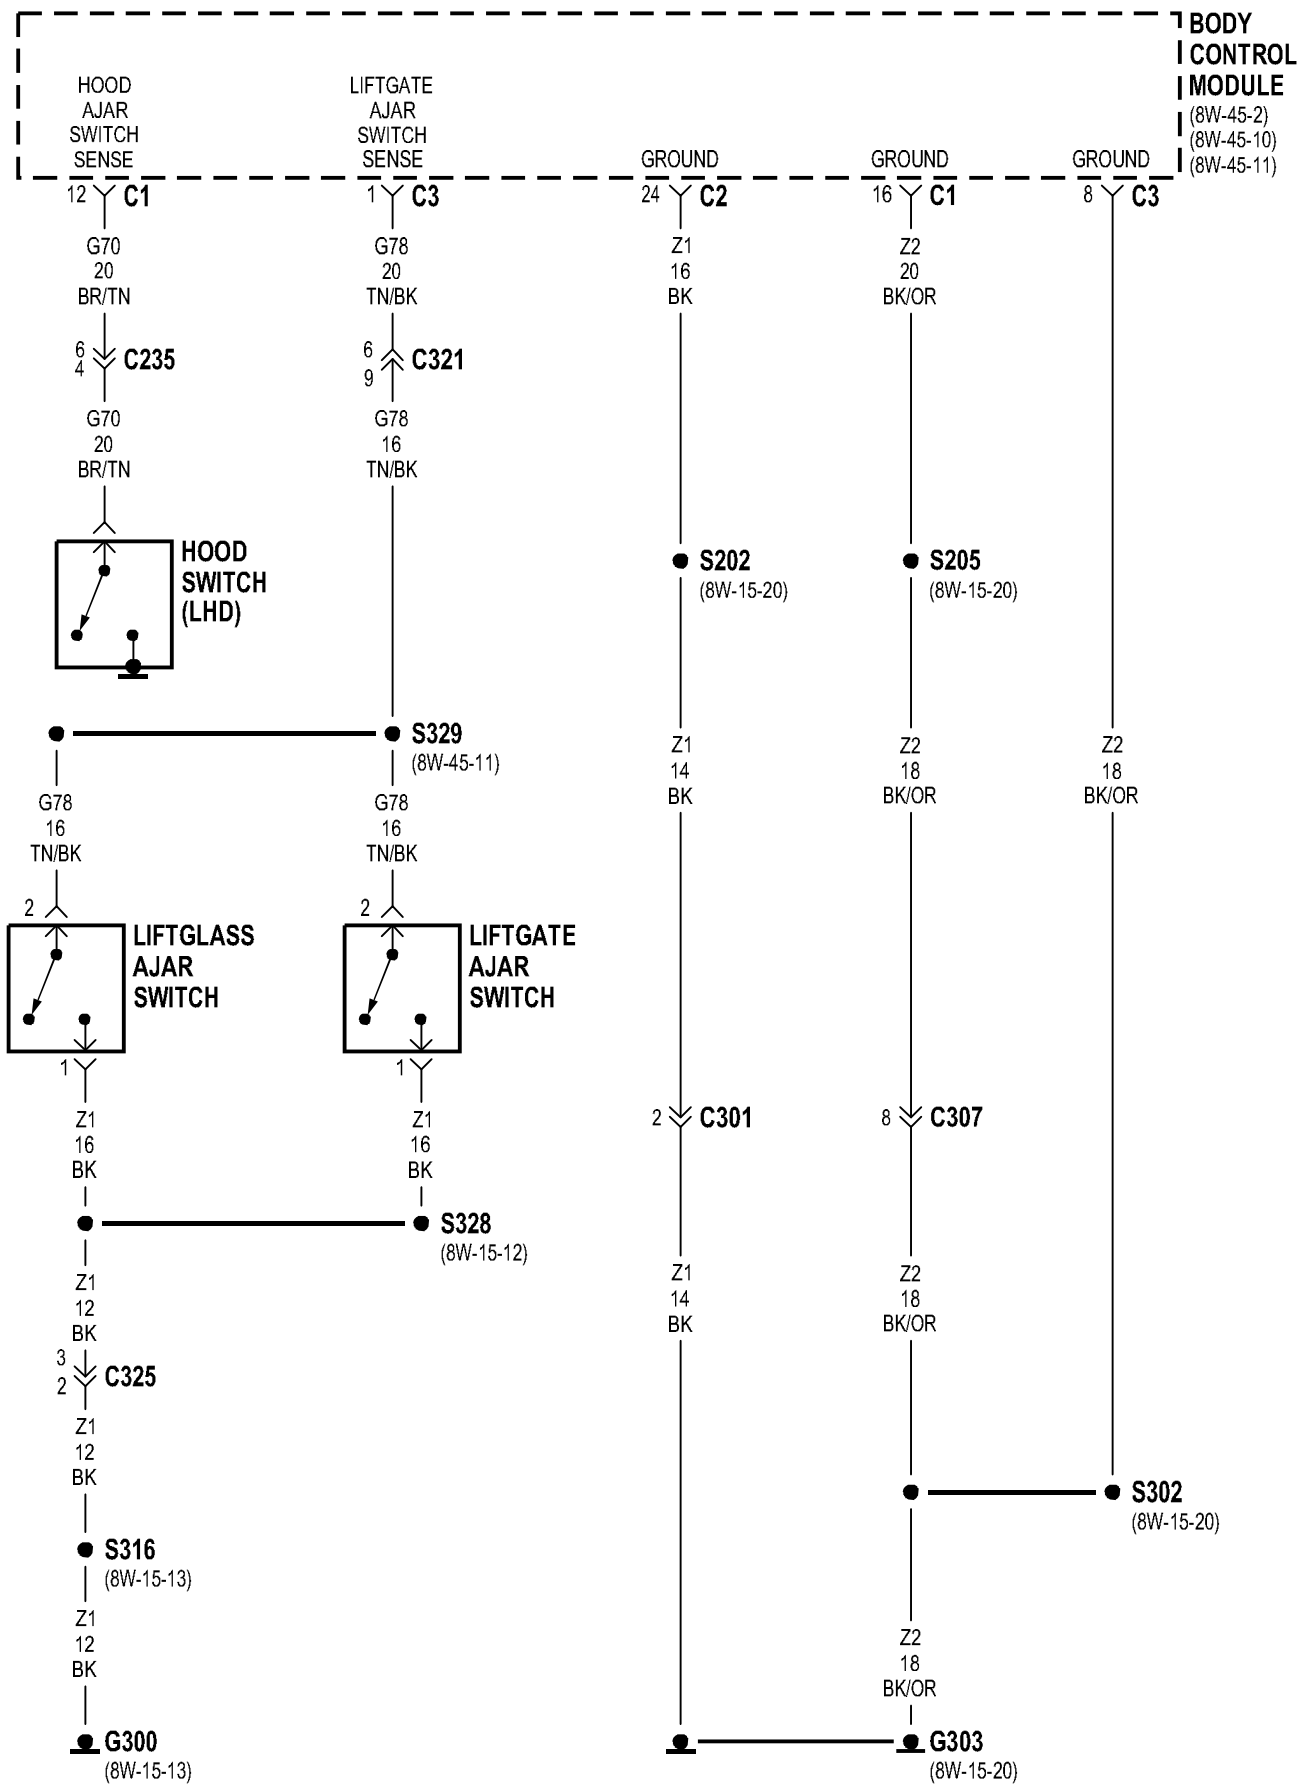


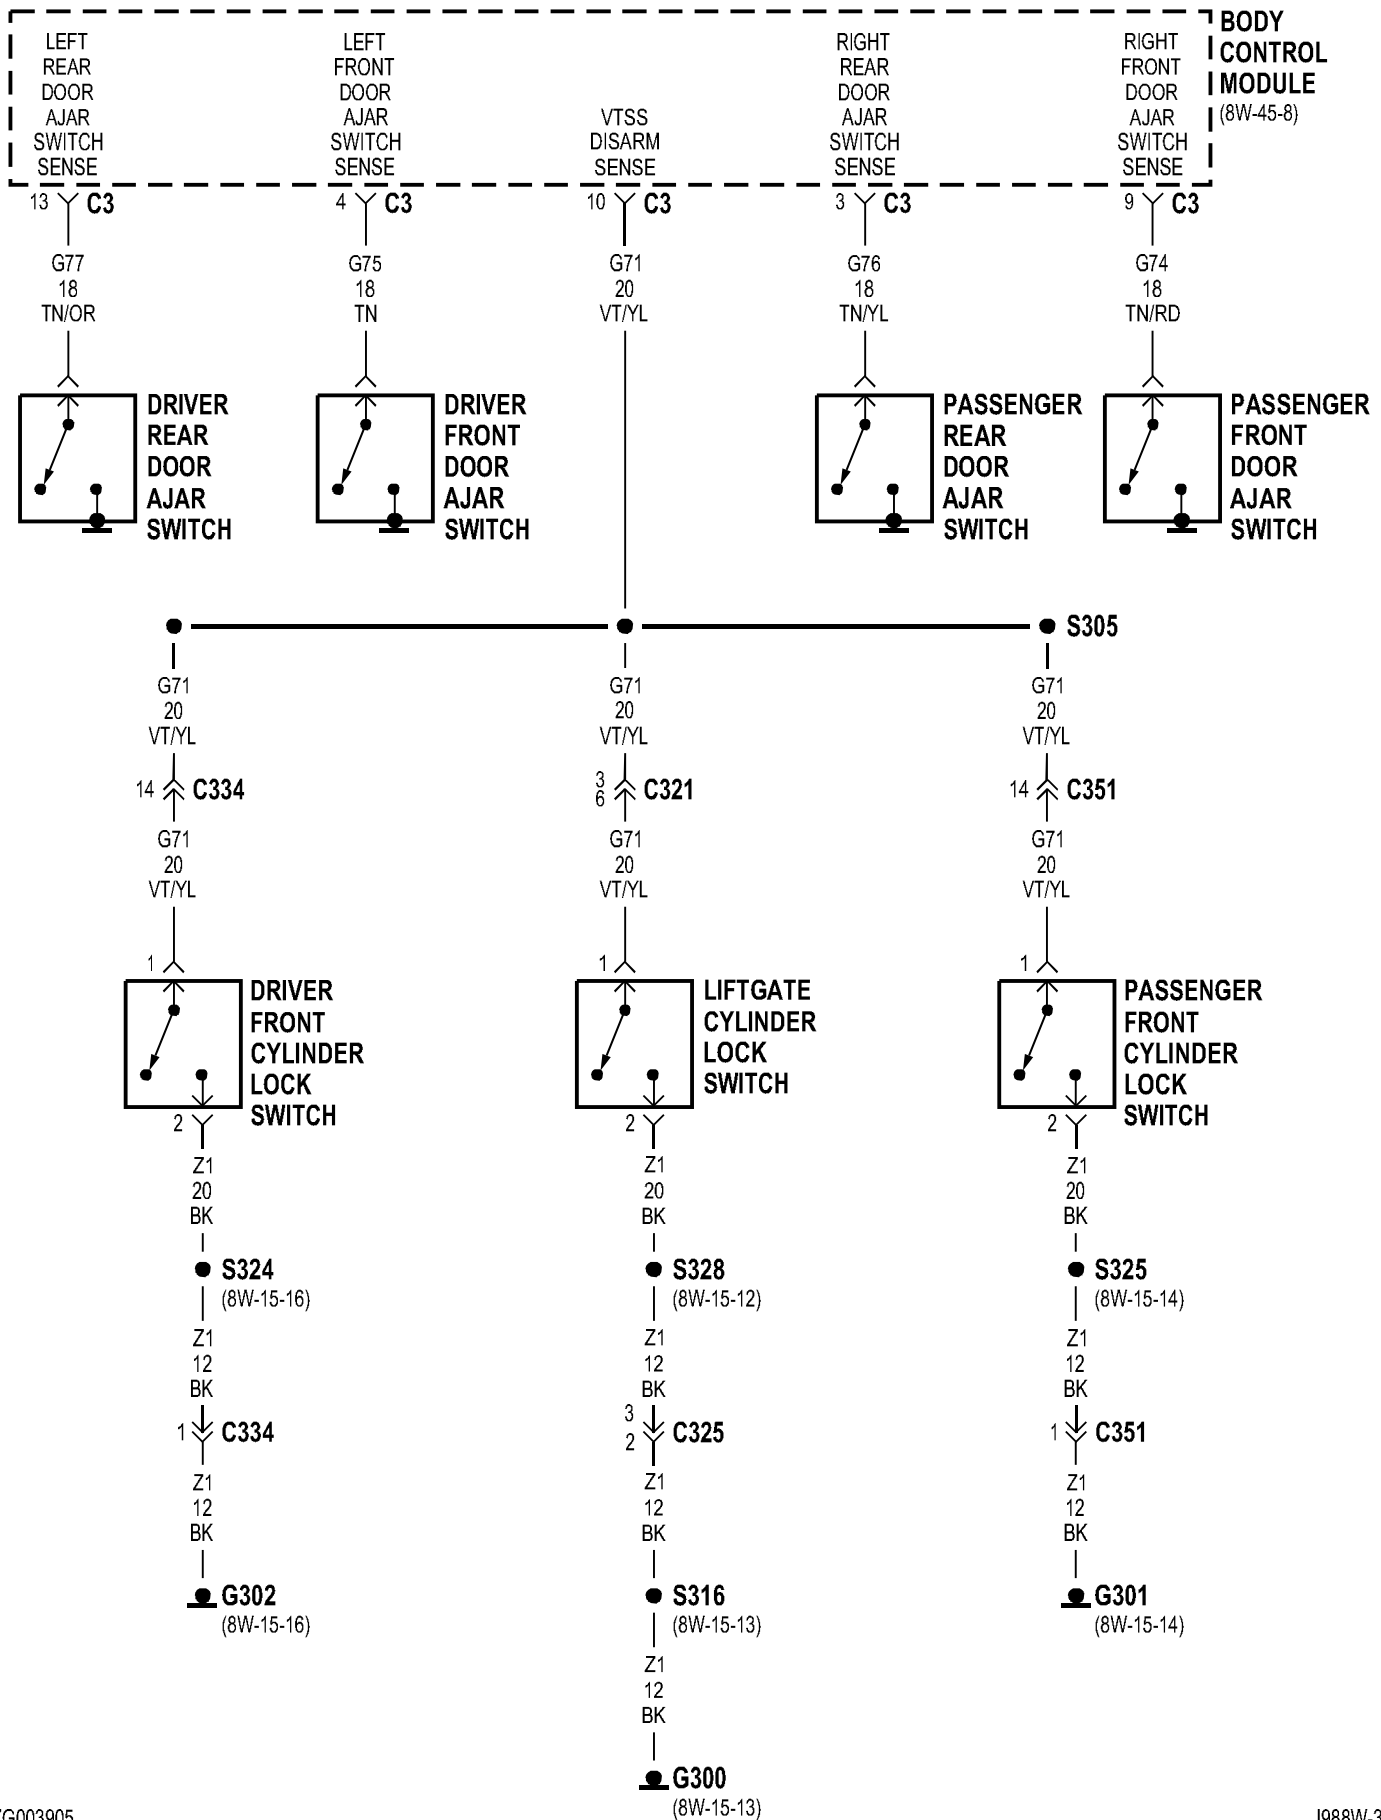


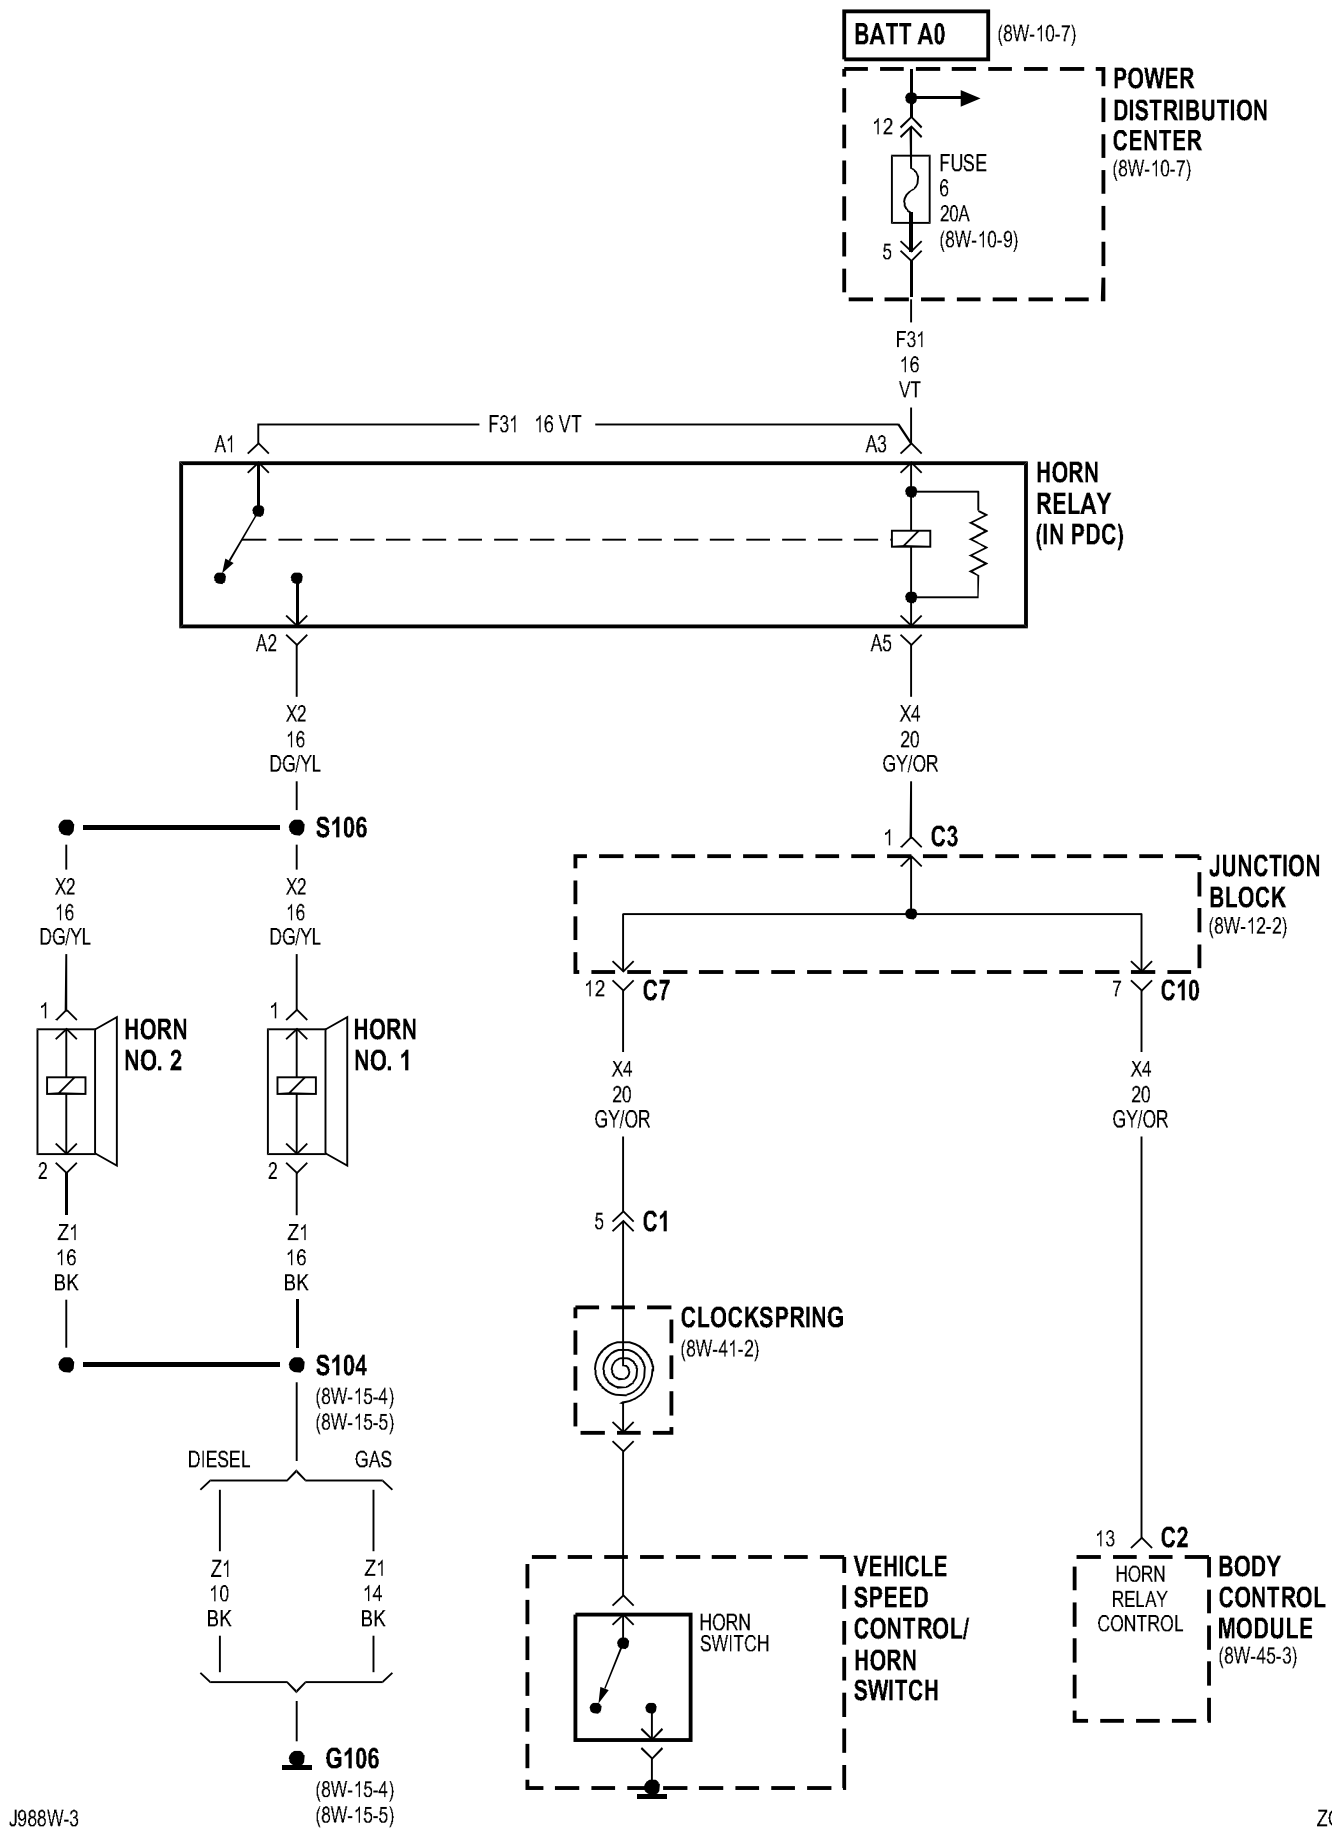



8W-40 INSTRUMENT CLUSTER


Component	Page	Component	Page
ABS Warning Lamp	8W-40-5	G303	8W-40-2, 5
Airbag Warning Lamp	8W-40-2	Headlamp Switch	8W-40-4
Body Control Module	8W-40-4, 6	High Beam Indicator Lamp	8W-40-5
Brake Pressure Switch	8W-40-6	Ignition Switch	8W-40-6
Brake Warning Lamp	8W-40-5	Illumination Lamps	8W-40-4
Check Engine Lamp	8W-40-2	Instrument Cluster	8W-40-2, 3, 4, 5
Check Gages Lamp	8W-40-5	Junction Block	8W-40-2, 4, 5
Controller Anti-Lock Brake	8W-40-5	Left Front Turn Signal Lamp	8W-40-4
Cruise Lamp	8W-40-5	Left Turn Signal Indicator Lamp	8W-40-4
Data Link Connector	8W-40-3	Low Fuel Warning Lamp	8W-40-2
Daytime Running Lamp Module	8W-40-6	Oil Pressure Gauge	8W-40-3
Engine Coolant Temperature Gauge	8W-40-3	Right Turn Signal Indicator Lamp	8W-40-4
Fuel Gauge	8W-40-3	Seat Belt Warning Lamp	8W-40-2
Fuse 5 (JB)	8W-40-5	Speedometer	8W-40-3
Fuse 7 (JB)	8W-40-2, 5	Tachometer	8W-40-3
G108	8W-40-6	Turn Signal/Hazard Warning Switch	8W-40-4
G109	8W-40-4	Volt Meter	8W-40-3

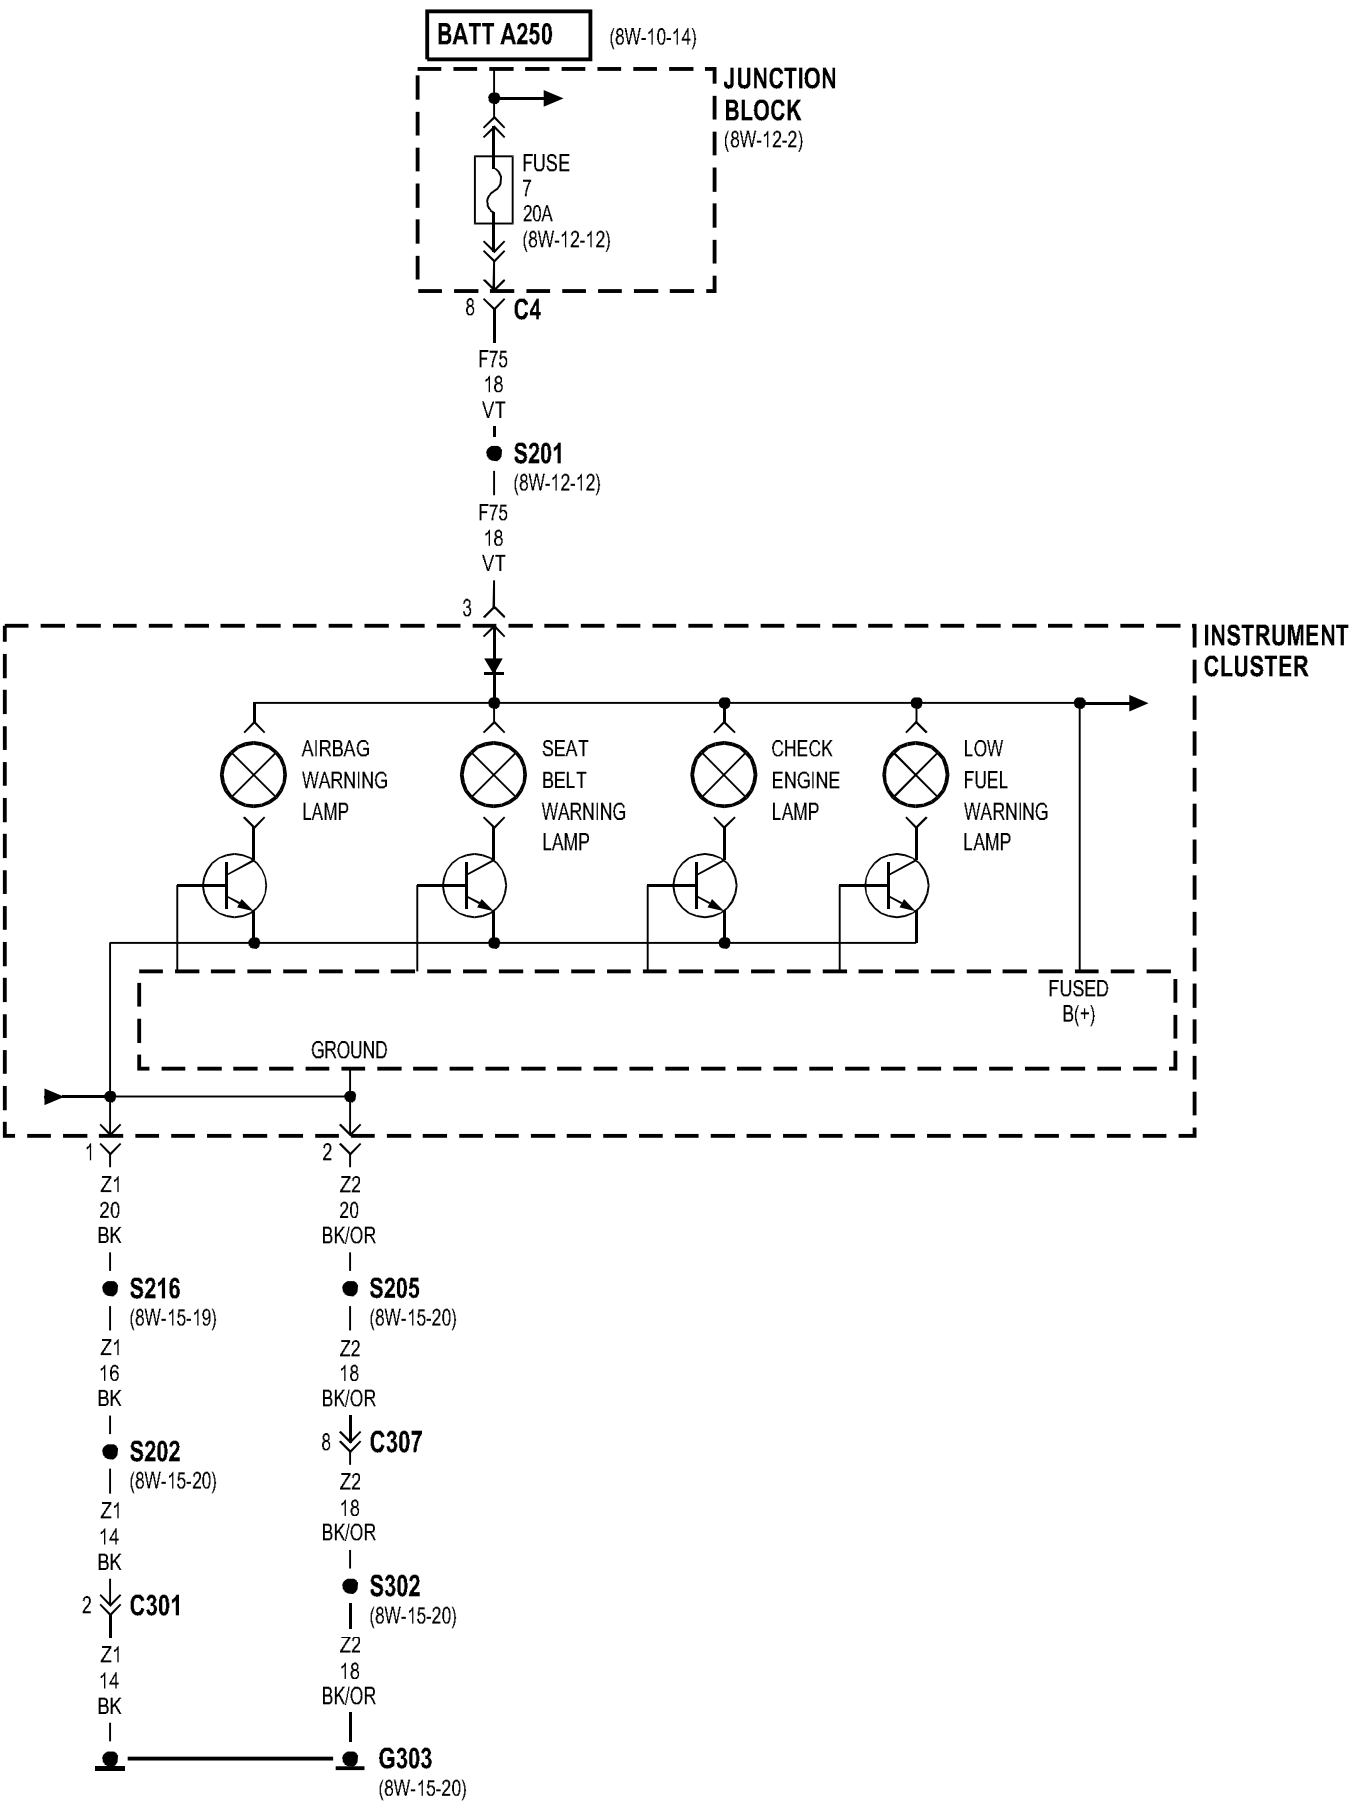

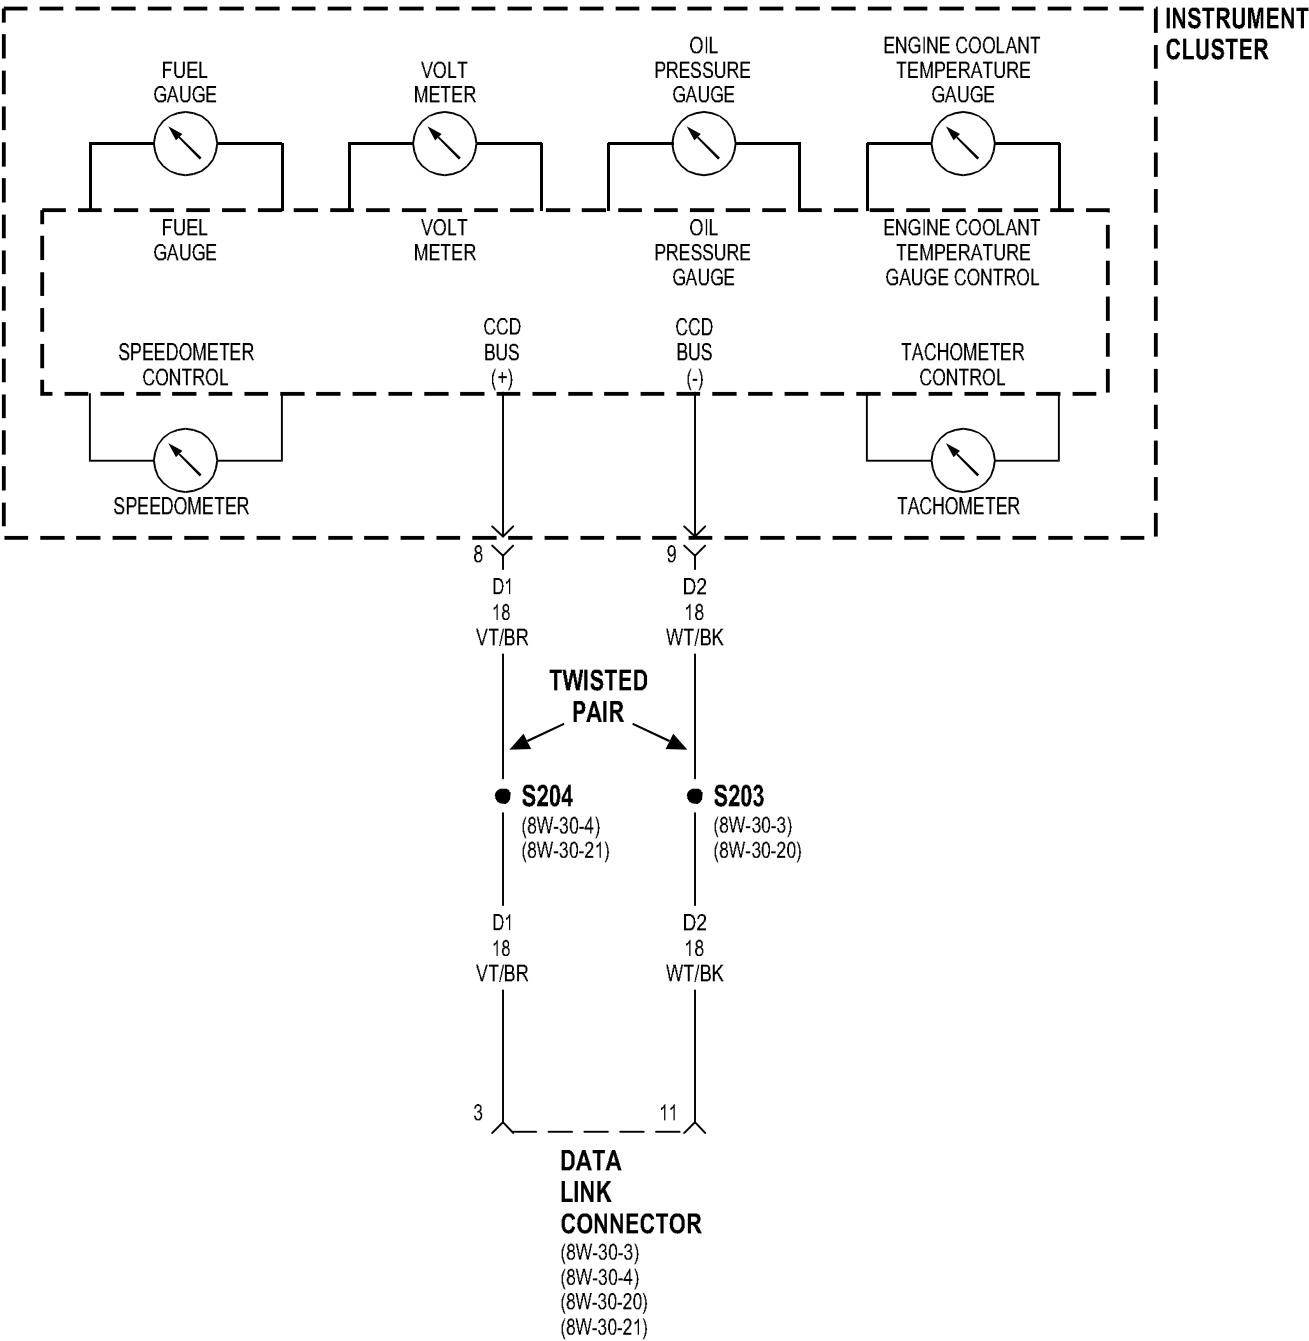

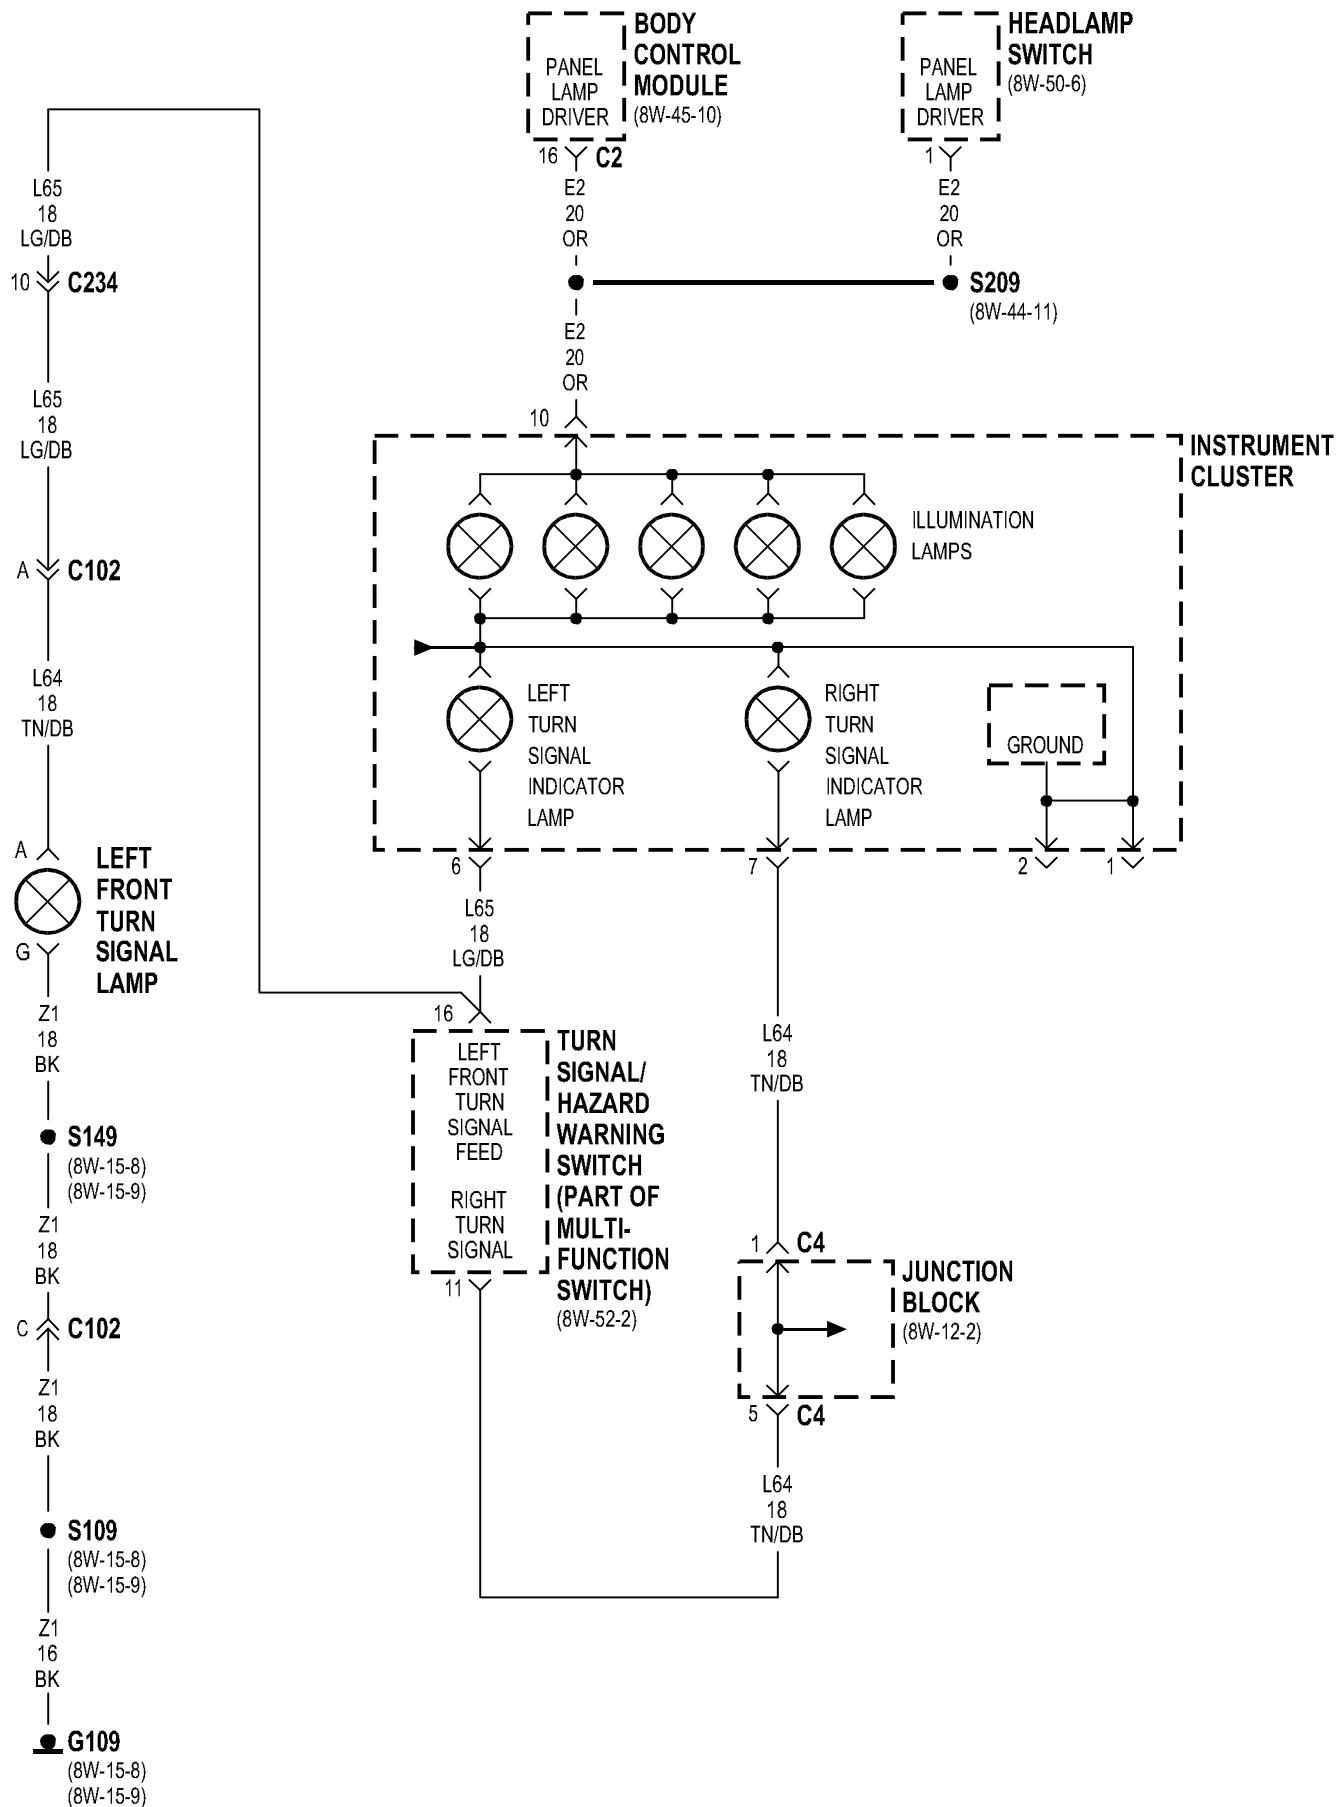

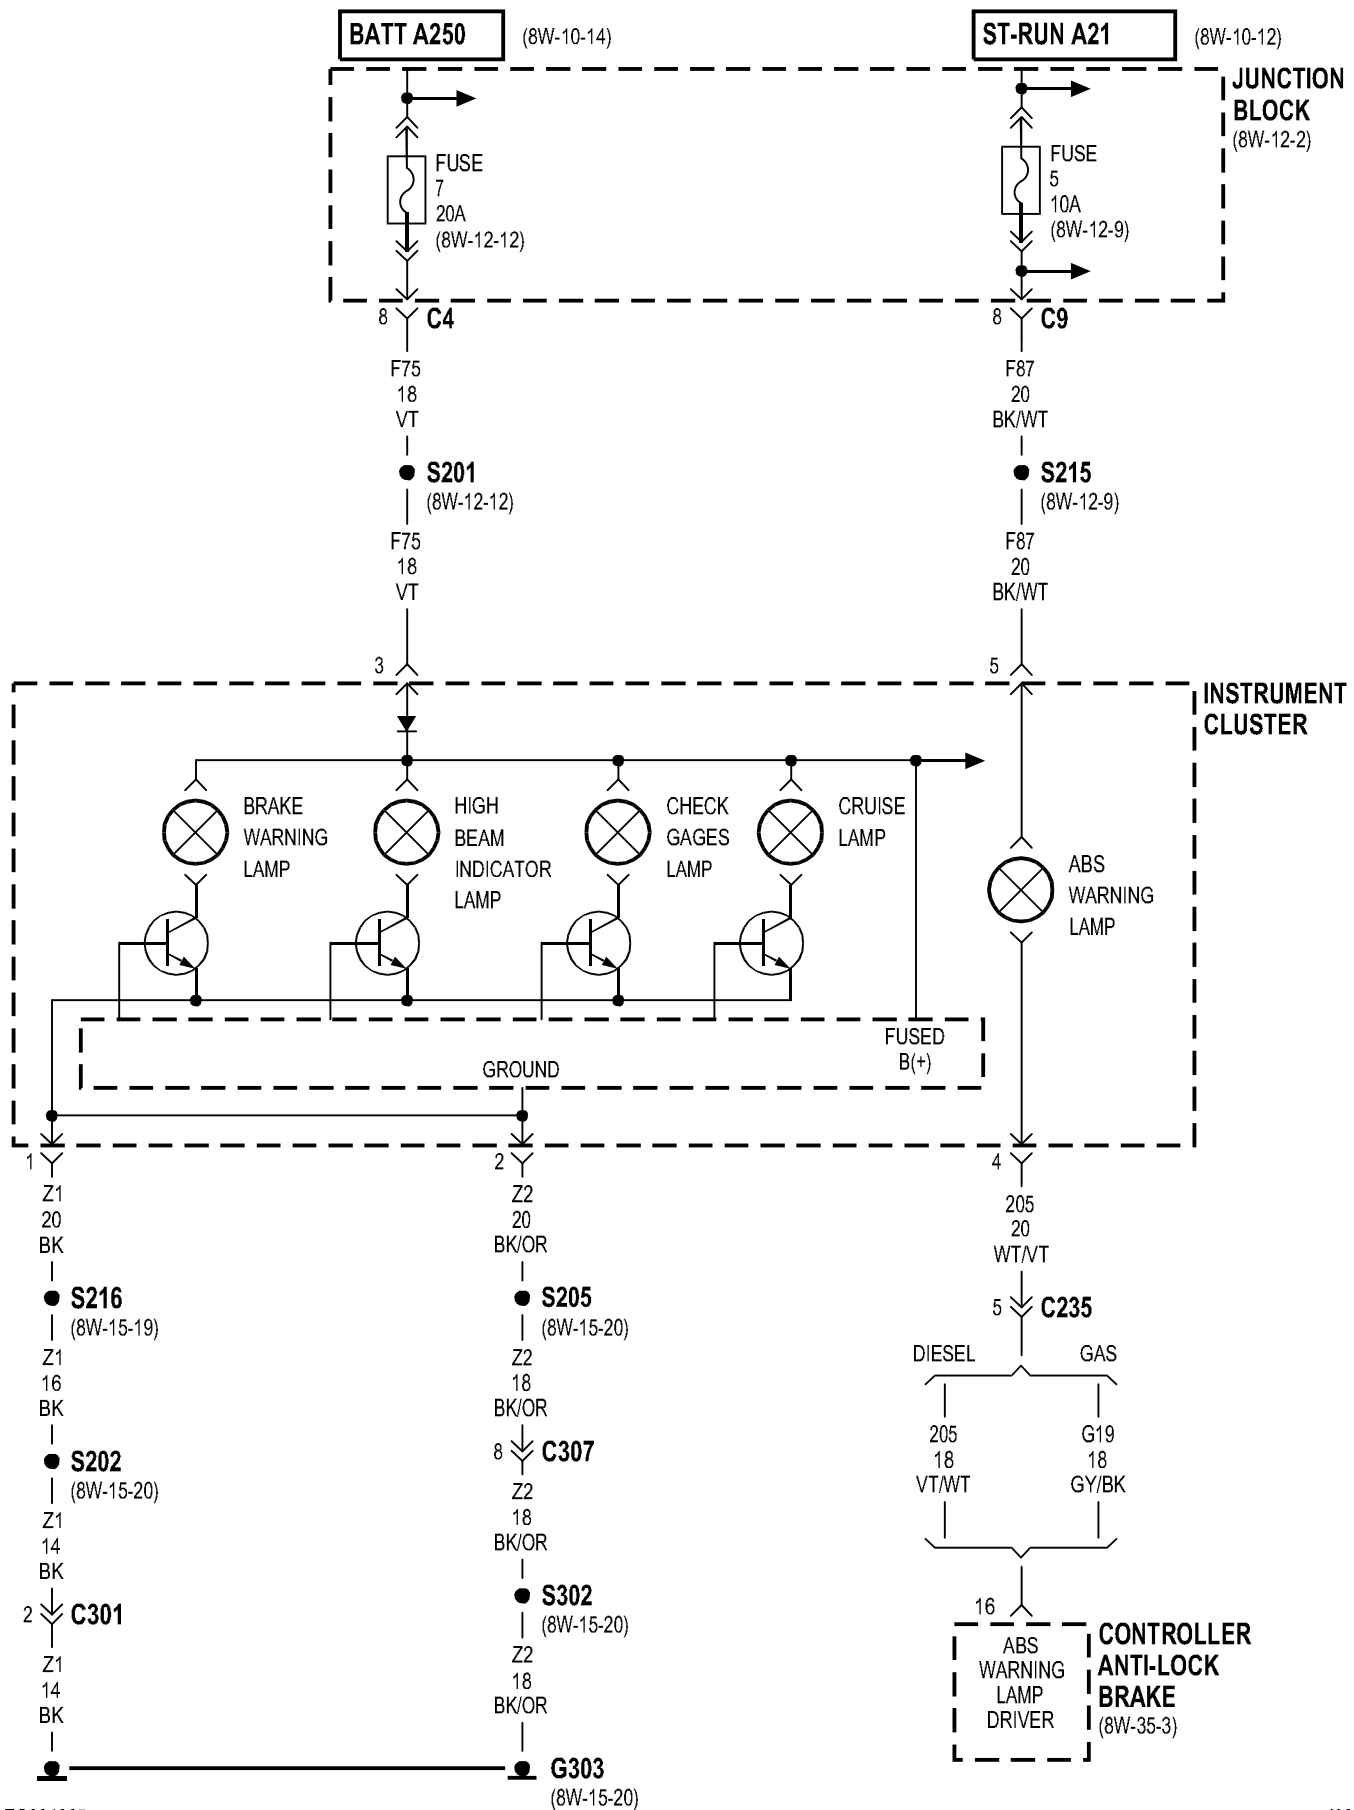


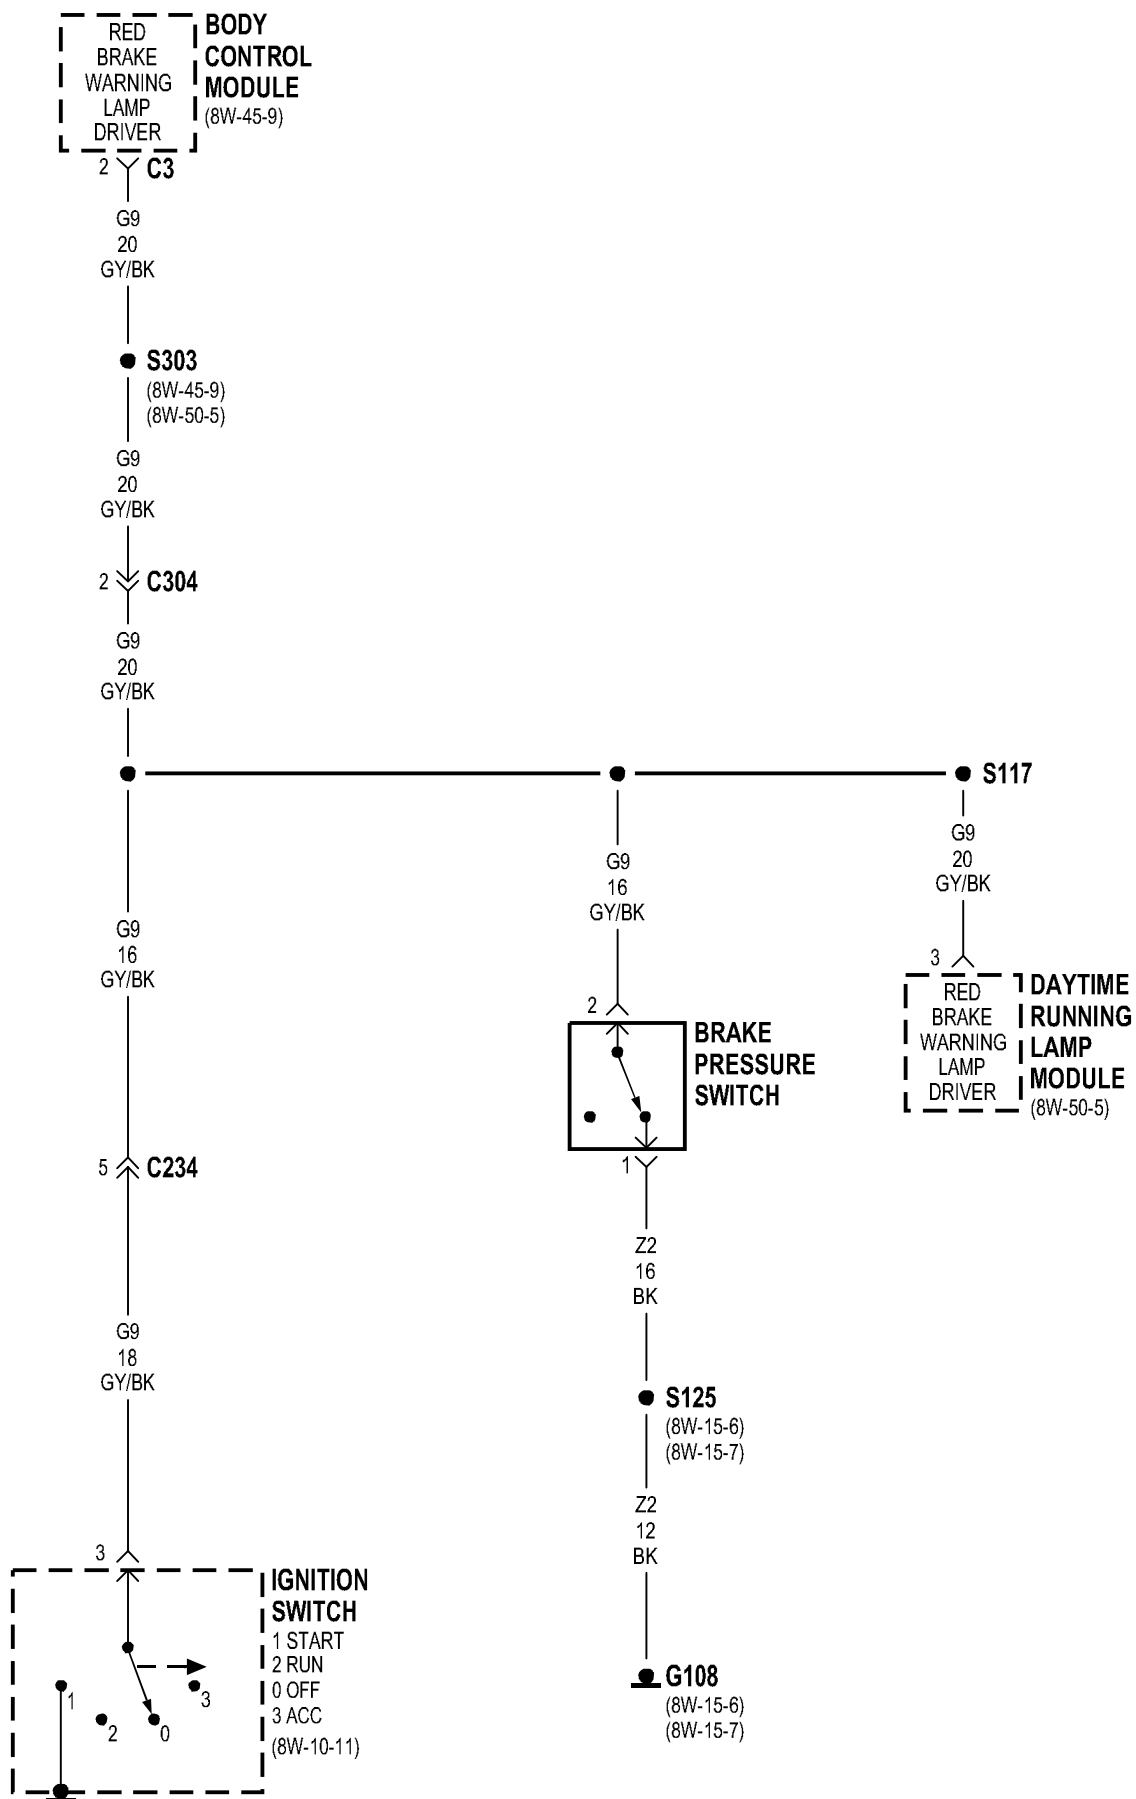


8W-41 HORN/CIGAR LIGHTER

Component	Page
Body Control Module	8W-41-2, 3
Cigar Lighter	8W-41-4
Cigar Lighter Relay	8W-41-3, 4
Cigar Lighter/Power Outlet	8W-41-3
Clockspring	8W-41-2
Fuse 2 (JB)	8W-41-3, 4
Fuse 6 (PDC)	8W-41-2
Fuse 14 (JB)	8W-41-3, 4
Fuse 21 (JB)	8W-41-3, 4
G106	8W-41-2


Component	Page
G303	8W-41-3, 4
Horn No. 1	8W-41-2
Horn No. 2	8W-41-2
Horn Relay	8W-41-2
Horn Switch	8W-41-2
Junction Block	8W-41-2, 3, 4
Power Distribution Center	8W-41-2
Power Outlet	8W-41-4
Vehicle Speed Control/Horn Switch.	8W-41-2

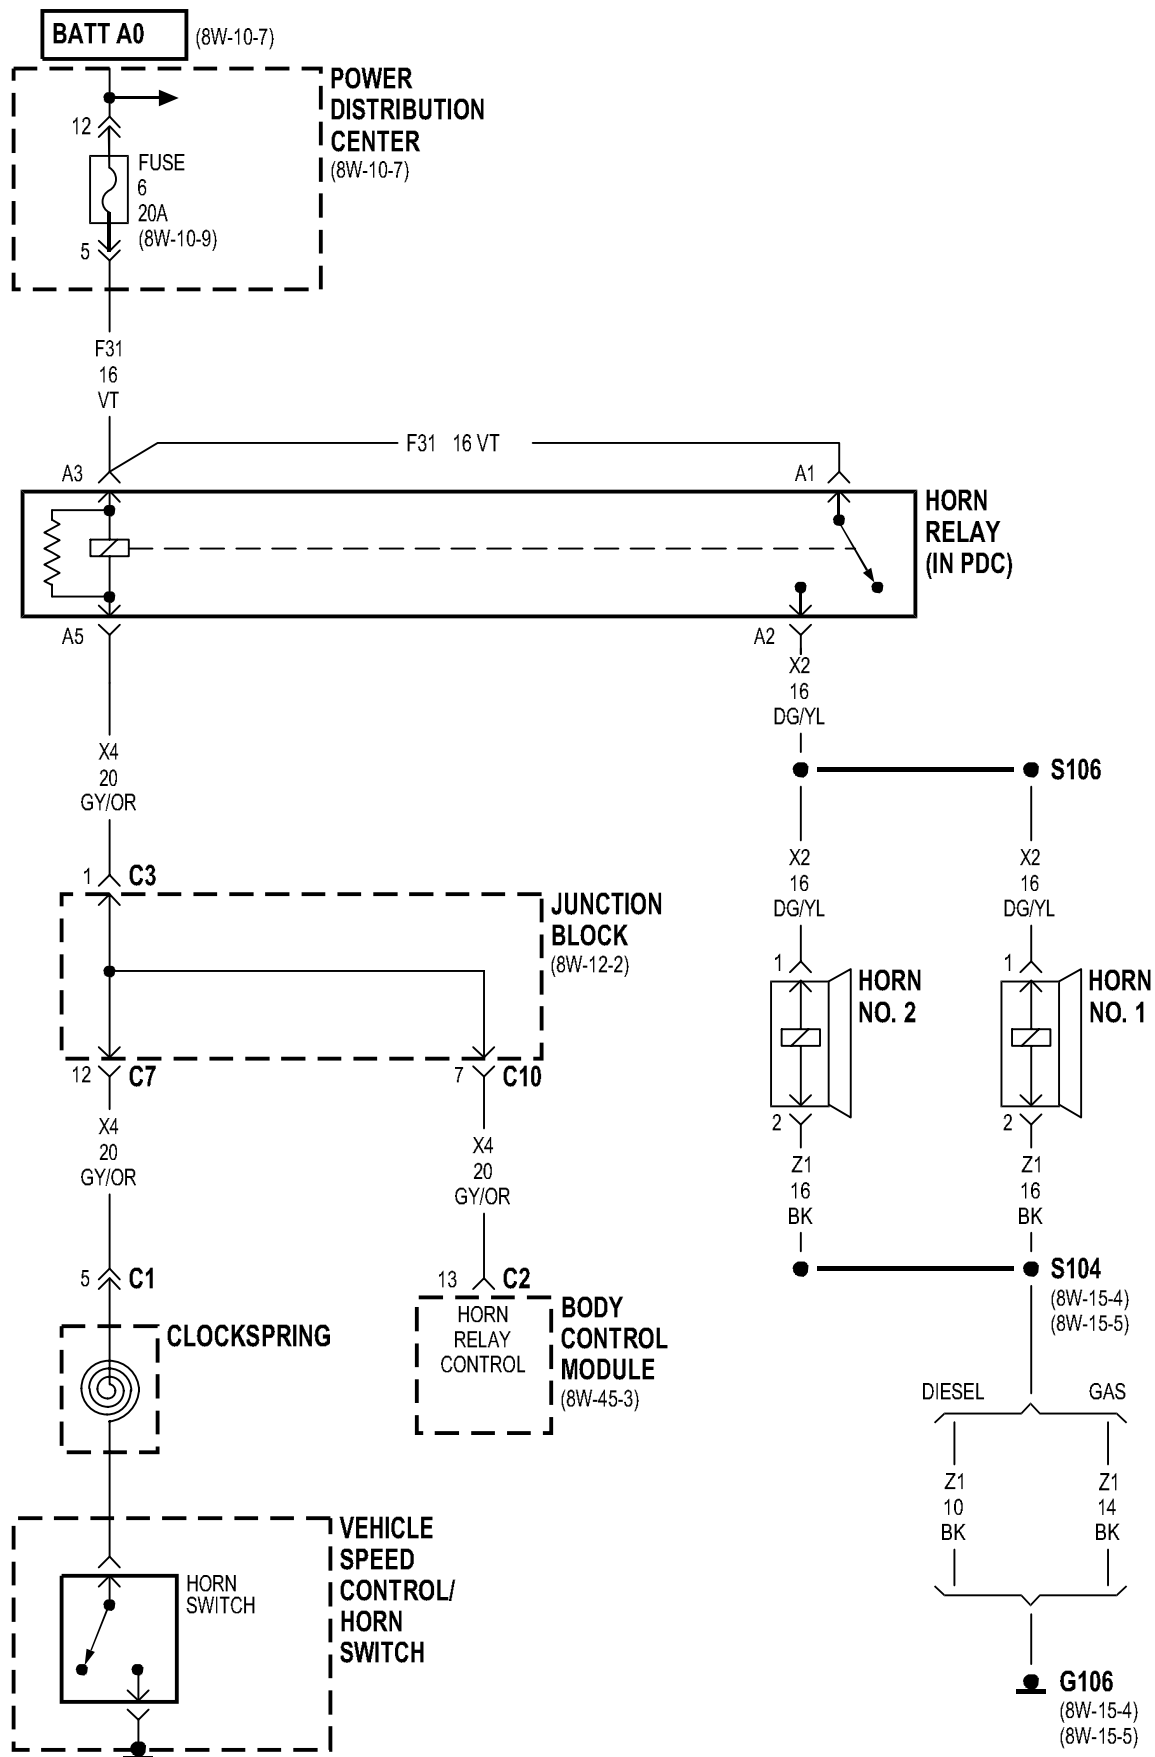

LHD

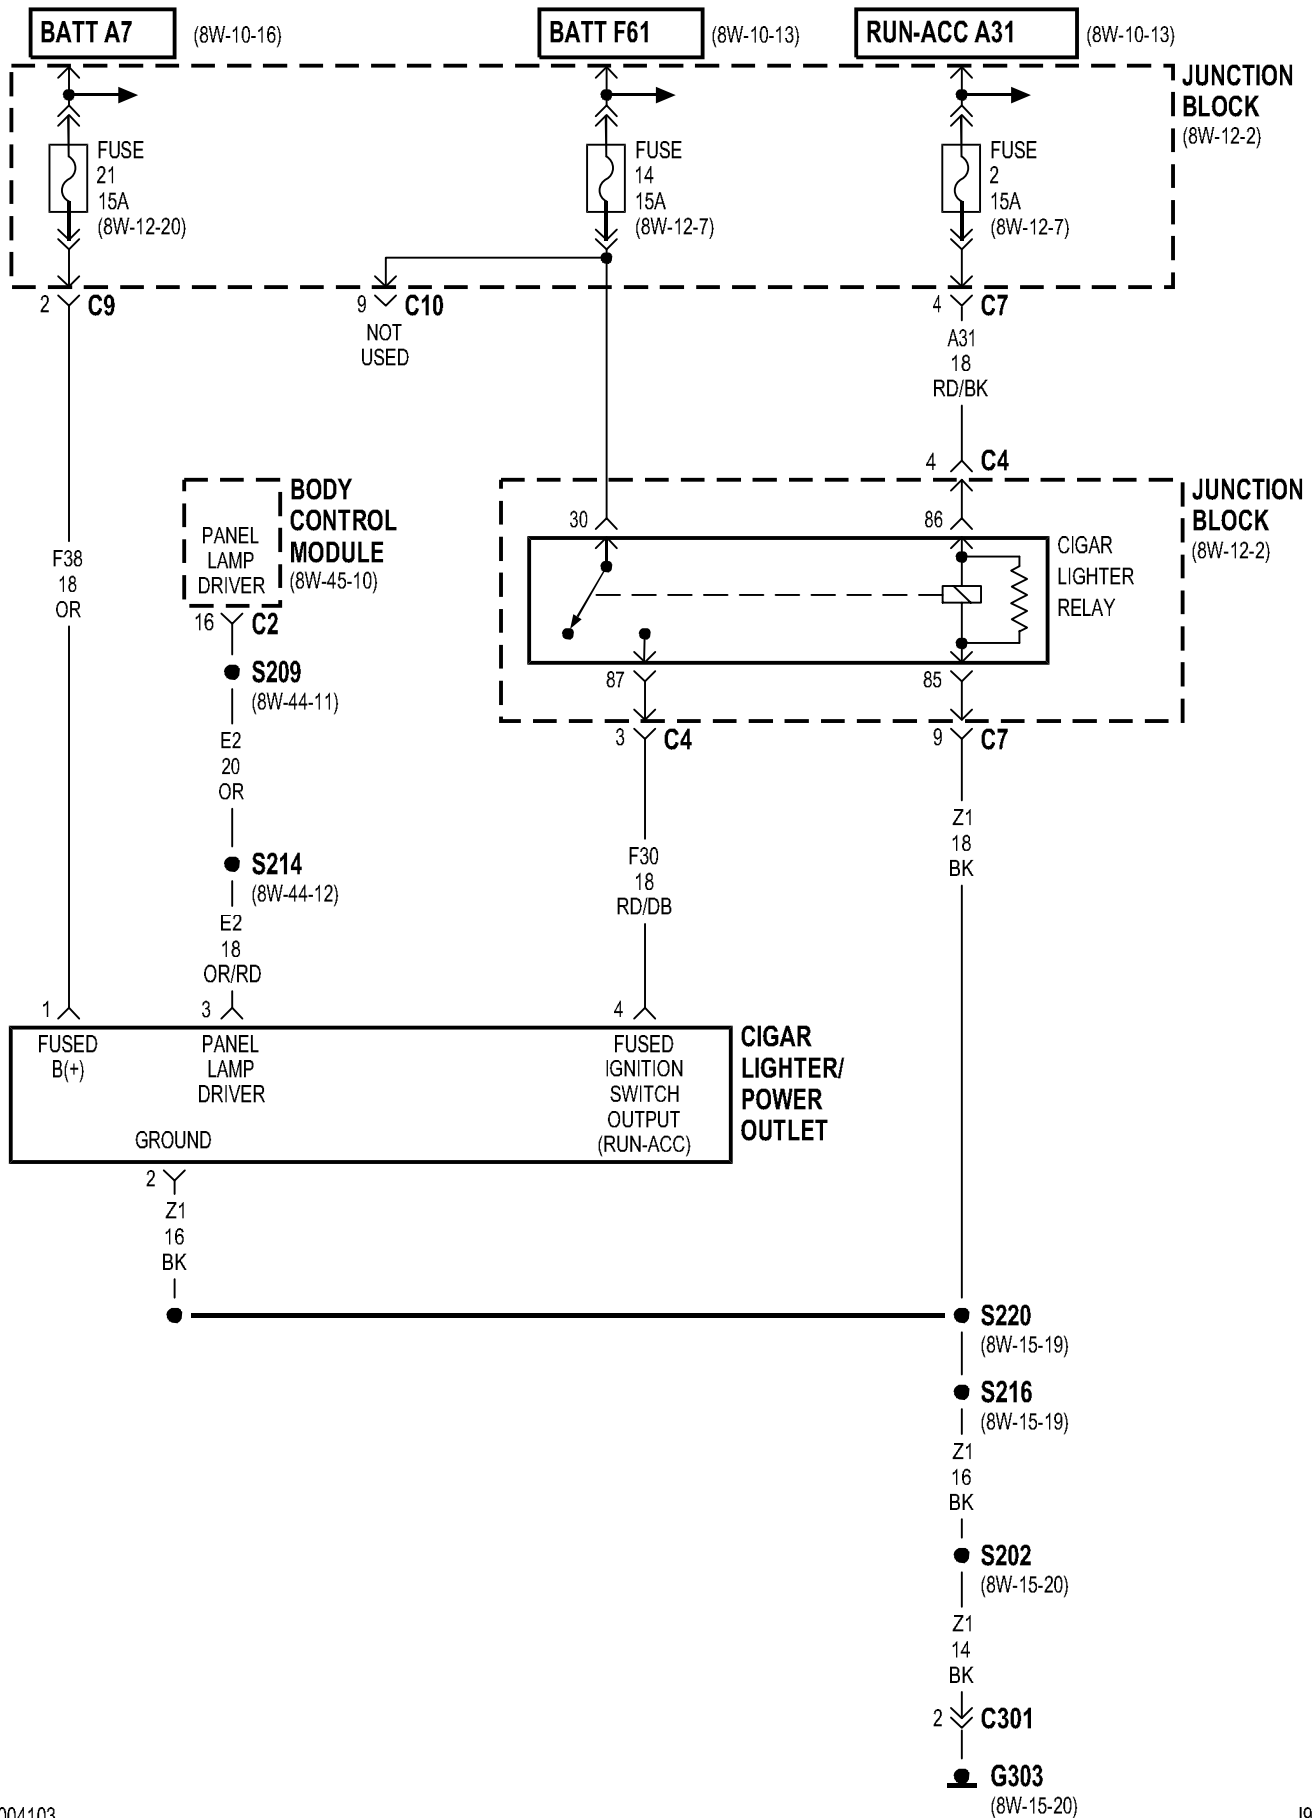



RHD

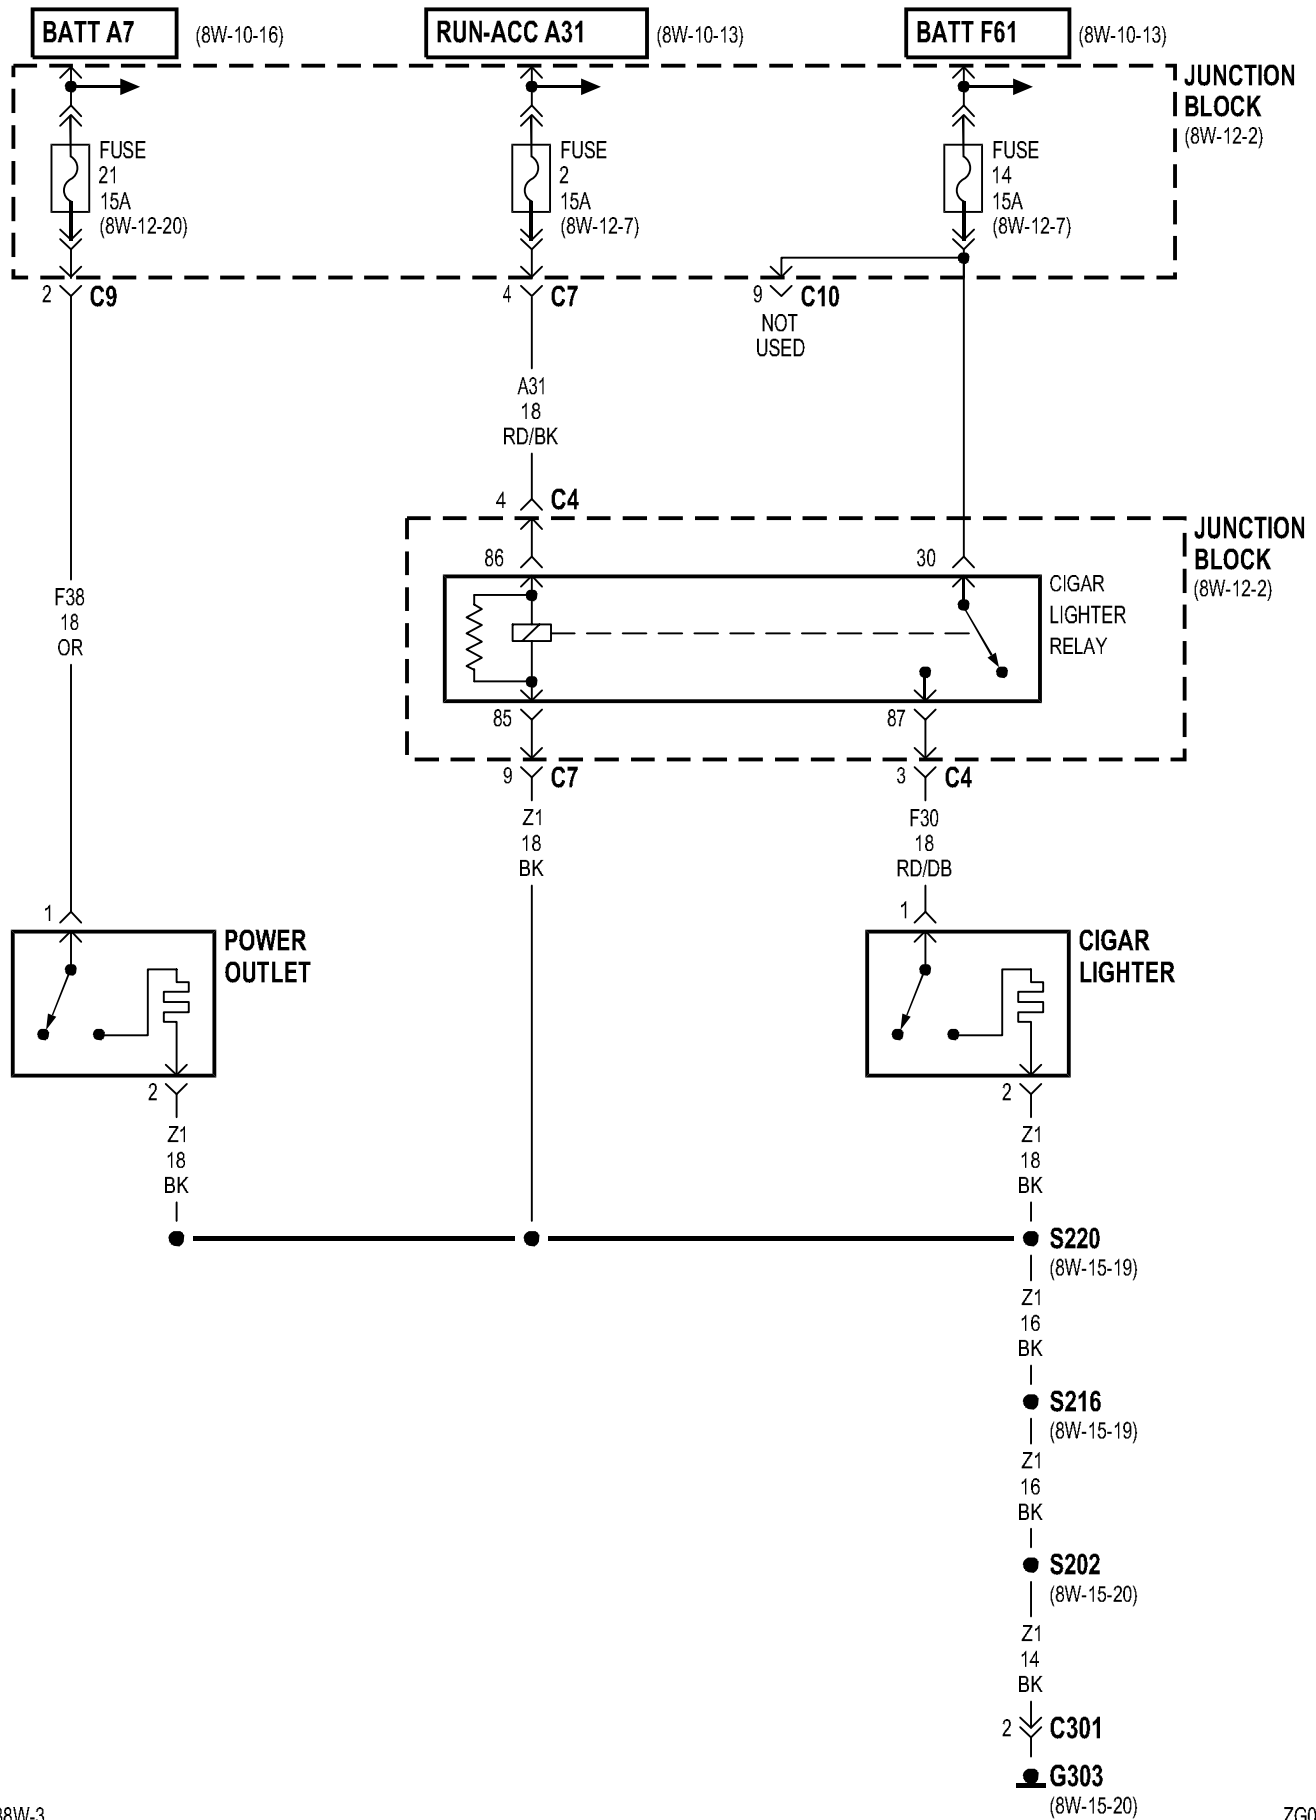



8W-42 AIR CONDITIONING/HEATER


Component	Page	Component	Page
A/C Compressor Clutch	8W-42-10, 11	Fuse 18 (PDC)	8W-42-10
A/C Compressor Clutch Relay	8W-42-10, 11	Fuse 20 (JB)	8W-42-2
A/C Heater Control	8W-42-2, 5	Fuse 20 (PDC)	8W-42-11
A/C High Pressure Switch	8W-42-12, 13	Fuse 21 (PDC)	8W-42-10, 11
A/C Low Pressure Switch	8W-42-12, 13	G104	8W-42-11
Ambient Temperature Sensor	8W-42-6	G105	8W-42-10
Automatic Shutdown Relay	8W-42-11	G106	8W-42-10, 11, 12
Automatic Temperature Control		G107	8W-42-2, 4, 7
Module	8W-42-2, 3, 4, 6, 8, 9	G111	8W-42-2, 4, 7
Blend Door Actuator	8W-42-6, 7, 8	G303	8W-42-7
Blower Motor	8W-42-2, 5	In-Car Temperature Sensor	8W-42-6
Blower Motor Resistor Block	8W-42-2, 5	Junction Block	8W-42-2, 5, 7, 9
Blower Power Module	8W-42-3	Mode Door Actuator	8W-42-6, 8
Body Control Module	8W-42-4, 5, 6	MSA Controller	8W-42-13
Data Link Connector	8W-42-9	Power Distribution Center	8W-42-2, 3, 10, 11
Fuse 3 (PDC)	8W-42-11	Powertrain Control Module	8W-42-12, 13
Fuse 7 (PDC)	8W-42-2, 3	Recirculation Door Actuator	8W-42-9
Fuse 12 (JB)	8W-42-5, 7, 9	Solar Sensor	8W-42-6

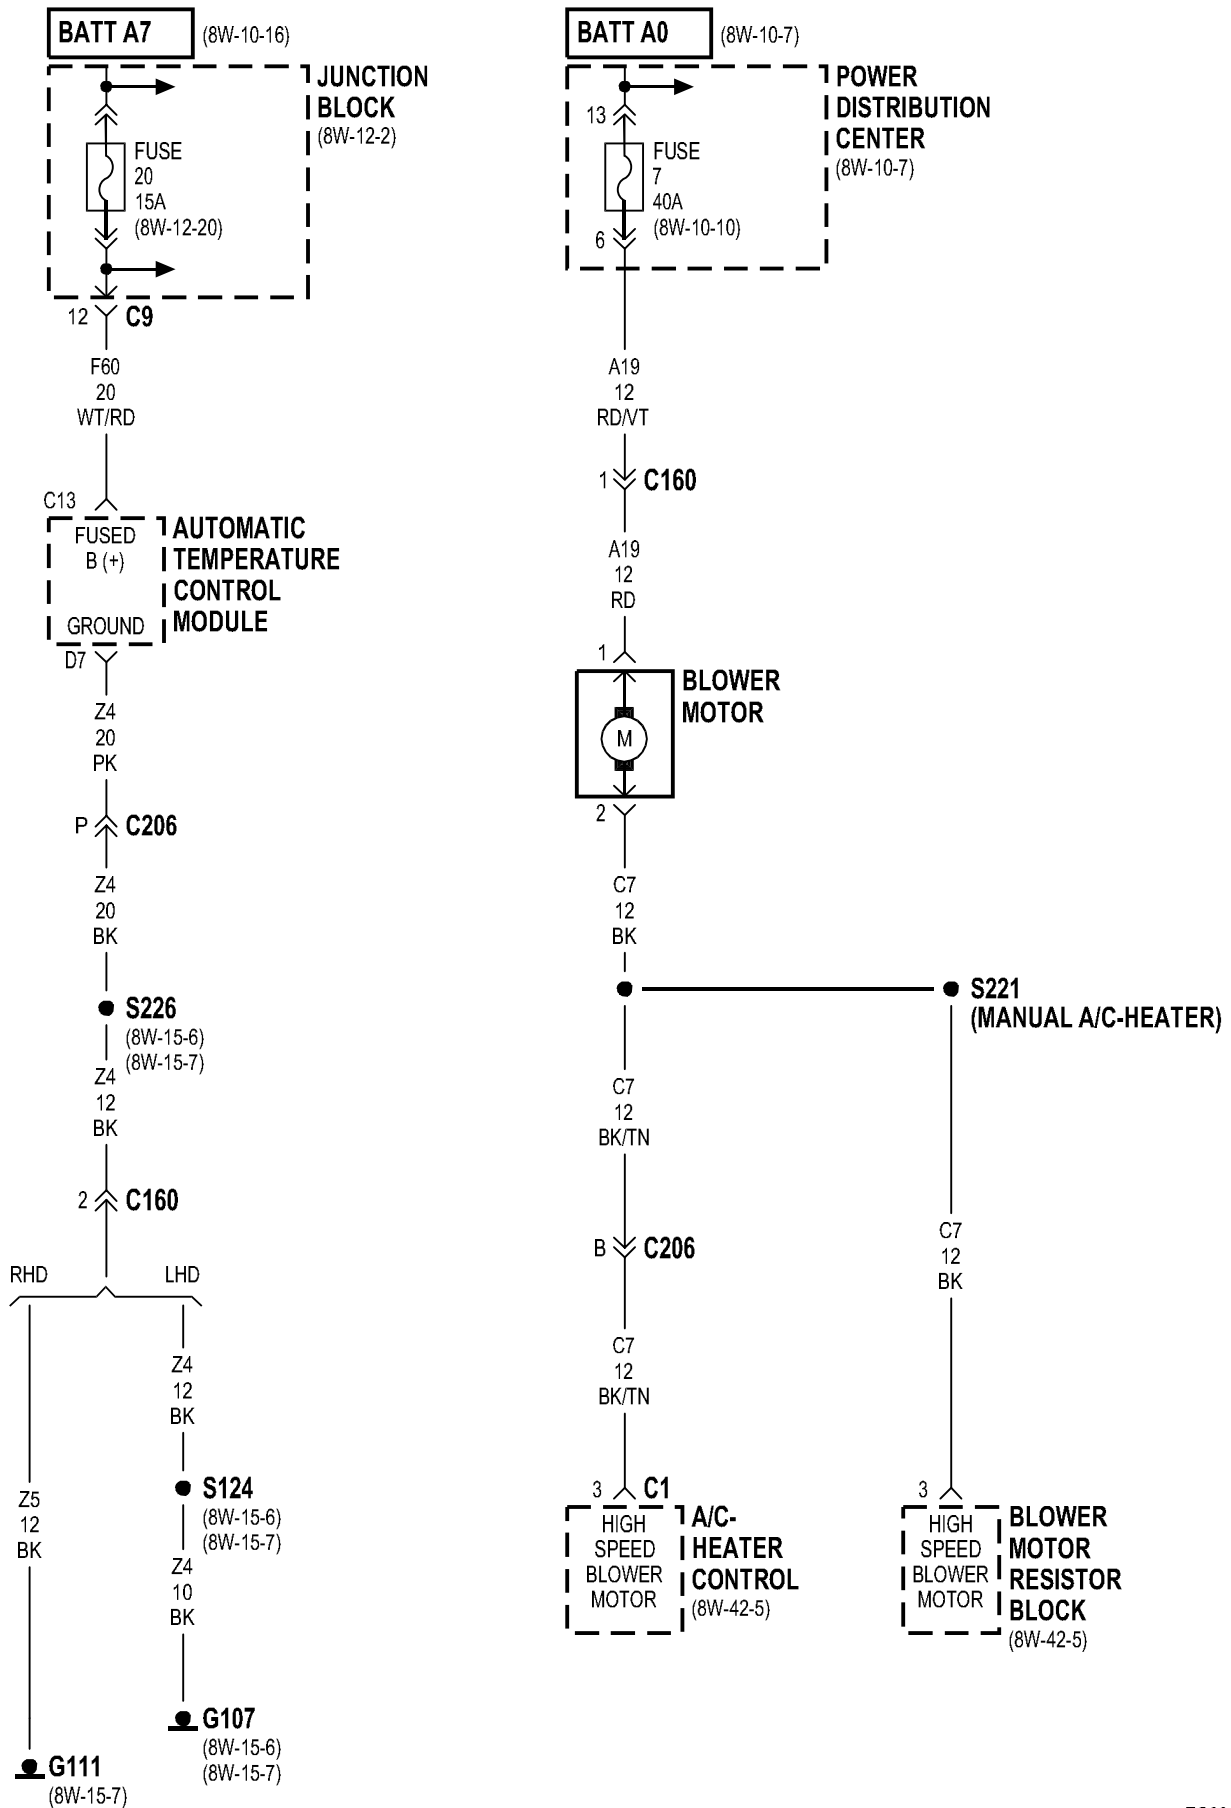


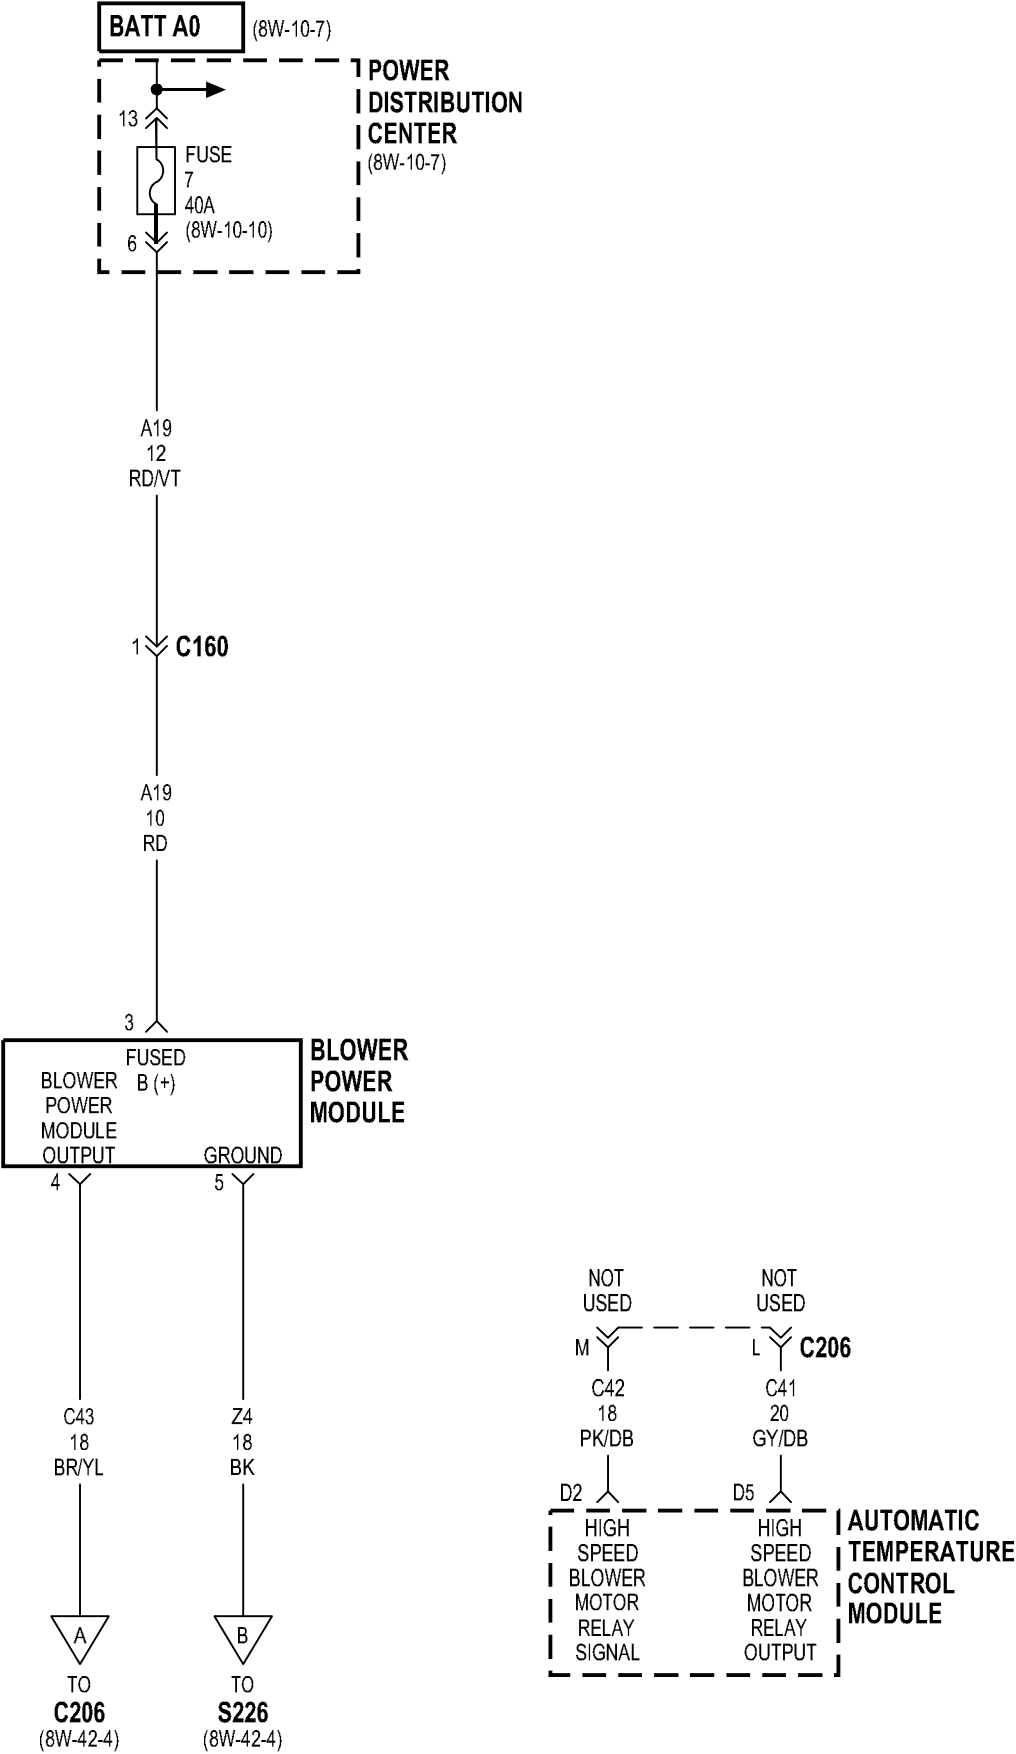


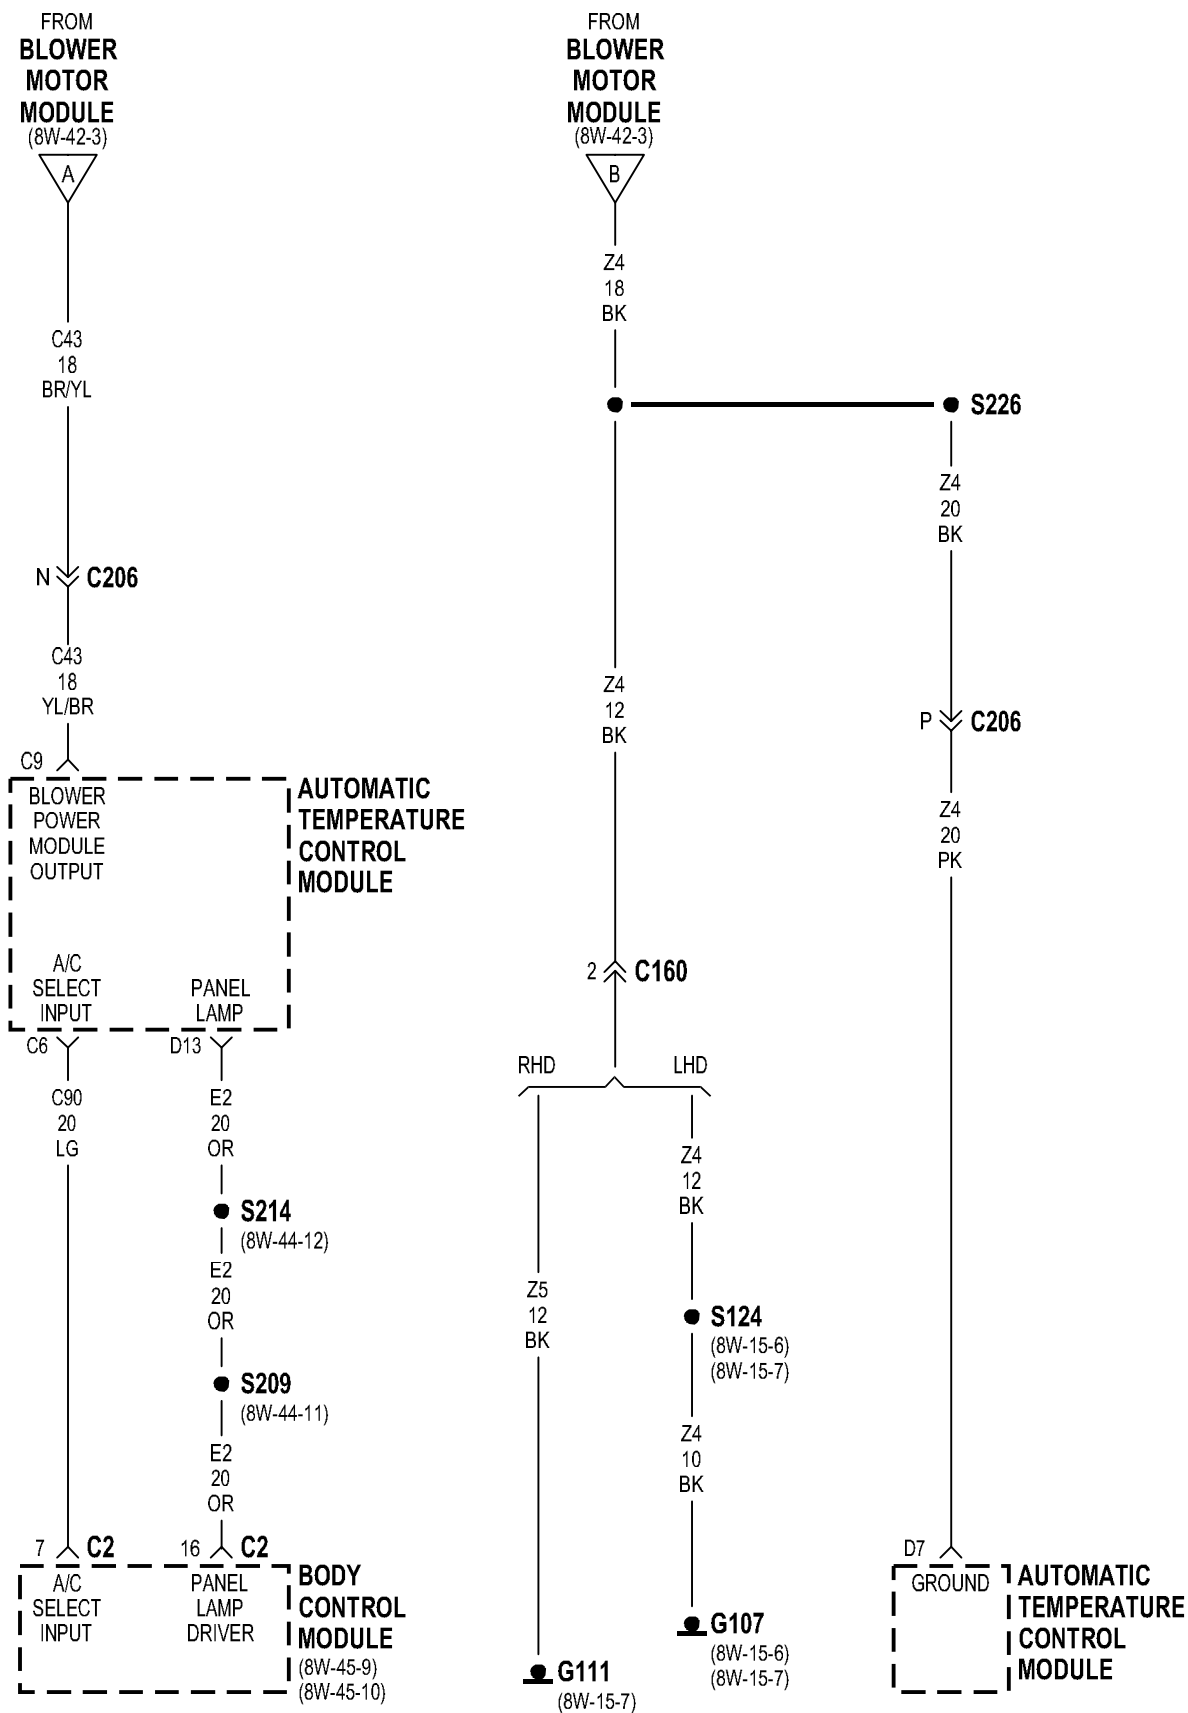


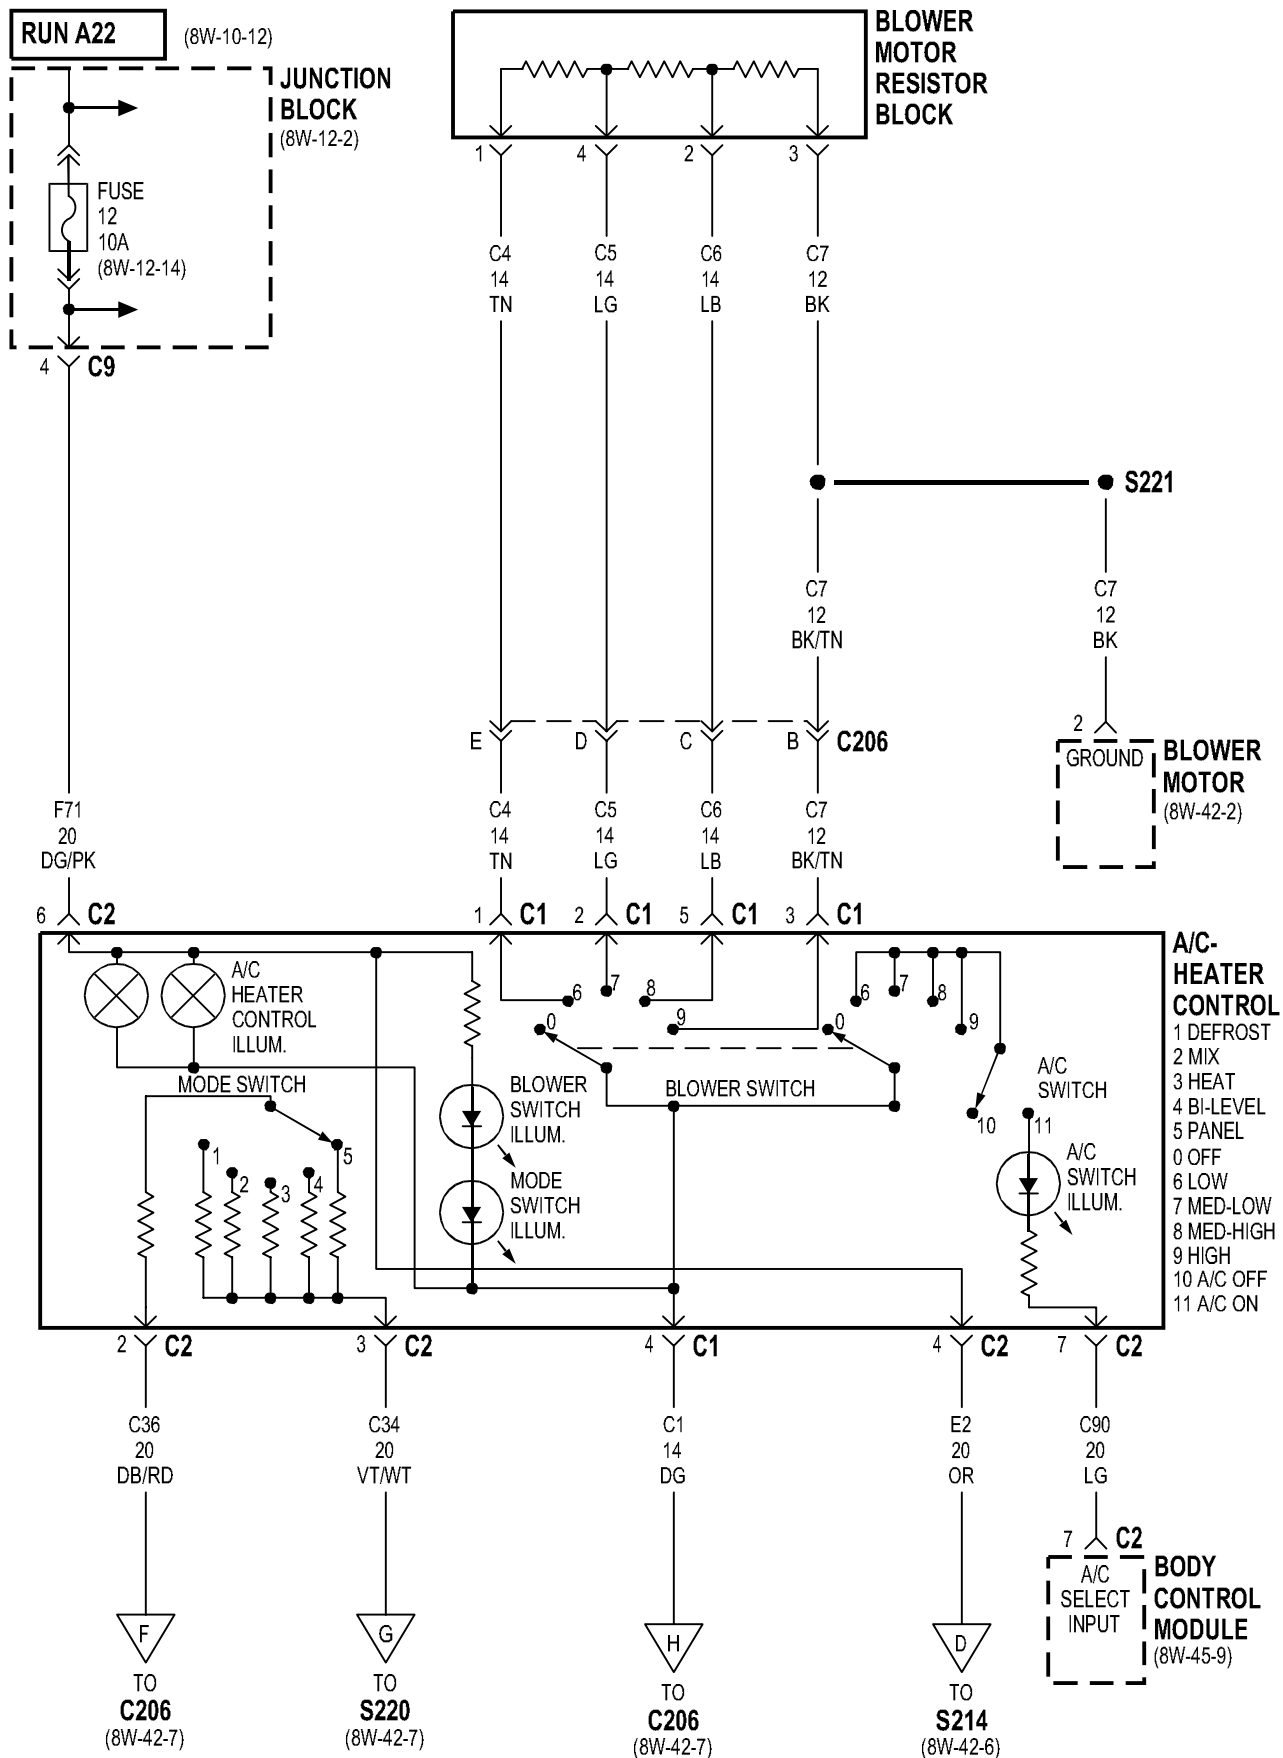


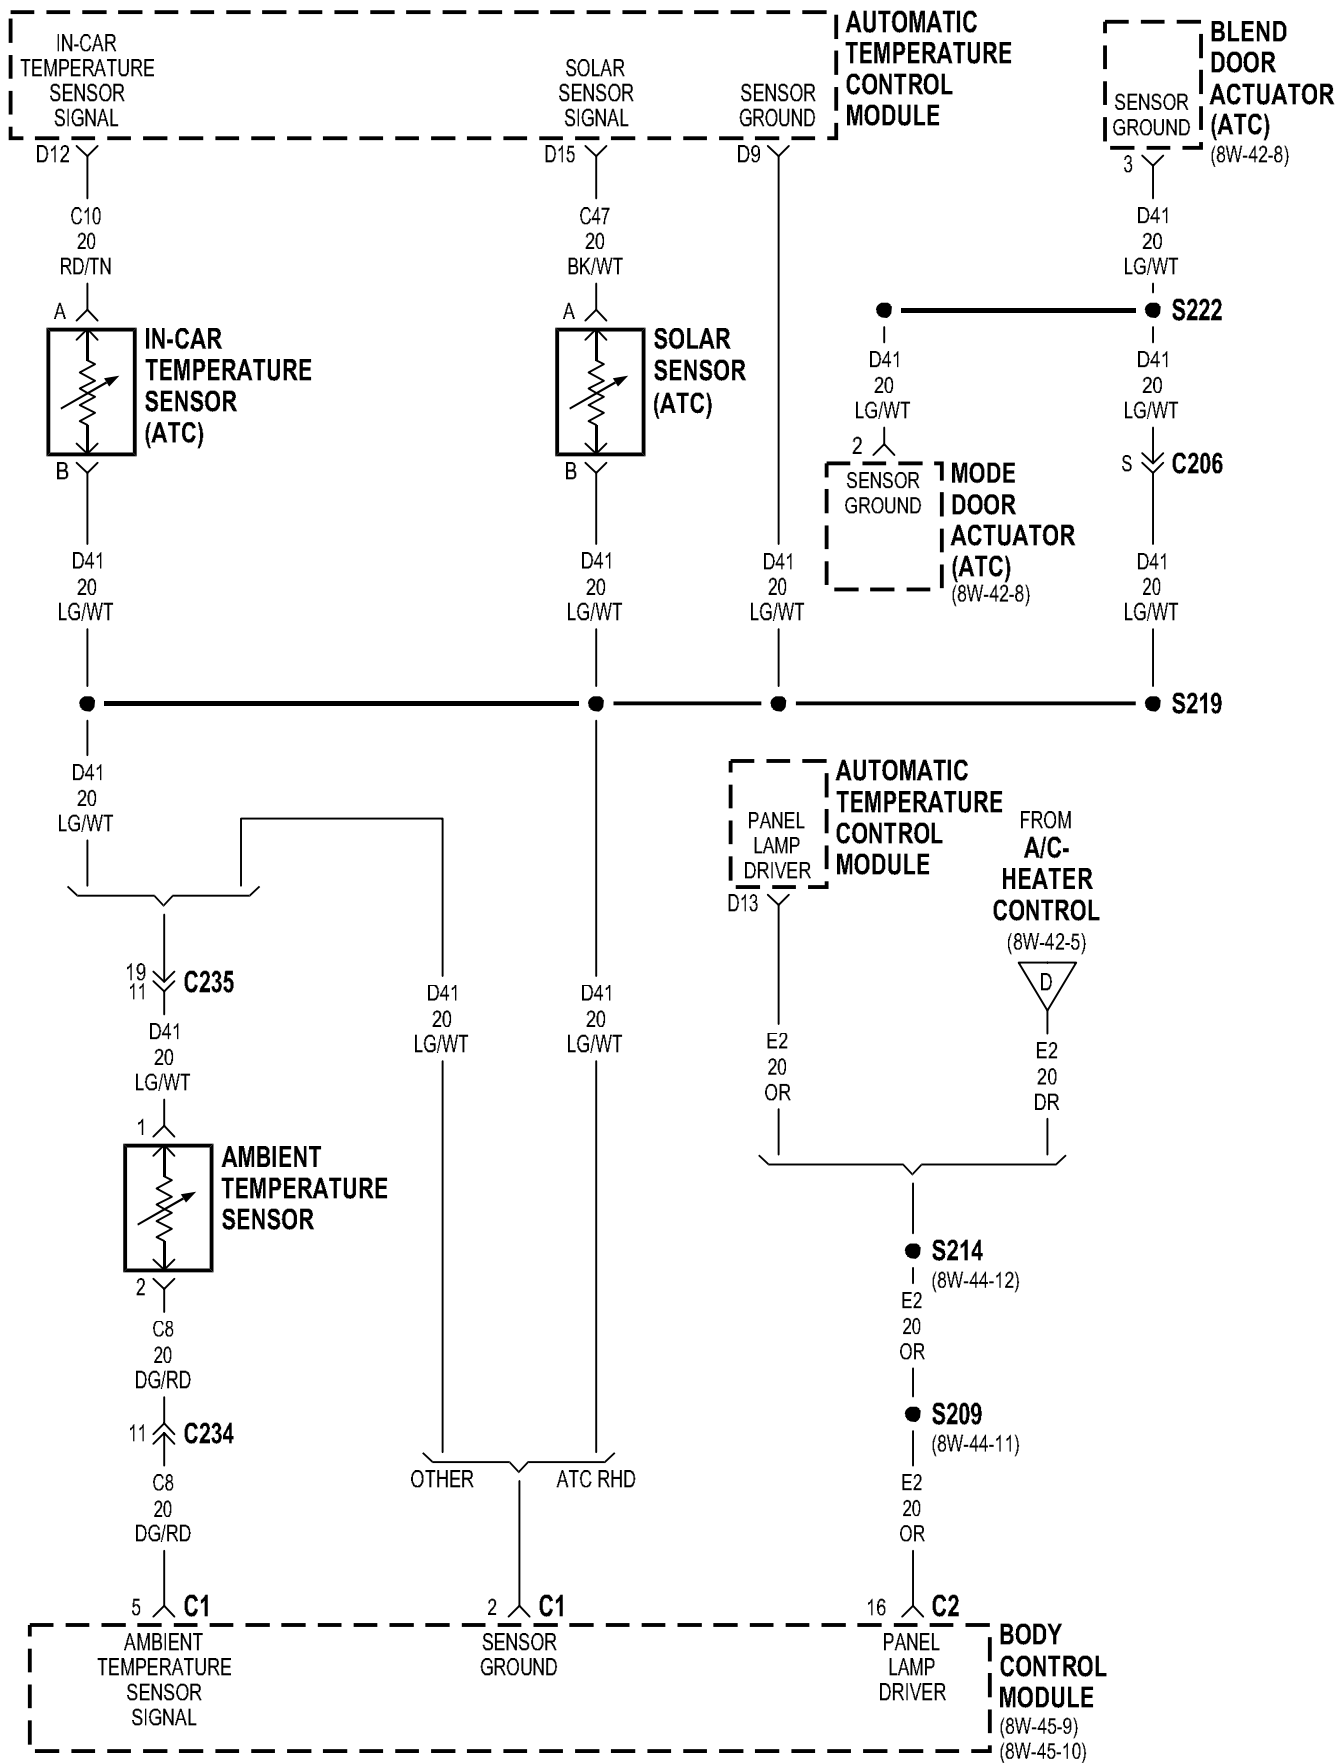


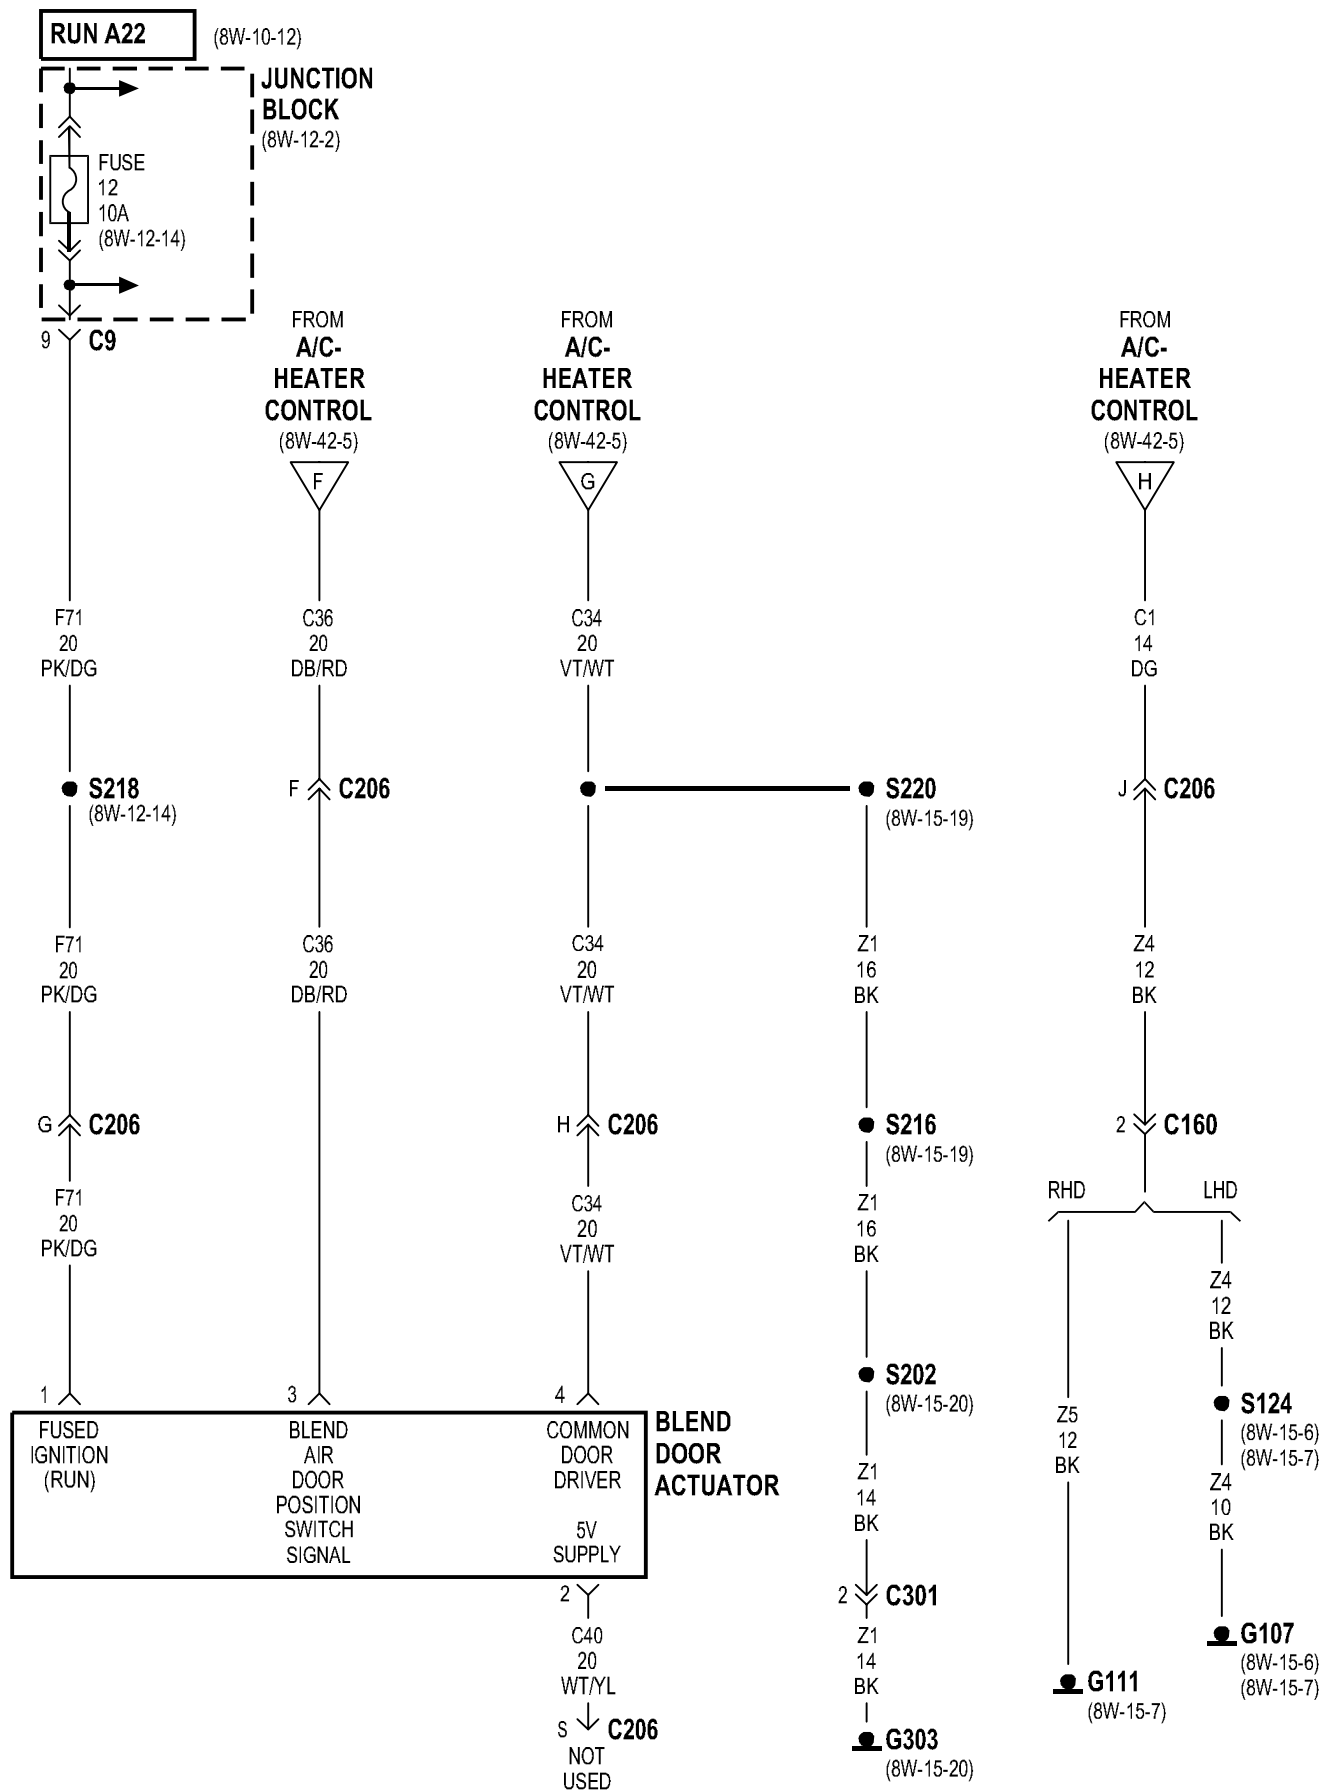


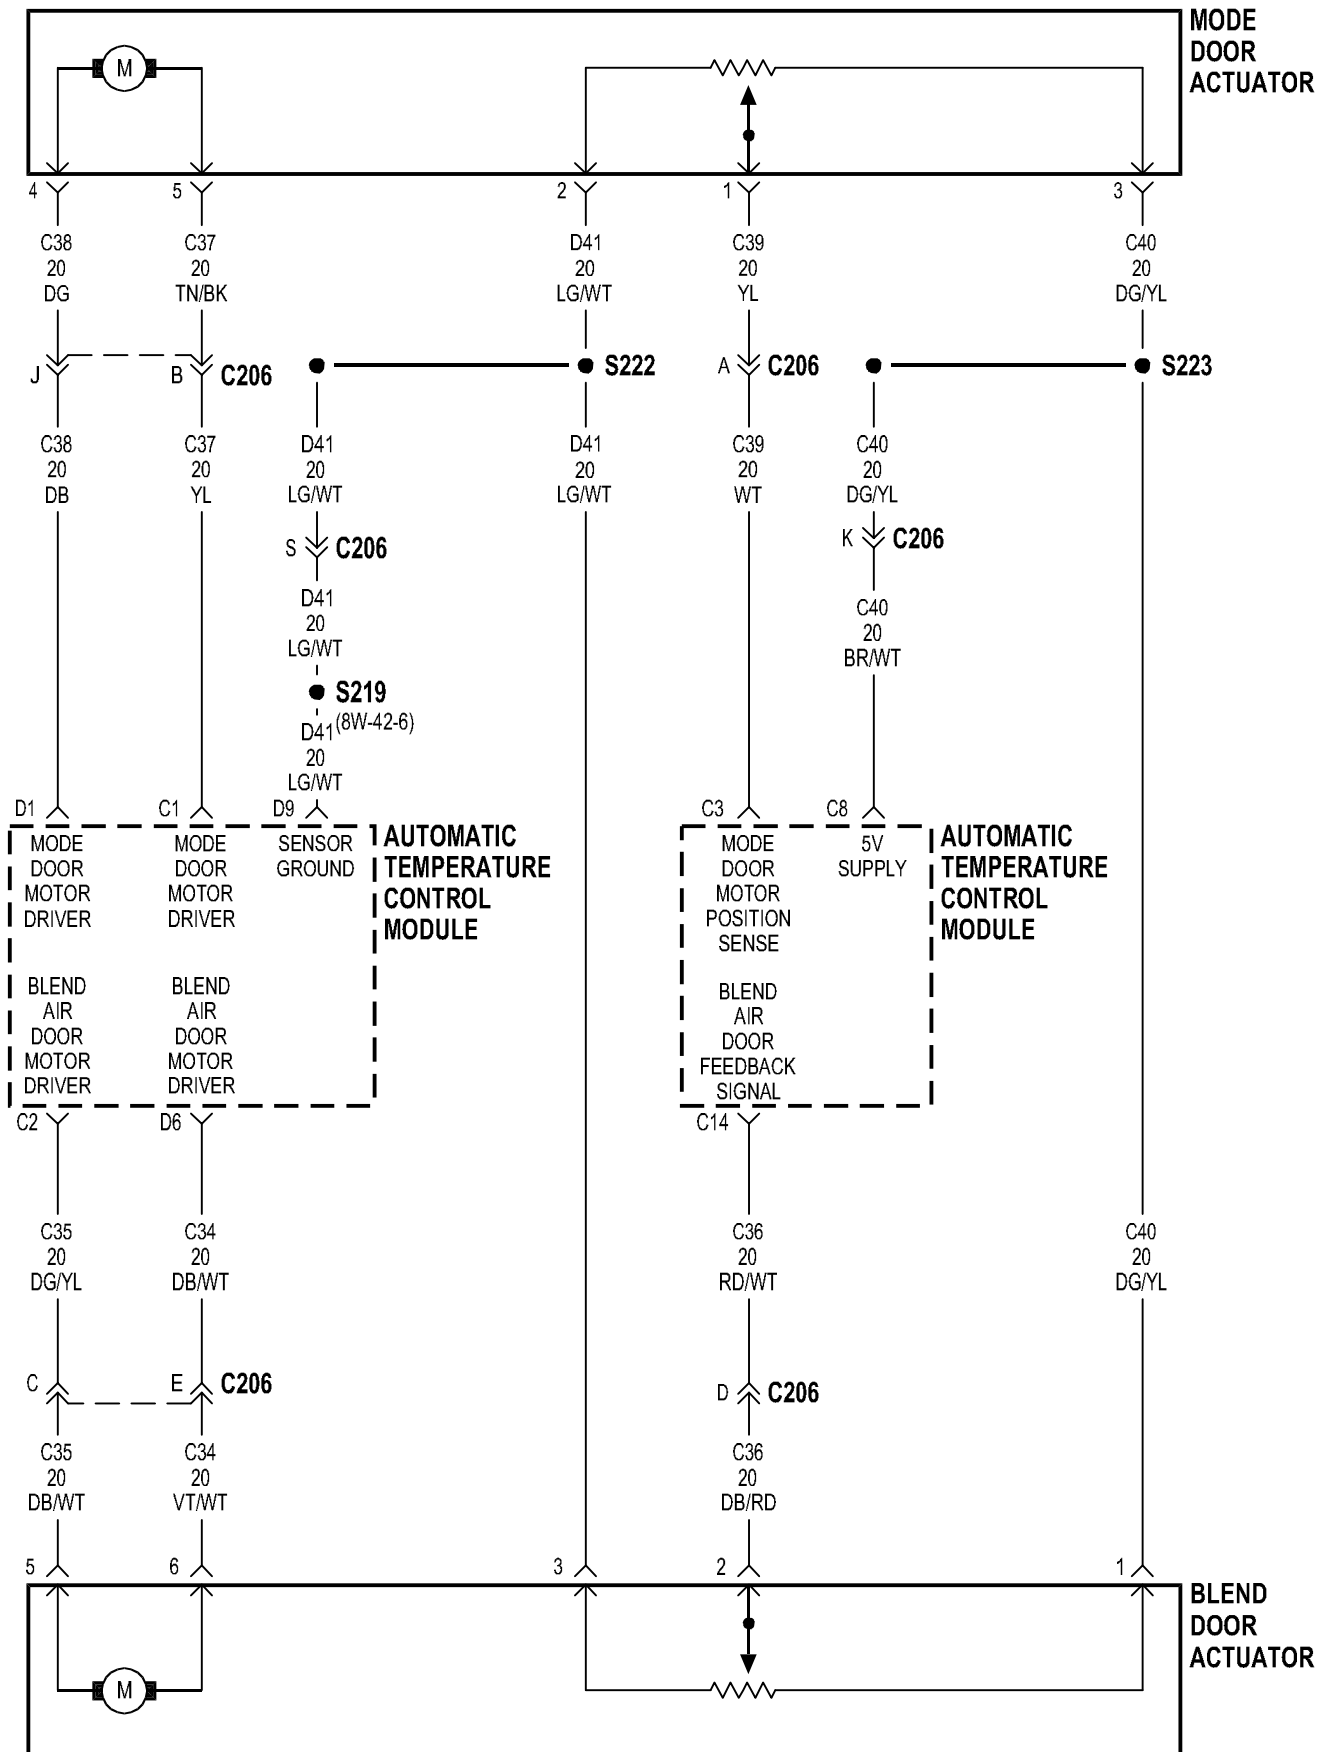


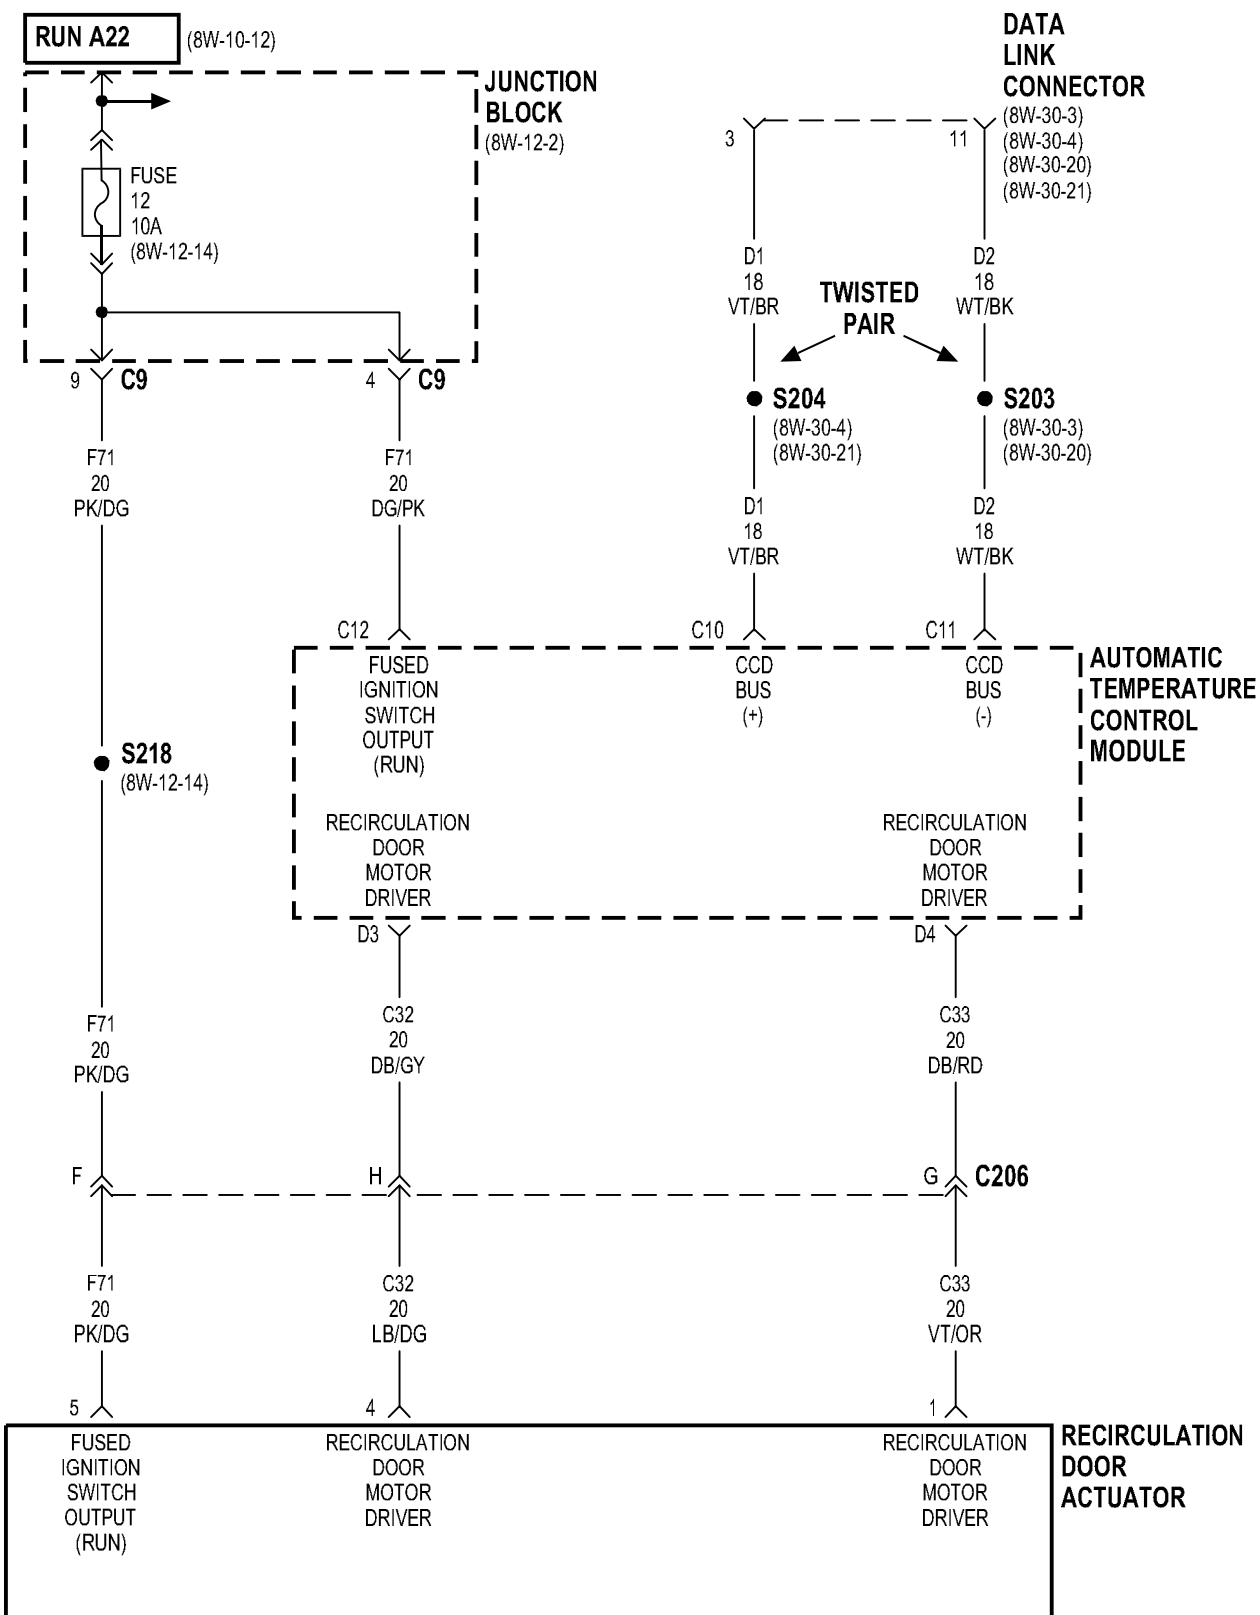

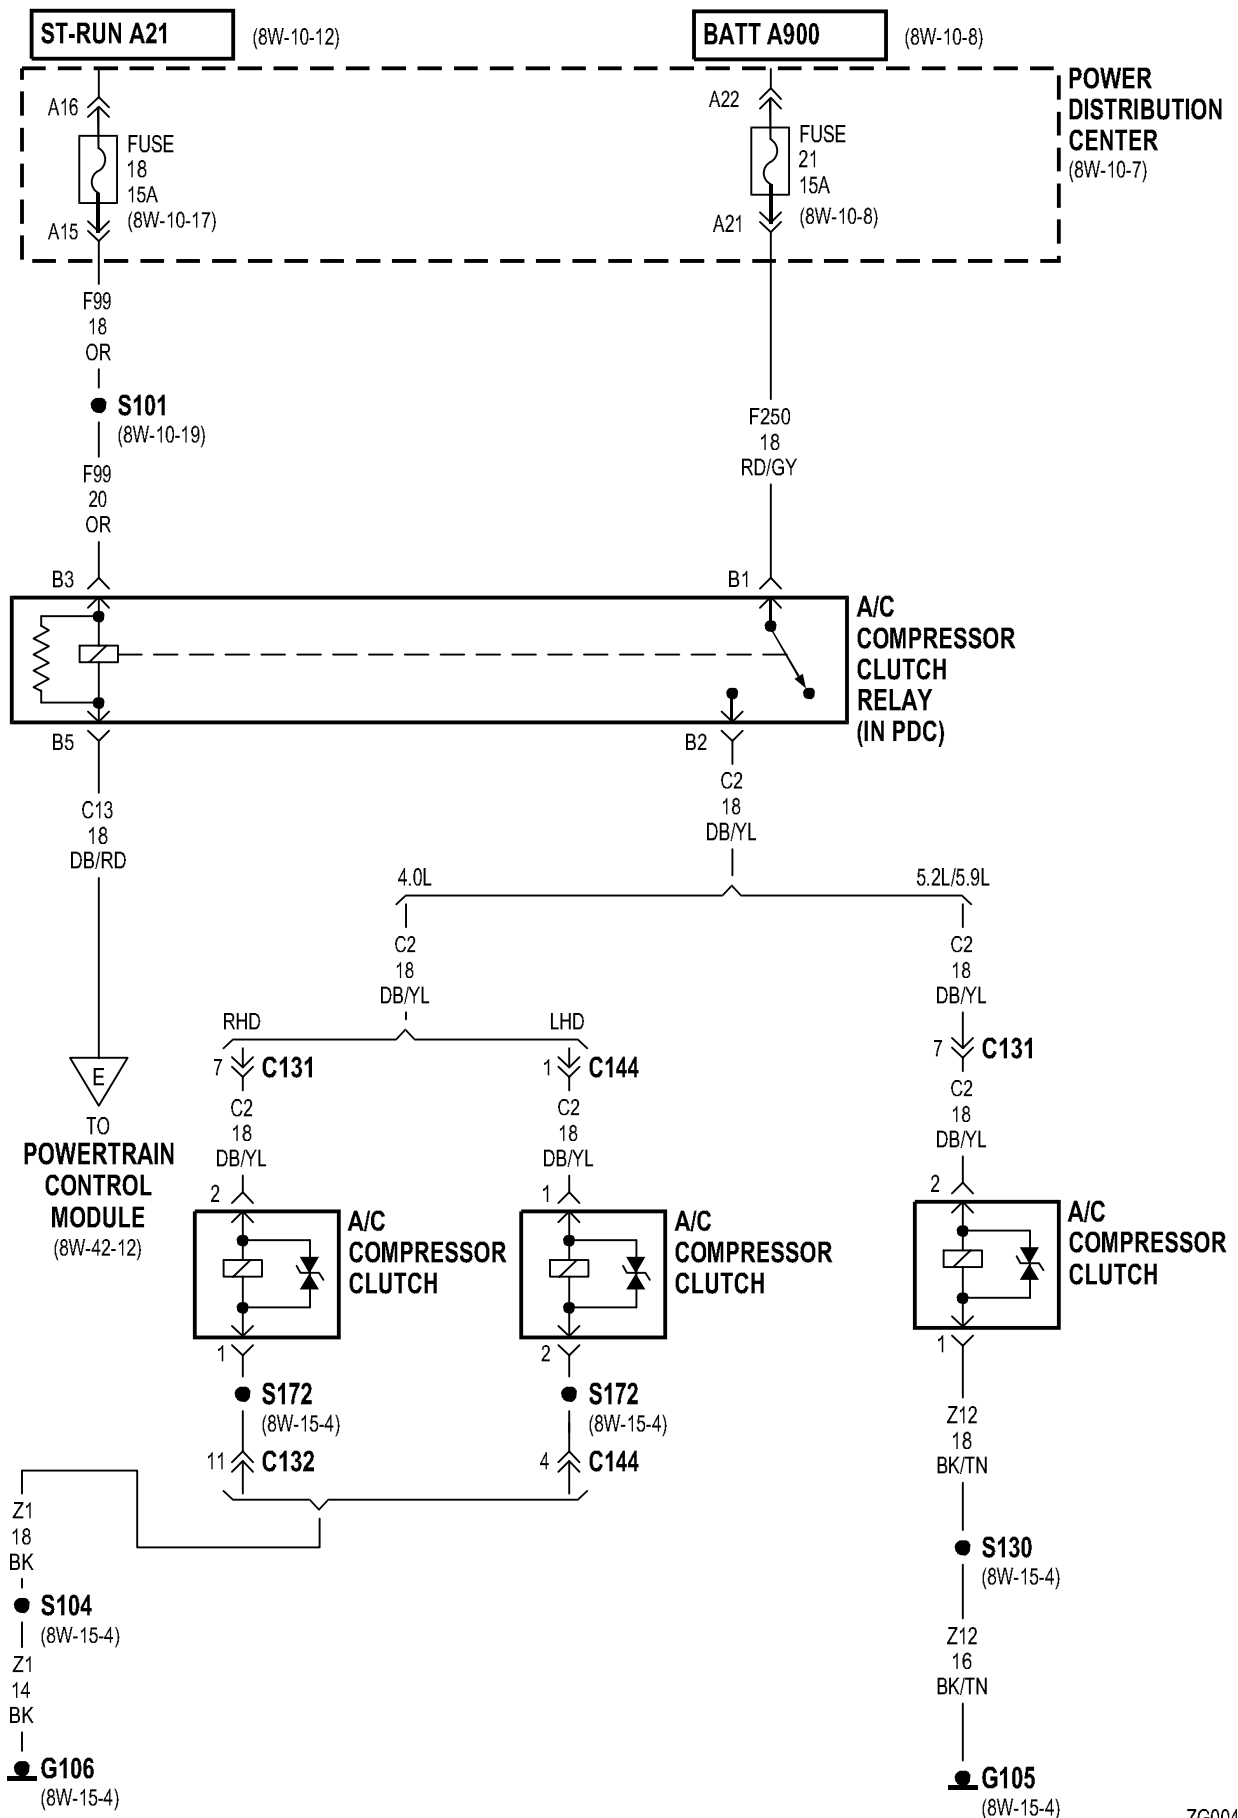

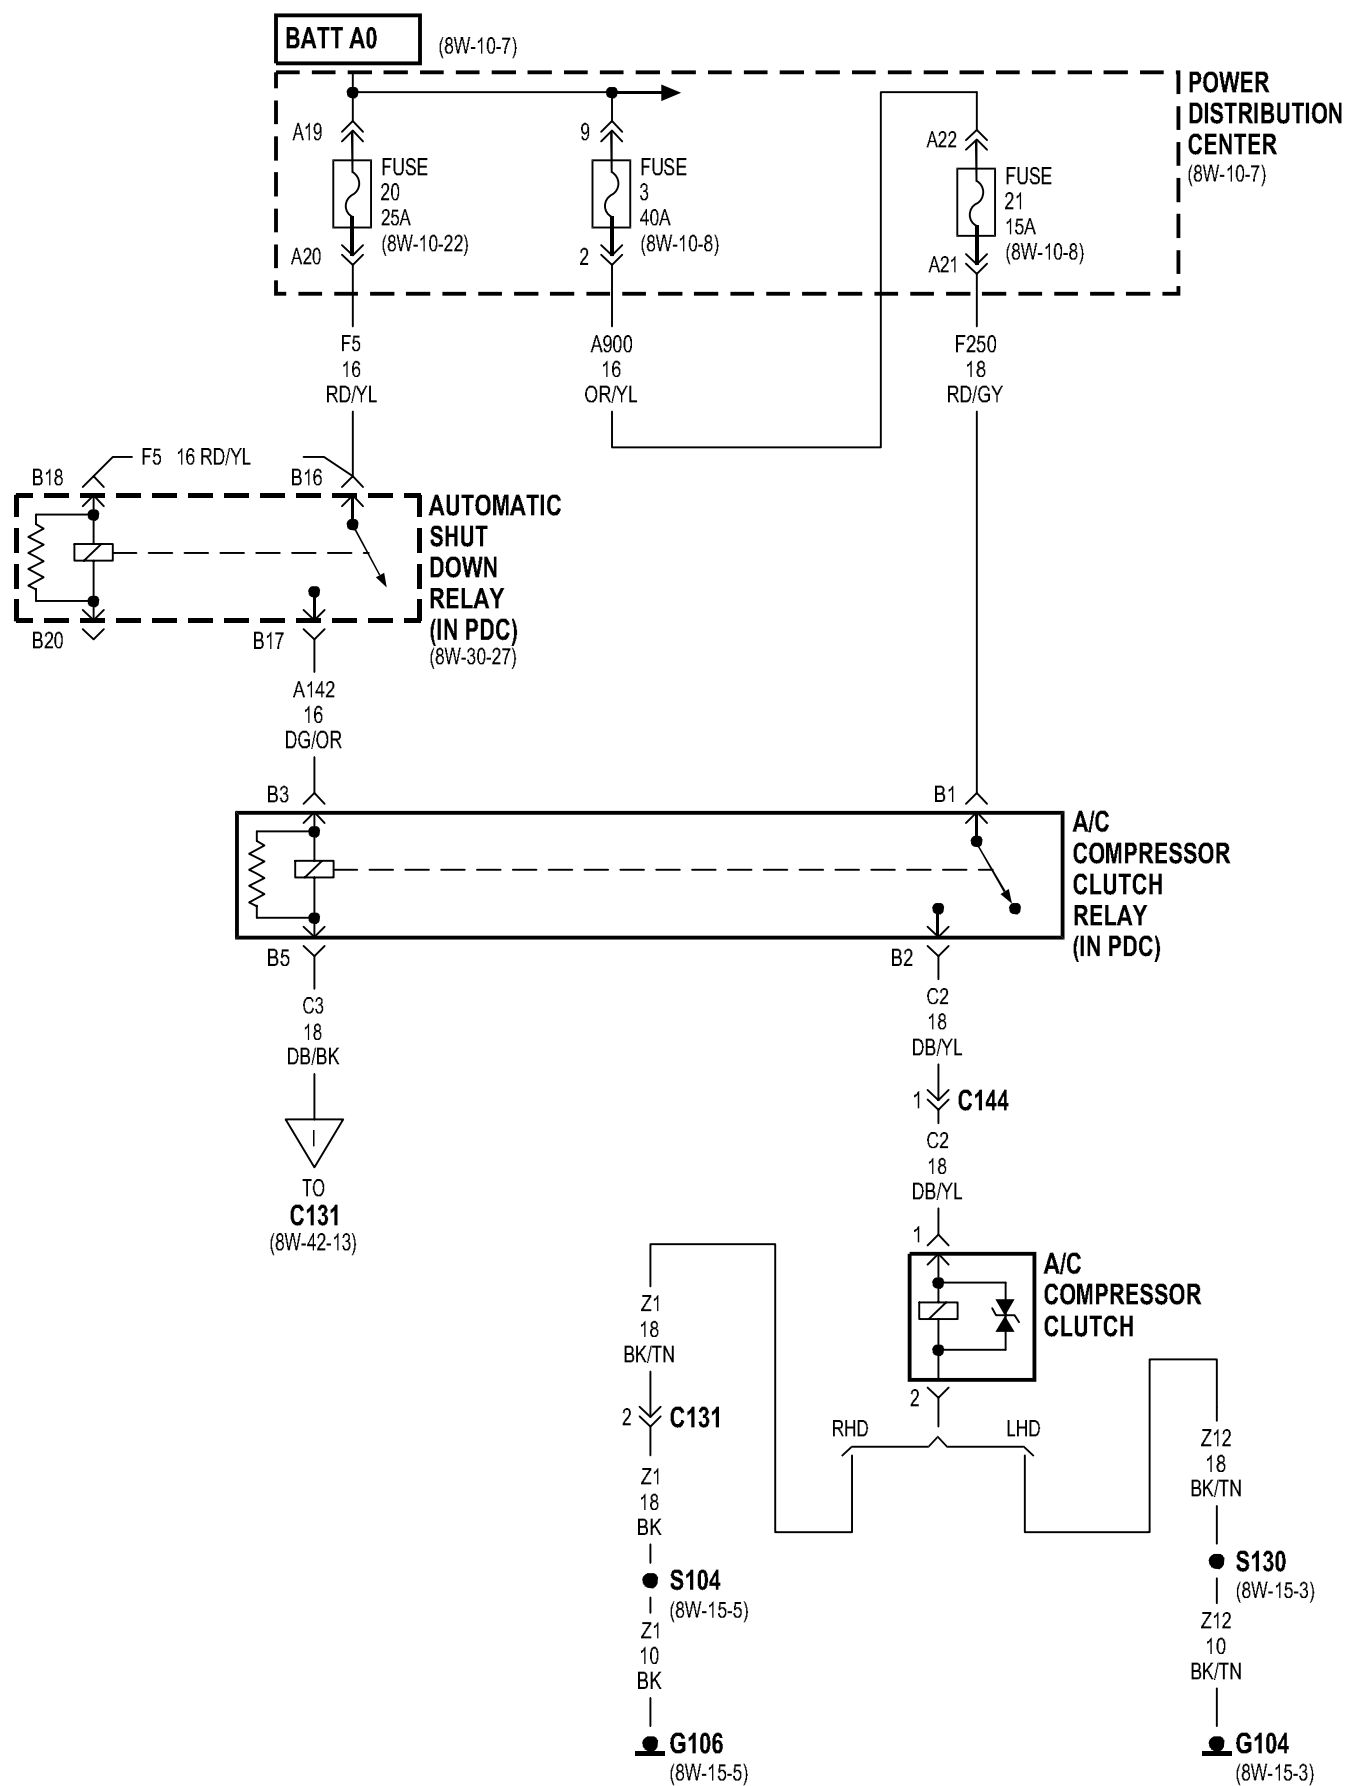

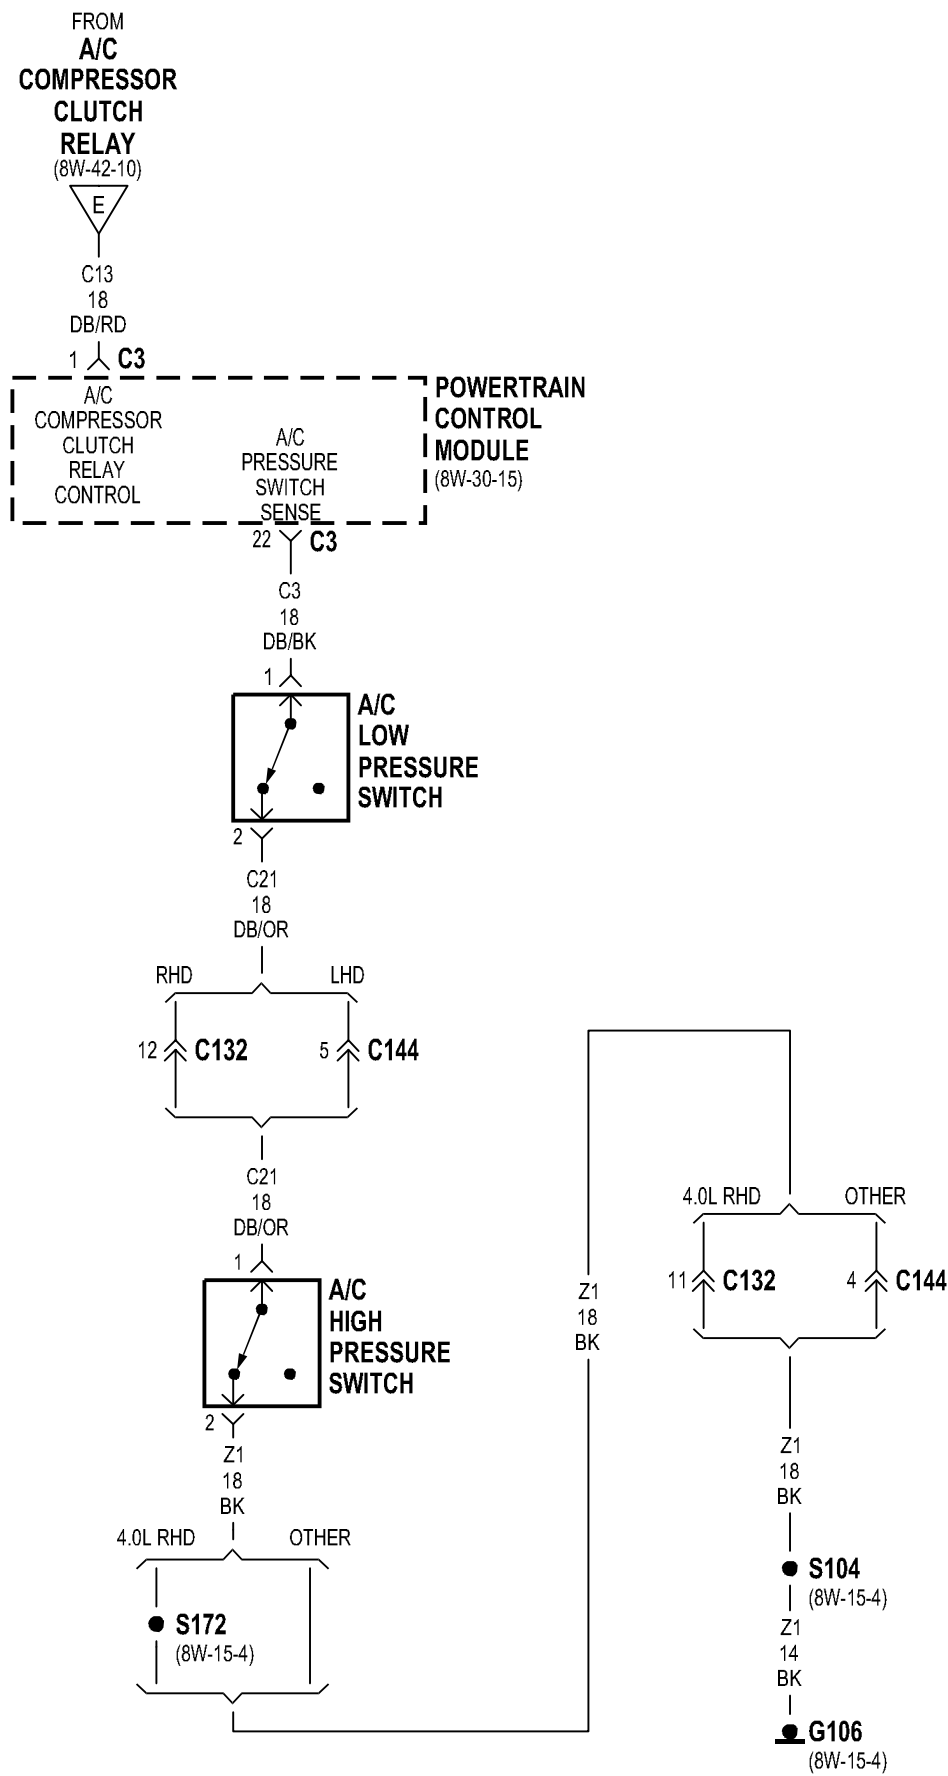

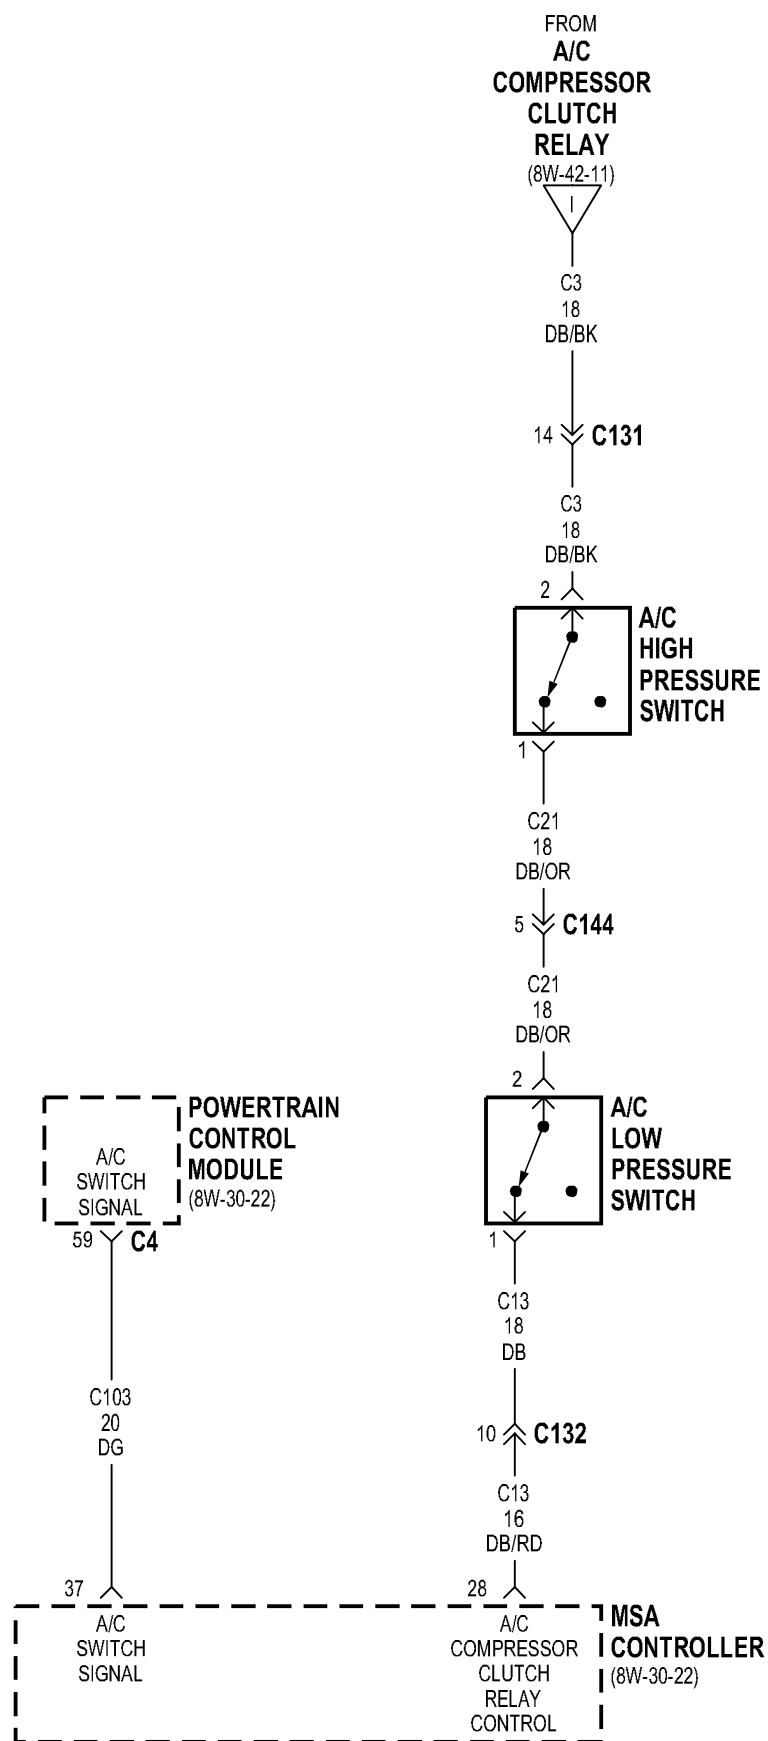

8W-43 AIRBAG SYSTEM

Component	Page	Component	Page
Airbag Control Module	8W-43-2, 3	Fuse 22 (JB)	8W-43-2
Airbag Warning Lamp	8W-43-3	G303	8W-43-2, 3
Clockspring	8W-43-2	Instrument Cluster	8W-43-3
Driver Airbag	8W-43-2	Junction Block	8W-43-2, 3
Fuse 4 (JB)	8W-43-2	Passenger Airbag	8W-43-2
Fuse 7 (JB)	8W-43-3		

