




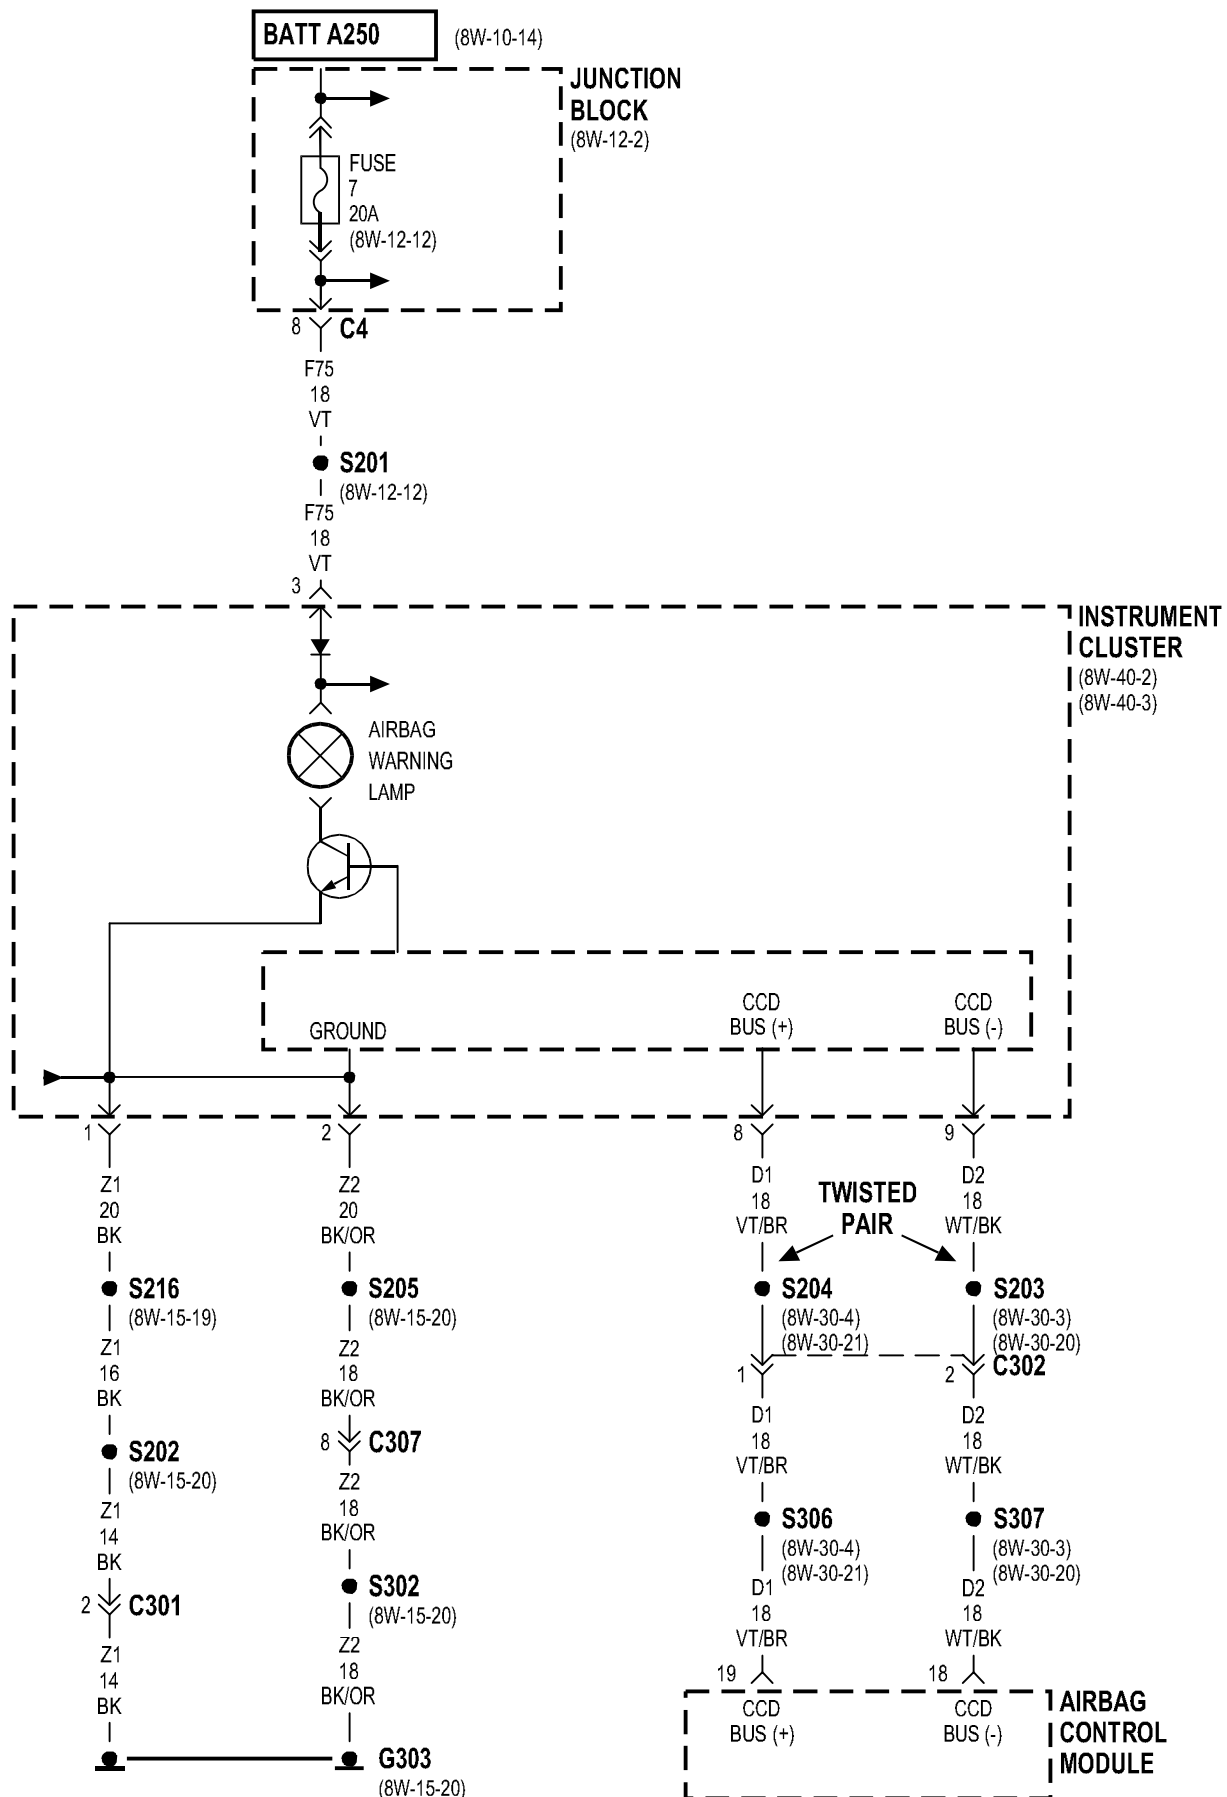



8W-44 INTERIOR LIGHTING


Component	Page	Component	Page
A/C Heater Control	8W-44-12	Glove Box Lamp	8W-44-2
Ash Receiver Lamp	8W-44-11, 12	Headlamp Switch	8W-44-11
Automatic Day/Night Mirror	8W-44-6	Instrument Cluster	8W-44-11
Automatic Temperature Control Module . .	8W-44-12	Junction Block	8W-44-2, 3, 4, 5, 6, 7, 8, 9, 10
Back-Up Lamp Switch	8W-44-7	Key-In Switch/Halo Lamp	8W-44-2
Body Control Module	8W-44-2, 5, 9, 11, 12, 13	Left Courtesy Lamp	8W-44-2, 9
Cargo Lamp	8W-44-5	Left Visor/Vanity Lamp	8W-44-5
Cigar Lighter Lamp	8W-44-12	Liftgate Ajar Switch	8W-44-13
Cigar Lighter/Power Outlet	8W-44-12	Liftglass Ajar Switch	8W-44-13
Circuit Breaker 2	8W-44-10	Mercury Switch	8W-44-2
Courtesy Lamp Relay	8W-44-2, 3, 4, 5, 9	Overhead Console	8W-44-4
Dome/Reading Lamp	8W-44-3	Park/Neutral Position Switch	8W-44-8
Driver Door Courtesy Lamp	8W-44-10	Passenger Door Courtesy Lamp	8W-44-10
Driver Door Module	8W-44-10	Passenger Door Module	8W-44-10
Driver Front Door Ajar Switch	8W-44-13	Passenger Front Door Ajar Switch	8W-44-13
Driver Outside Power Mirror	8W-44-6	Passenger Rear Door Ajar Switch	8W-44-13
Driver Rear Door Ajar Switch	8W-44-13	Powertrain Control Module	8W-44-8
Floor Console Lamps	8W-44-11	Radio	8W-44-9
Fuse 6 (JB)	8W-44-6	Right Courtesy Lamp	8W-44-2, 9
Fuse 16 (JB)	8W-44-2, 3, 4, 5, 9	Right Visor/Vanity Lamp	8W-44-5
G107	8W-44-2	Switch Pod	8W-44-11
G109	8W-44-2	Underhood Lamp	8W-44-2
G300	8W-44-13	Universal Garage Door Opener	8W-44-5
G301	8W-44-10	Vehicle Information Center/ Graphic Display Module	8W-44-12
G302	8W-44-10, 11		
G303	8W-44-2, 7, 8, 9, 11, 12		

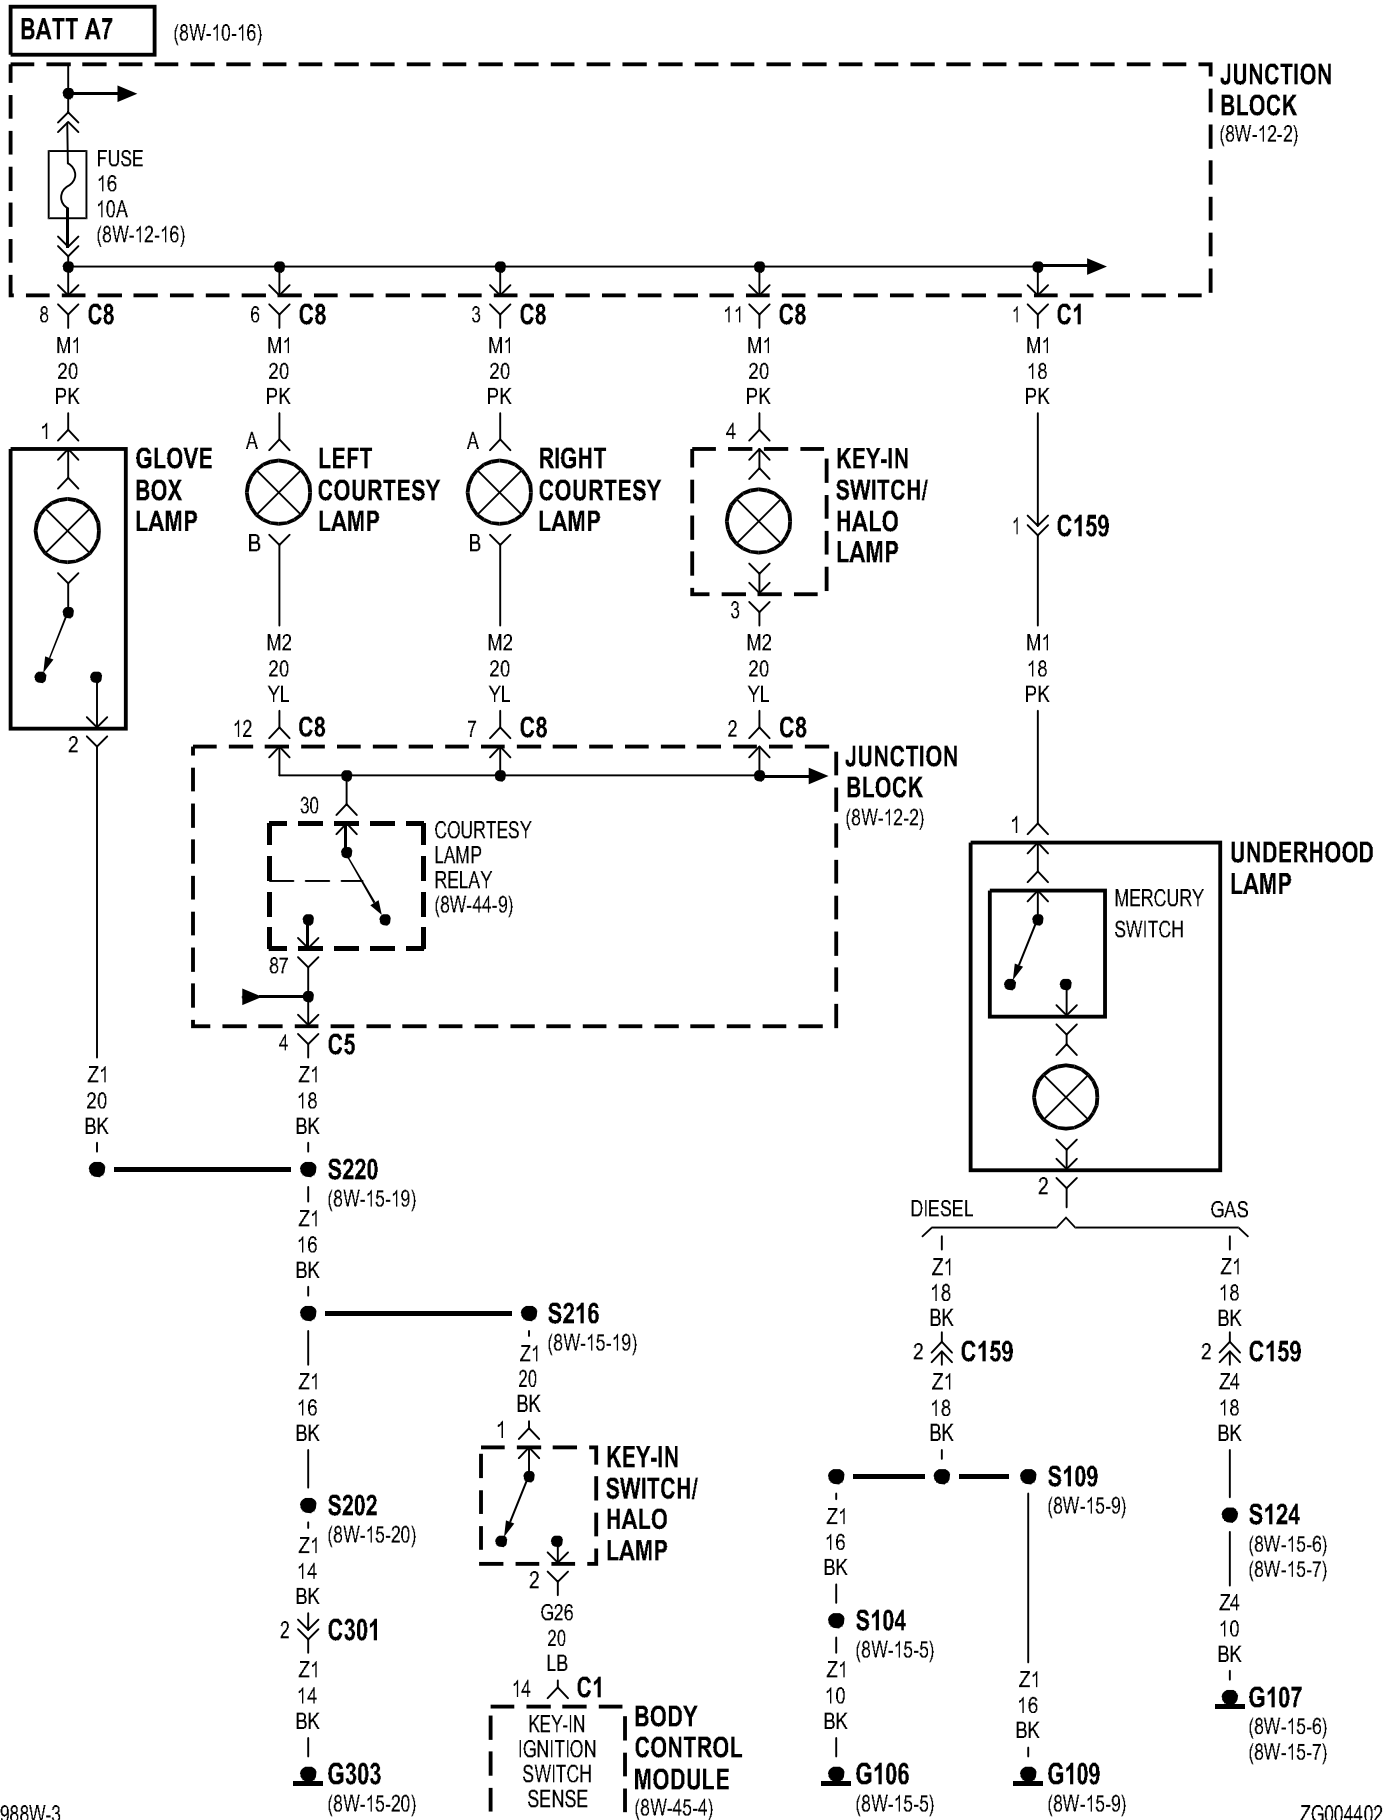


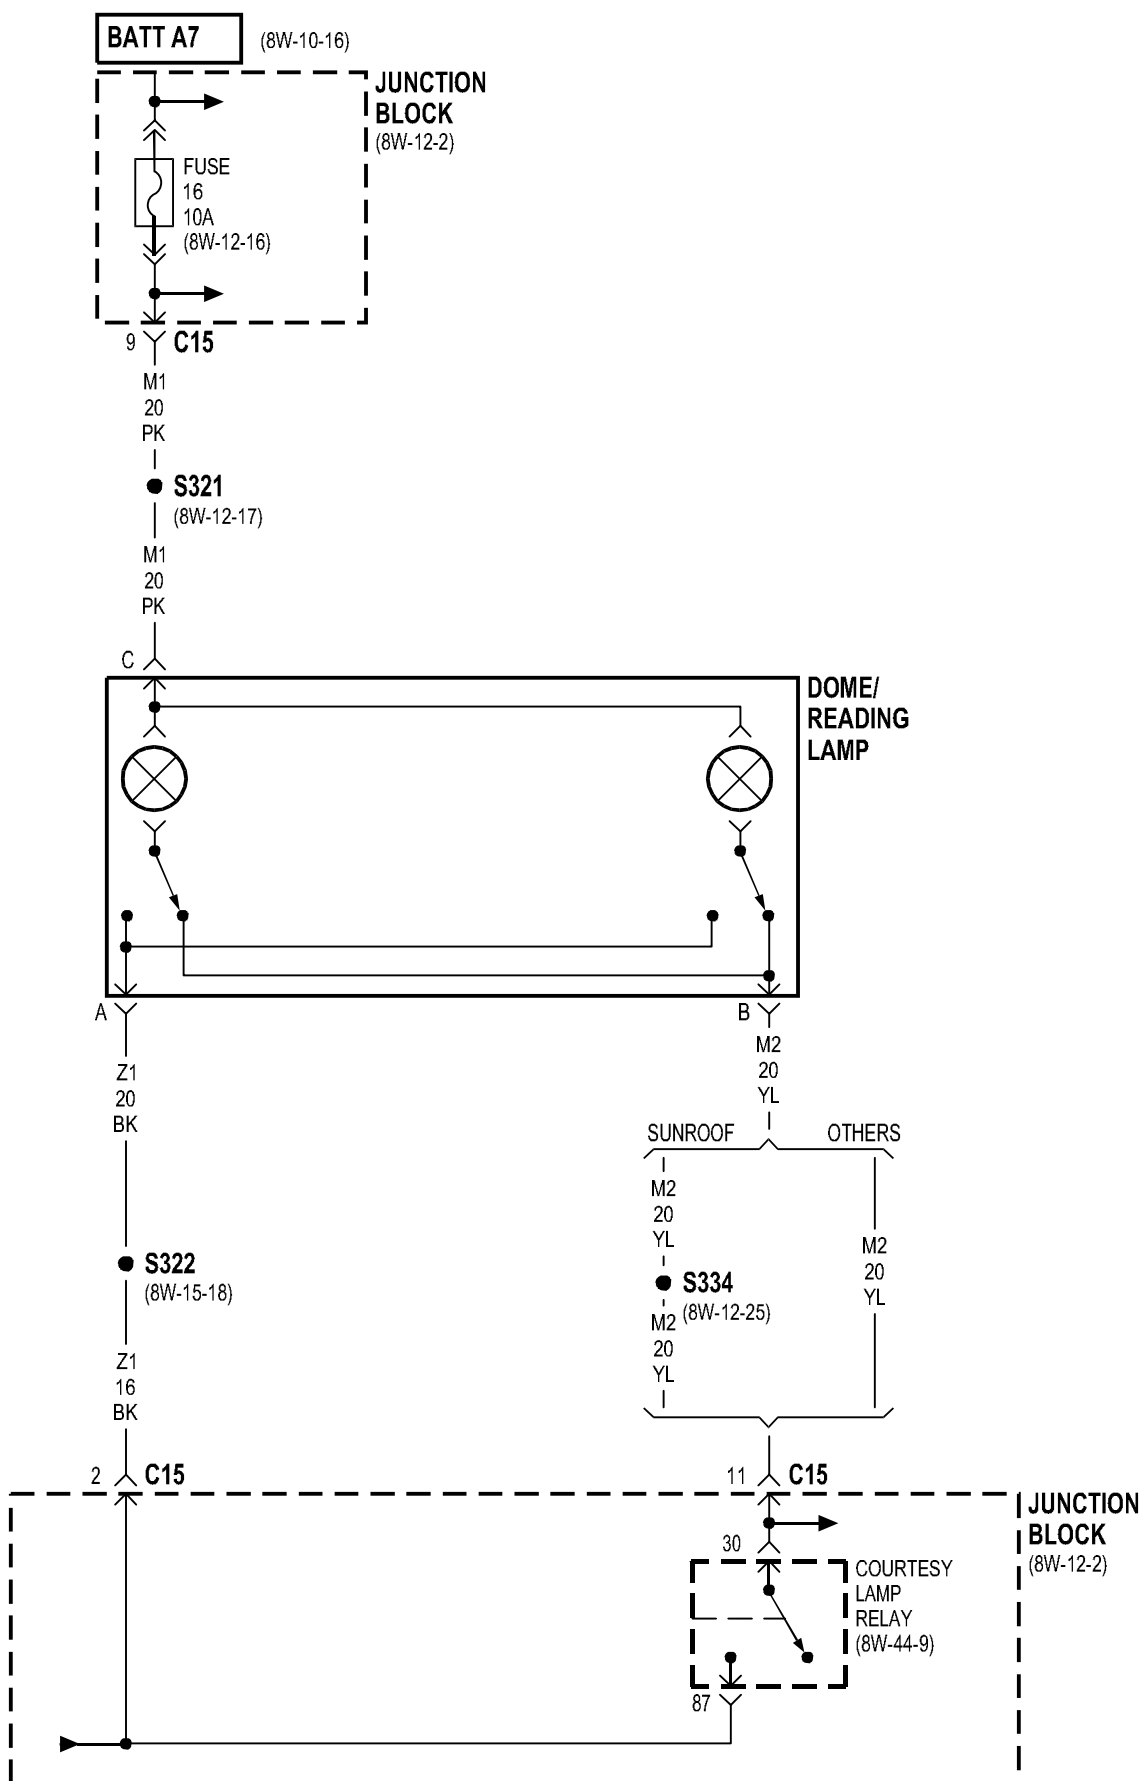


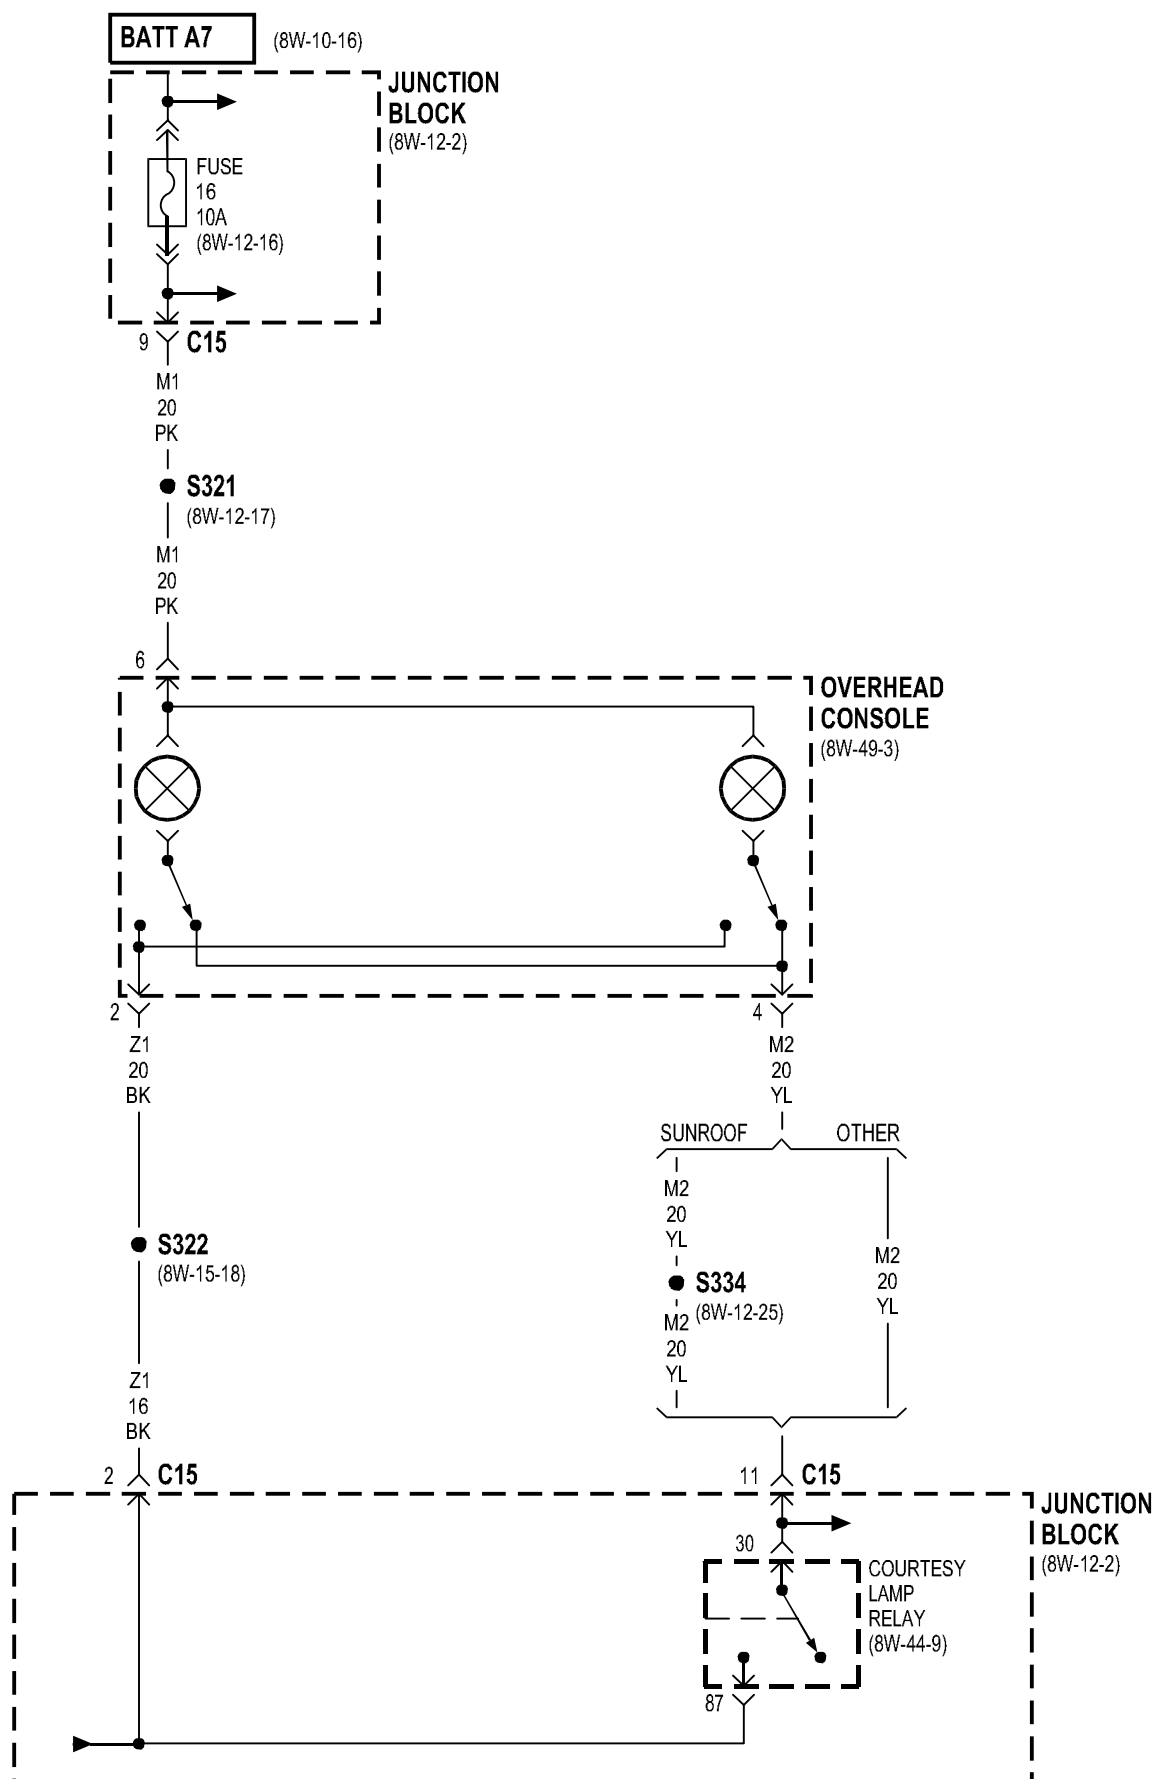

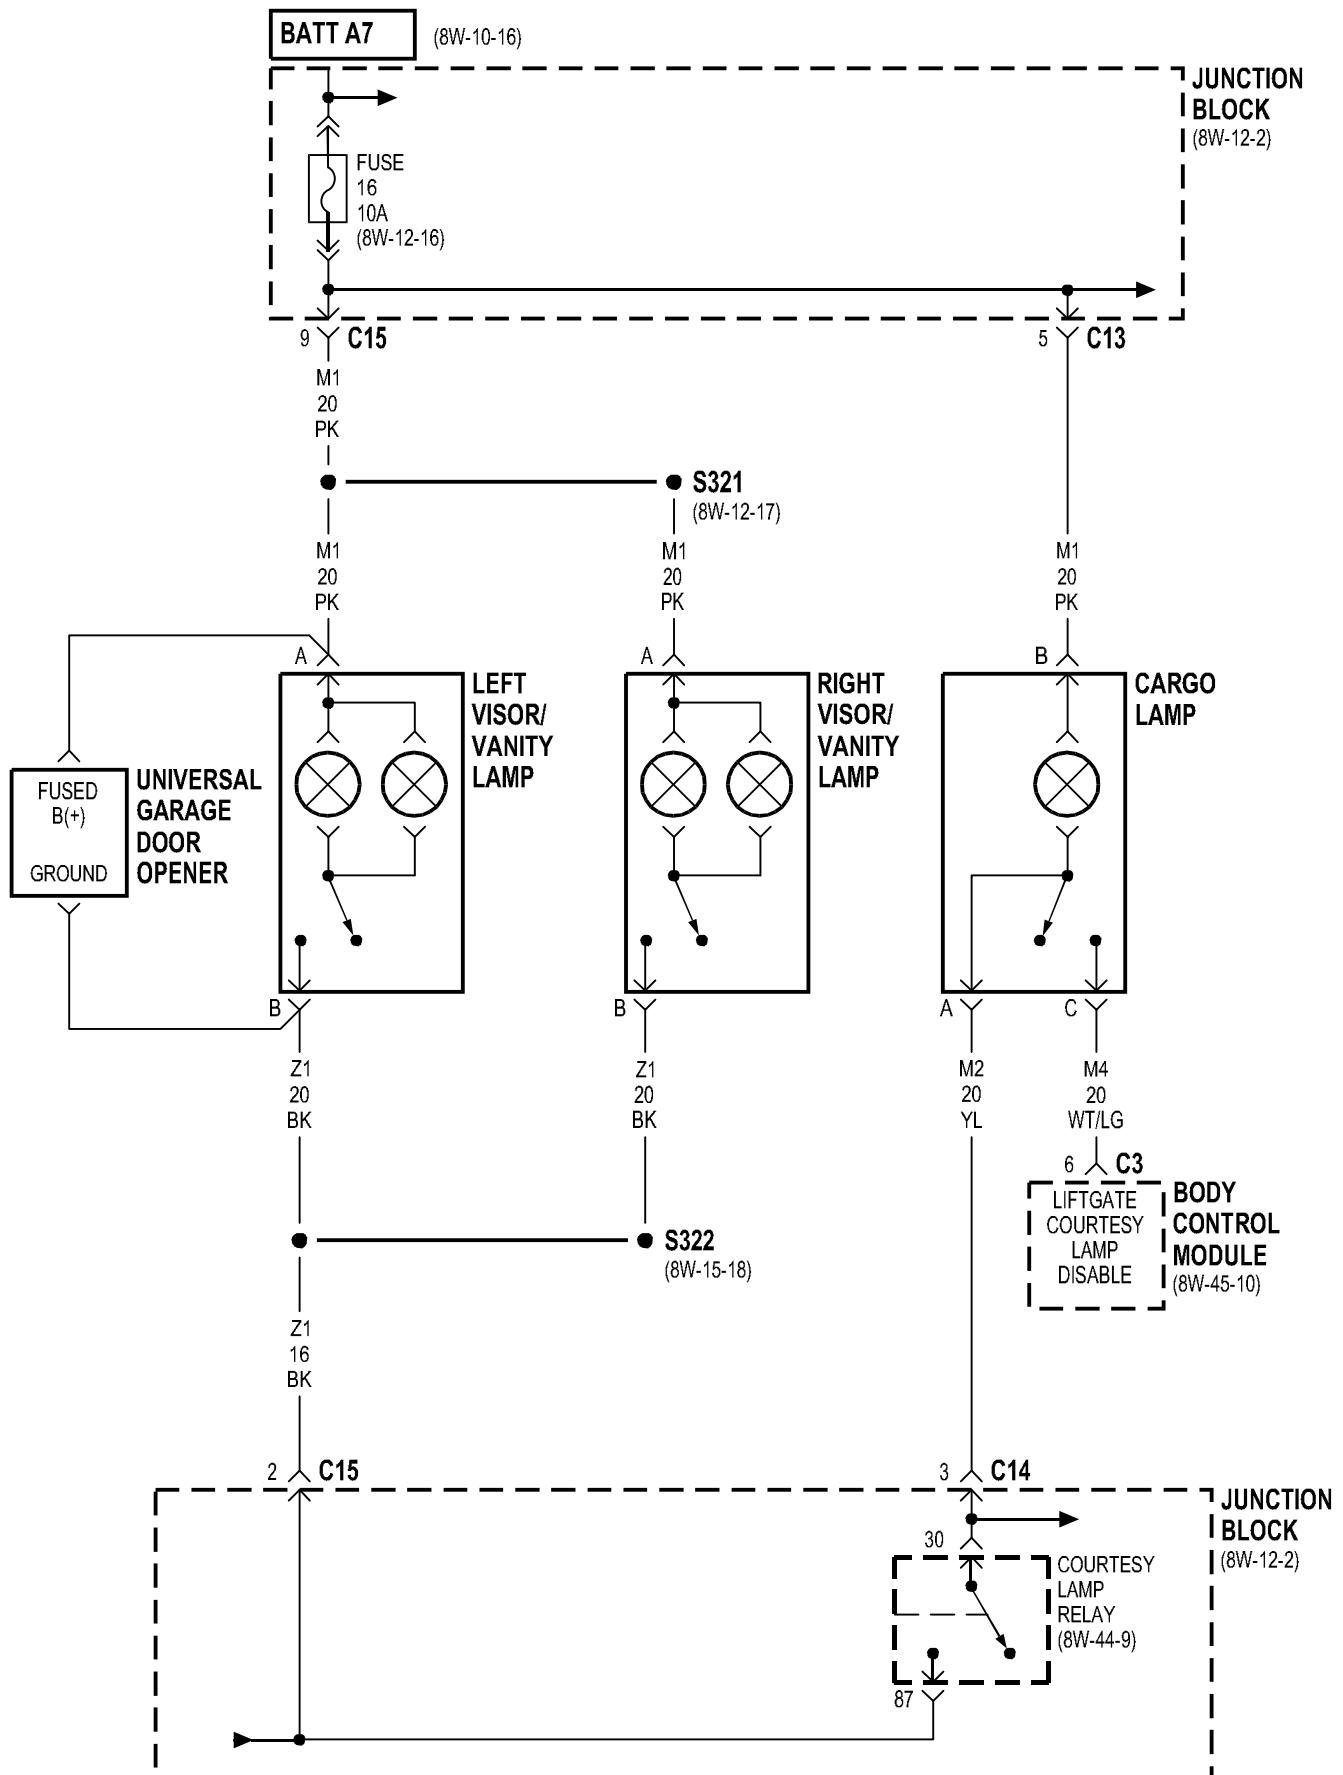


 


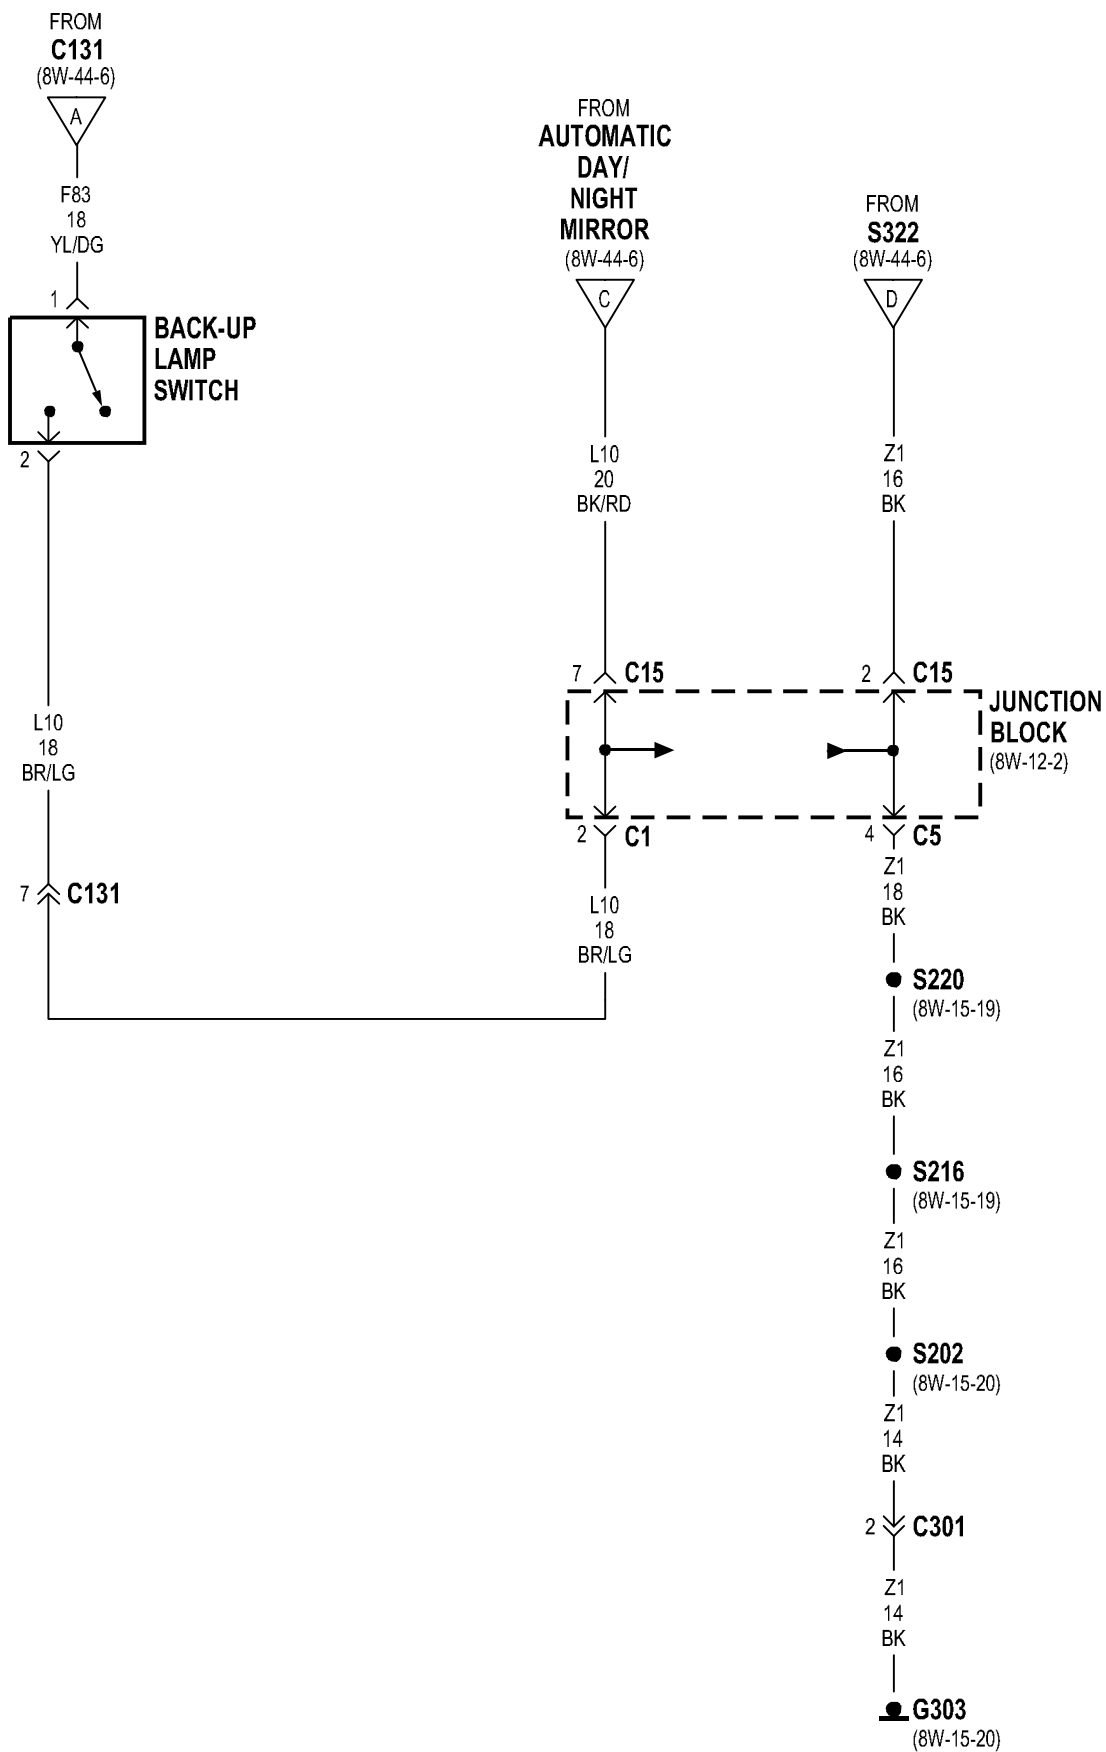


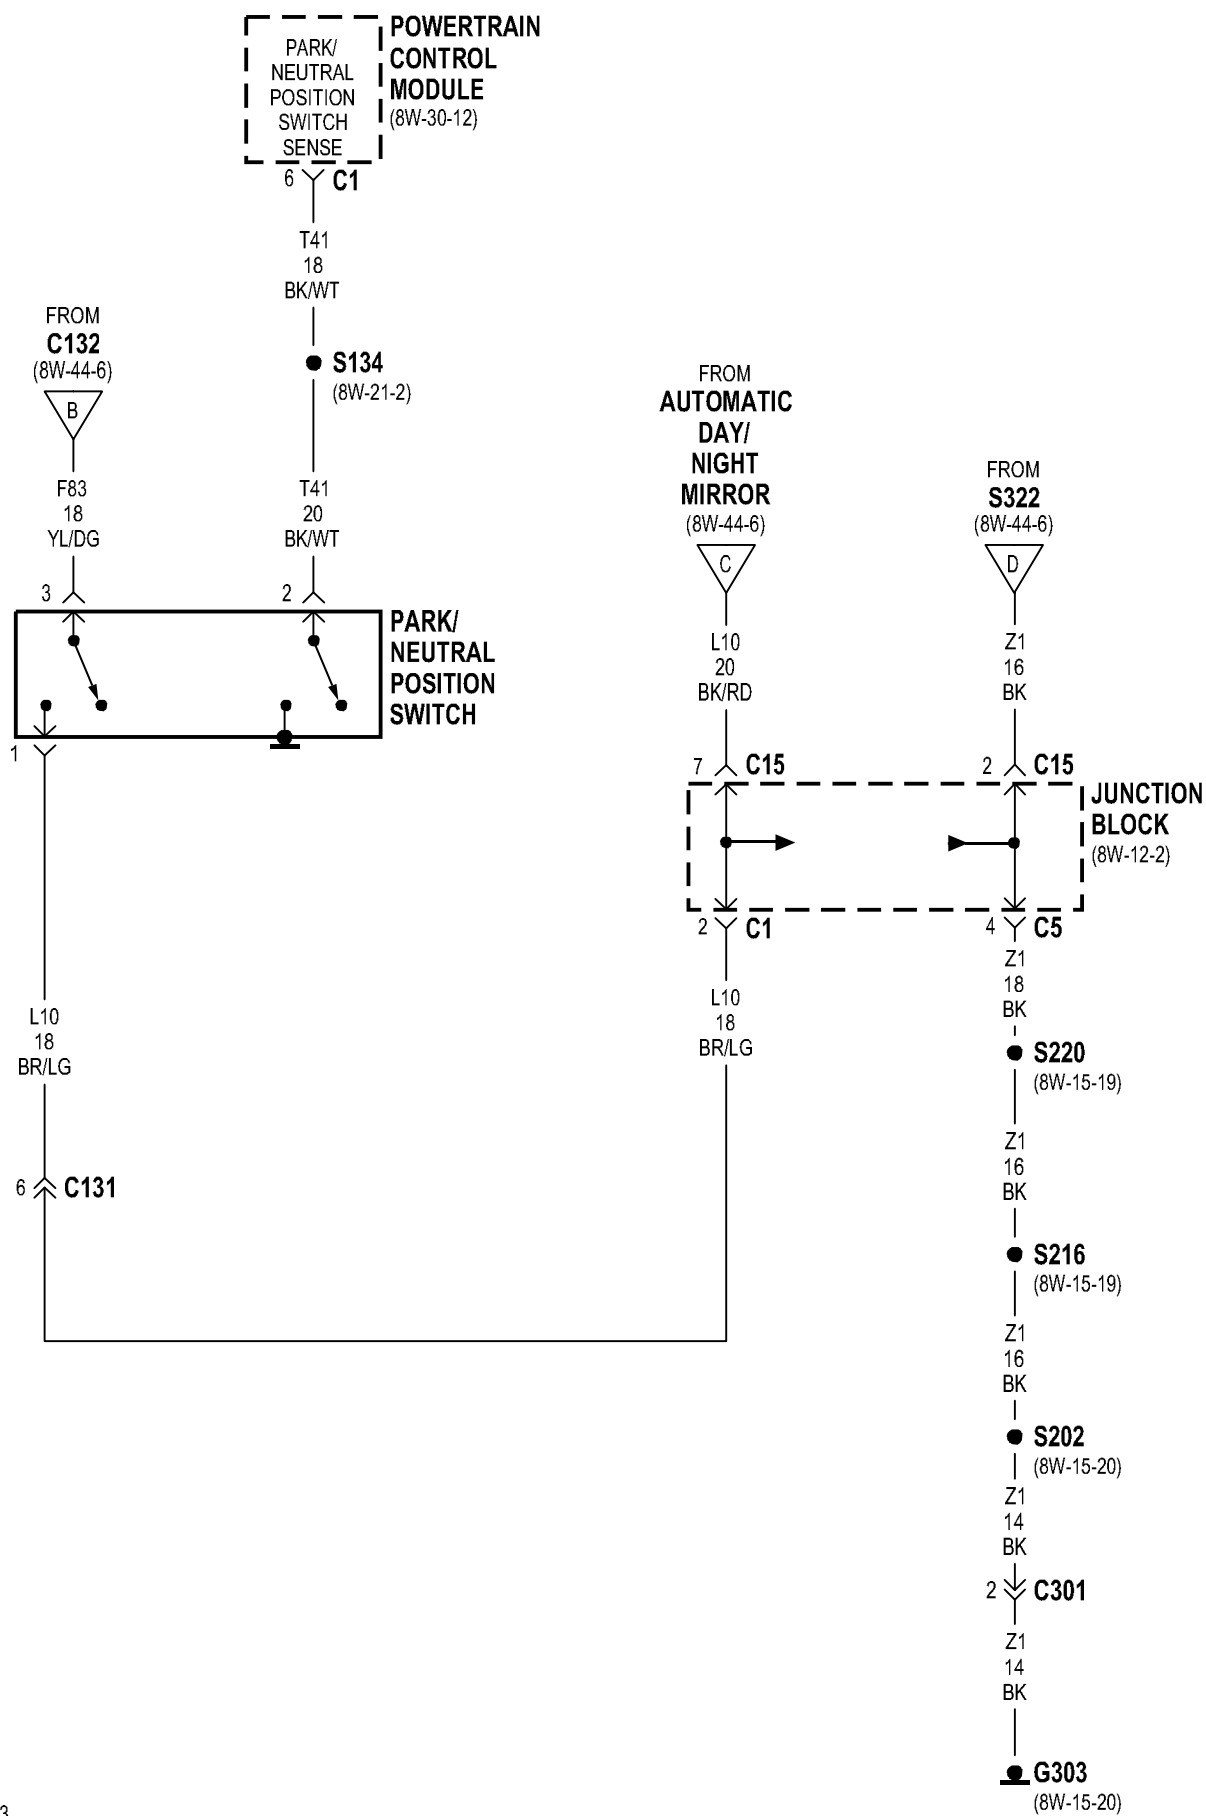



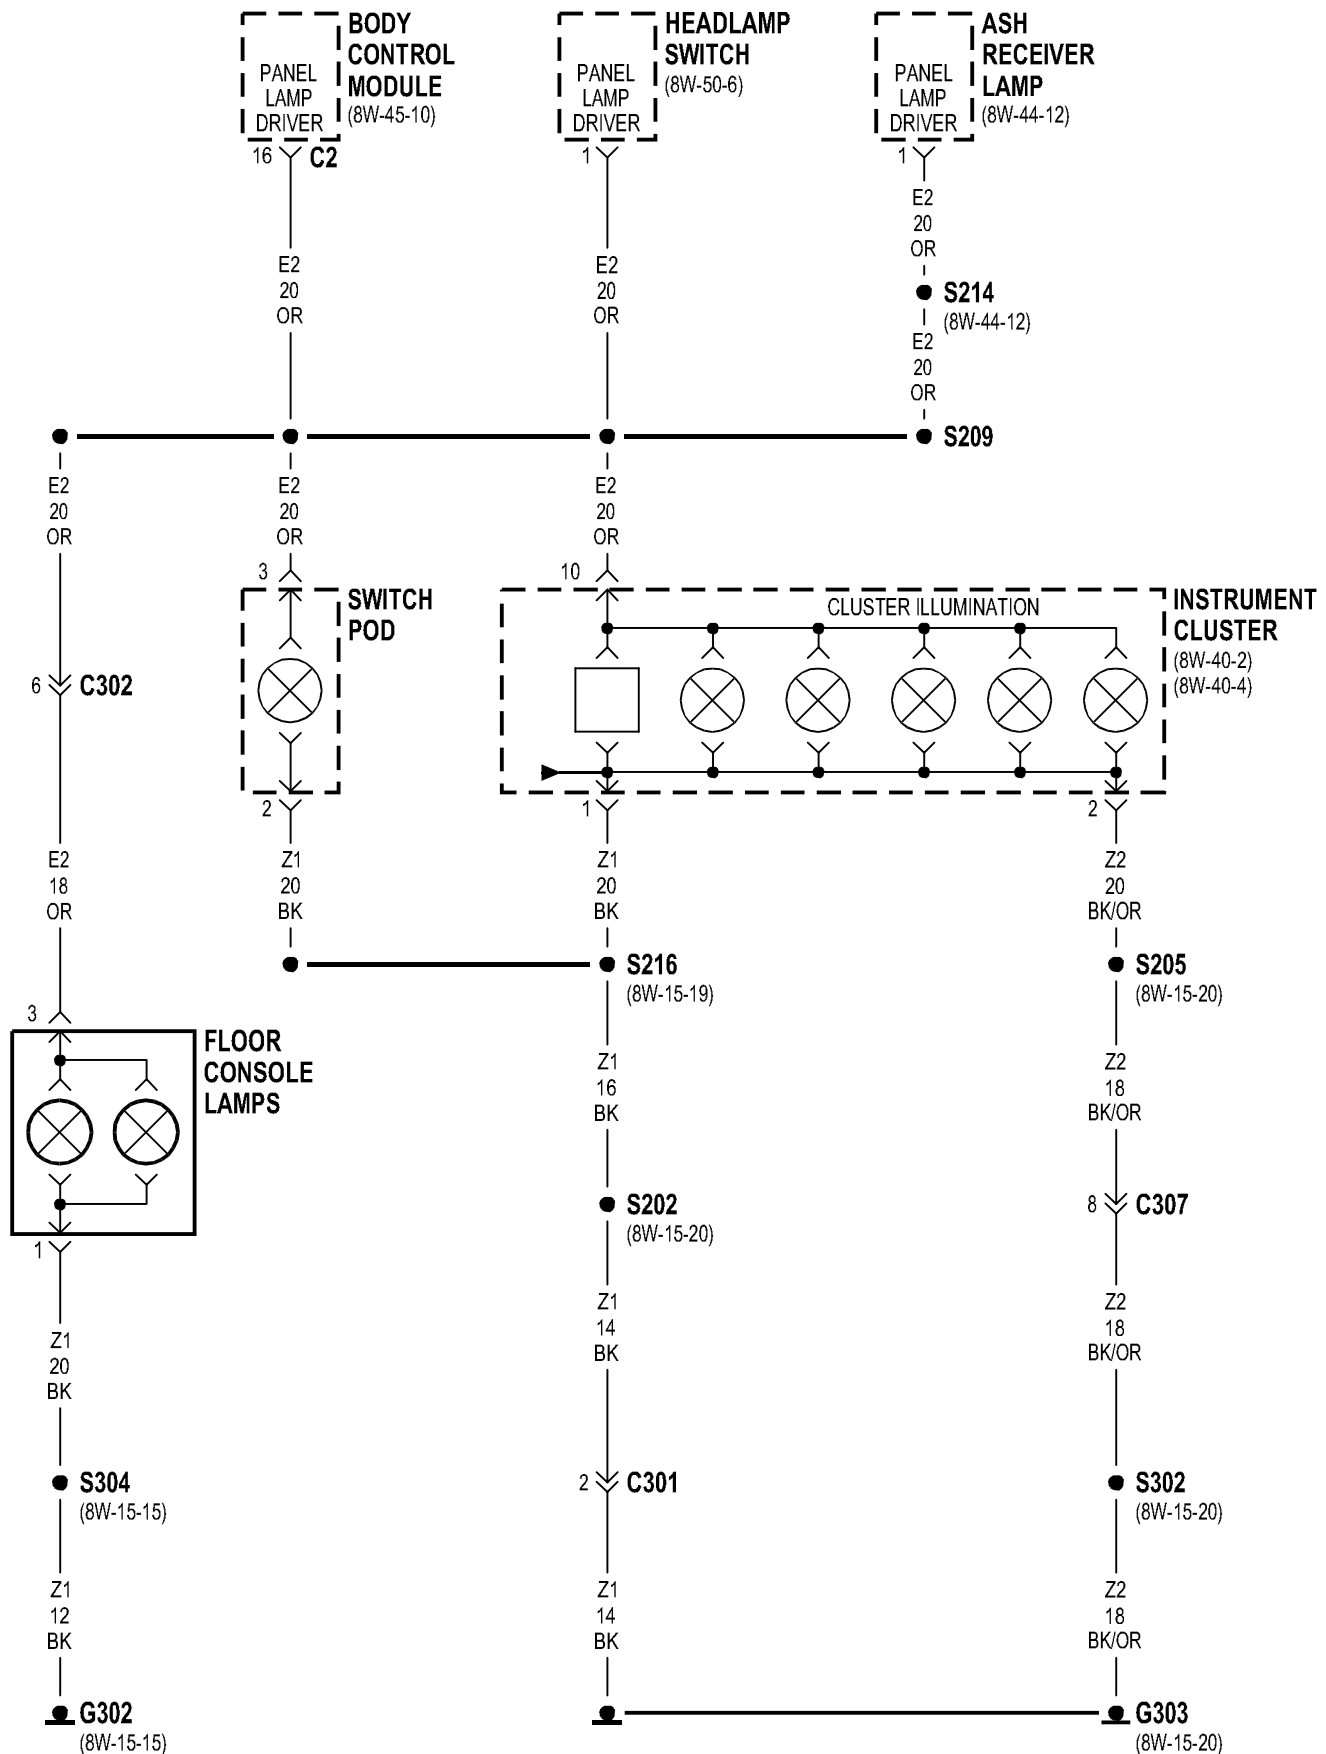


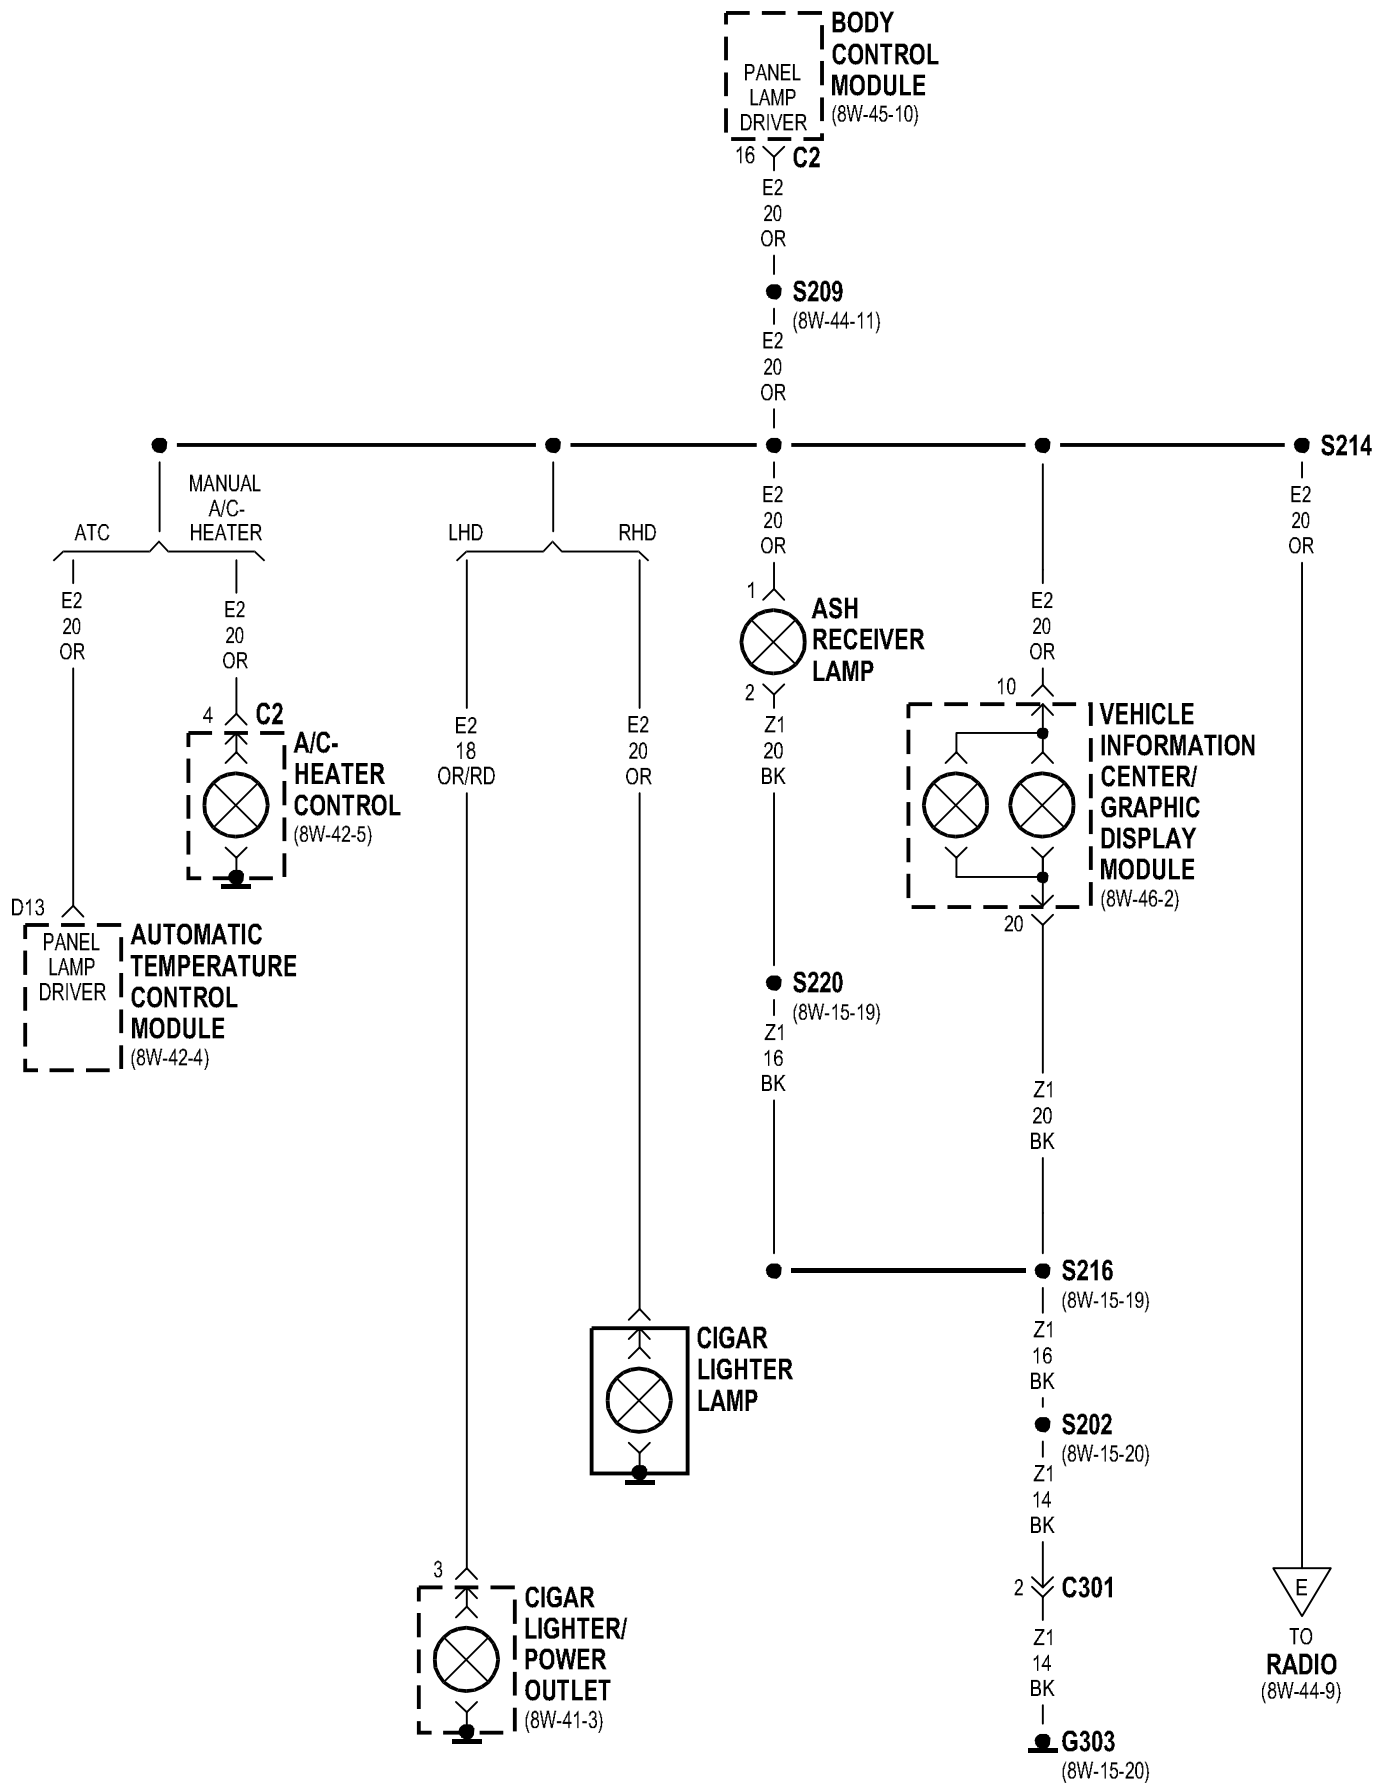


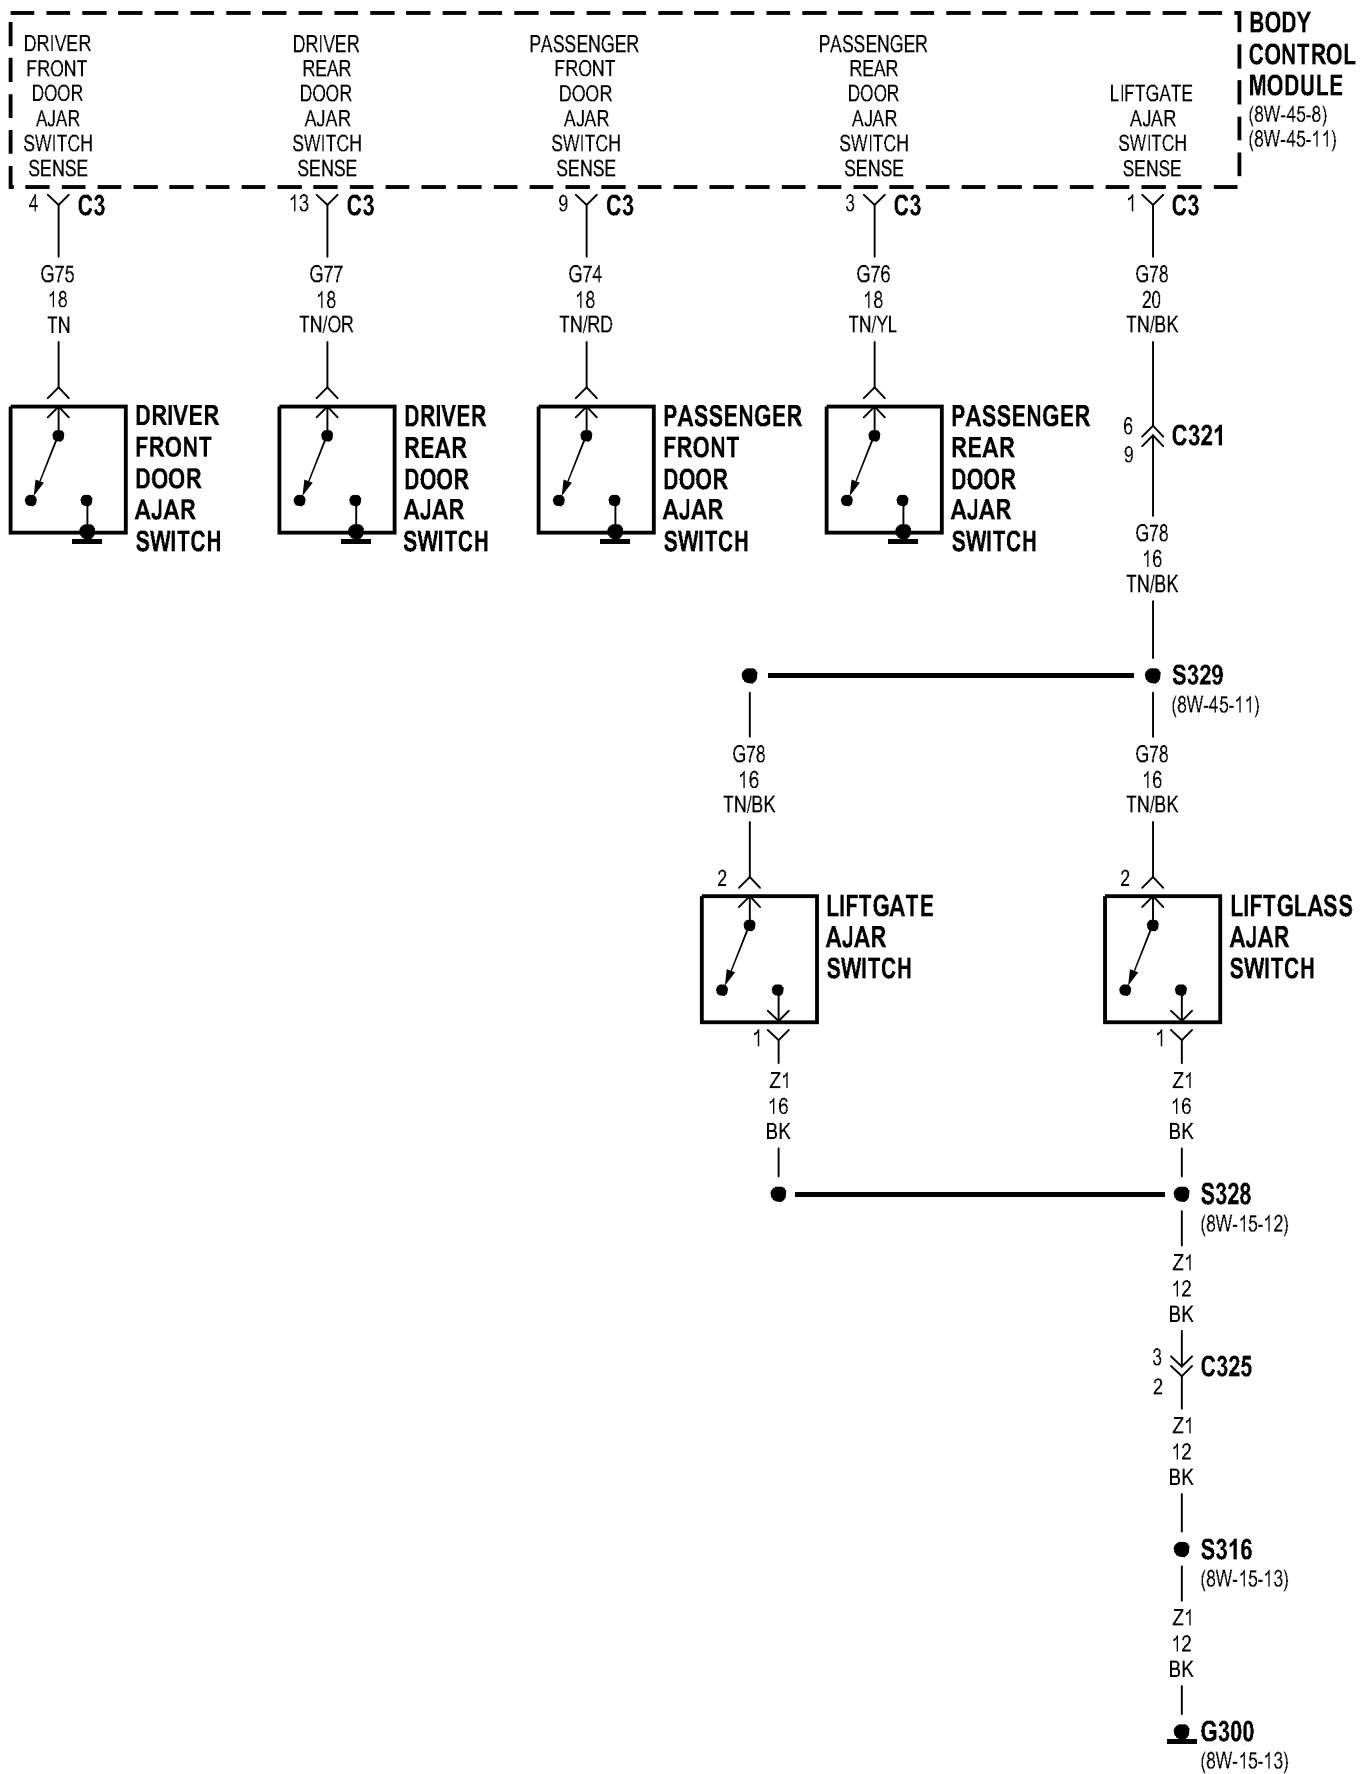


8W-45 BODY CONTROL MODULE


Component	Page	Component	Page
A/C Heater Control	8W-45-9	G300	8W-45-11
Ambient Temperature Sensor	8W-45-9	G302	8W-45-4
Ash Receiver Lamp	8W-45-10	G303	8W-45-2, 6
Automatic Headlamp Light Sensor/ Vtss Led	8W-45-4	Headlamp Dimmer Switch	8W-45-5
Automatic Headlamp Relay	8W-45-5	Headlamp Switch	8W-45-6
Automatic Temperature Control Module	8W-45-9	Hood Switch	8W-45-10
Body Control Module . .8W-45-2, 3, 4, 5, 6, 7, 8, 9, 10		Horn Relay	8W-45-3
Brake Pressure Switch	8W-45-9	Instrument Cluster	8W-45-10
Cargo Lamp	8W-45-10	Intermittent Wiper Relay	8W-45-7
Circuit Breaker 1	8W-45-7	Intermittent Wiper Switch	8W-45-7
Clockspring	8W-45-7	Junction Block.	8W-45-2, 3, 4, 5, 7
Courtesy Lamp Relay	8W-45-3	Key-In Switch/Halo Lamp.	8W-45-4
Data Link Connector	8W-45-2	Liftgate Ajar Switch	8W-45-11
Daytime Running Lamp Module	8W-45-5	Liftgate Cylinder Lock Switch	8W-45-8
Driver Front Cylinder Lock Switch.	8W-45-8	Liftglass Ajar Switch.	8W-45-11
Driver Front Door Ajar Switch	8W-45-8	Park Brake Switch	8W-45-9
Driver Rear Door Ajar Switch.	8W-45-8	Park Lamp Relay	8W-45-4
Floor Console Lamps.	8W-45-10	Passenger Front Cylinder Lock Switch.	8W-45-8
Fog Lamp Relay	8W-45-5	Passenger Front Door Ajar Switch	8W-45-8
Fog Lamp Switch	8W-45-6	Passenger Rear Door Ajar Switch.	8W-45-8
Fuse 3 (JB)	8W-45-2	Power Distribution Center	8W-45-2, 3
Fuse 3 (PDC)	8W-45-3	Rear Window Defogger Relay	8W-45-3
Fuse 6 (PDC)	8W-45-3	Rear Window Defogger Switch	8W-45-9
Fuse 7 (JB)	8W-45-4	Rear Wiper Module	8W-45-11
Fuse 17 (JB)	8W-45-4	Seat Belt Switch.	8W-45-4
Fuse 18 (PDC)	8W-45-2	Switch Pod	8W-45-10

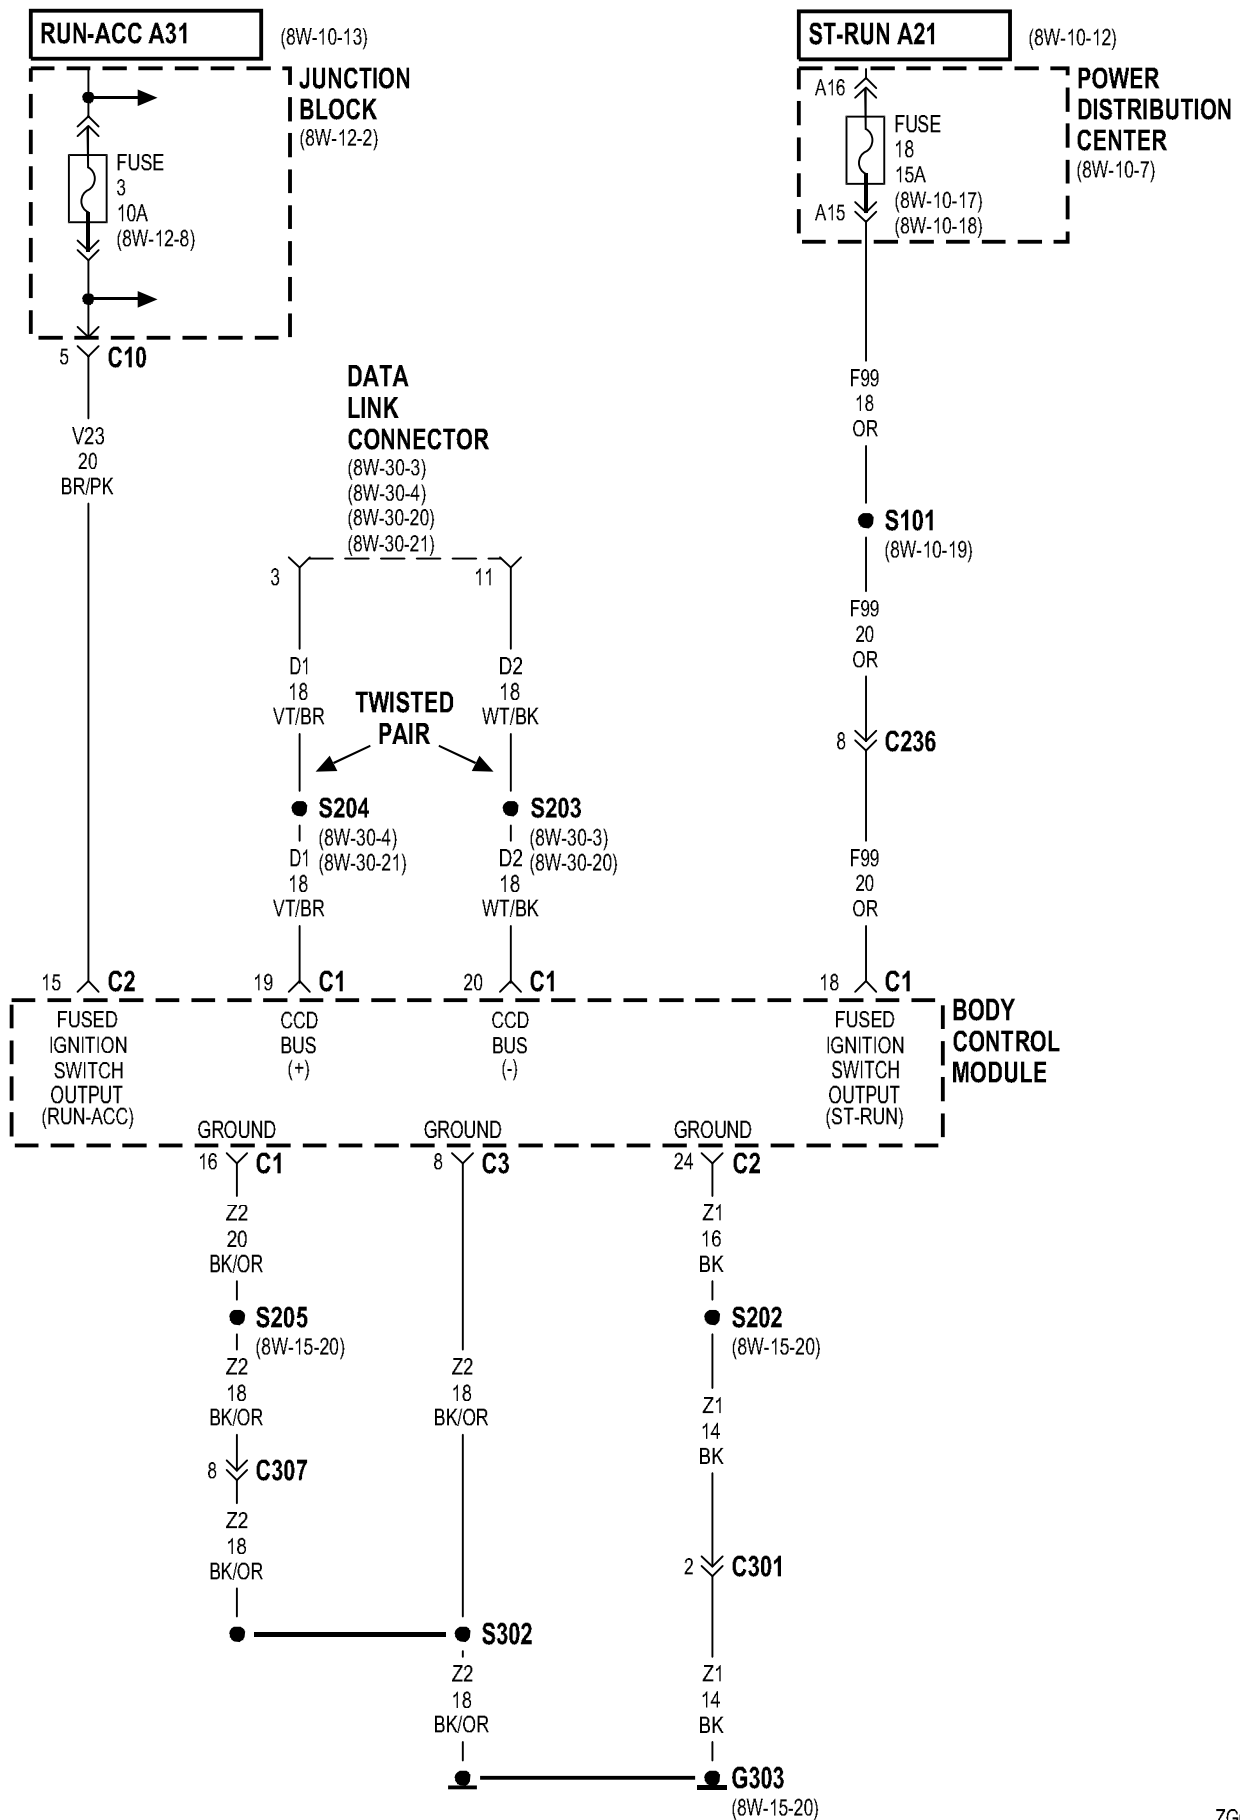

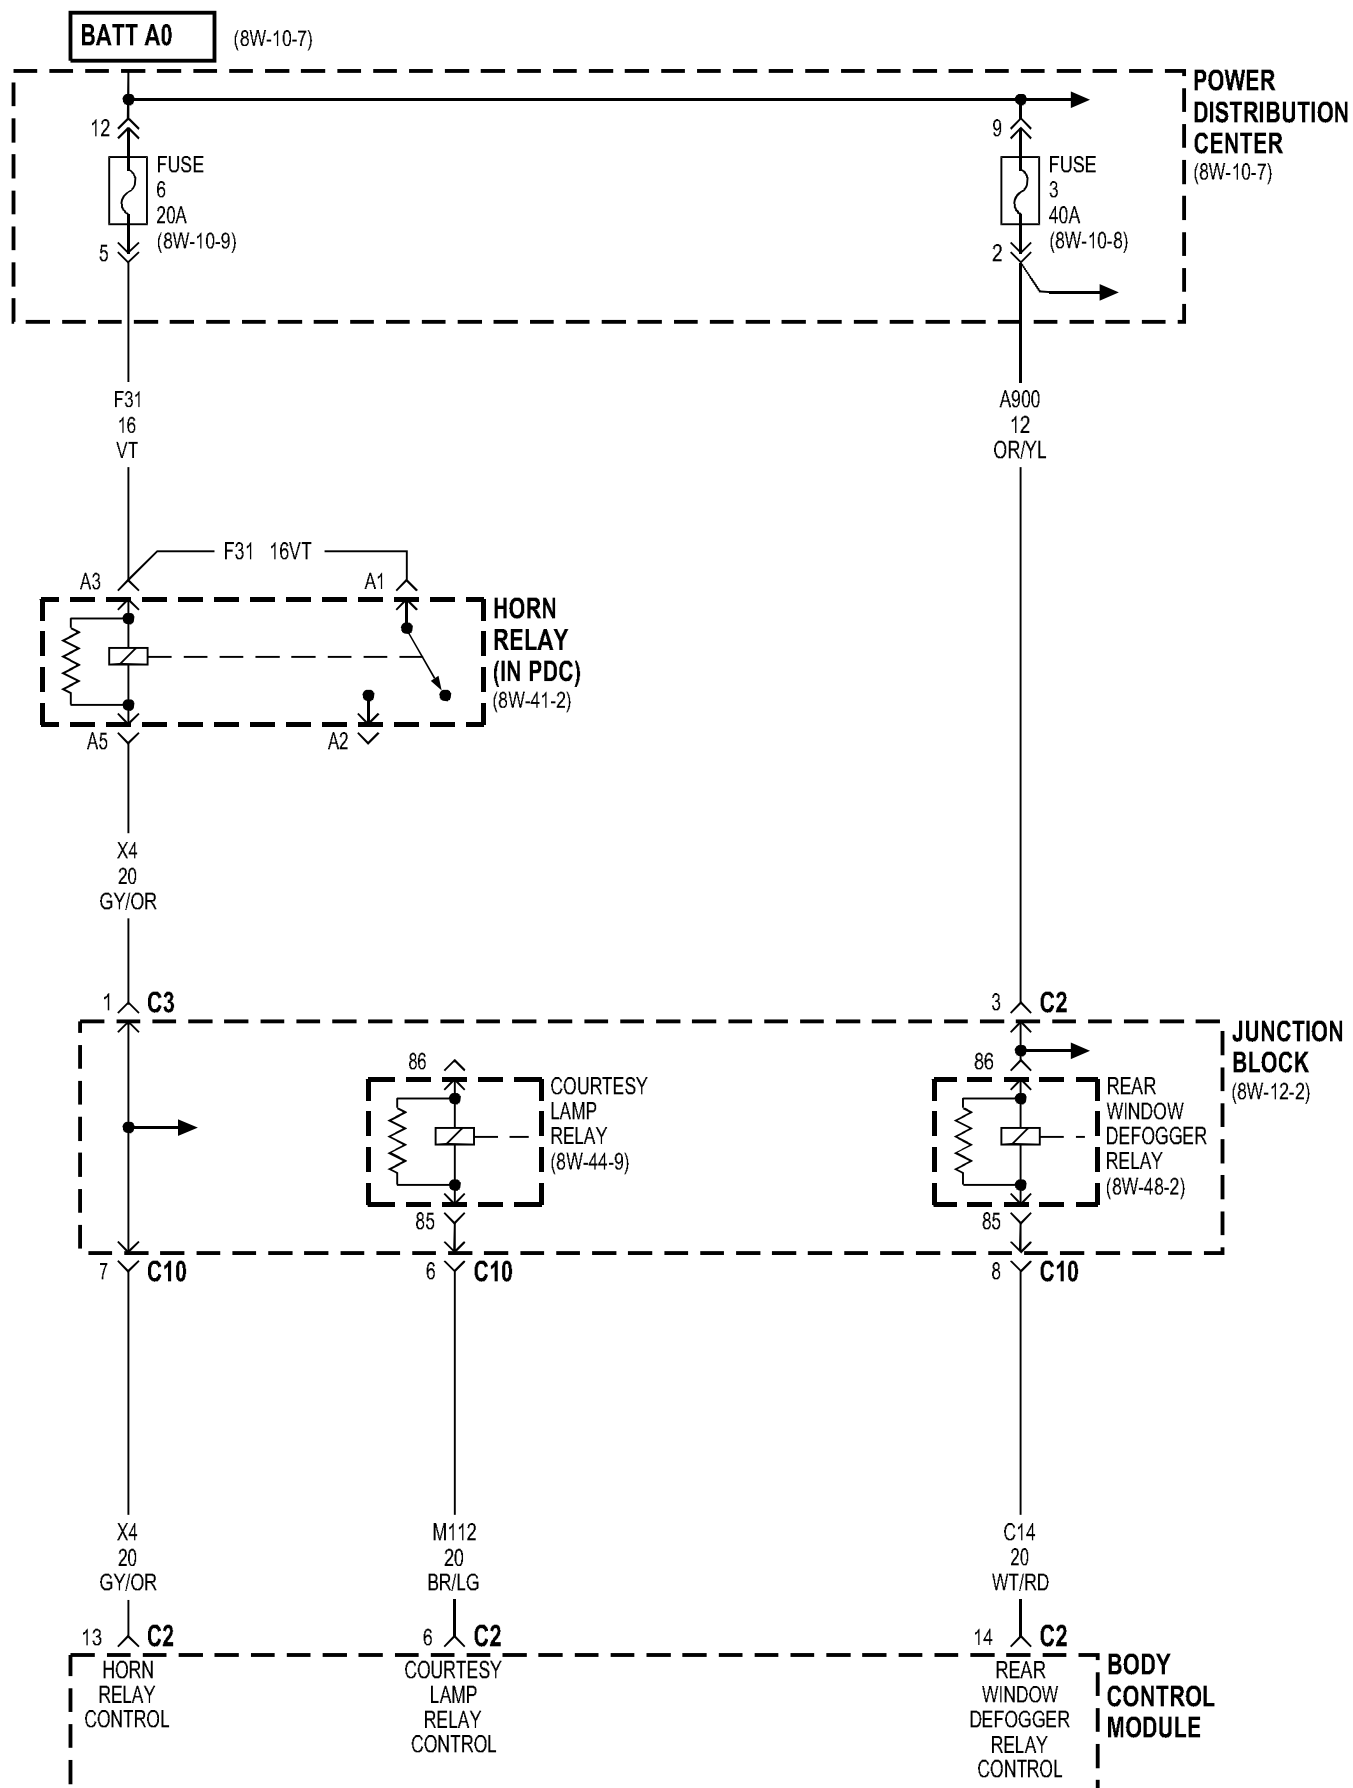


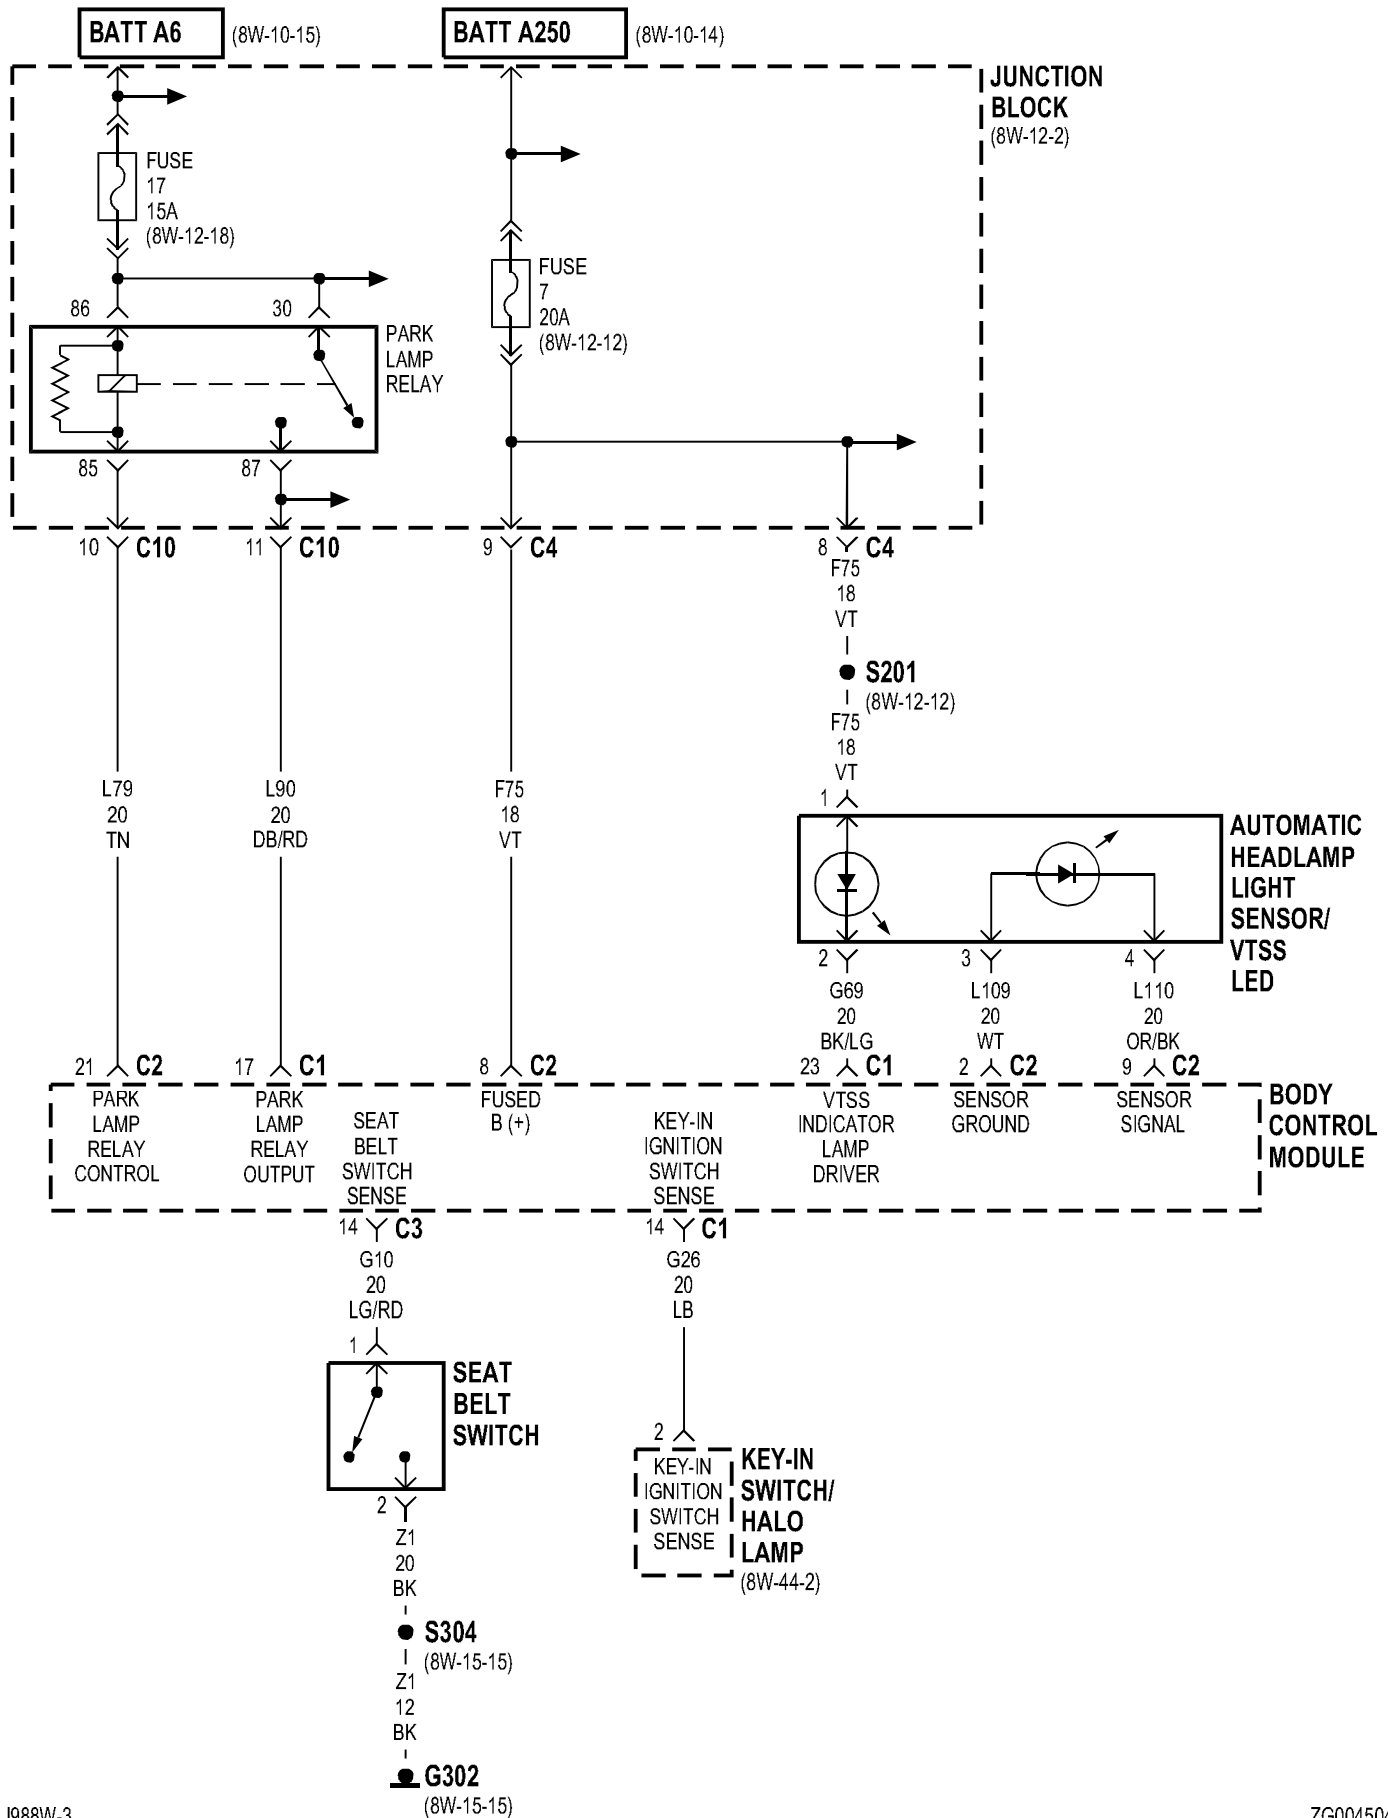





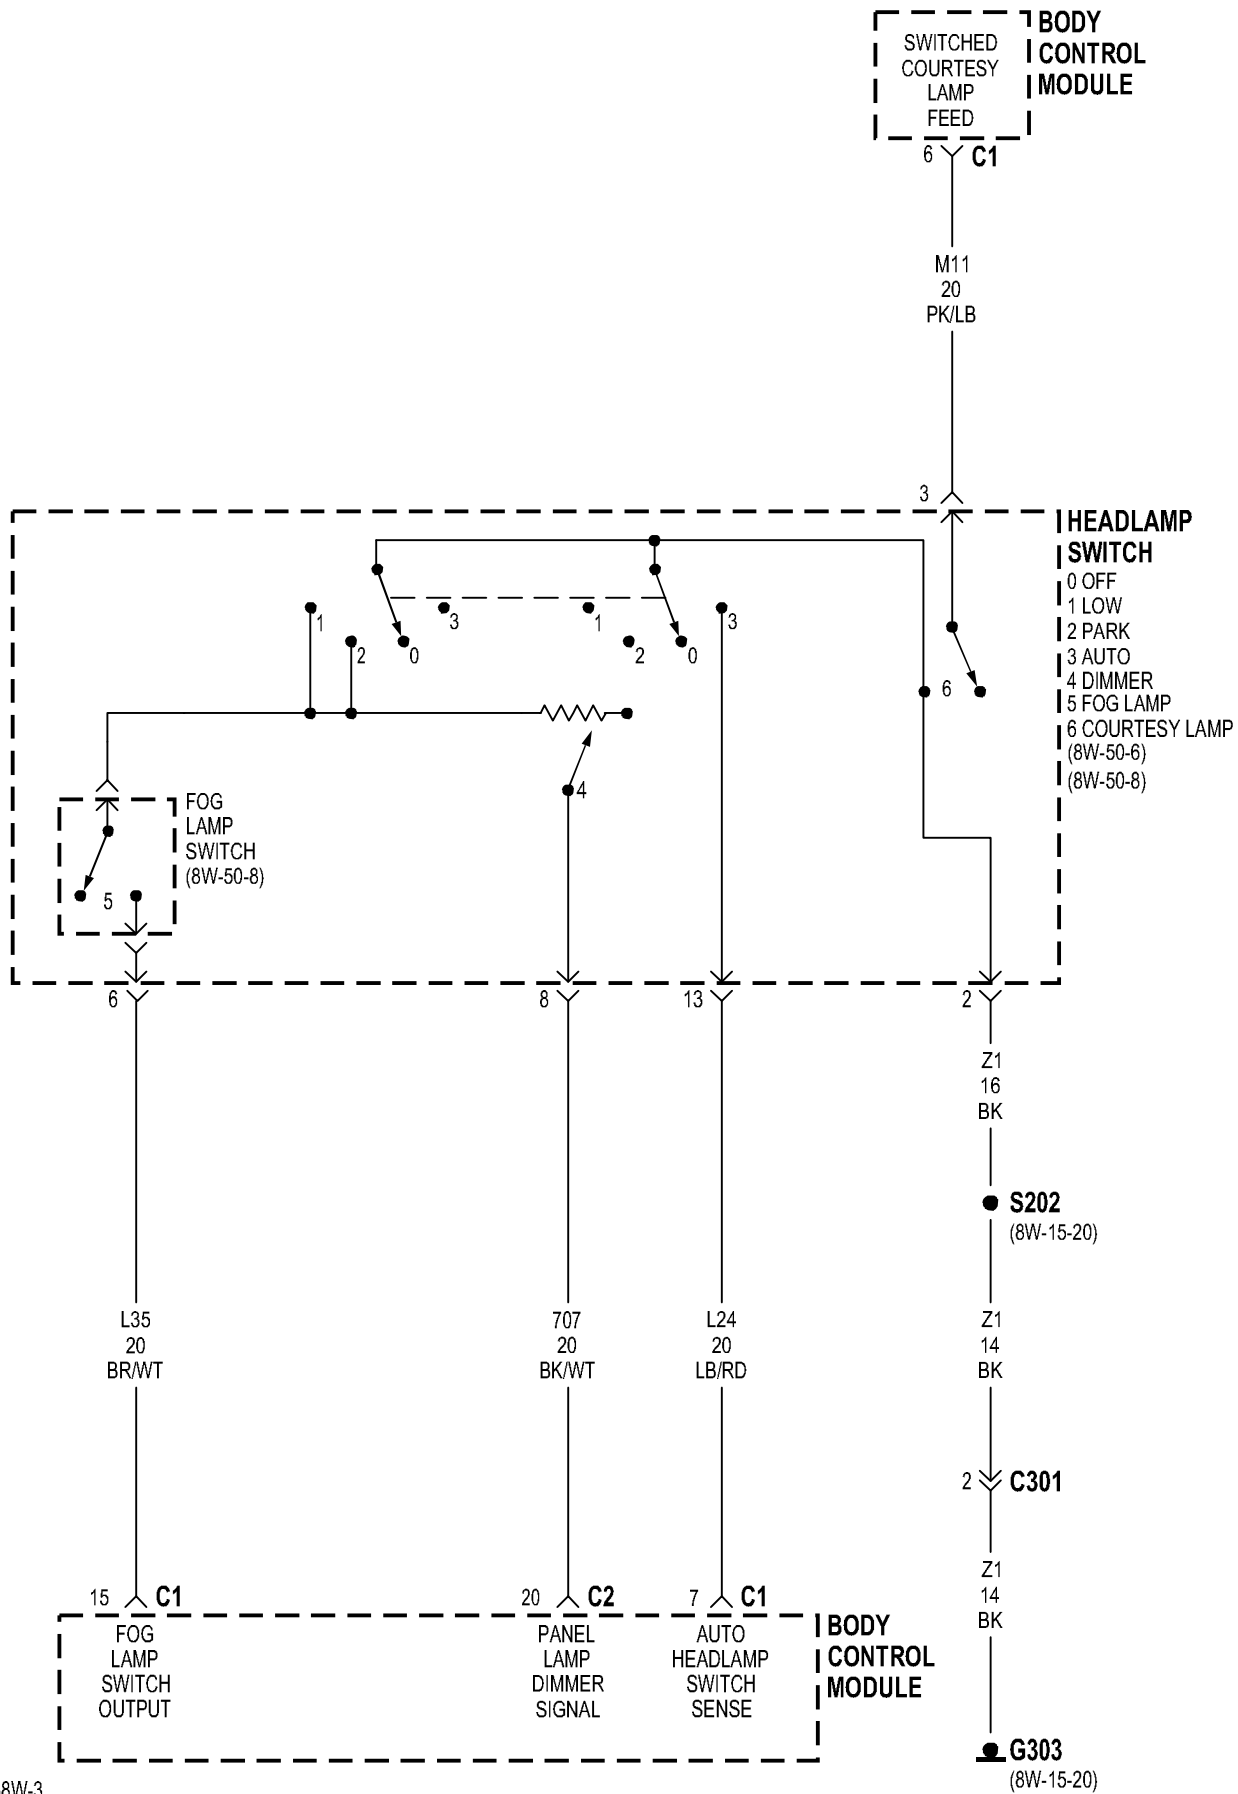




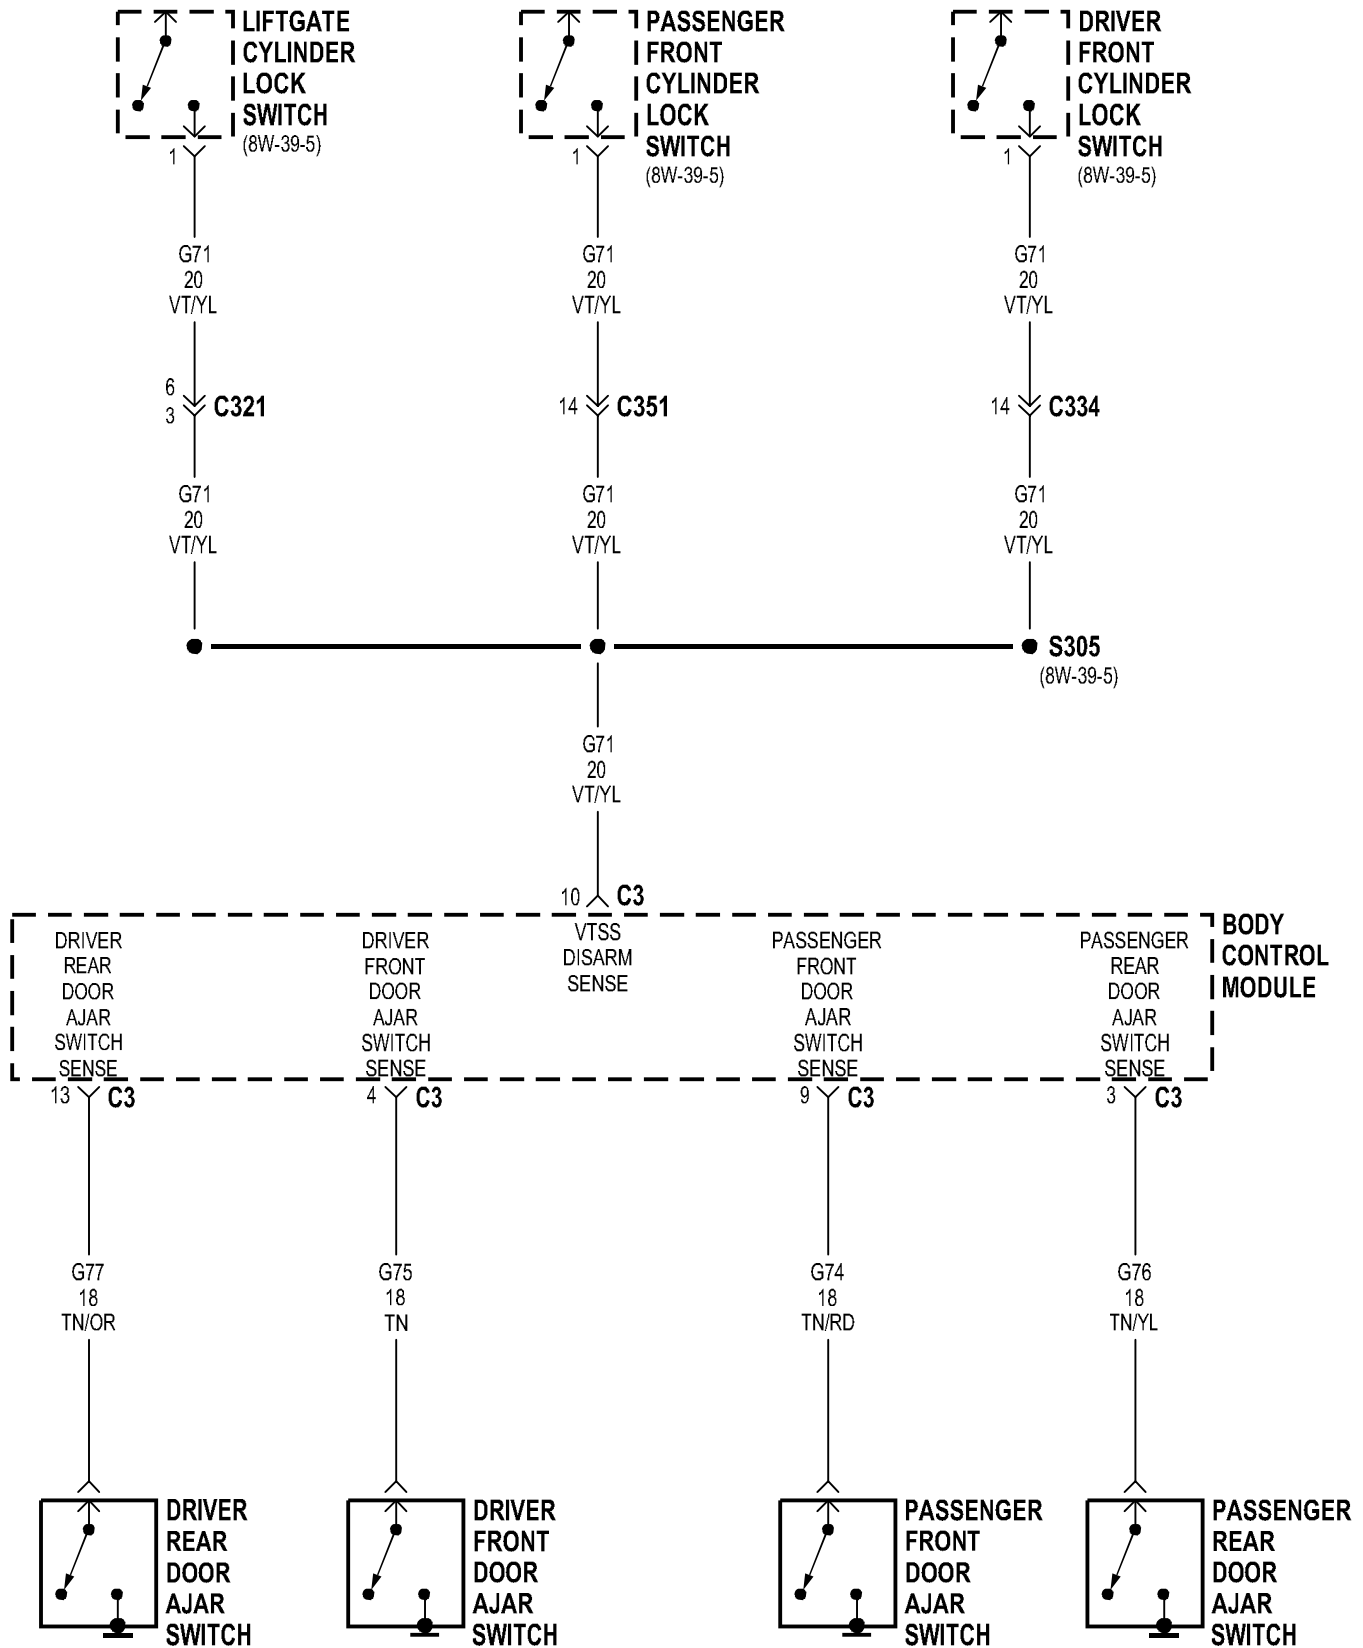

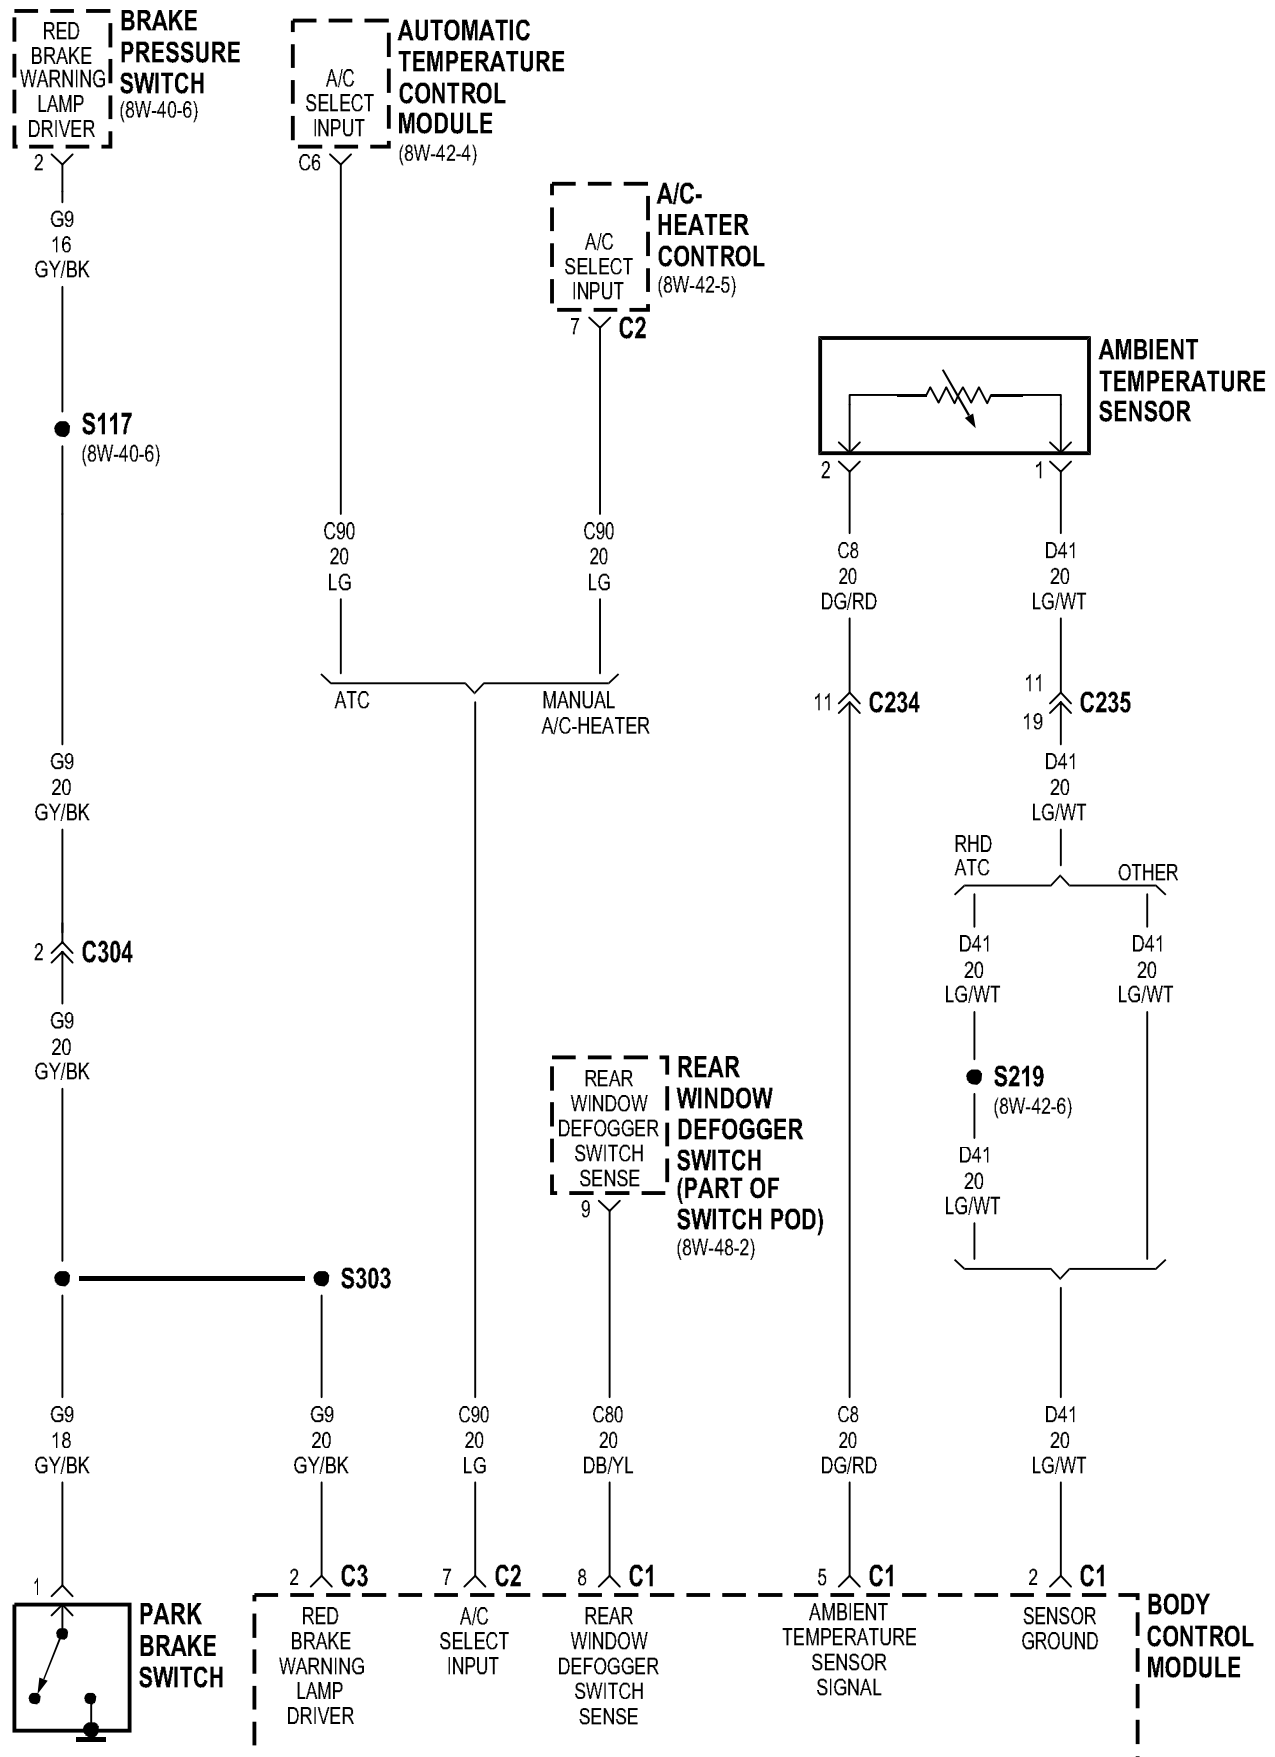


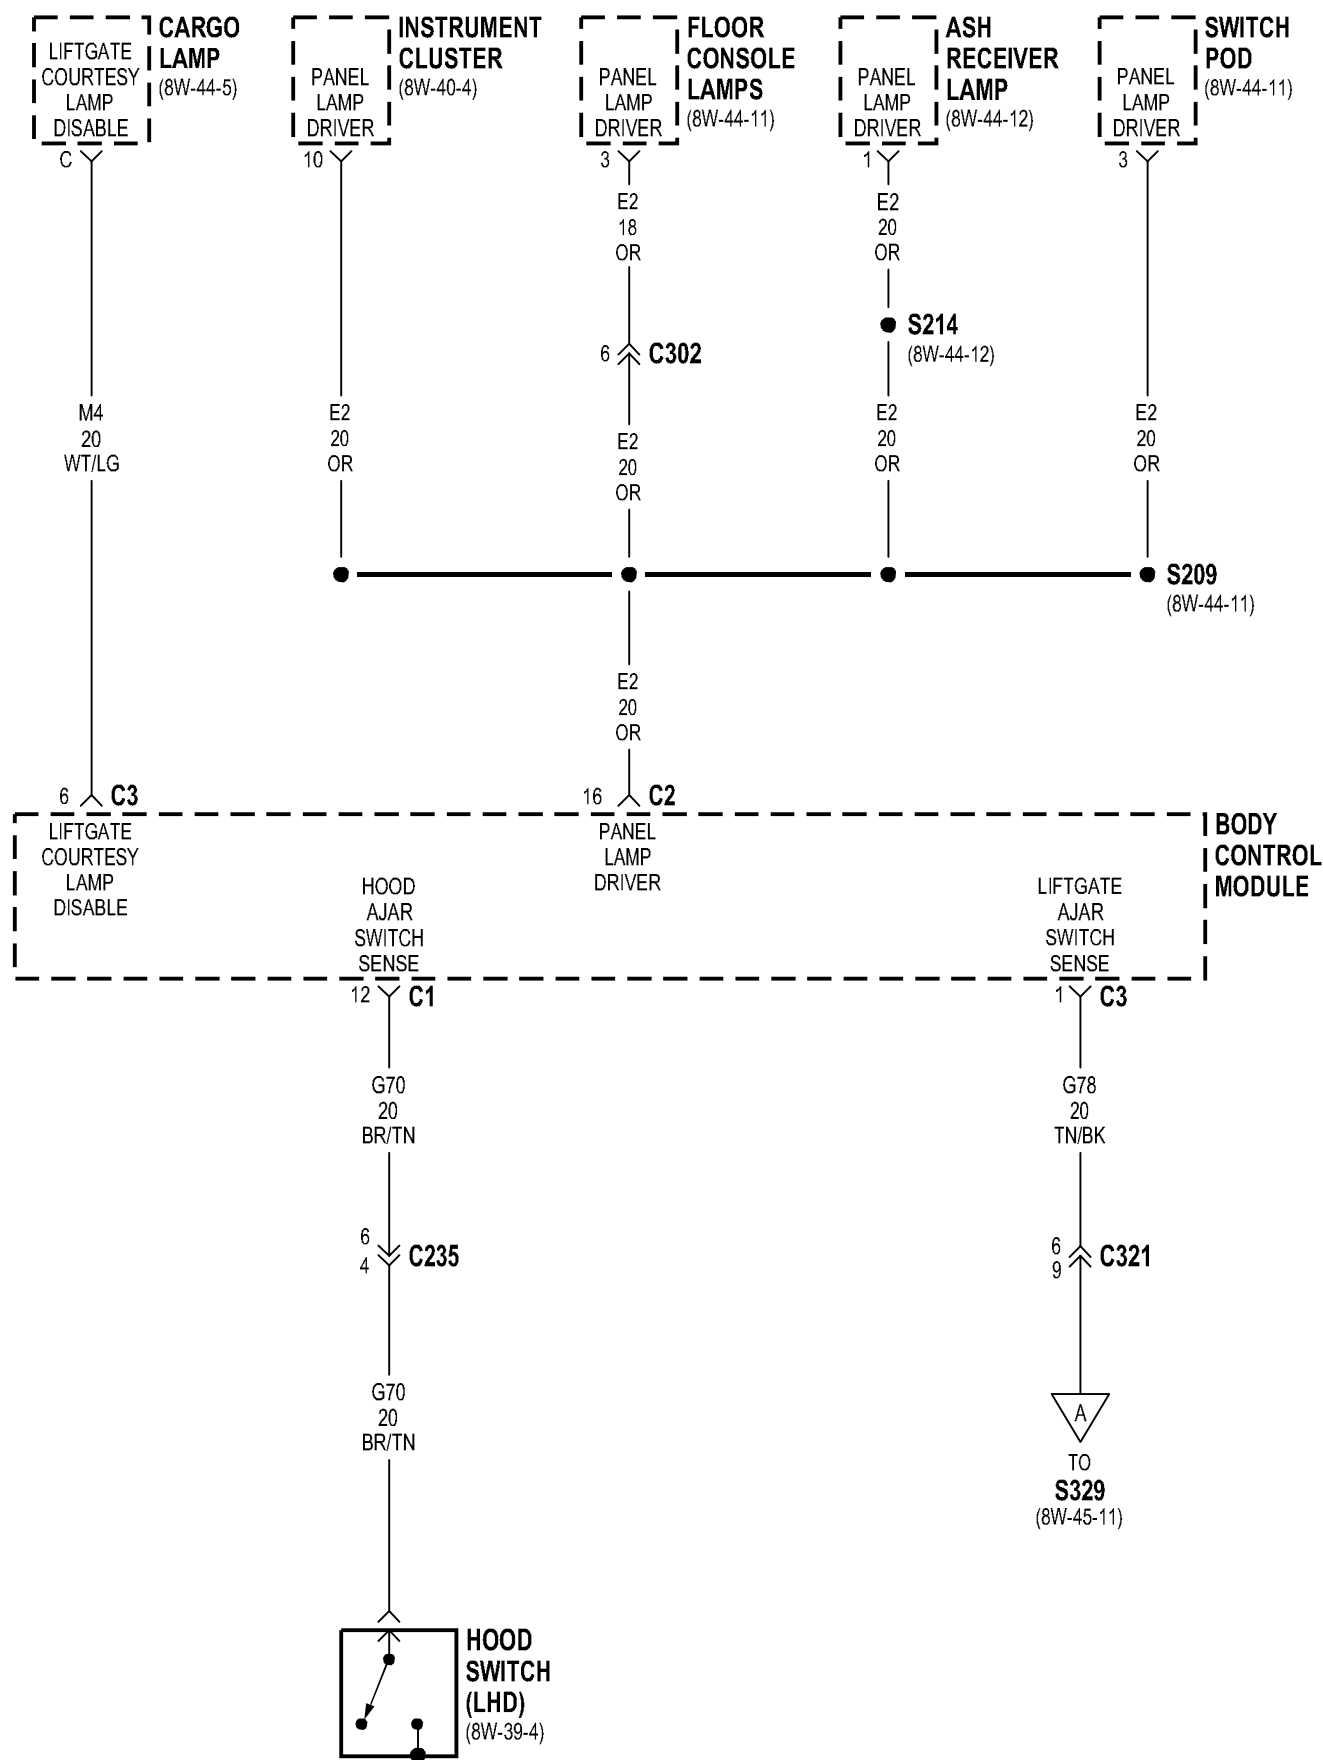


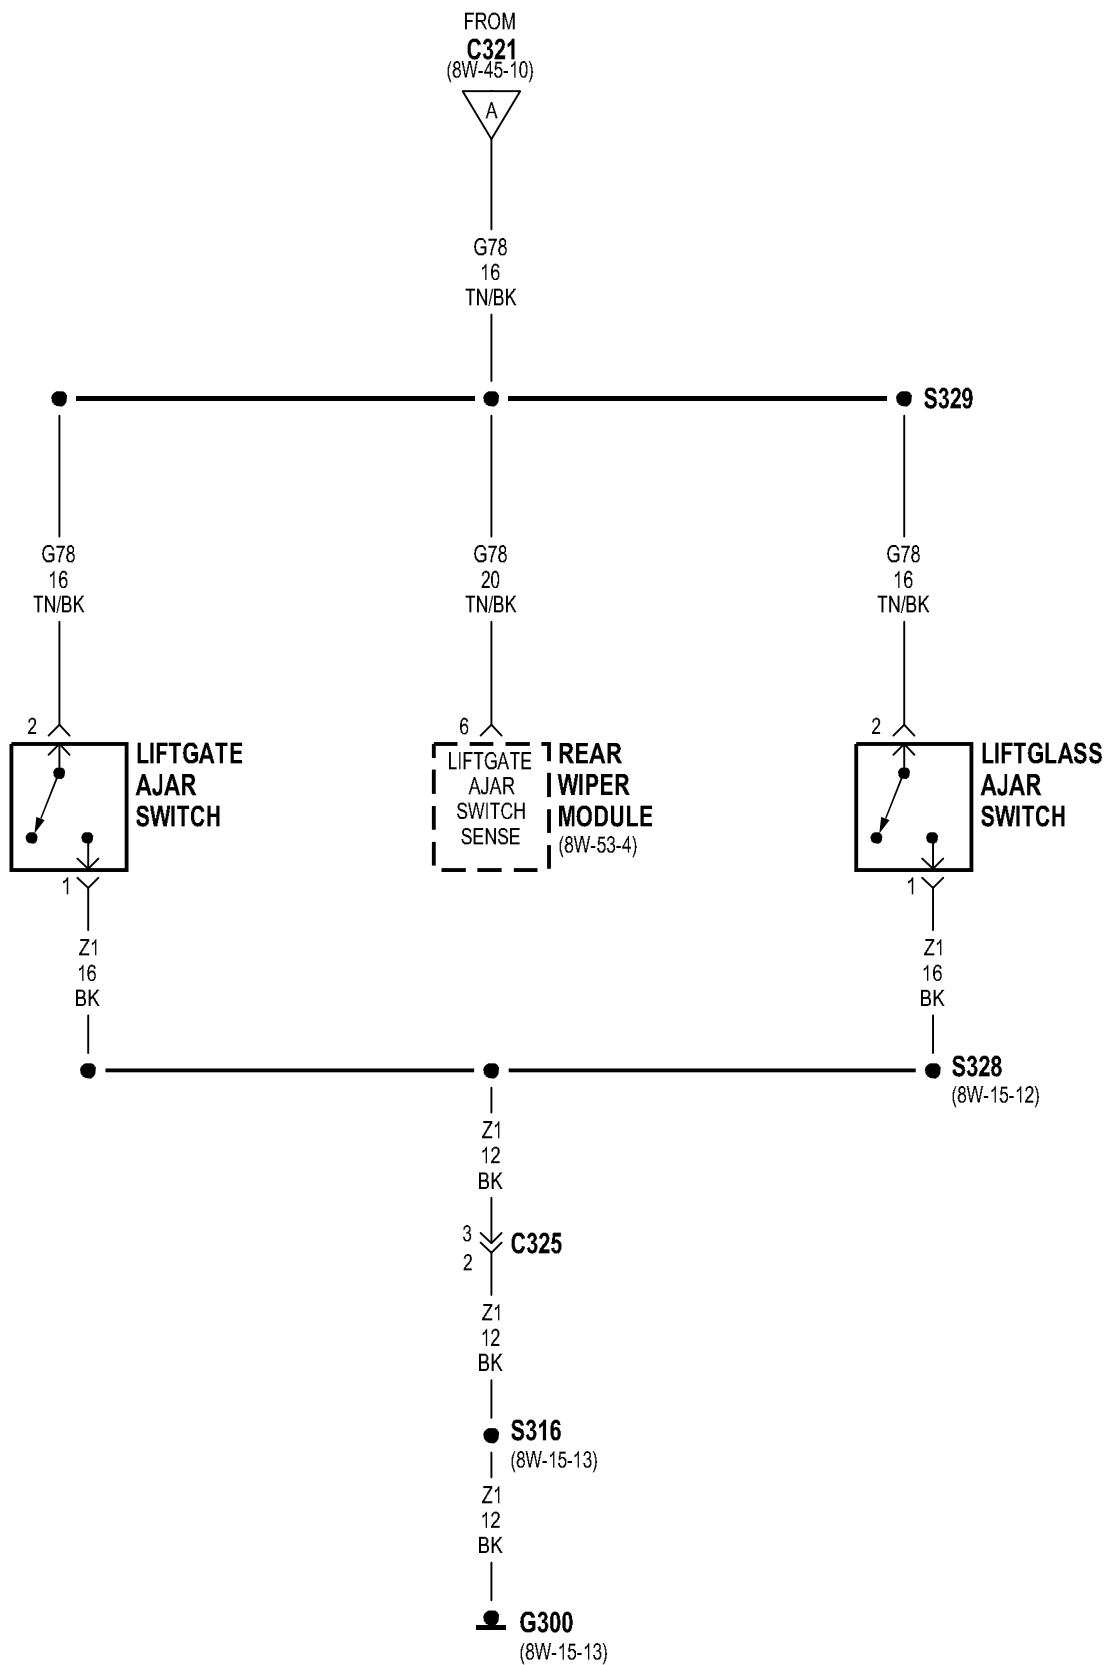


8W-46 MESSAGE CENTER

Component	Page	Component	Page
Body Control Module	.8W-46-2, 5	G118	.8W-46-4
Coolant Level Sensor	.8W-46-4	G303	.8W-46-2
Electronic Flasher	.8W-46-4	Headlamp Switch	.8W-46-4
Four Wheel Drive Switch	.8W-46-3	Junction Block	.8W-46-2, 3, 4
Fuse 6 (JB)	.8W-46-2	Lamp Outage Module	.8W-46-4
Fuse 15 (PDC)	.8W-46-2	Power Distribution Center	.8W-46-2
Fuse 17 (JB)	.8W-46-4	Powertrain Control Module	.8W-46-4
Fuse 20 (JB)	.8W-46-2	Turn Signal/Hazard Warning Switch	.8W-46-4
G105	.8W-46-3	Vehicle Information Center/ Graphic Display Module	.8W-46-2, 3, 4, 5
G106	.8W-46-3, 4	Wiper Fluid Level Sensor	.8W-46-4
G109	.8W-46-4		

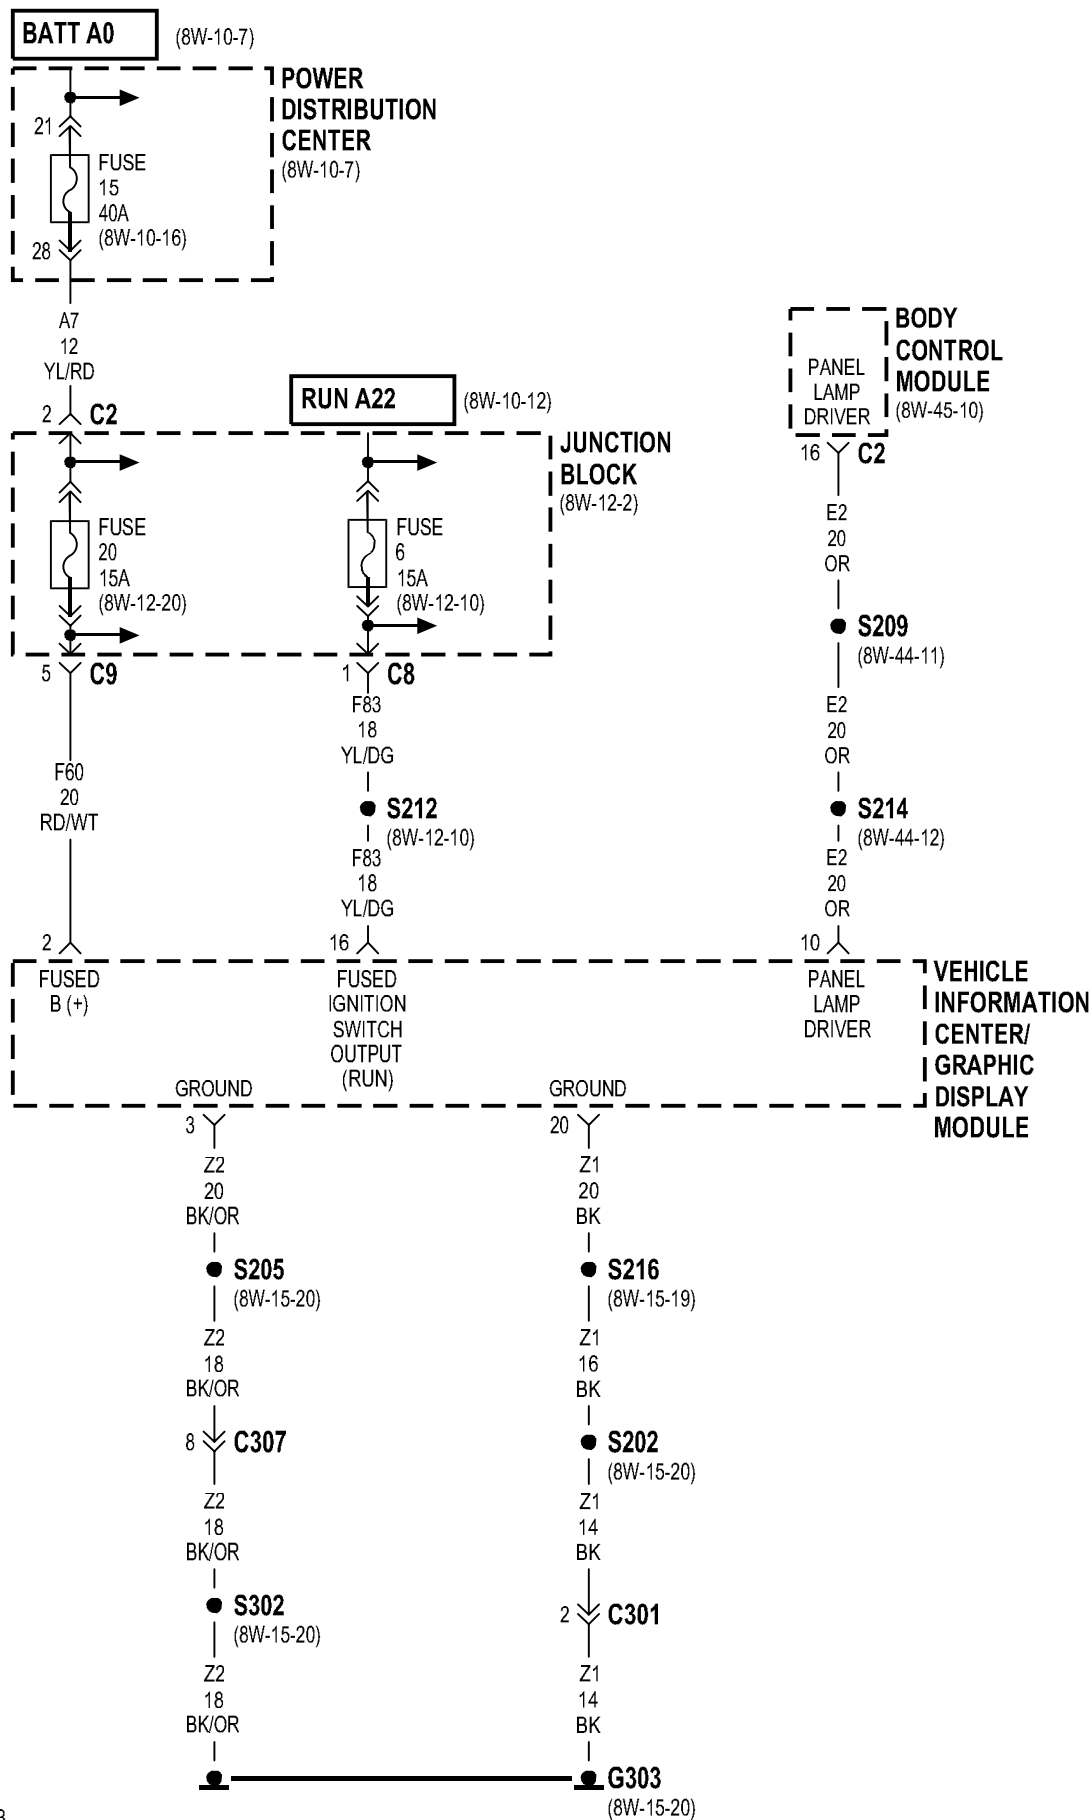

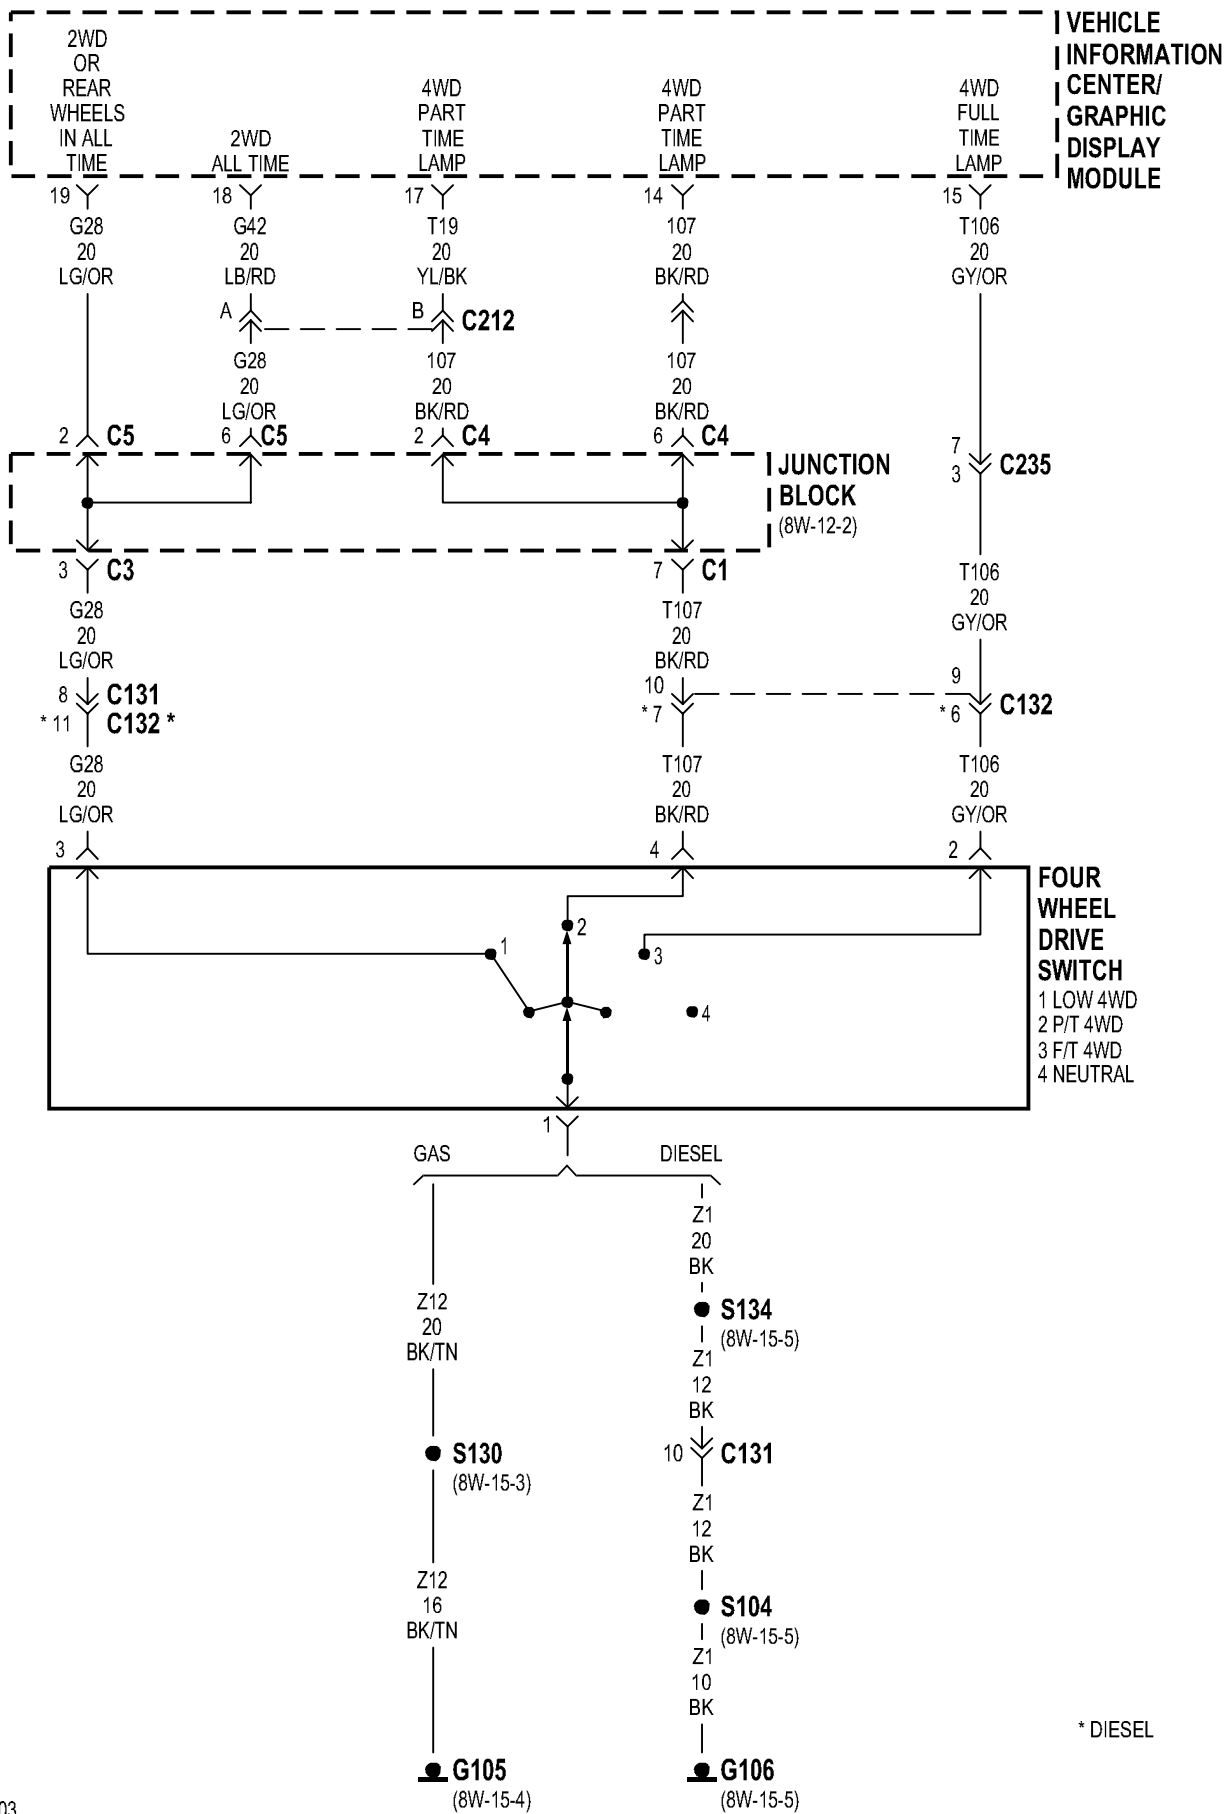





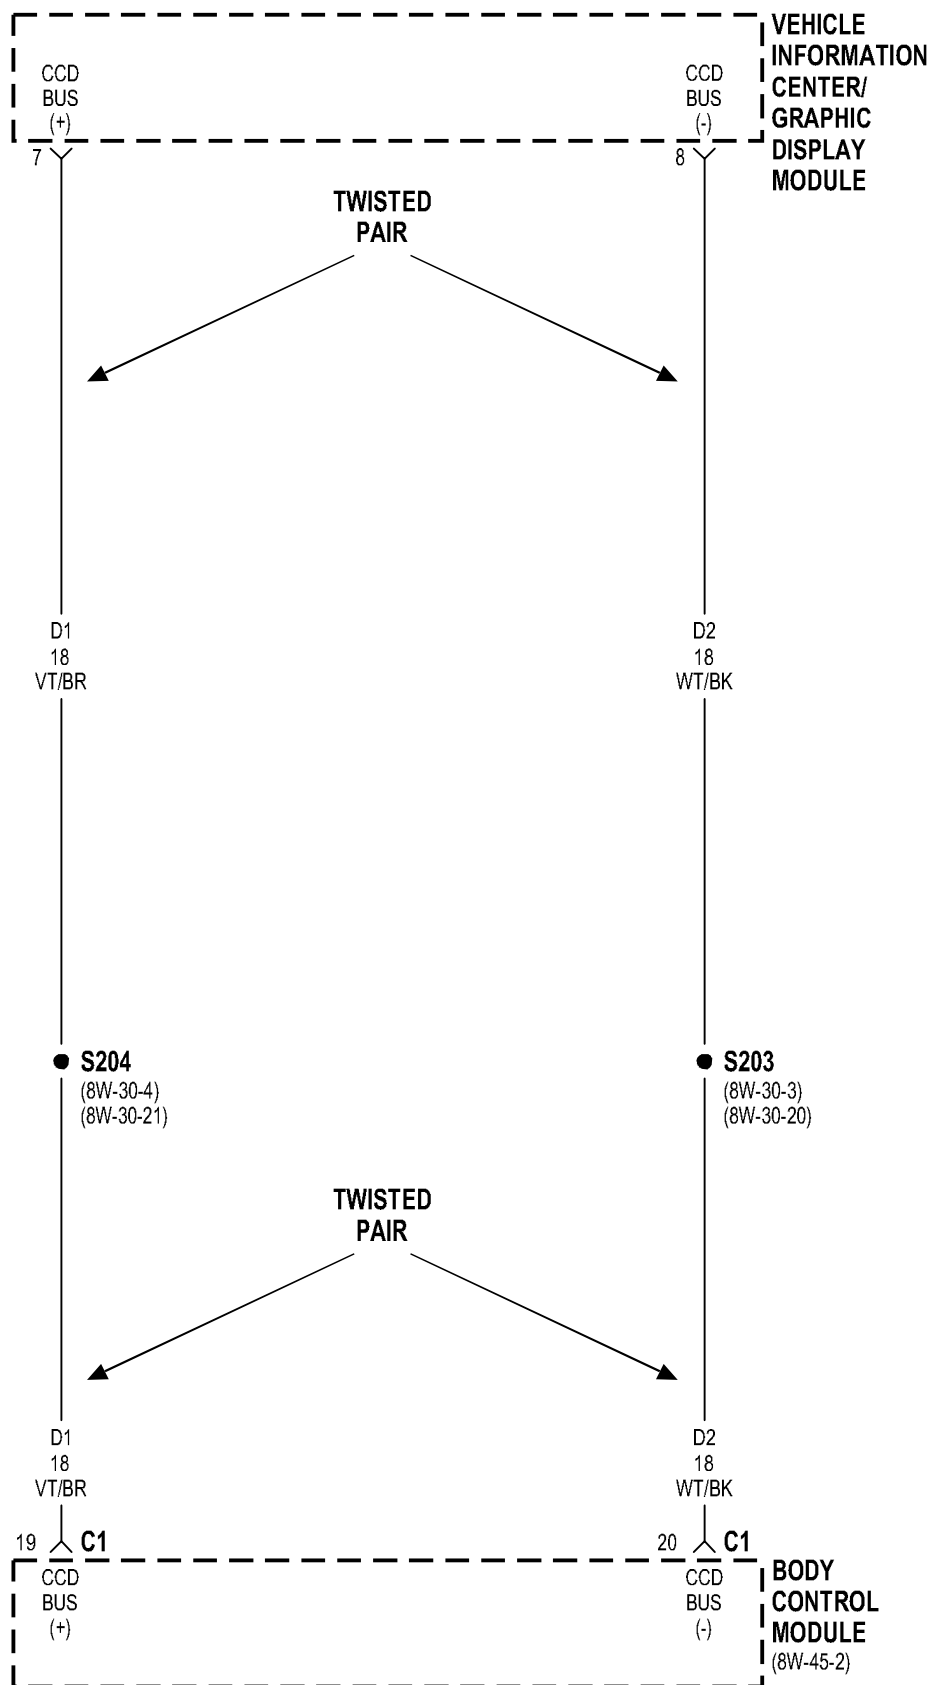



8W-47 AUDIO SYSTEM


Component	Page	Component	Page
Antenna	.8W-47-2	Left Instrument Panel Speaker.	.8W-47-4, 5
Body Control Module.	.8W-47-2, 11	Park Lamp Relay	.8W-47-2
Clockspring	.8W-47-11	Passenger Front Door Speaker	.8W-47-4, 5, 7
Driver Front Door Speaker	.8W-47-4, 5, 7	Passenger Rear Door Speaker	.8W-47-6, 7, 10
Driver Rear Door Speaker.	.8W-47-6, 7, 10	Power Amplifier	.8W-47-3, 4, 5, 6, 7, 8, 9, 10
Fuse 1 (JB)	.8W-47-2	Power Antenna	.8W-47-3
Fuse 7 (JB)	.8W-47-8, 9	Power Antenna Relay	.8W-47-3
Fuse 13 (JB)	.8W-47-3	Radio.	.8W-47-2, 3, 7, 8, 9
Fuse 17 (JB)	.8W-47-2	Rear Speaker	.8W-47-10
Fuse 20 (JB)	.8W-47-2	Remote Radio Switch No. 1	.8W-47-11
G303	.8W-47-2, 3, 8, 9, 11	Remote Radio Switch No. 2	.8W-47-11
Junction Block	.8W-47-2, 3, 8, 9	Right Instrument Panel Speaker	.8W-47-4, 5

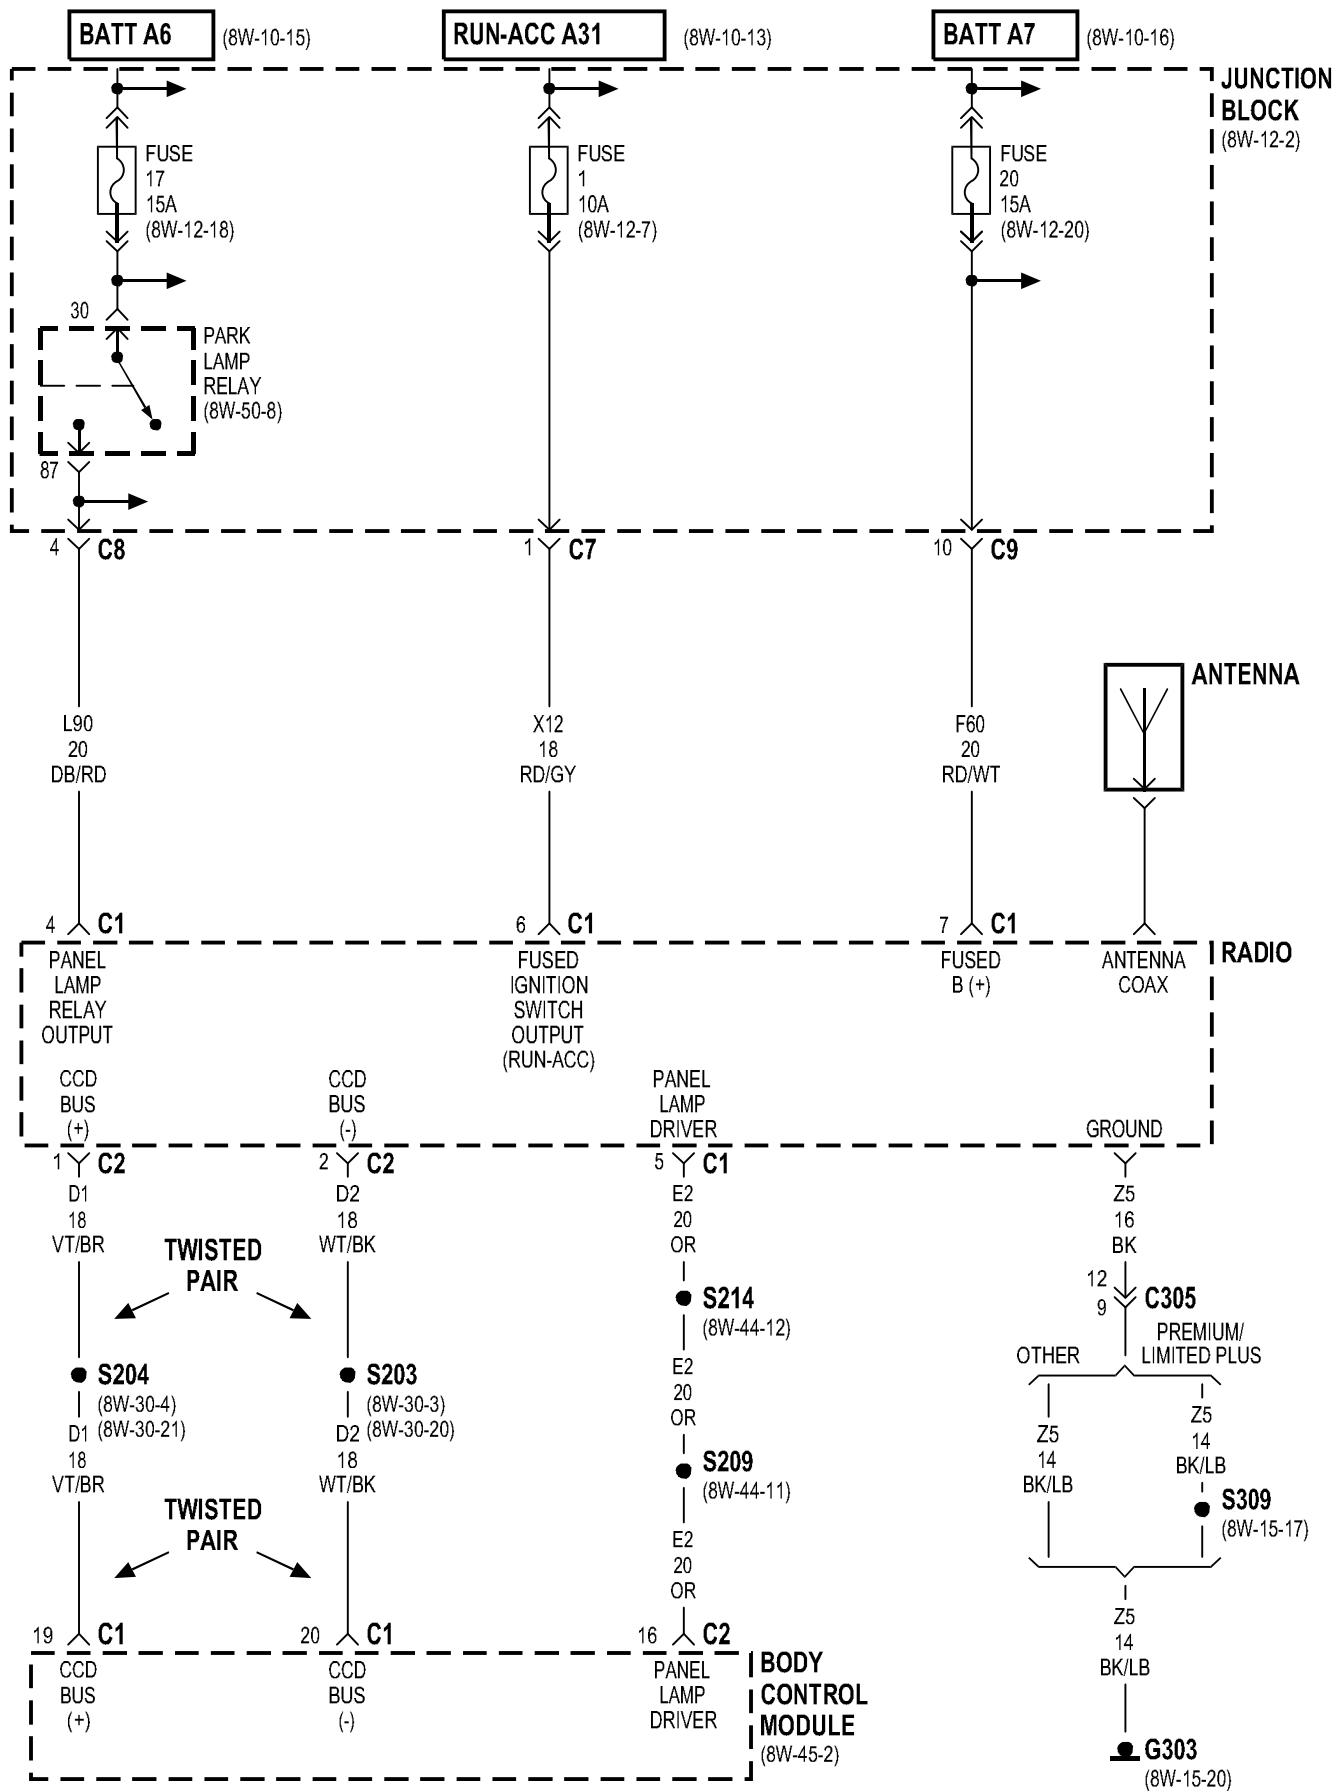


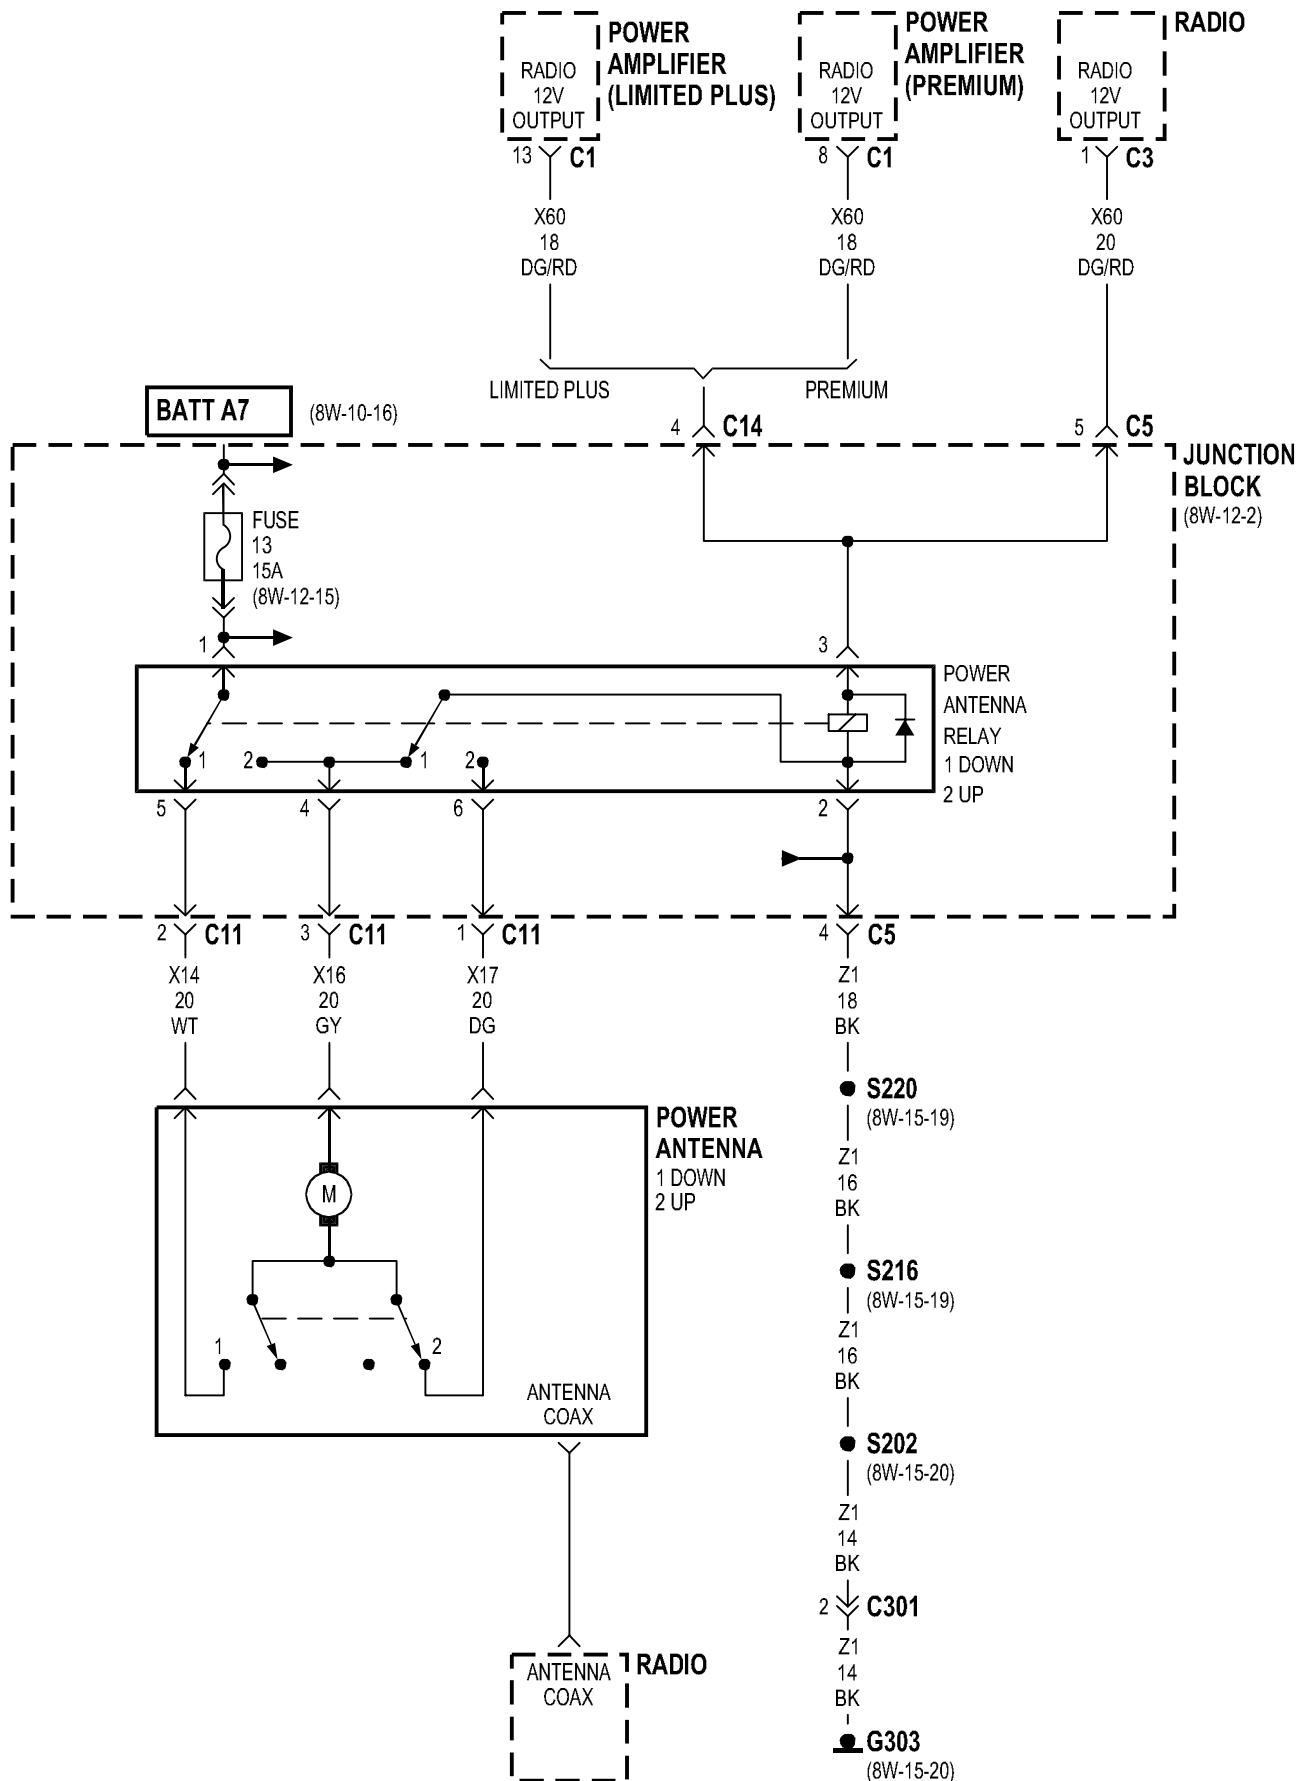


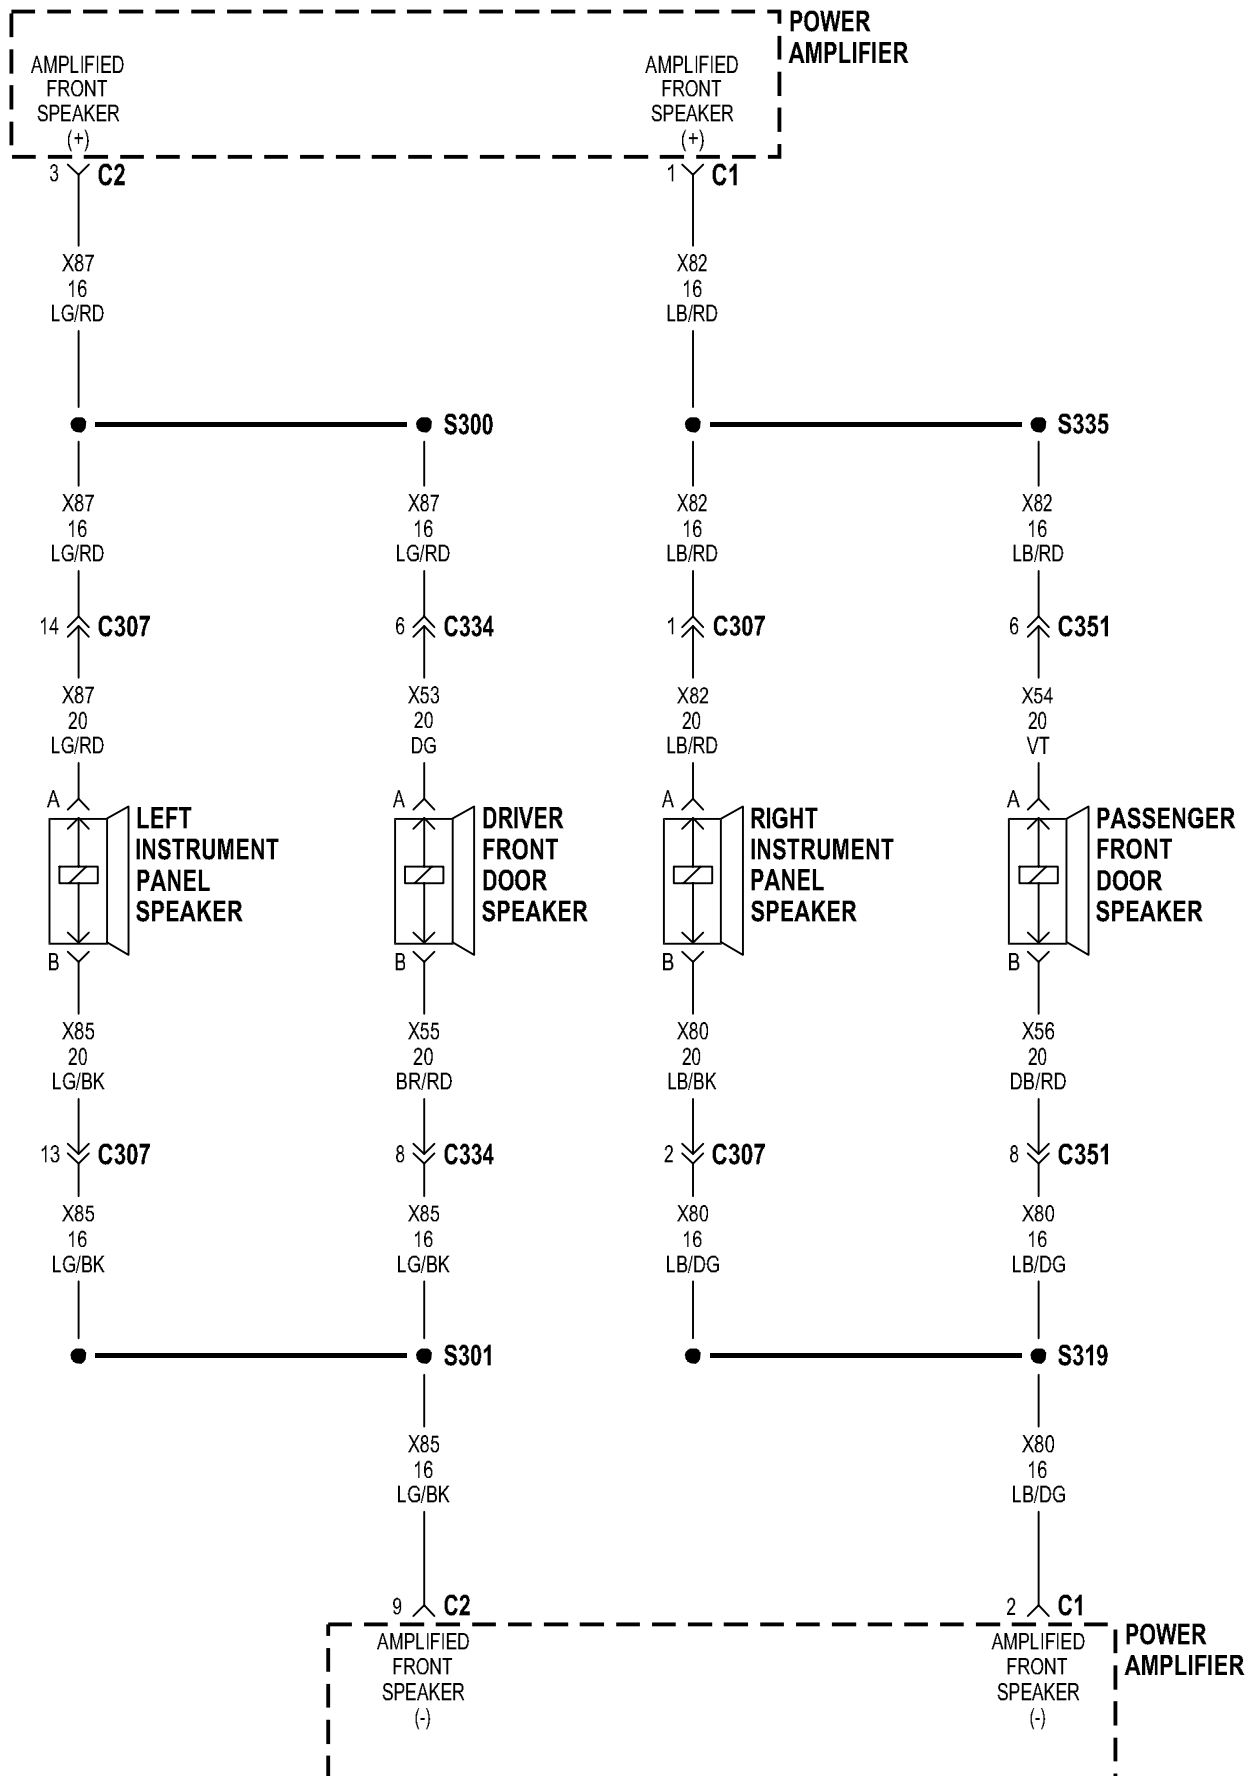


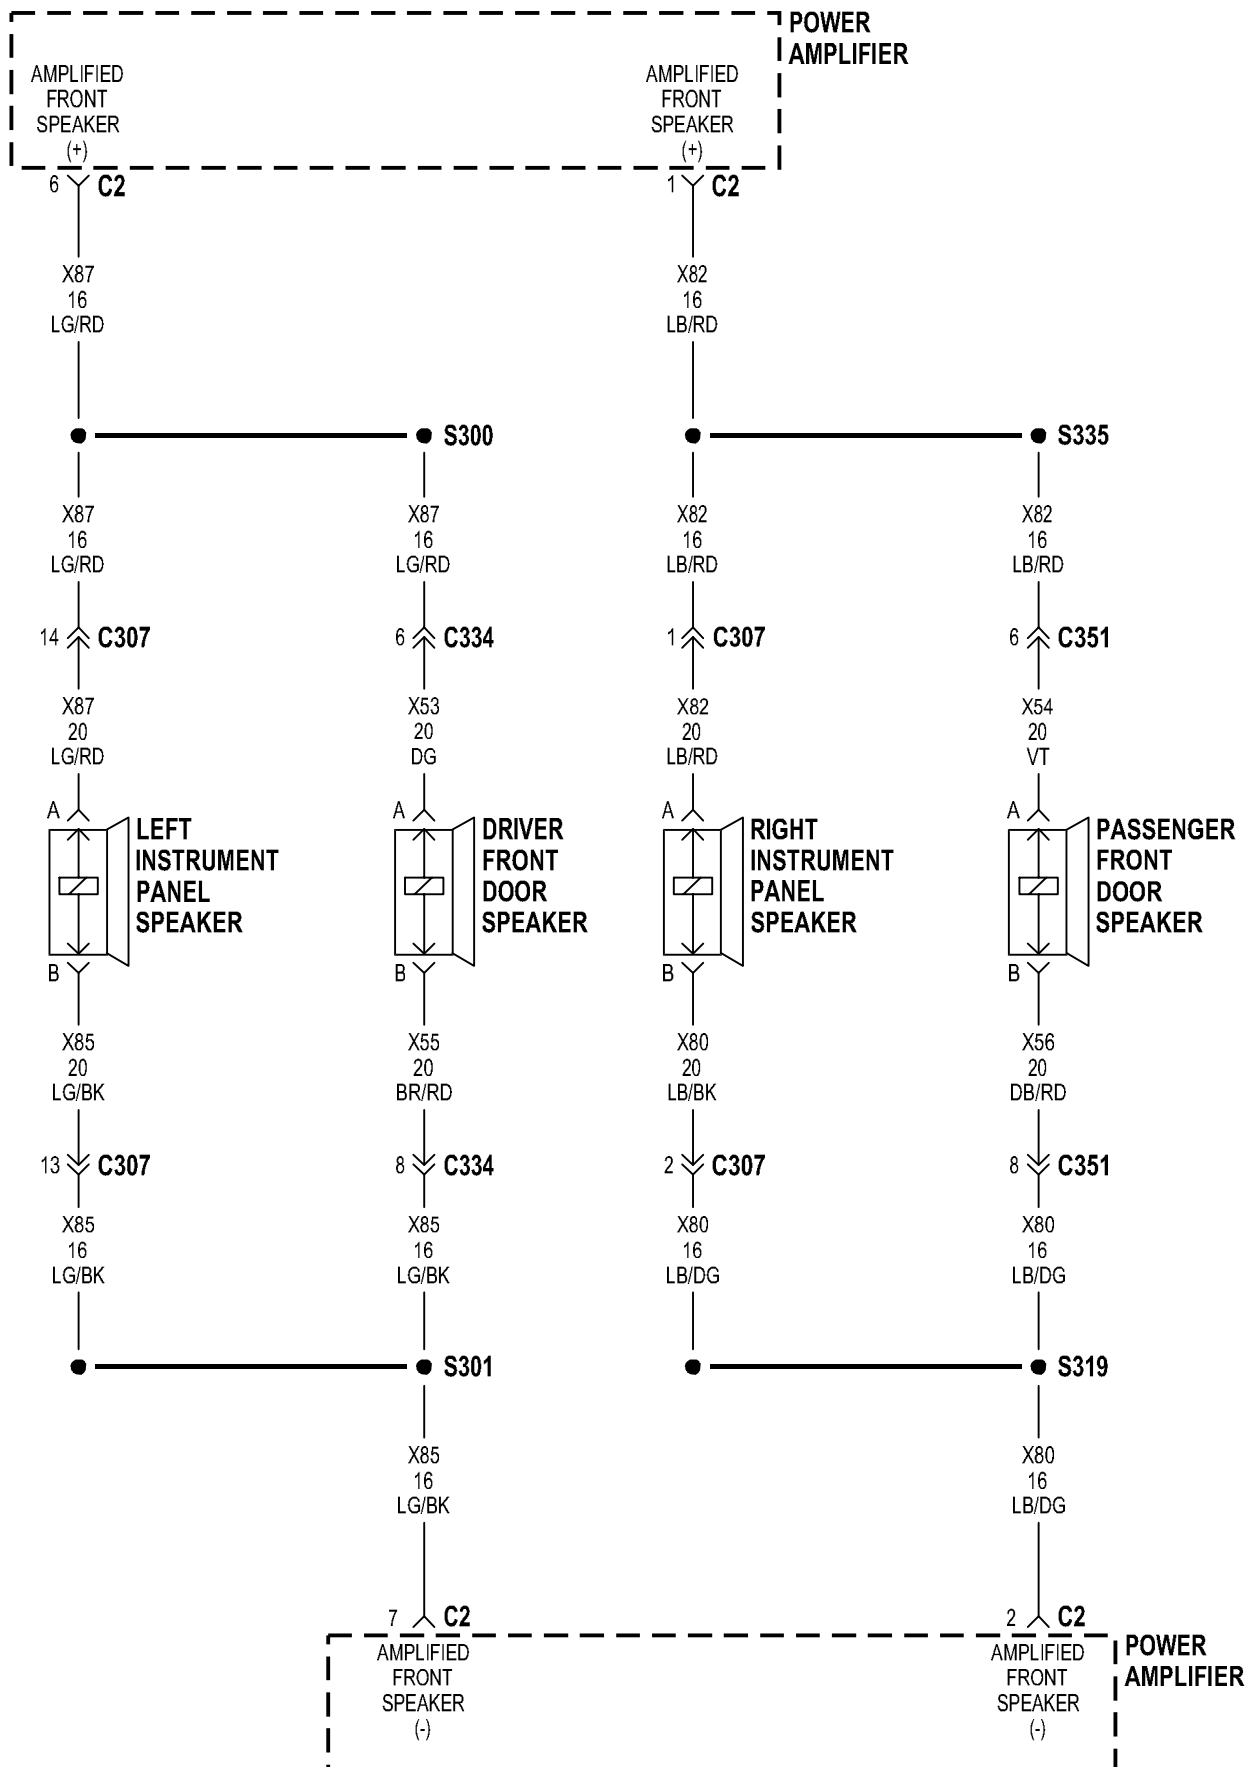


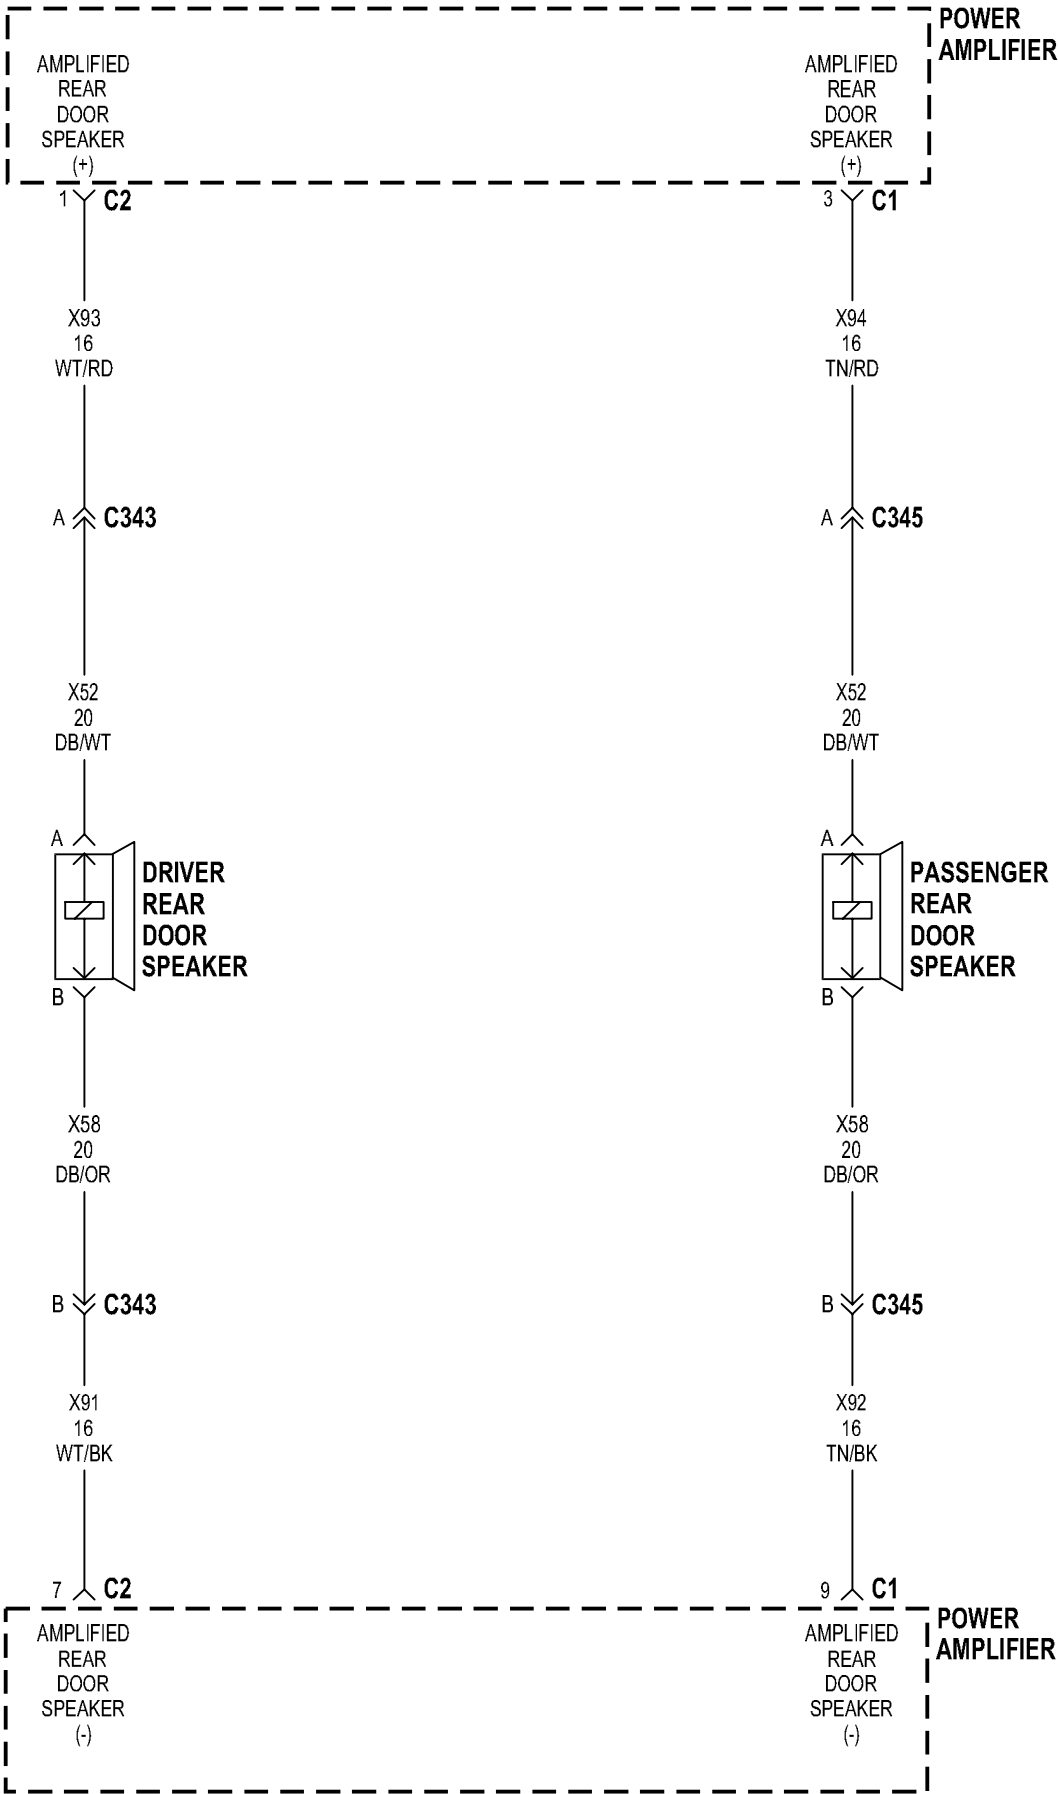


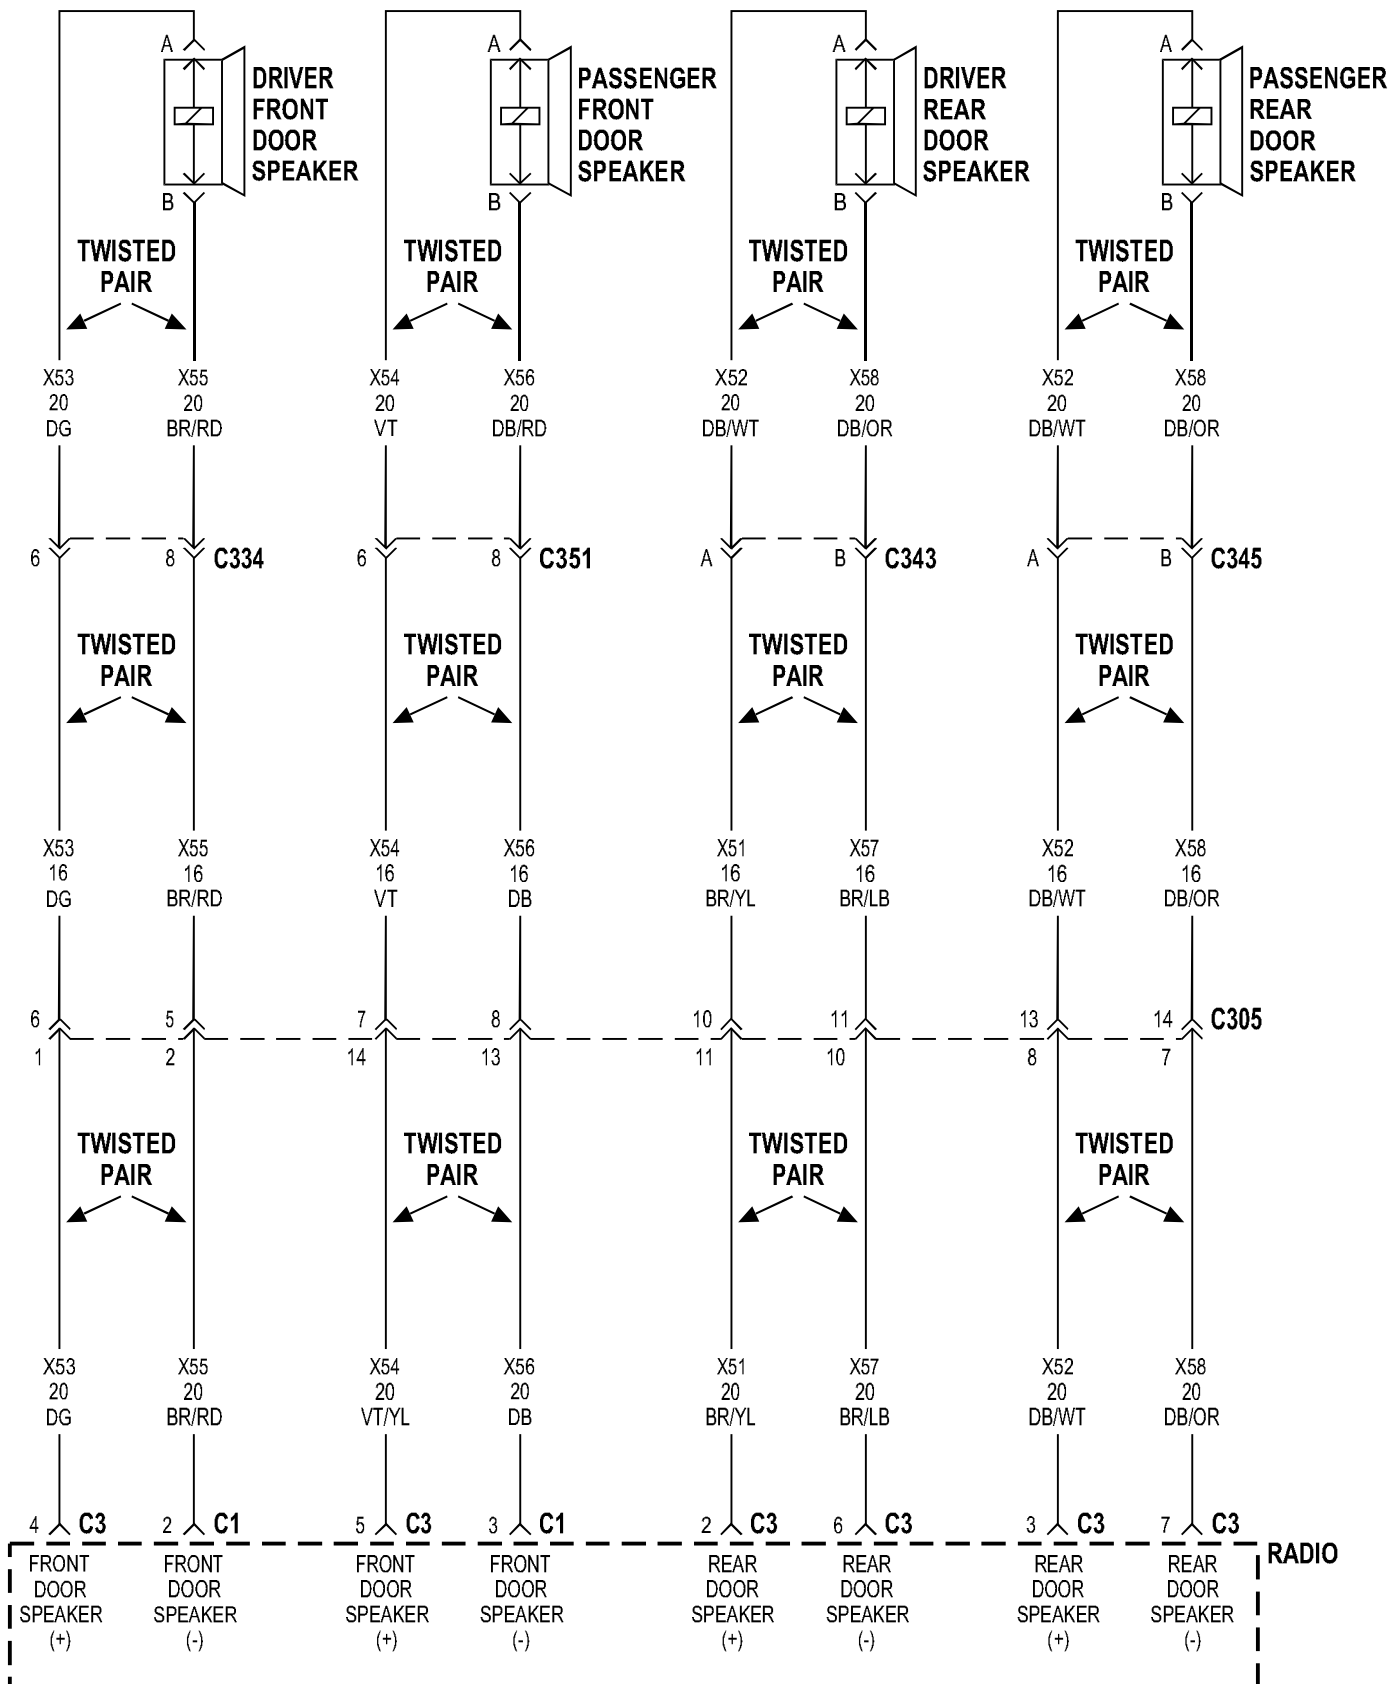

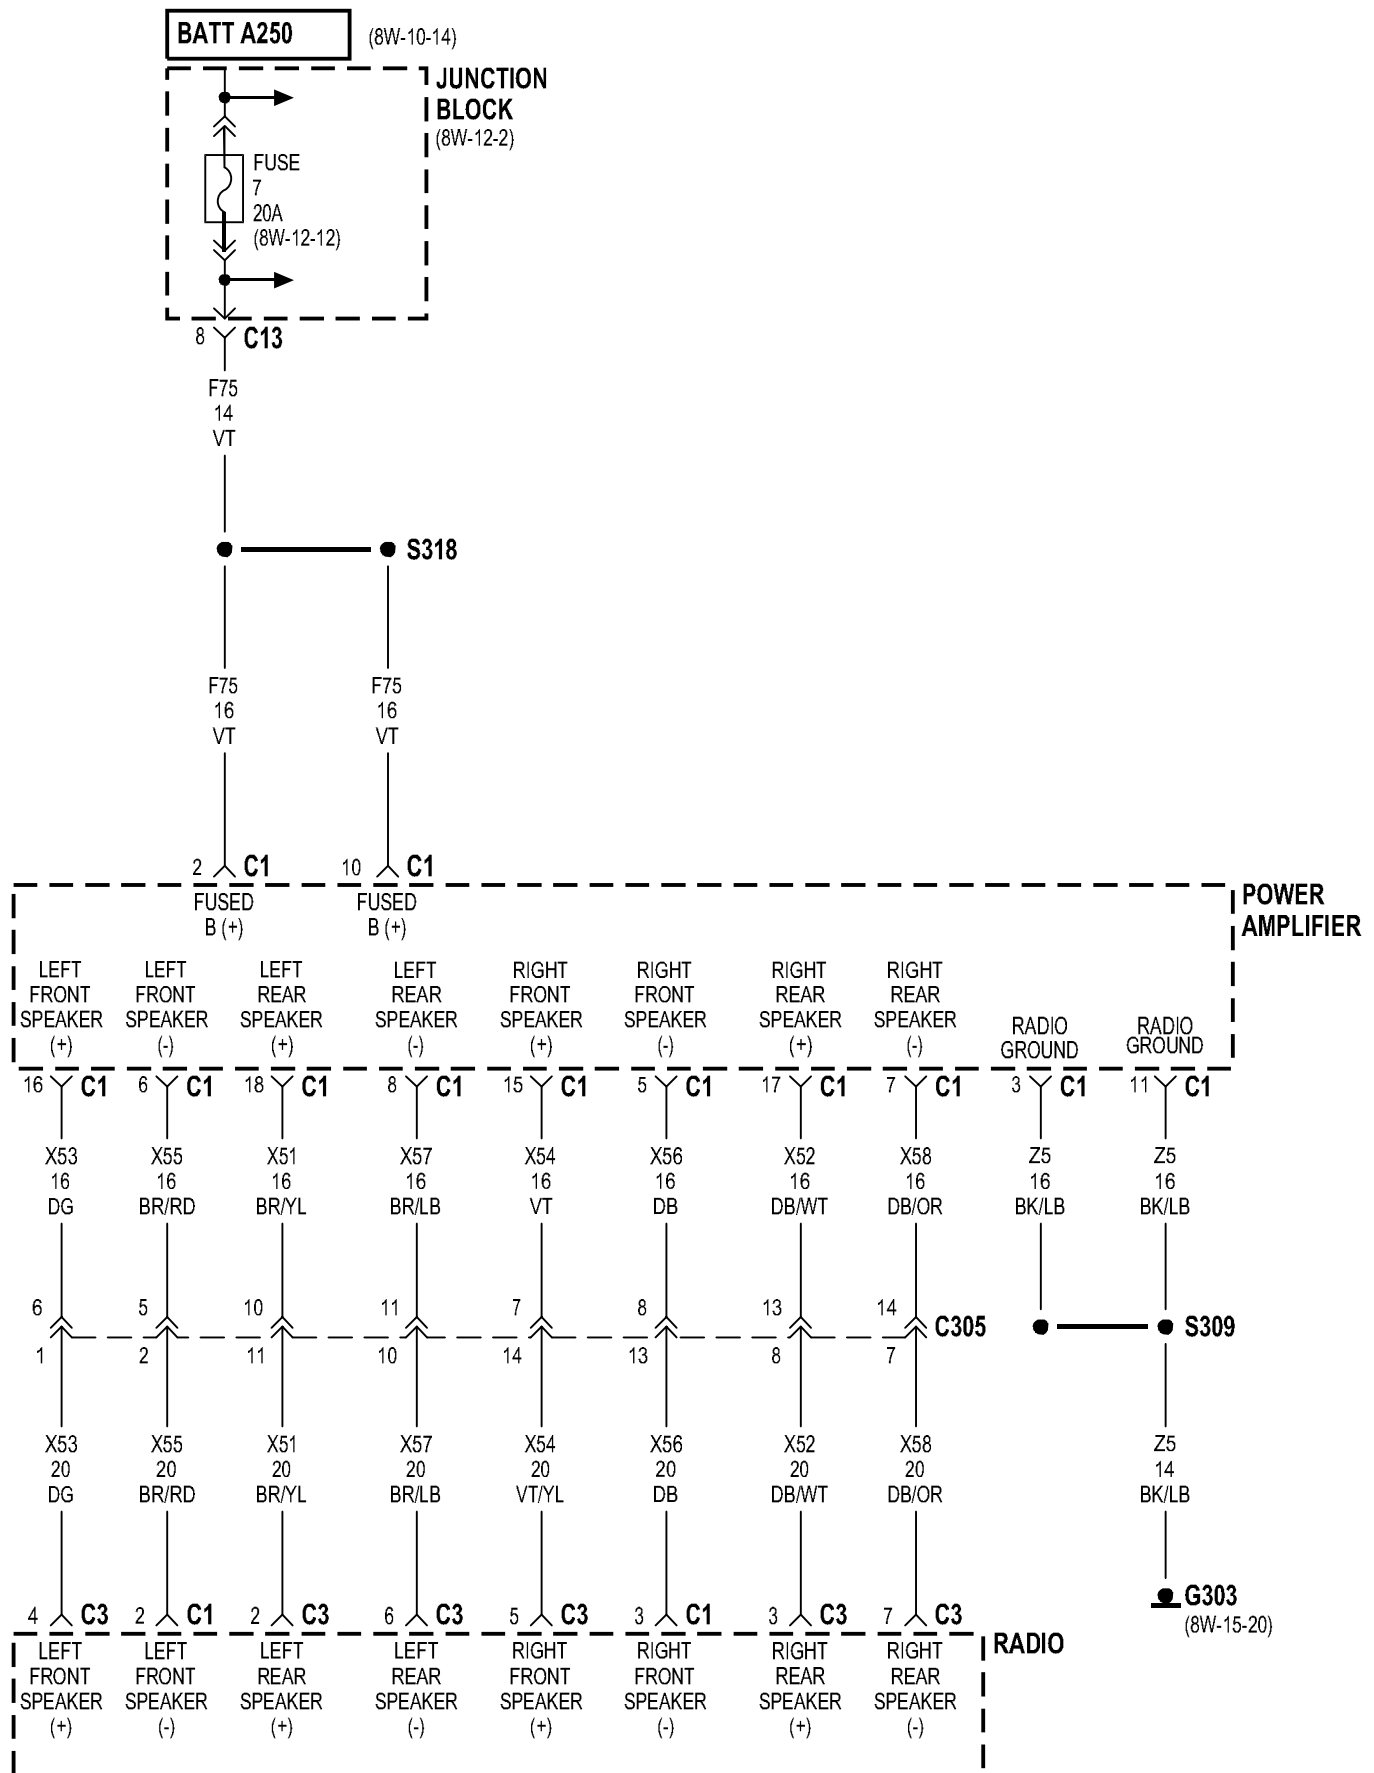

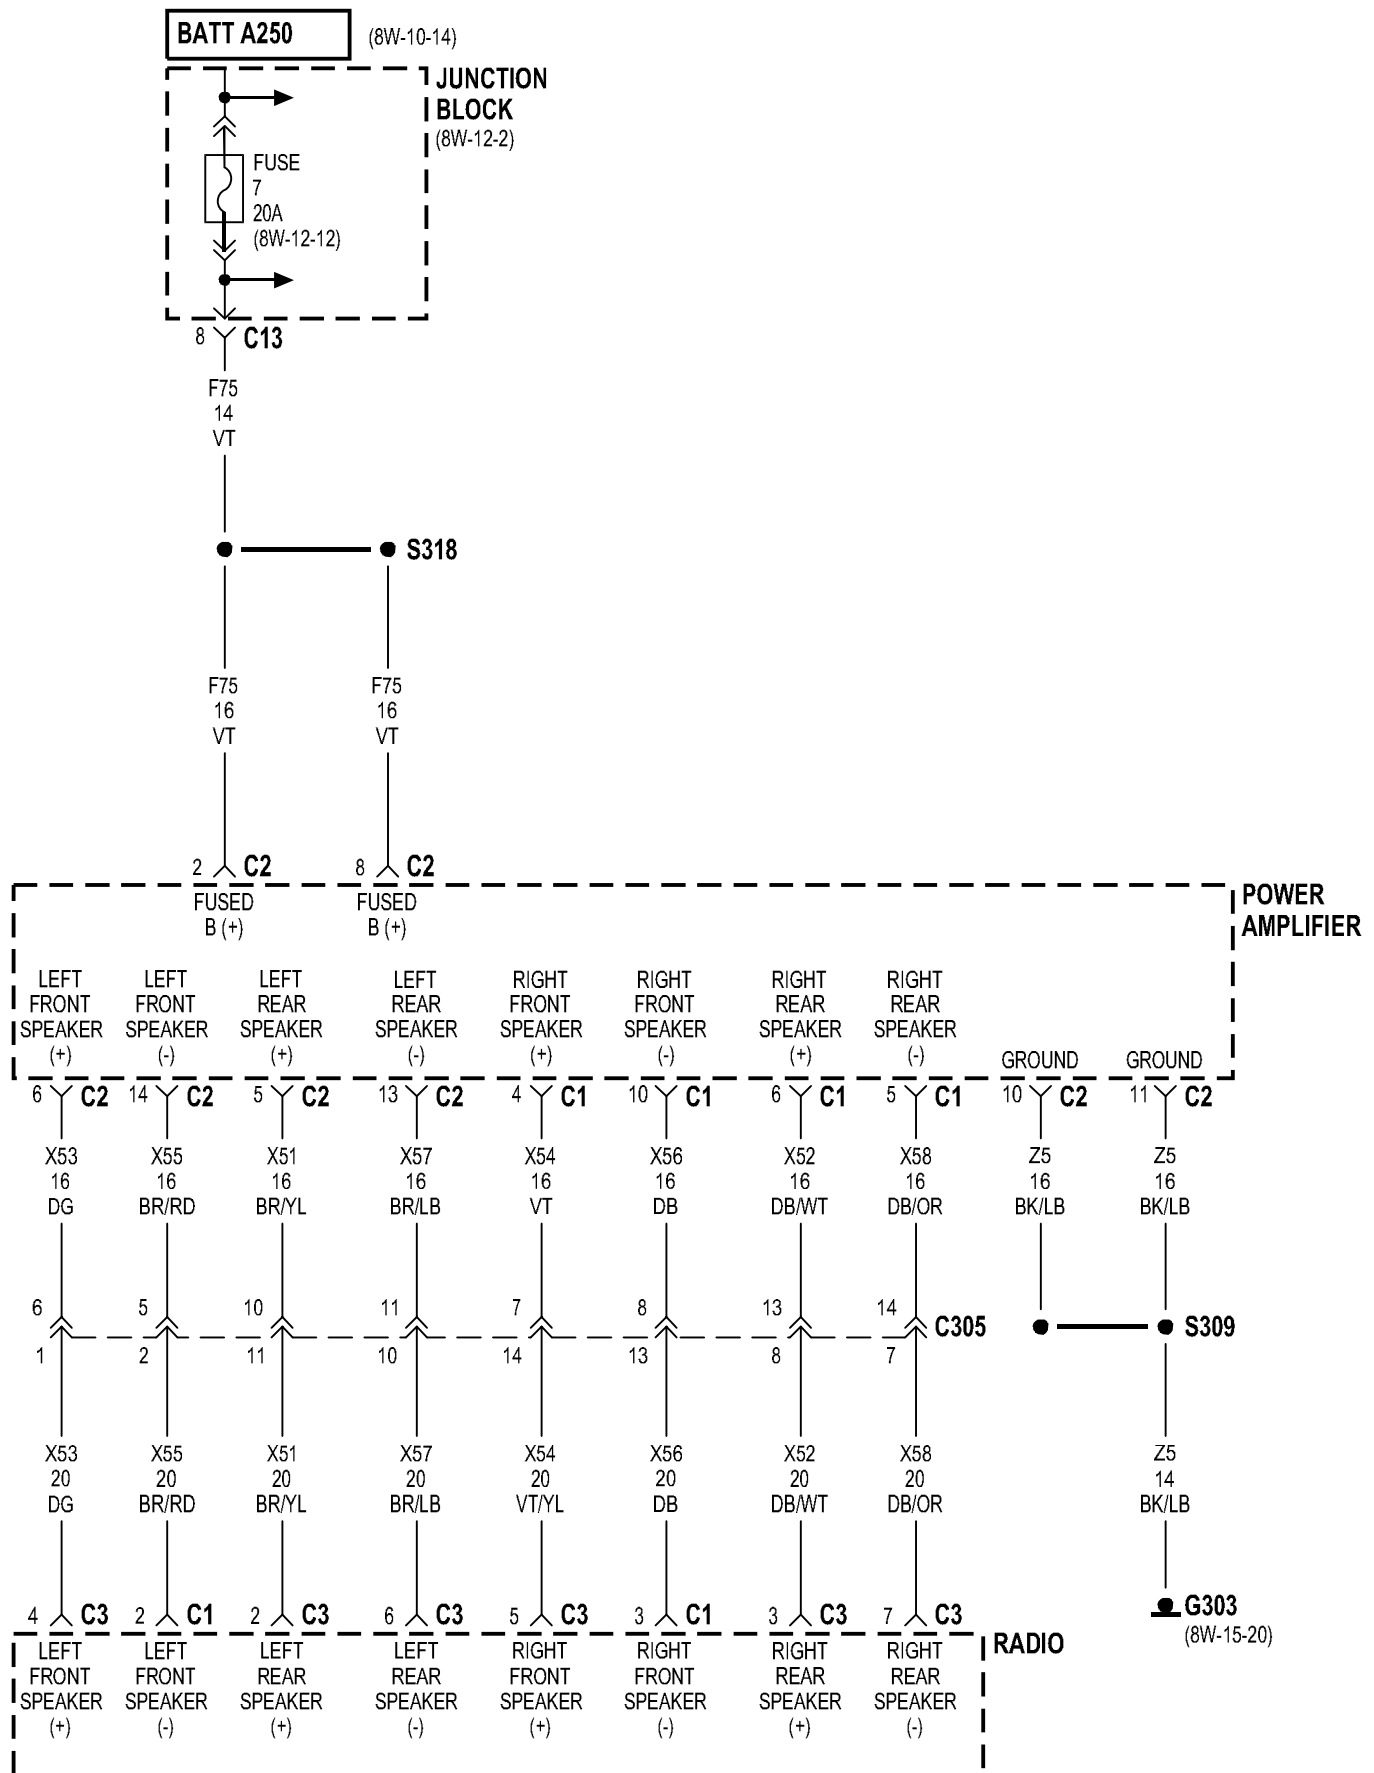


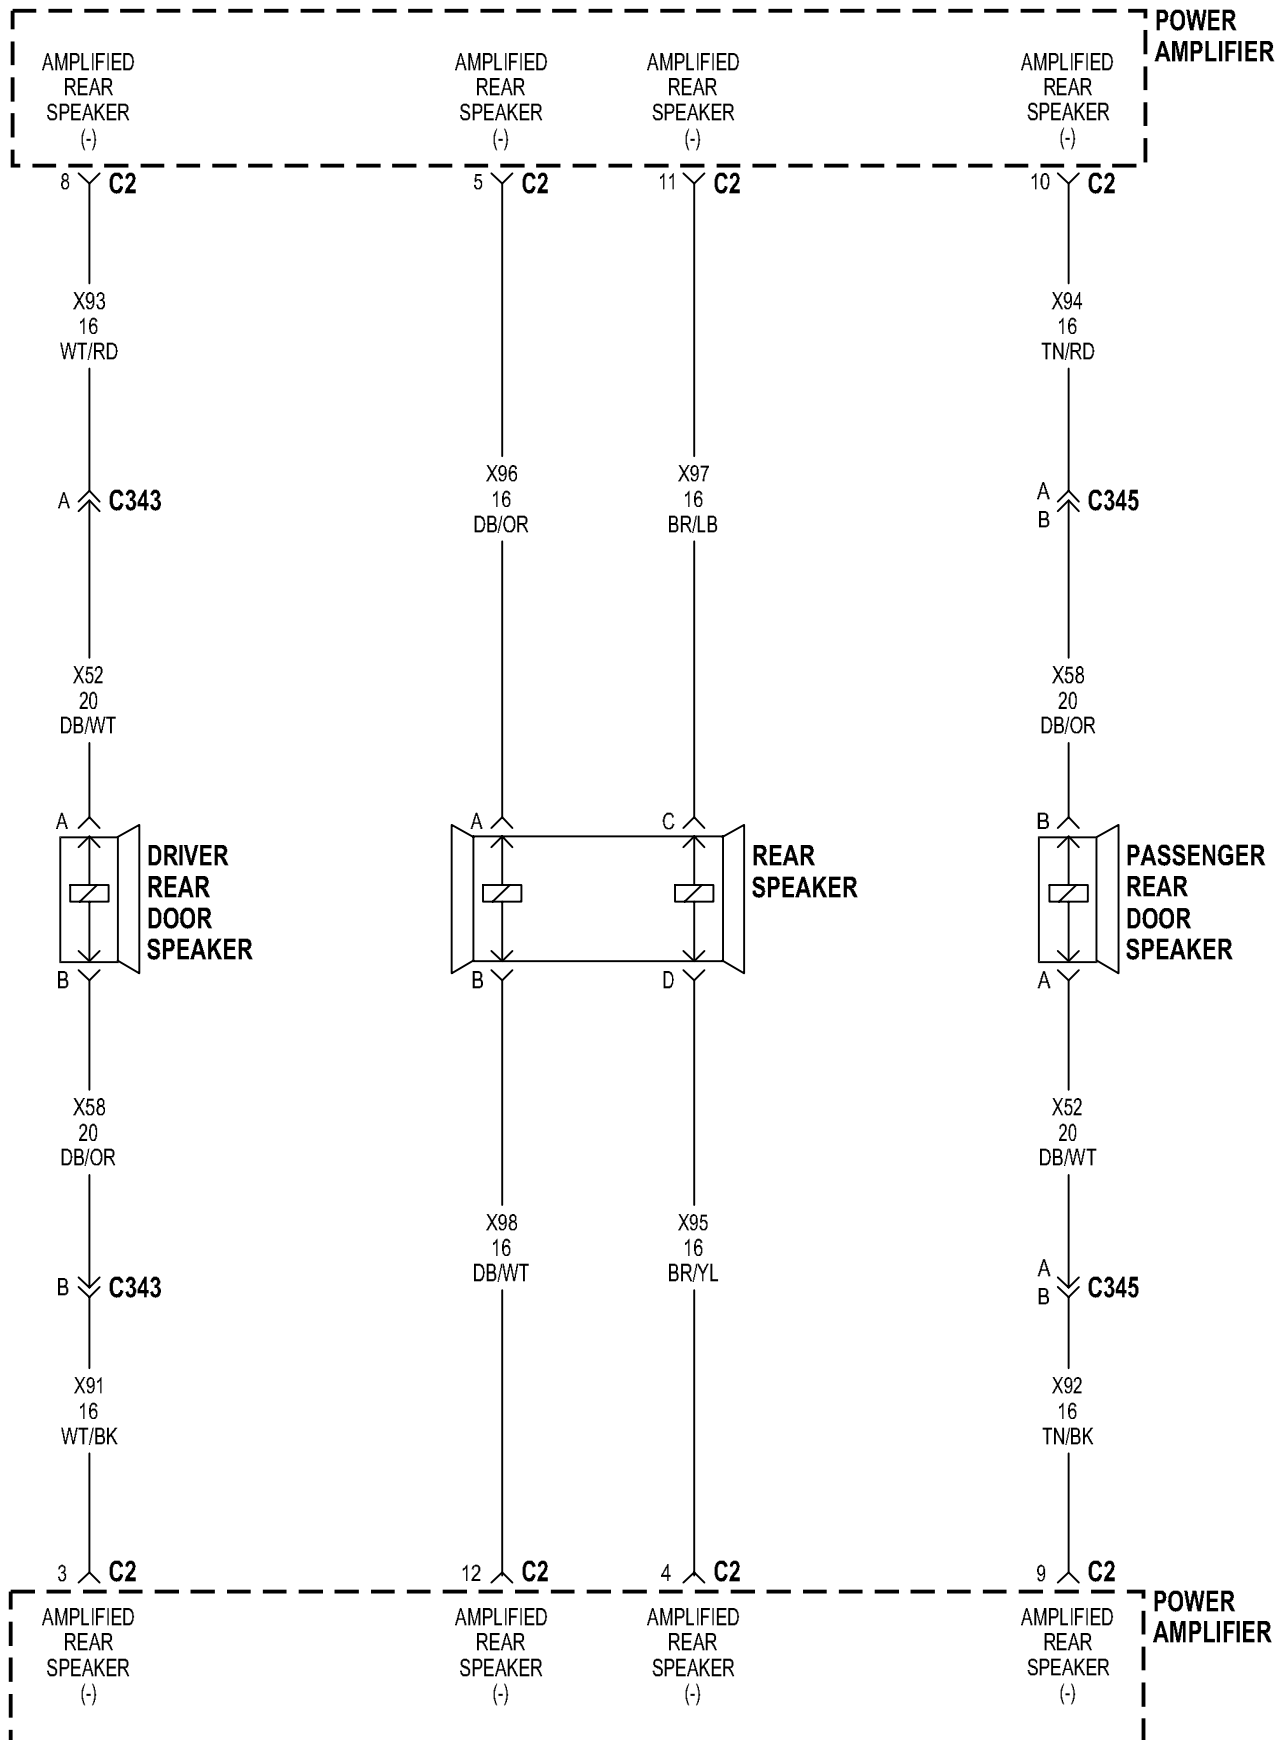

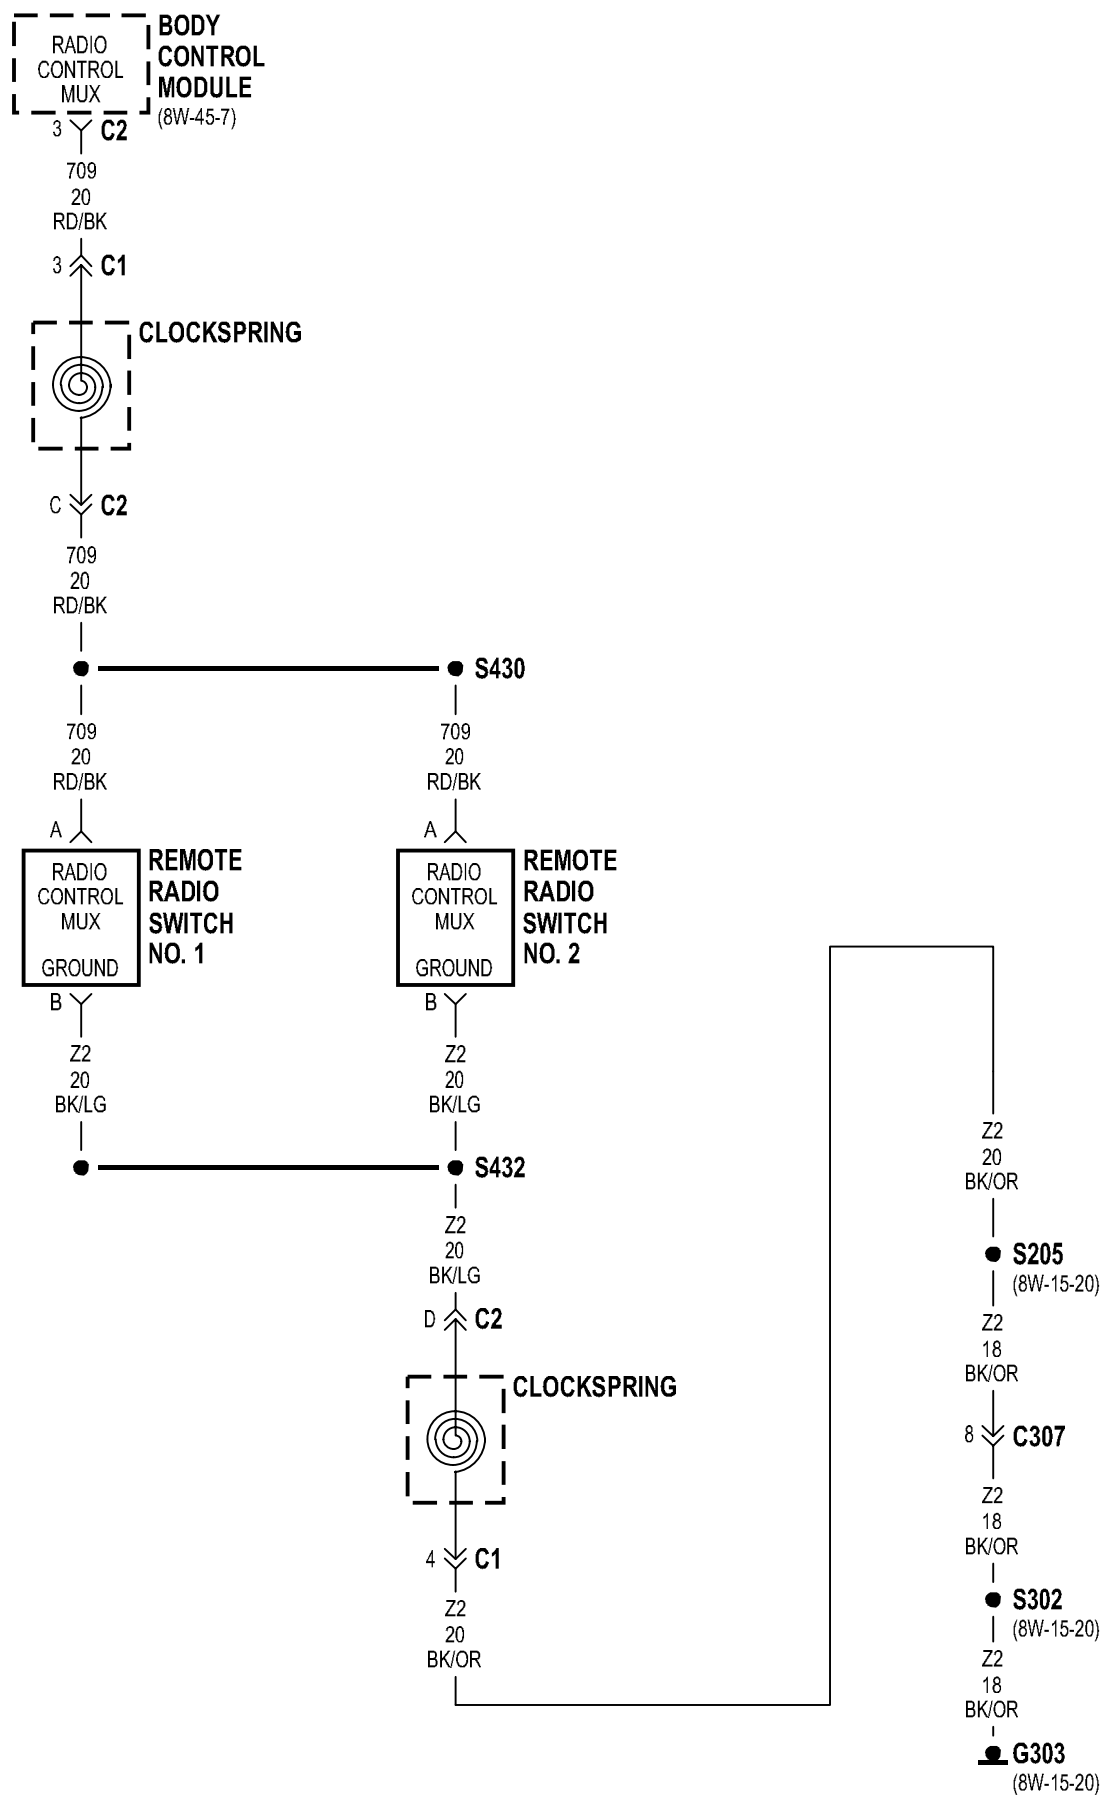


8W-48 REAR WINDOW DEFOGGER


Component	Page	Component	Page
Body Control Module	8W-48-2	Junction Block	8W-48-2
Fuse 10 (JB)	8W-48-2	Rear Window Defogger	8W-48-2
G300	8W-48-2	Rear Window Defogger Relay	8W-48-2
G303	8W-48-2	Rear Window Defogger Switch	8W-48-2

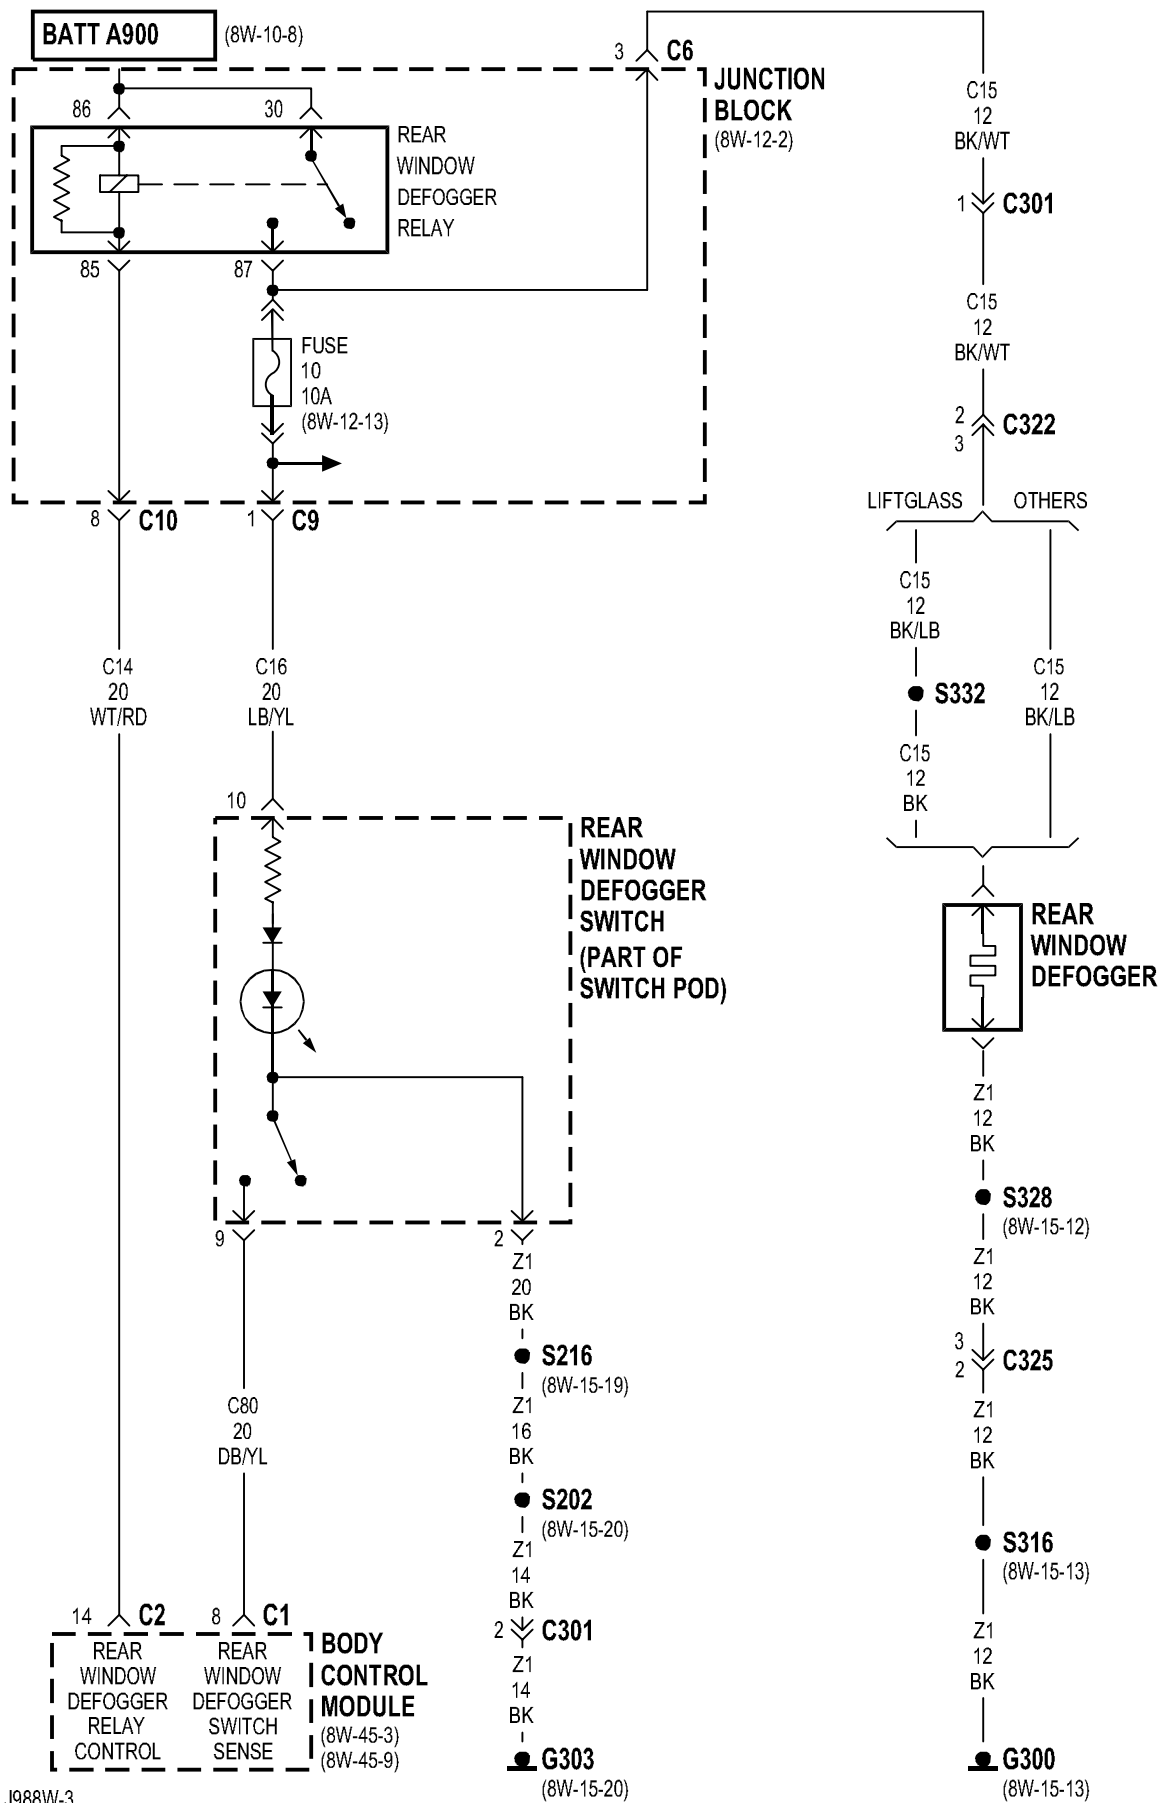

8W-49 OVERHEAD CONSOLE


Component	Page	Component	Page
Automatic Day/Night Mirror	8W-49-2	Fuse 16 (JB)	8W-49-2, 3
Courtesy Lamp Relay	8W-49-3	G303	8W-49-3
Data Link Connector	8W-49-2	Junction Block	8W-49-2, 3
Fuse 6 (JB)	8W-49-2	Overhead Console	8W-49-2, 3

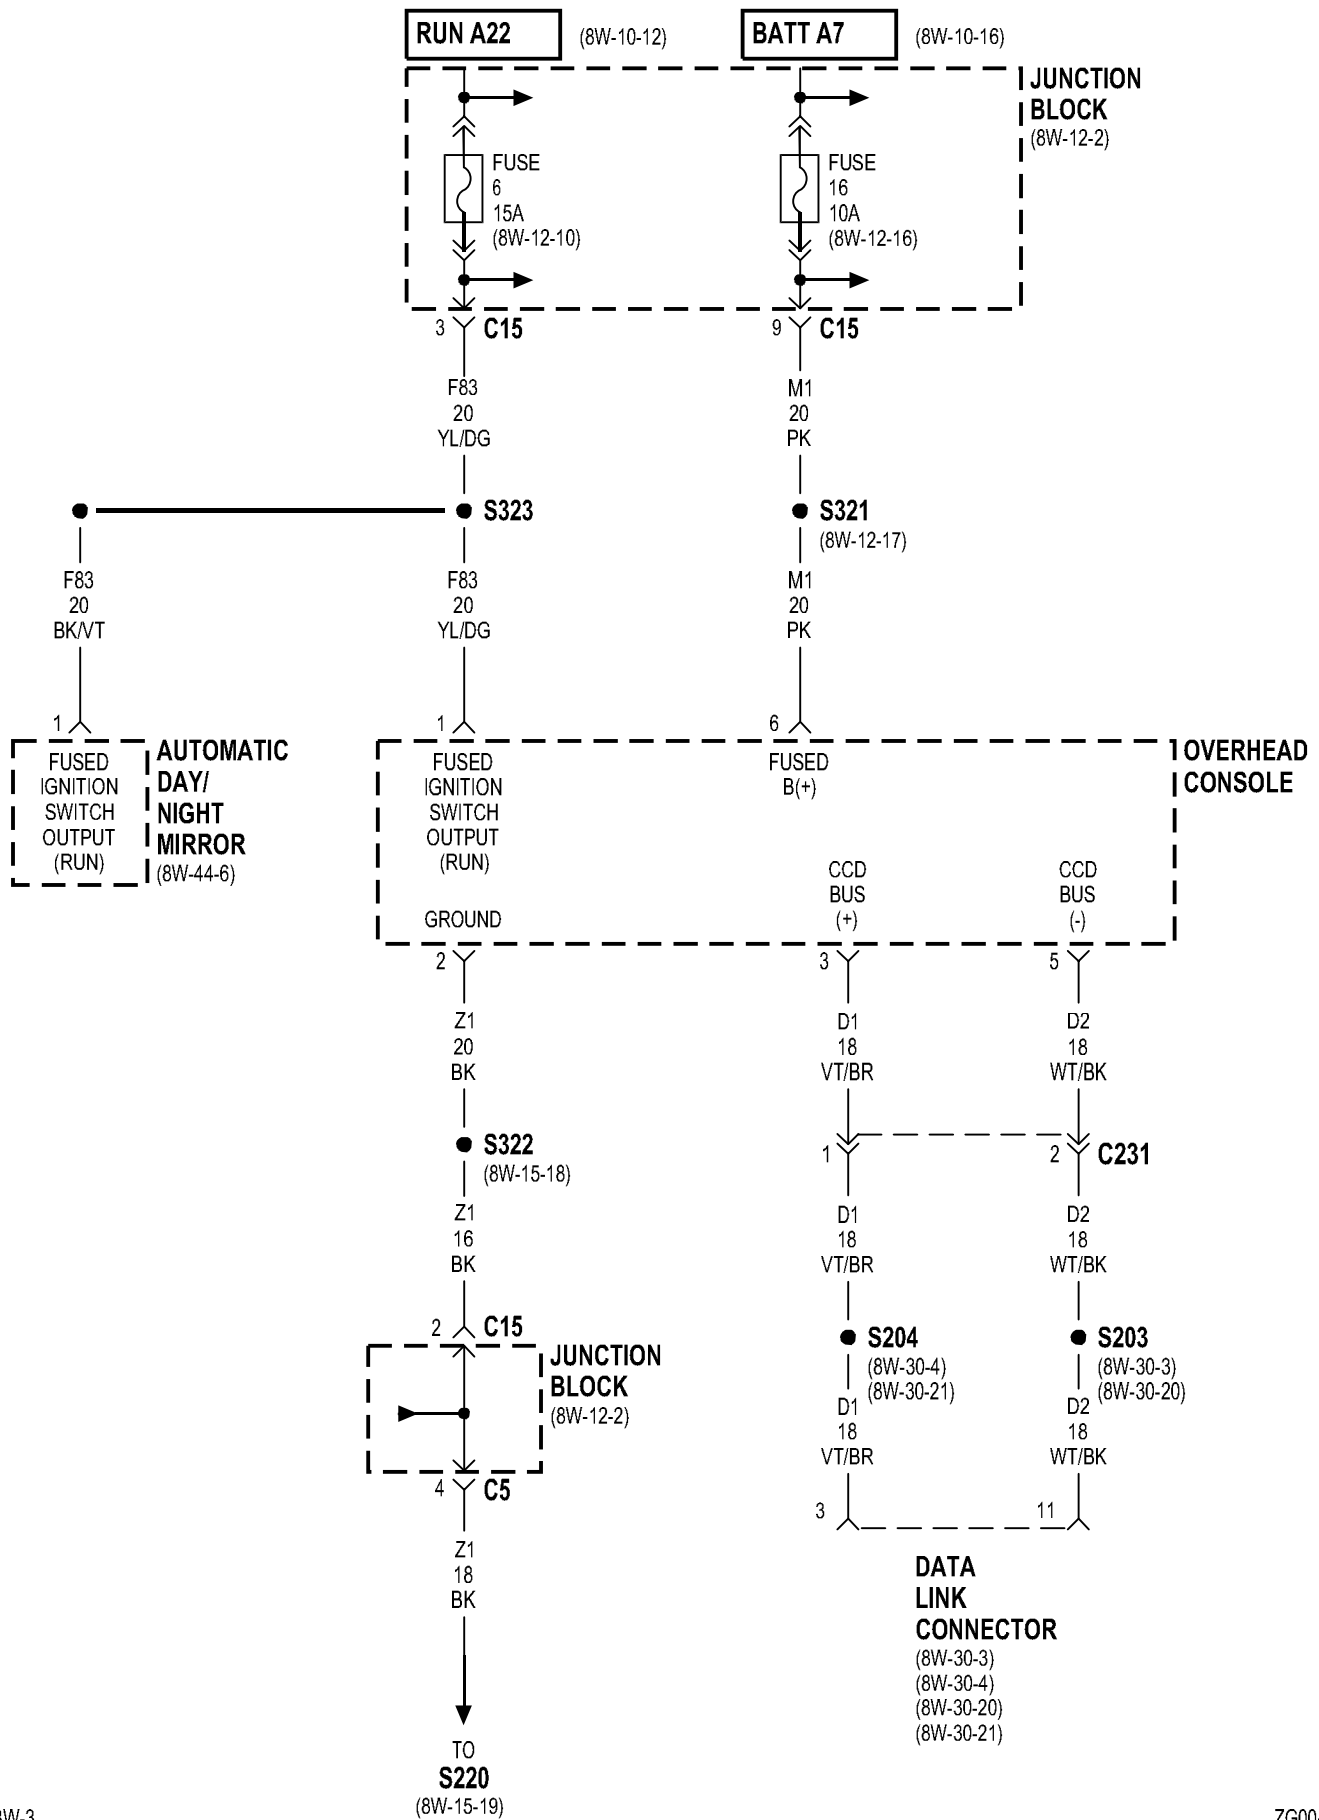


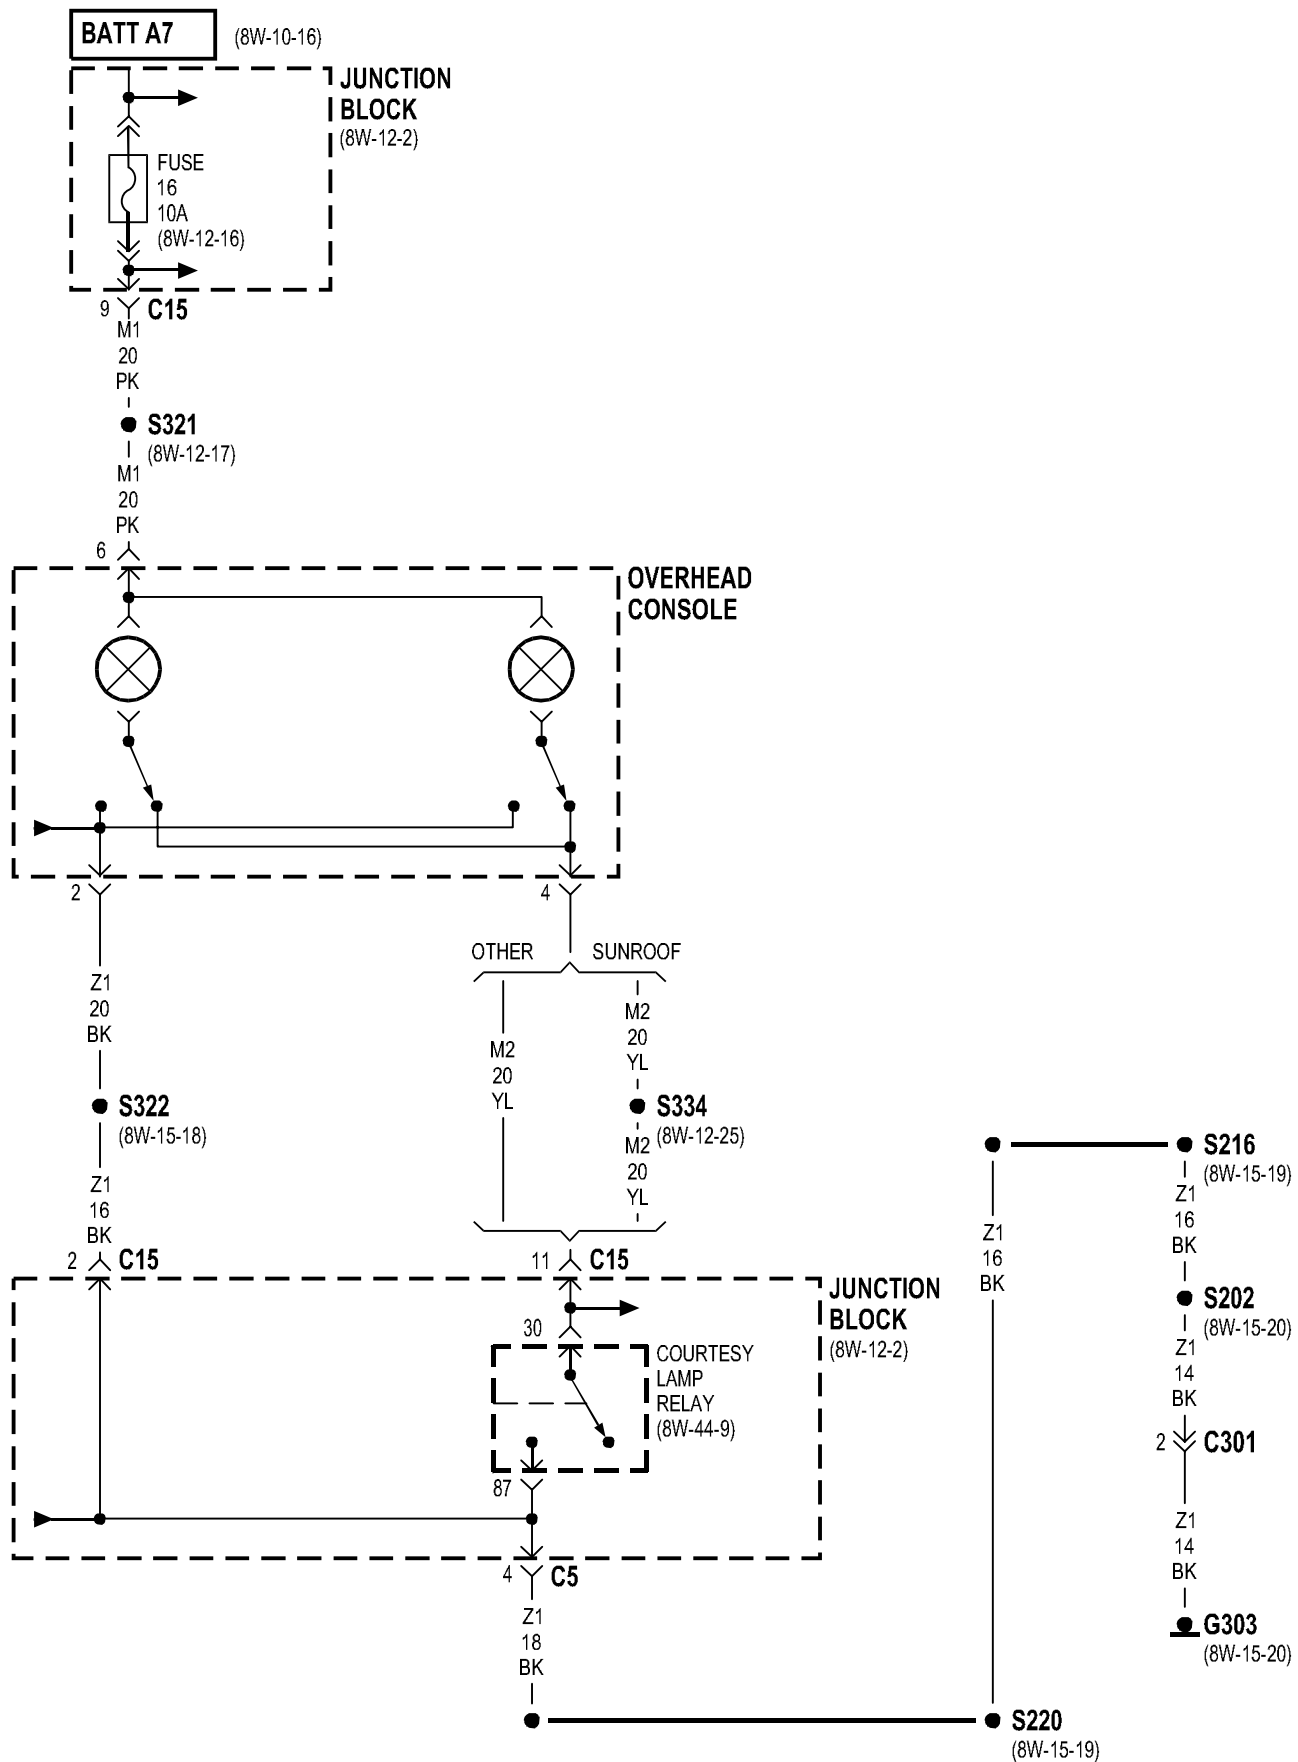


8W-50 FRONT LIGHTING

Component	Page	Component	Page
Automatic Headlamp Light Sensor/ Vtss Led	8W-50-6	Instrument Cluster	8W-50-10, 11
Automatic Headlamp Relay	8W-50-2	Junction Block	8W-50-2, 5, 7, 8, 9, 11, 12
Body Control Module	8W-50-2, 3, 4, 5, 6, 7, 8, 9	Left Fog Lamp	8W-50-7
Brake Pressure Switch	8W-50-5	Left Front Park Lamp.	8W-50-10
Circuit Breaker	8W-50-6	Left Front Side Marker Lamp.	8W-50-10
Daytime Running Lamp Module	8W-50-3, 5	Left Front Turn Signal Lamp	8W-50-10
Fog Lamp Relay	8W-50-7	Left Headlamp	8W-50-3, 4
Fog Lamp Switch	8W-50-8	Left Headlamp Leveling Motor	8W-50-12
Fuse 6 (JB)	8W-50-5, 12	Left Side Repeater	8W-50-10
Fuse 13 (PDC).	8W-50-2, 5	Park Brake Switch	8W-50-5
Fuse 17 (JB)	8W-50-8, 9	Park Lamp Relay	8W-50-8, 9
Fuse 18 (JB)	8W-50-2	Power Distribution Center	8W-50-2, 5, 7
Fuse 19 (PDC)	8W-50-7	Right Fog Lamp	8W-50-7
G106	8W-50-3, 4, 7, 11	Right Front Park Lamp.	8W-50-11
G107	8W-50-5	Right Front Side Marker Lamp.	8W-50-11
G109	8W-50-4, 7, 10	Right Front Turn Signal Lamp	8W-50-11
G303	8W-50-6, 8, 12	Right Headlamp	8W-50-3, 4
Headlamp Dimmer Switch	8W-50-2	Right Headlamp Leveling Motor	8W-50-12
Headlamp Leveling Switch	8W-50-12	Right Side Repeater	8W-50-11
Headlamp Switch	8W-50-2, 6, 8	Turn Signal/Hazard Warning Switch. . .	8W-50-10, 11

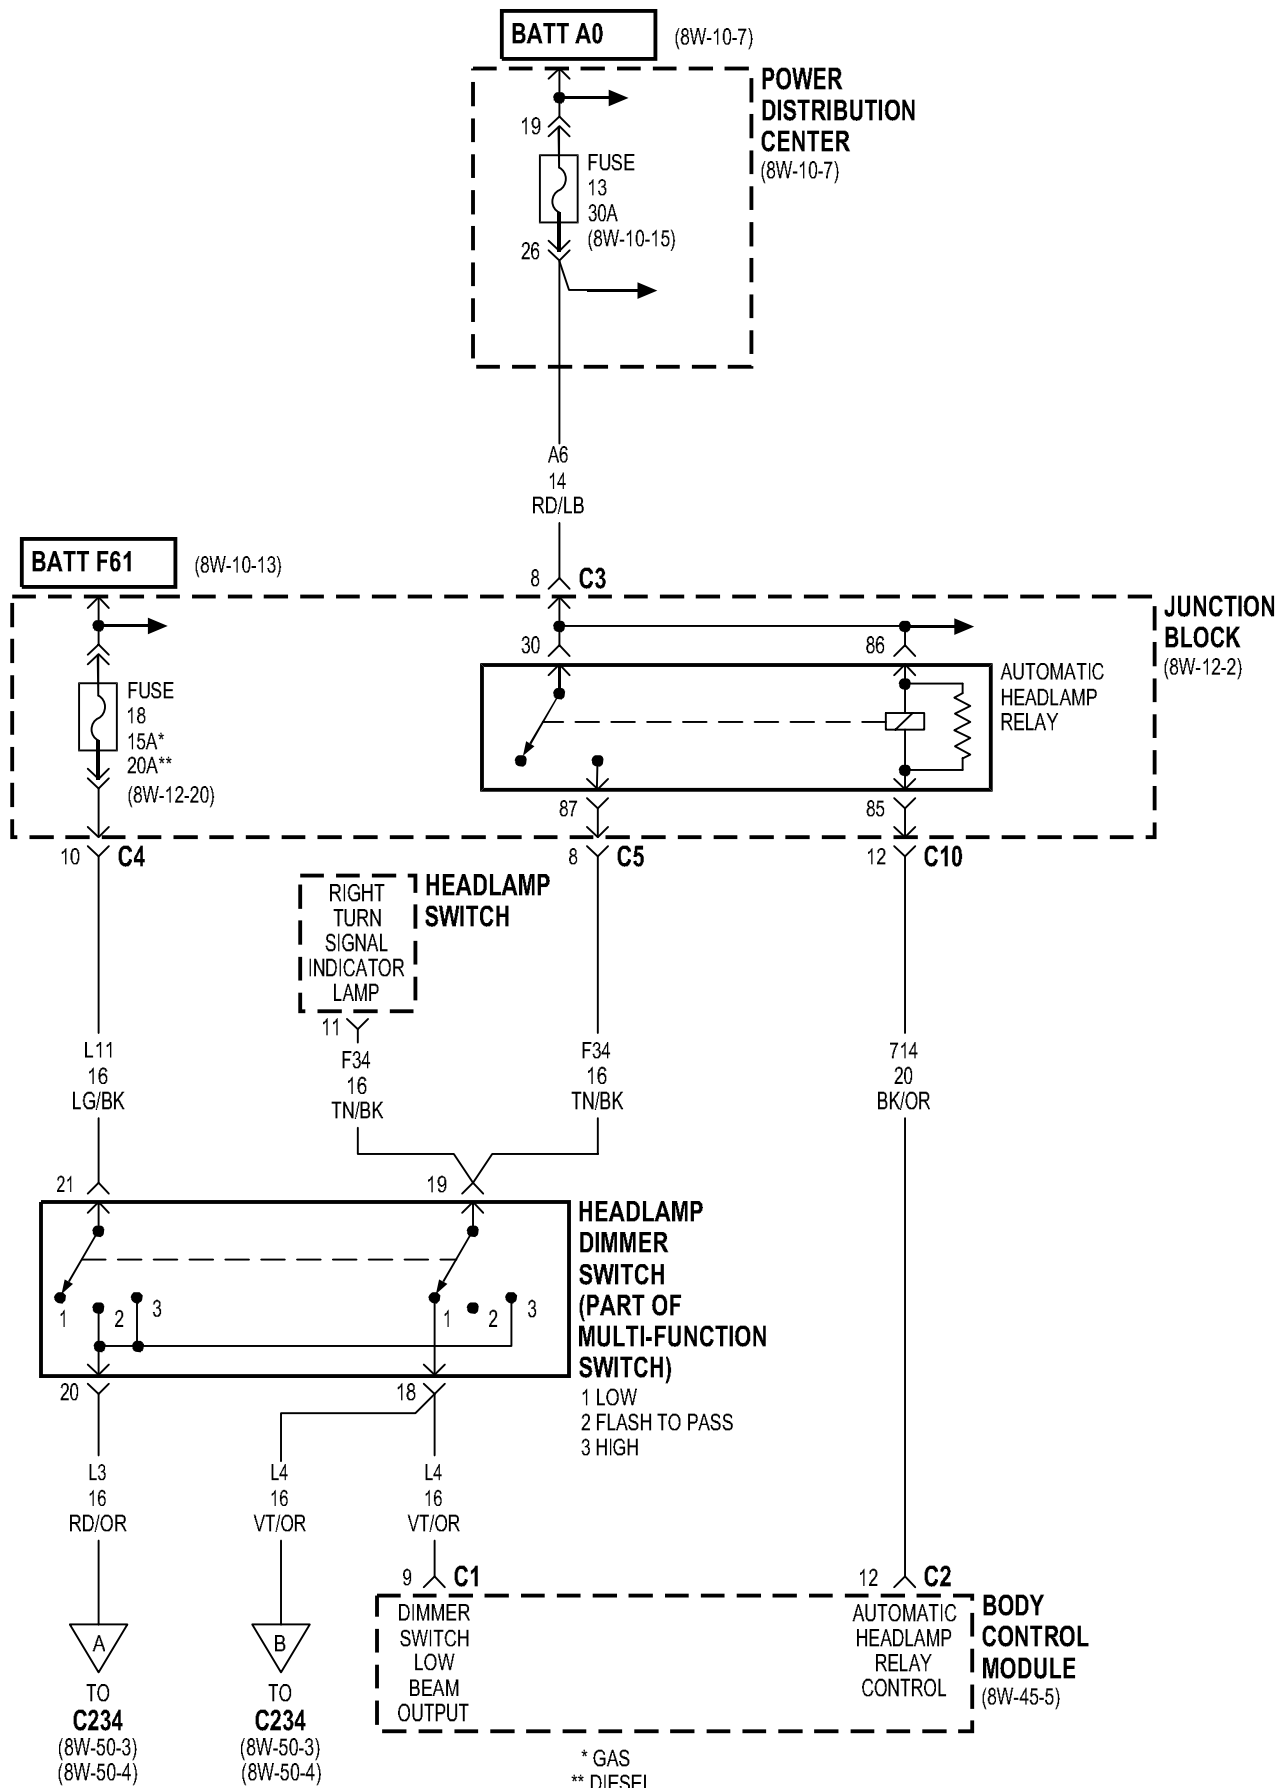

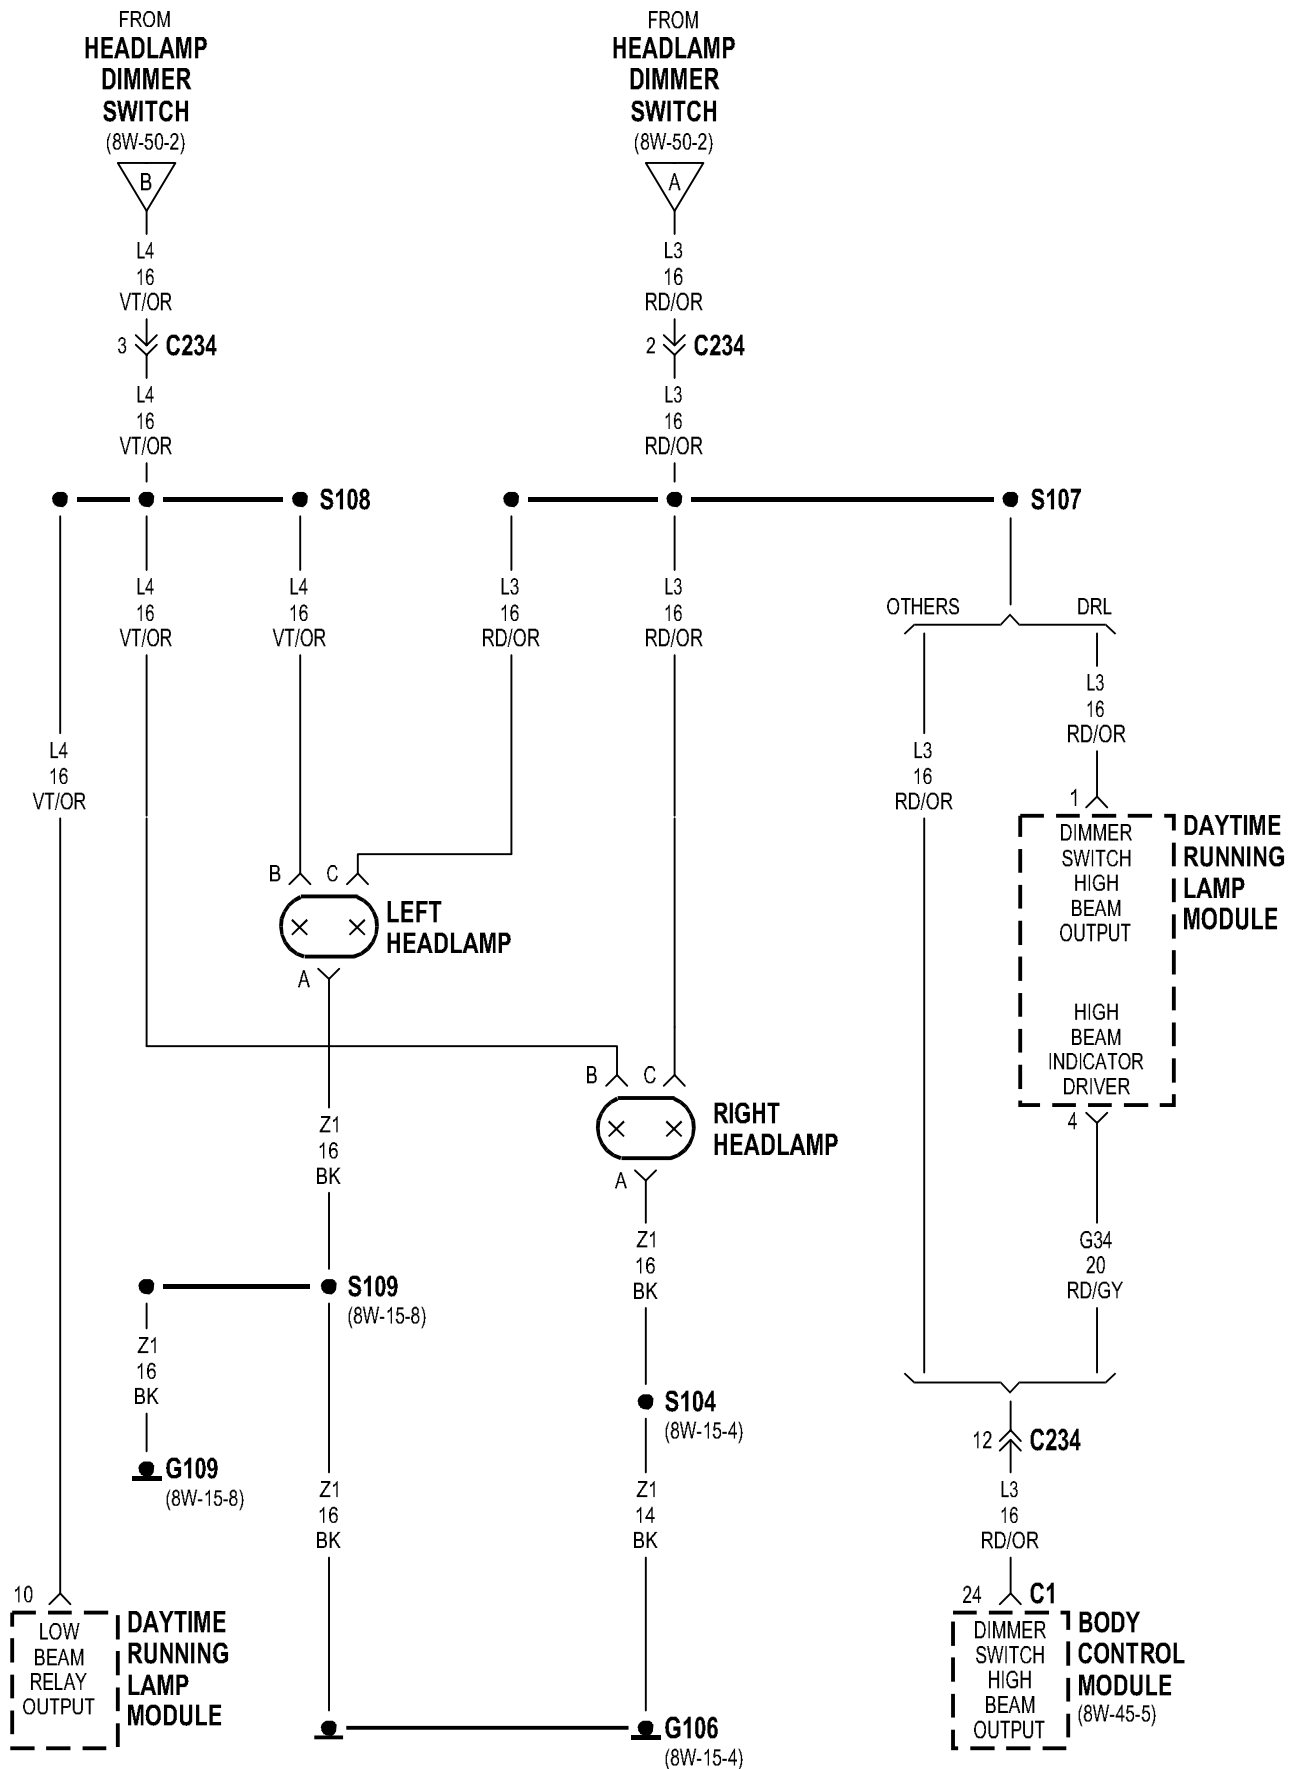

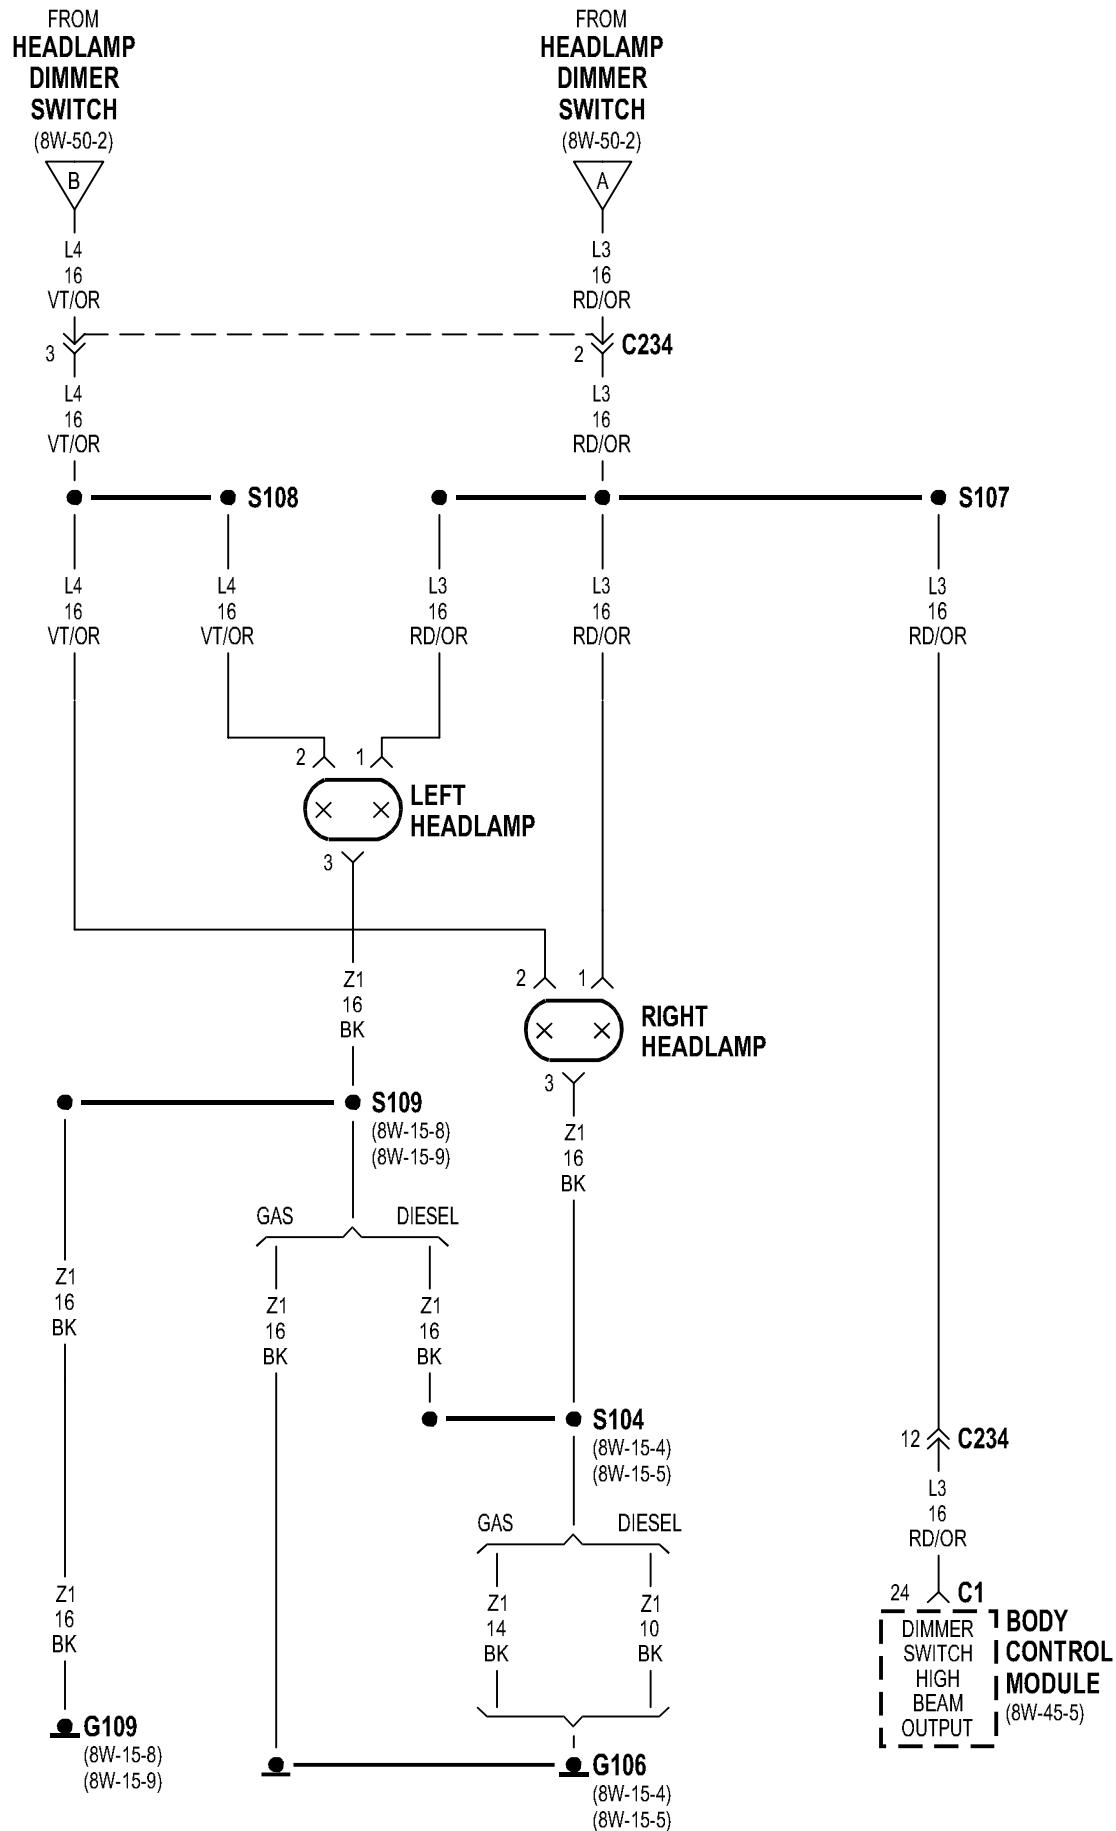

DRL

