





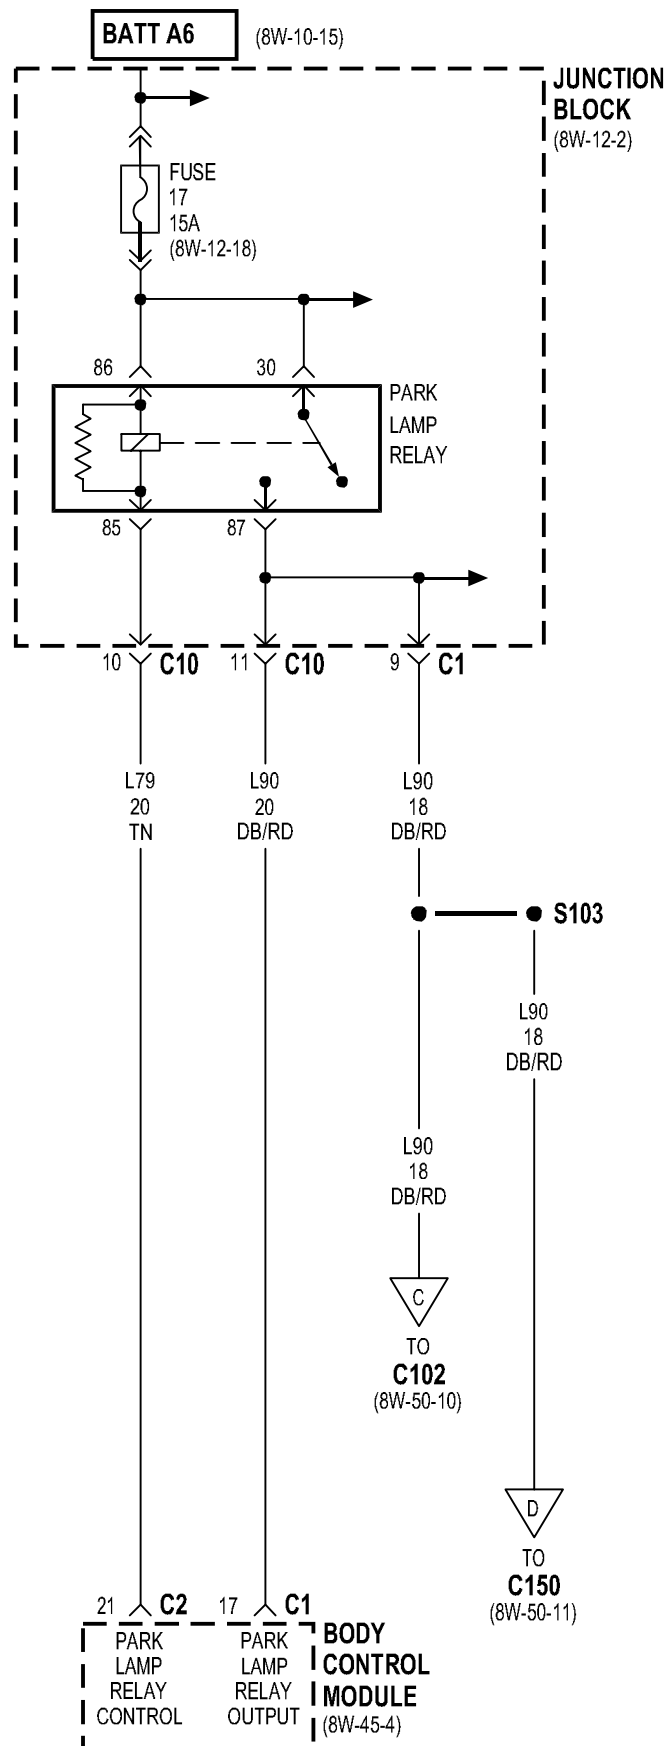

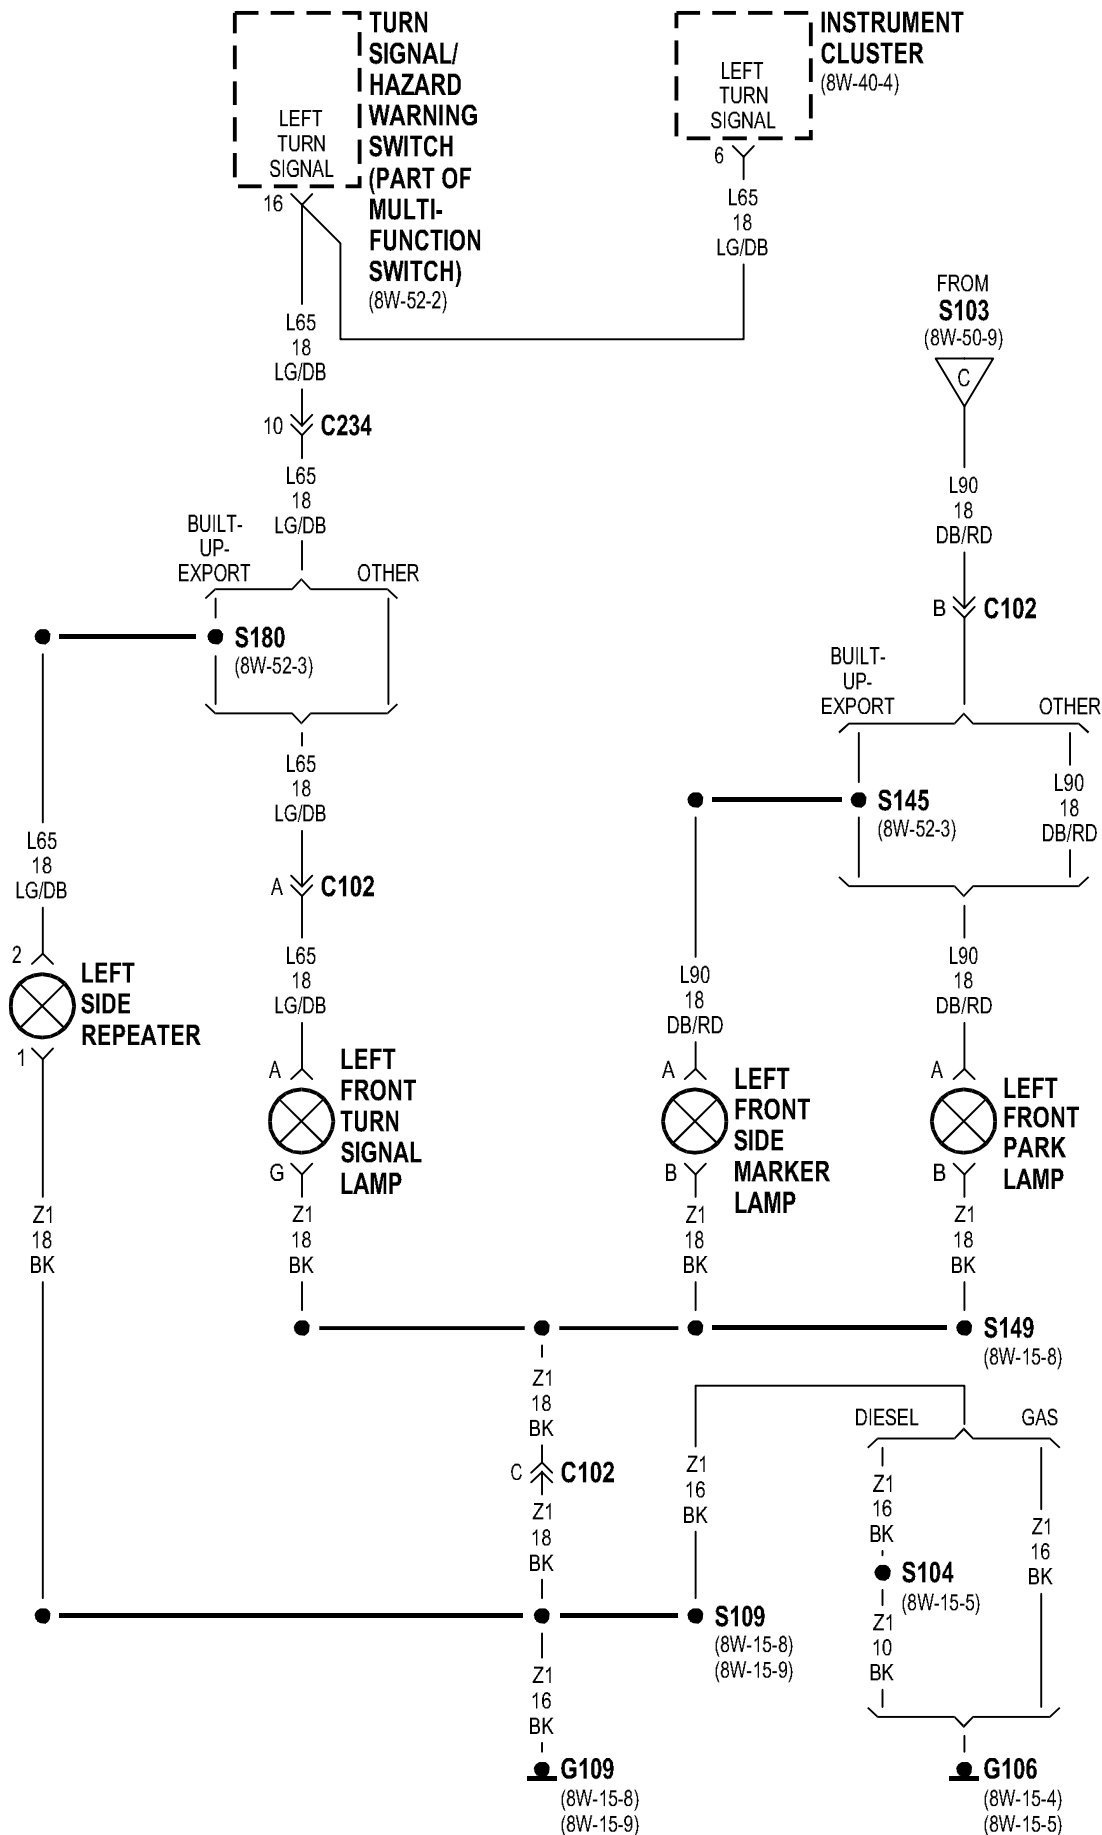


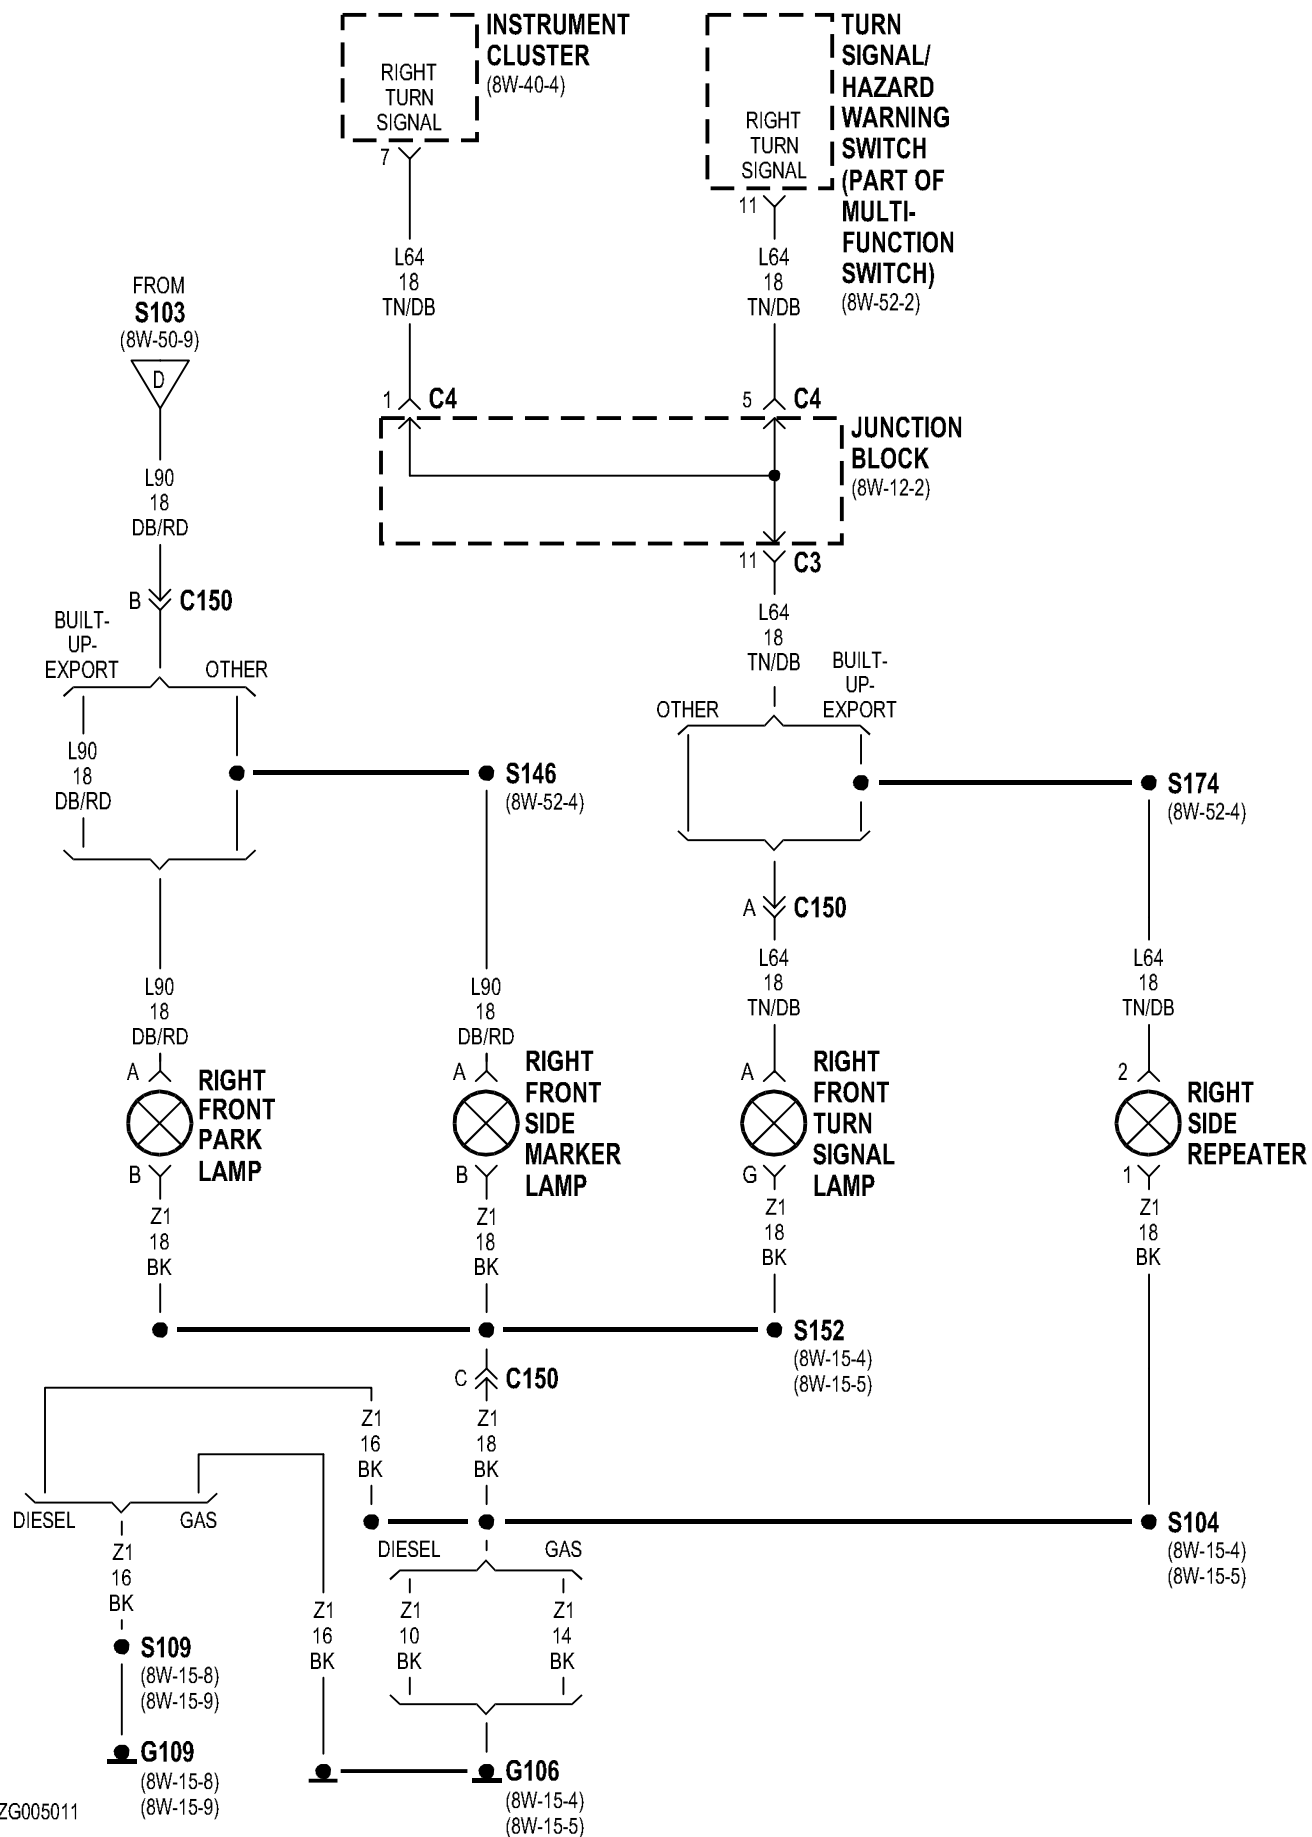

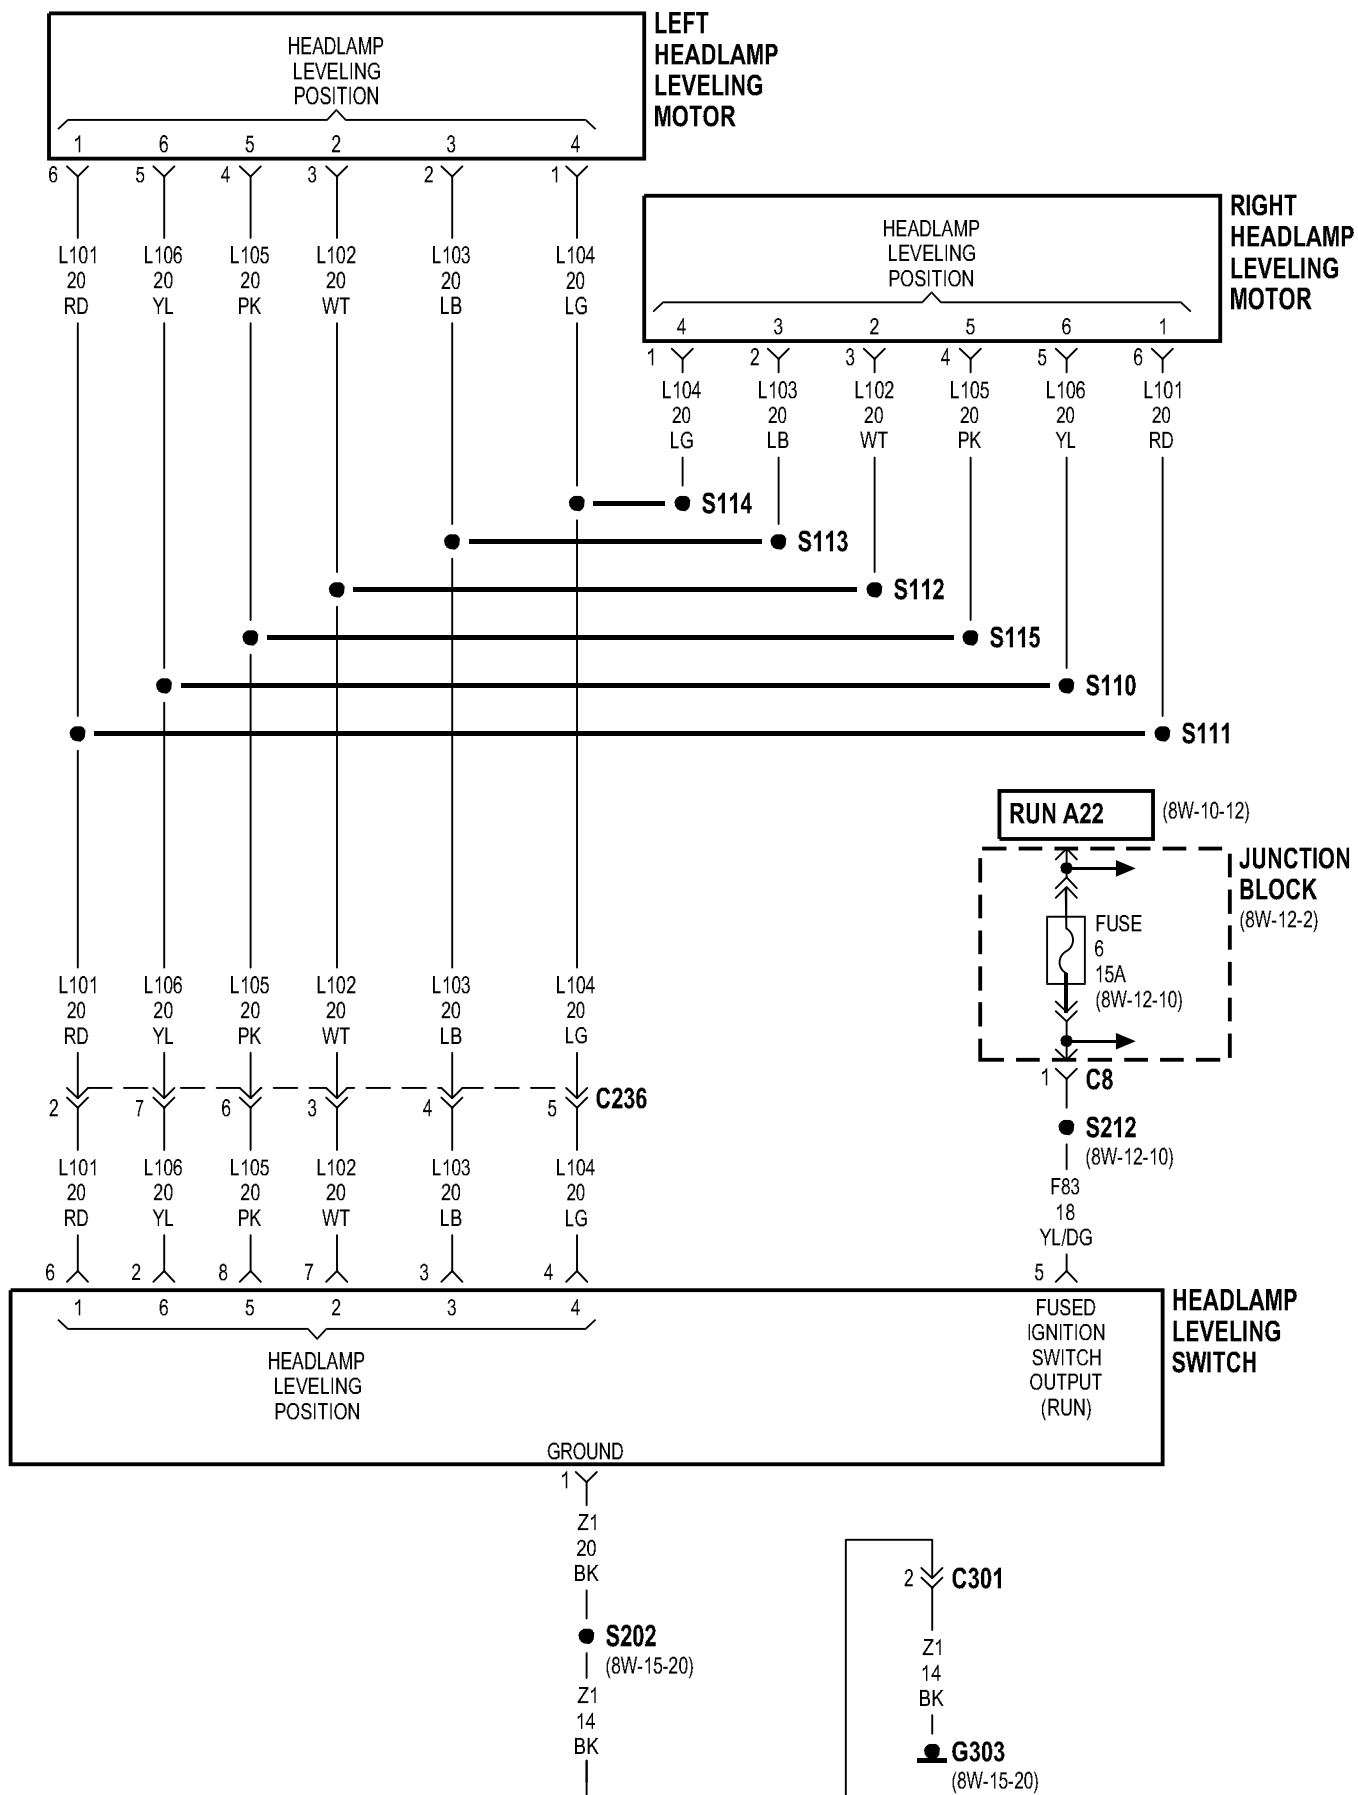



8W-51 REAR LIGHTING

Component	Page	Component	Page
Aftermarket Trailer Tow Connector	8W-51-4, 6	Lamp Outage Module	8W-51-2, 3, 4, 5, 6, 7
Back-Up Lamp Switch	8W-51-5	Left Back-Up Lamp	8W-51-6
Body Control Module	8W-51-2	Left License Lamp	8W-51-6
Center High Mounted Stop Lamp No. 1 . . .	8W-51-5	Left Rear Fog Lamp	8W-51-7
Center High Mounted Stop Lamp No. 2 . . .	8W-51-5	Left Rear Side Marker Lamp	8W-51-3
Center High Mounted Stop Lamp No. 3 . . .	8W-51-5	Left Tail/Stop Lamp	8W-51-3, 4
Factory Trailer Tow Connector	8W-51-6	Park Lamp Relay	8W-51-2
Fuse 5 (JB)	8W-51-2	Park/Neutral Position Switch	8W-51-5
Fuse 6 (JB)	8W-51-5	Rear Fog Lamp Relay	8W-51-7
Fuse 9 (JB)	8W-51-2	Right Back-Up Lamp	8W-51-6
Fuse 15 (JB)	8W-51-7	Right License Lamp	8W-51-6
Fuse 17 (JB)	8W-51-2, 7	Right Rear Fog Lamp	8W-51-7
G300	8W-51-3, 4, 5, 6, 7	Right Rear Side Marker Lamp	8W-51-3
G302	8W-51-5, 6	Right Tail/Stop Lamp	8W-51-3, 4
G303	8W-51-7	Stop Lamp Switch.	8W-51-2
Headlamp Switch	8W-51-2, 7	Trailer Tow Stop Lamp Relay	8W-51-4
Junction Block	8W-51-2, 5, 6, 7	Vehicle Information Center/ Graphic Display Module	8W-51-5

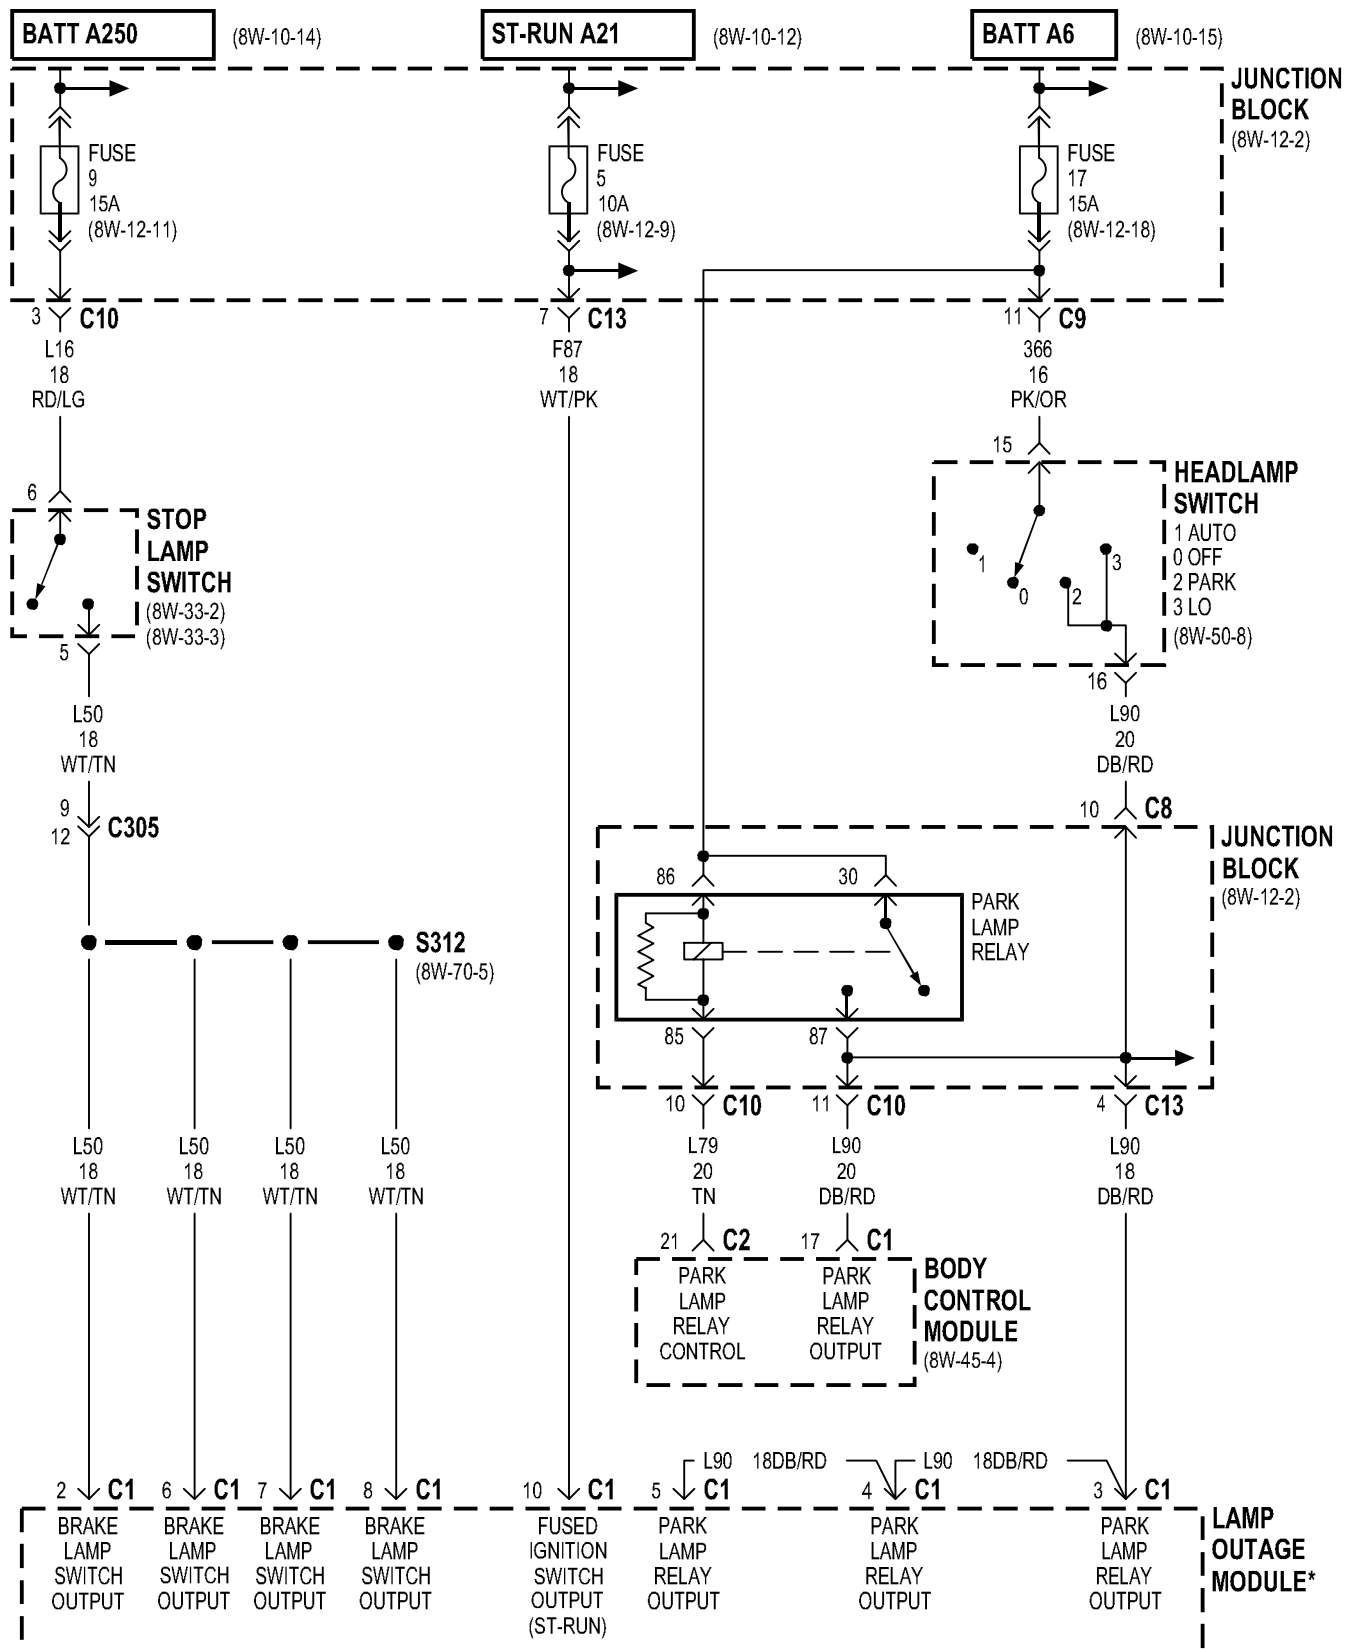



* WITHOUT LAMP OUTAGE MODULE,
C1 AND C2 MATE TO MAKE C316

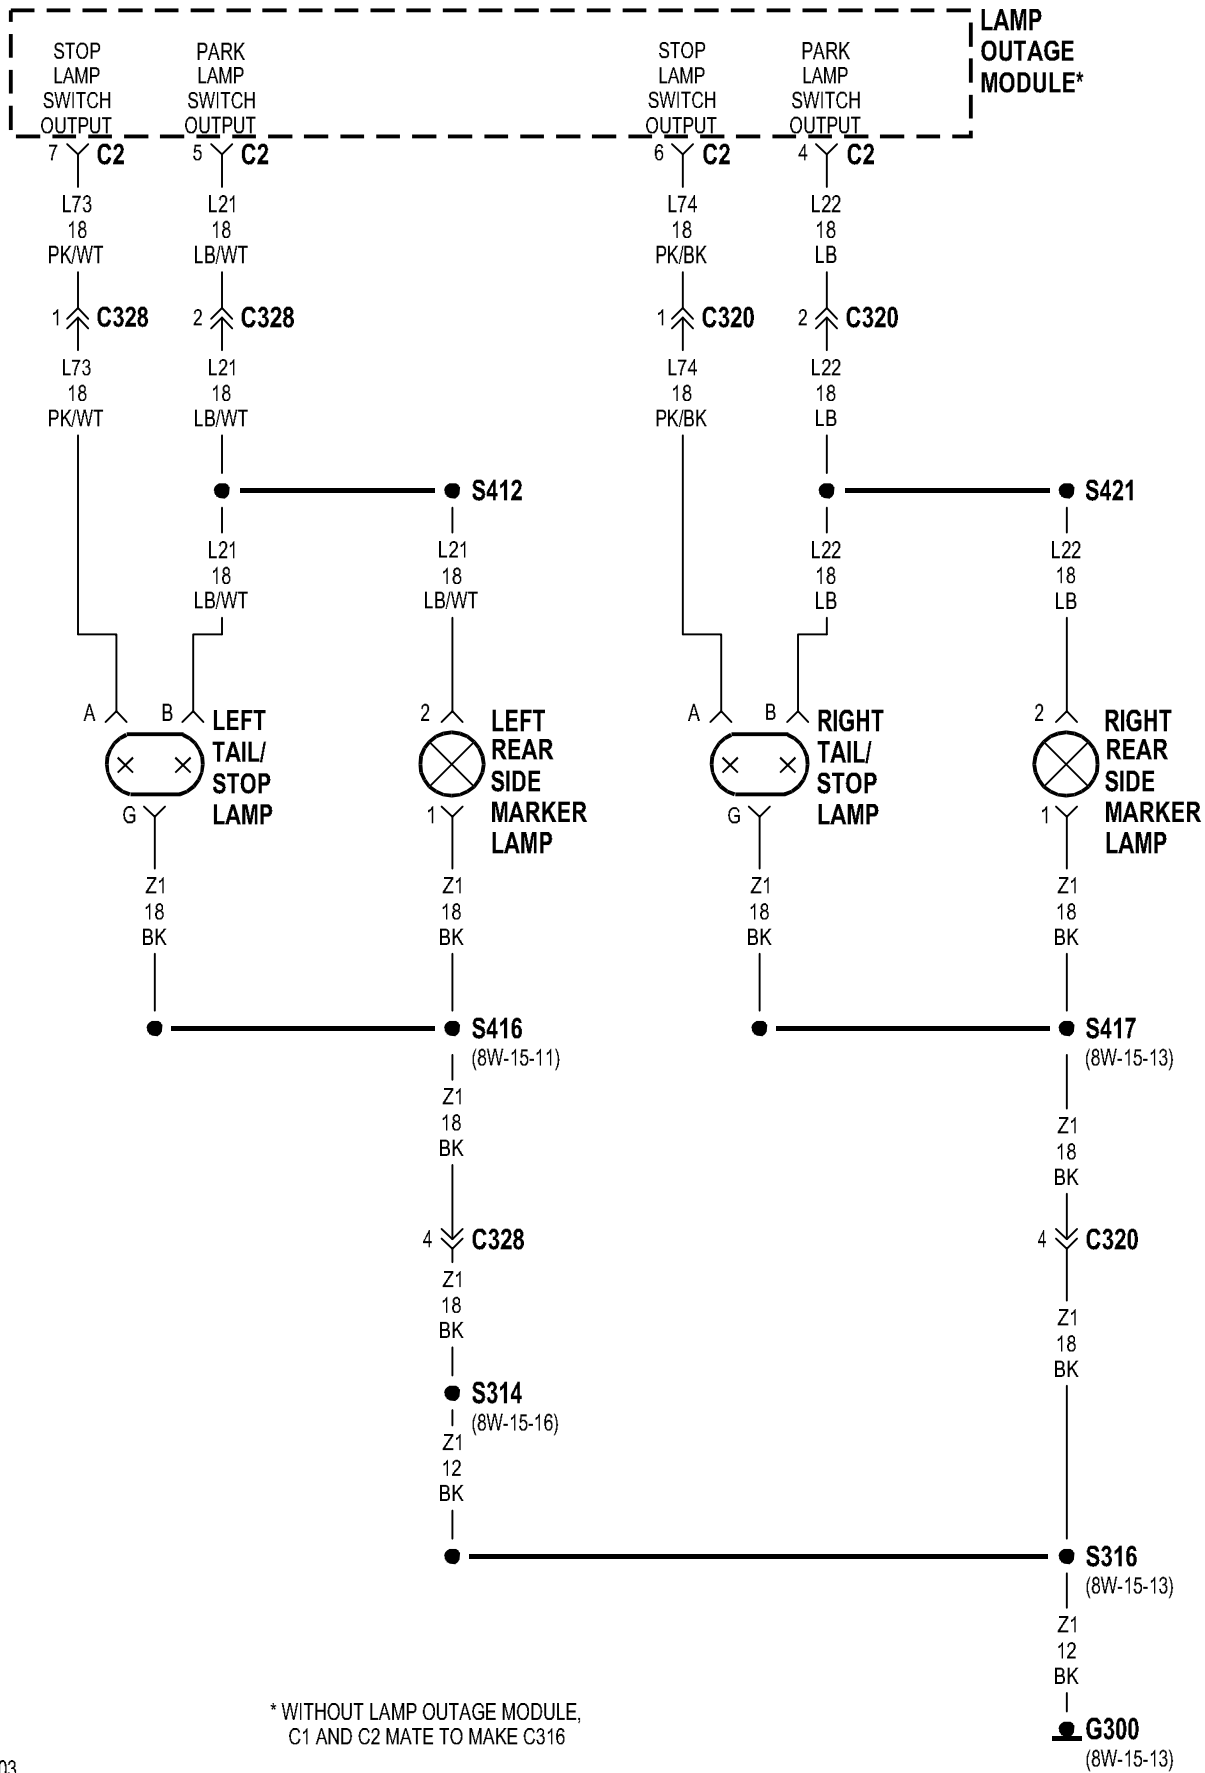


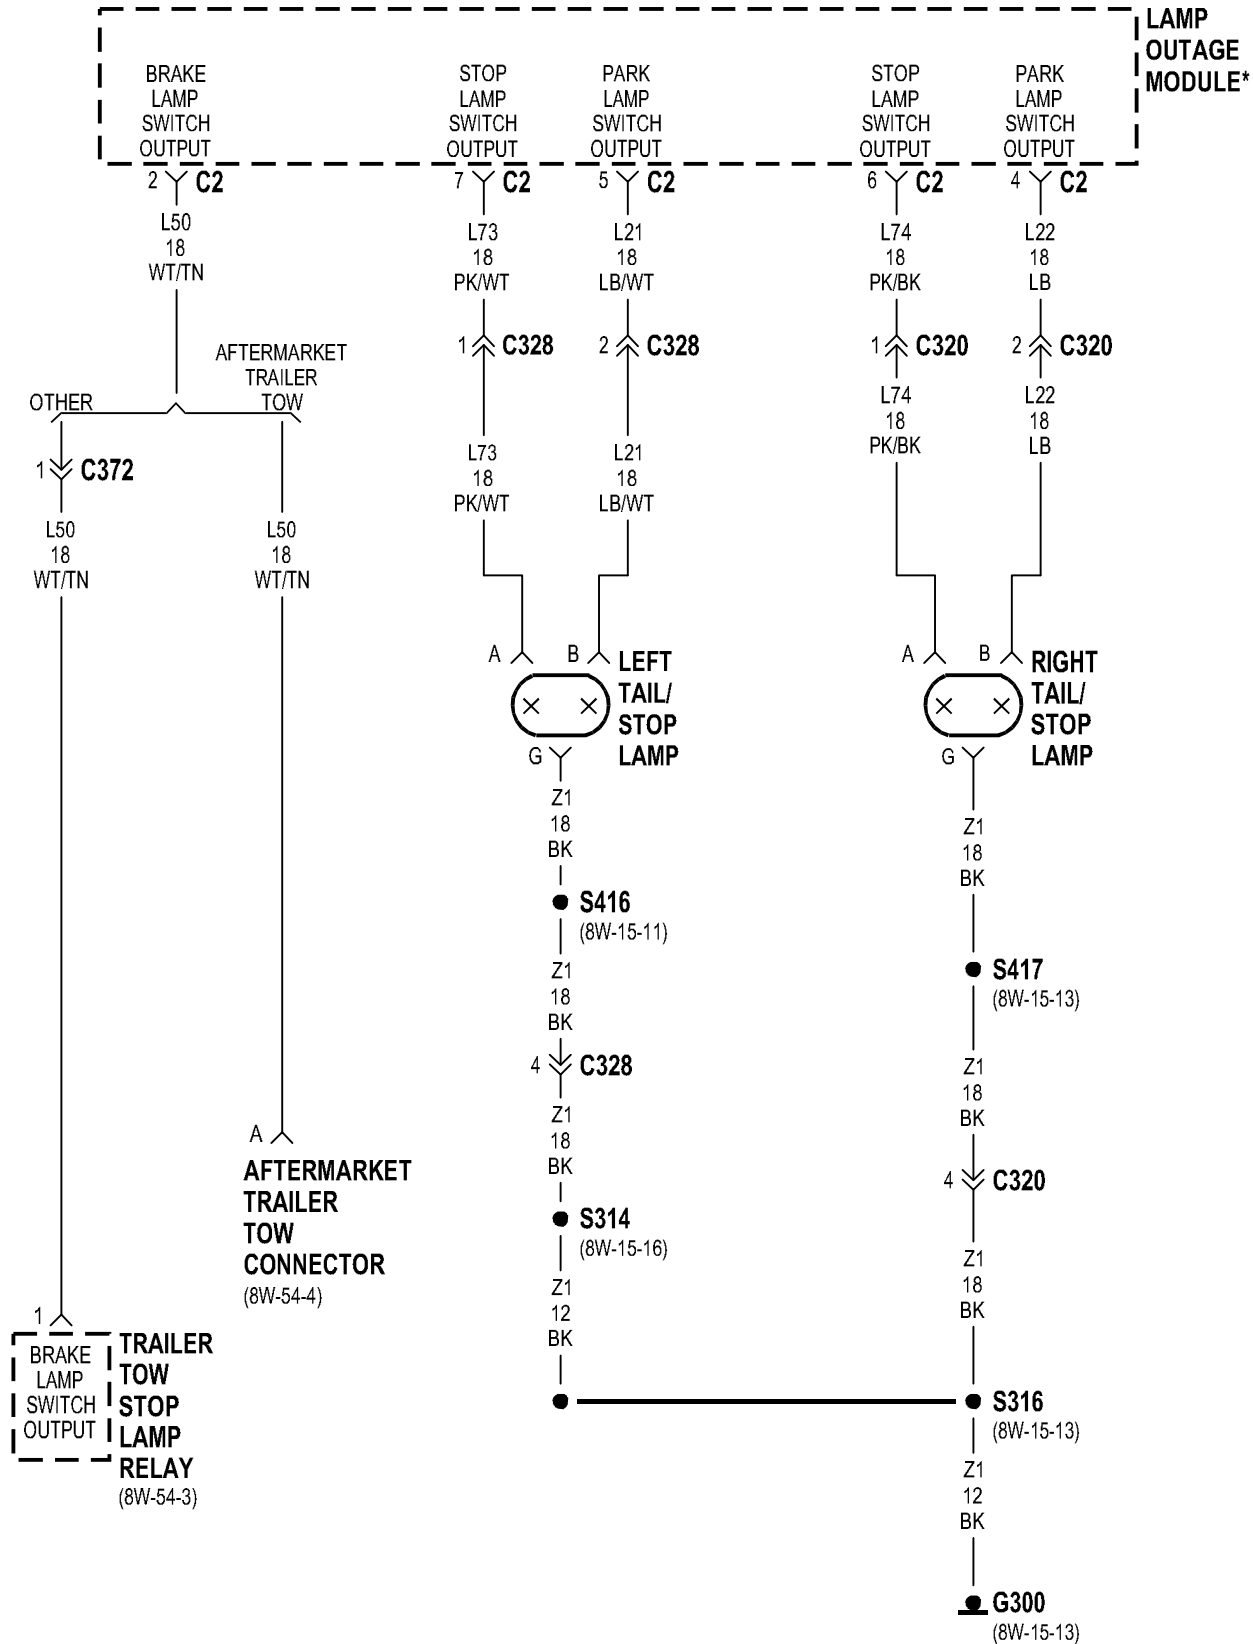

 * WITHOUT LAMP OUTAGE MODULE,
C1 AND C2 MATE TO MAKE C316

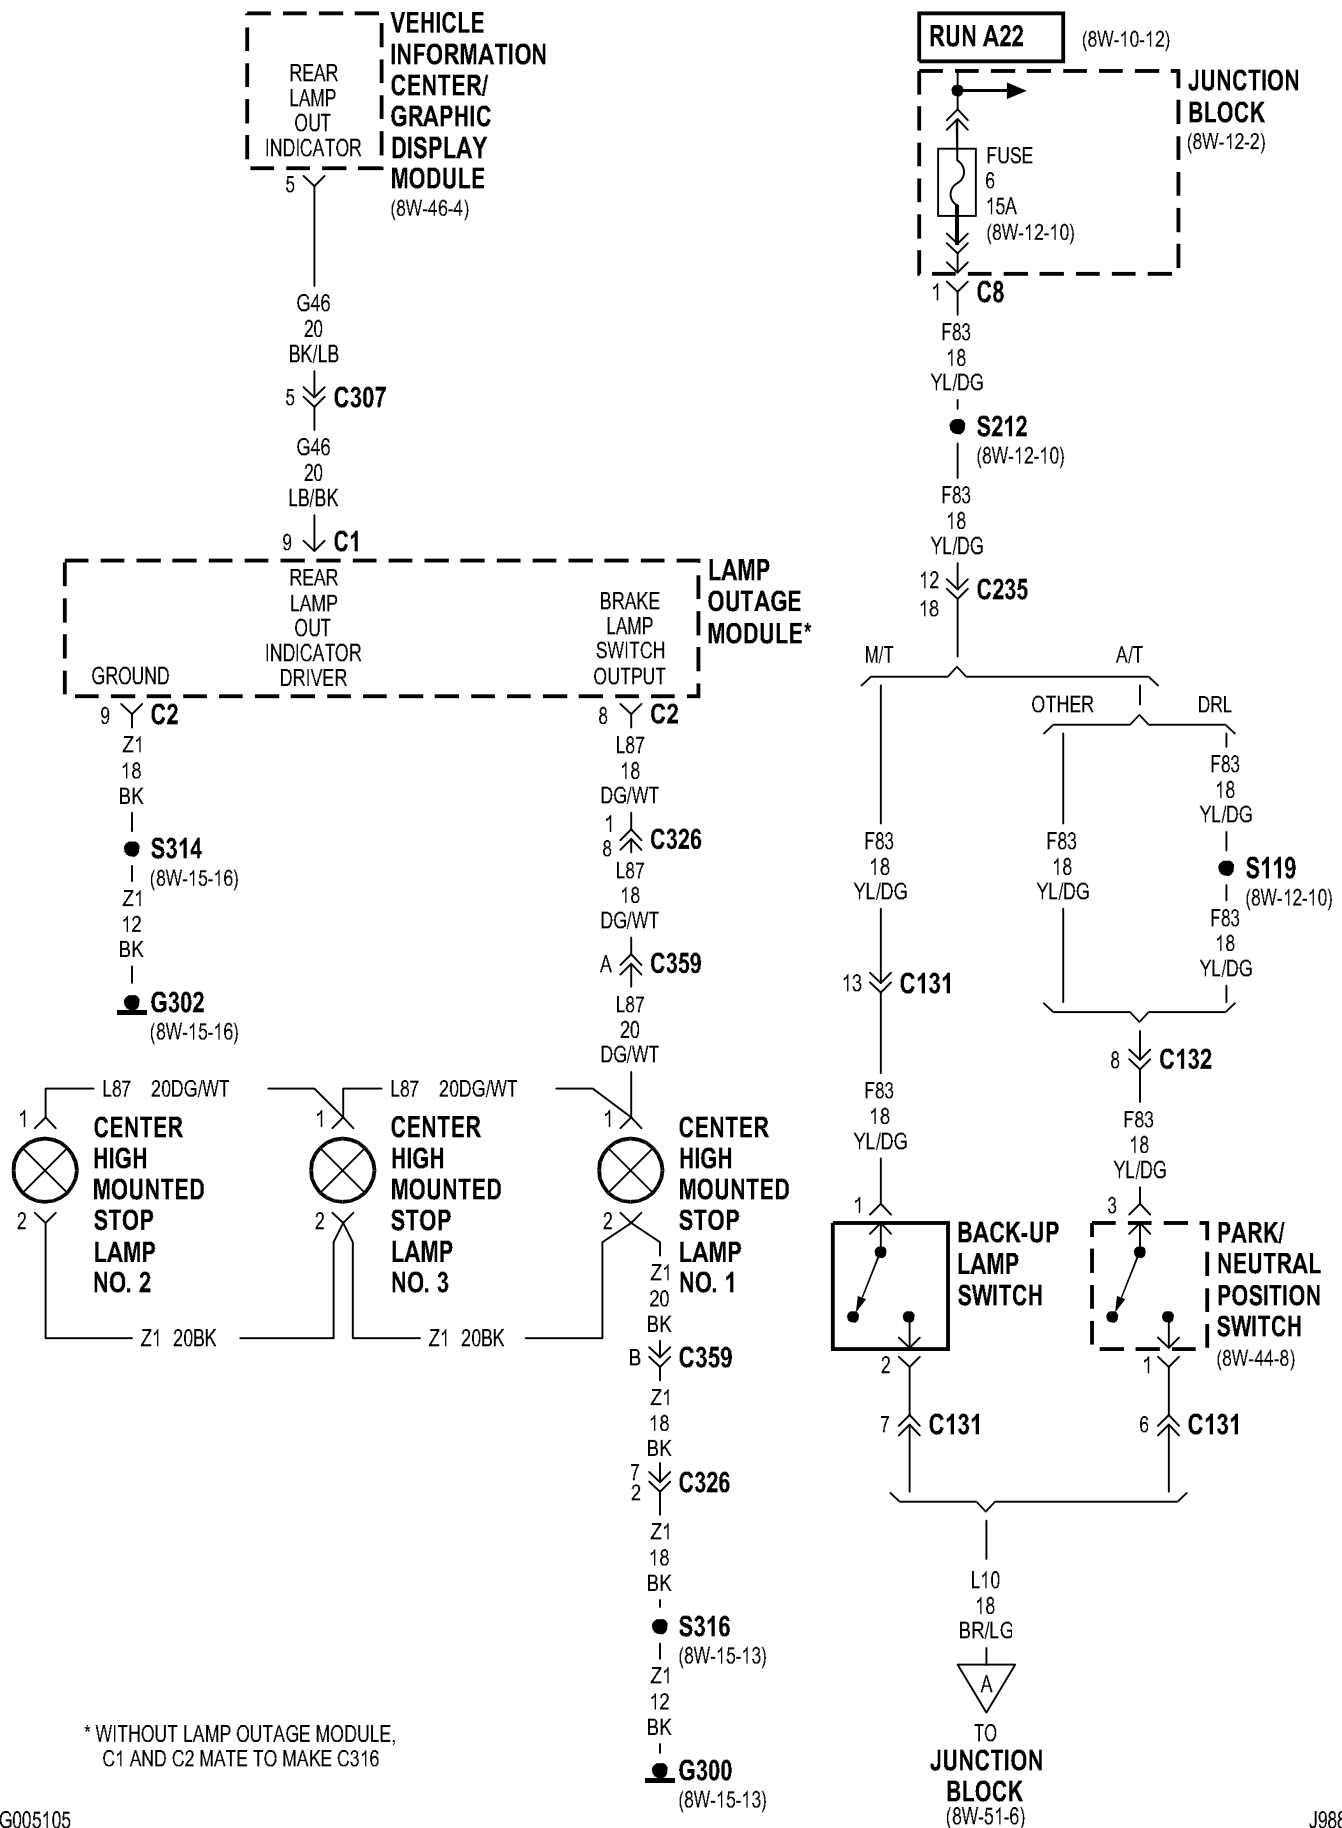


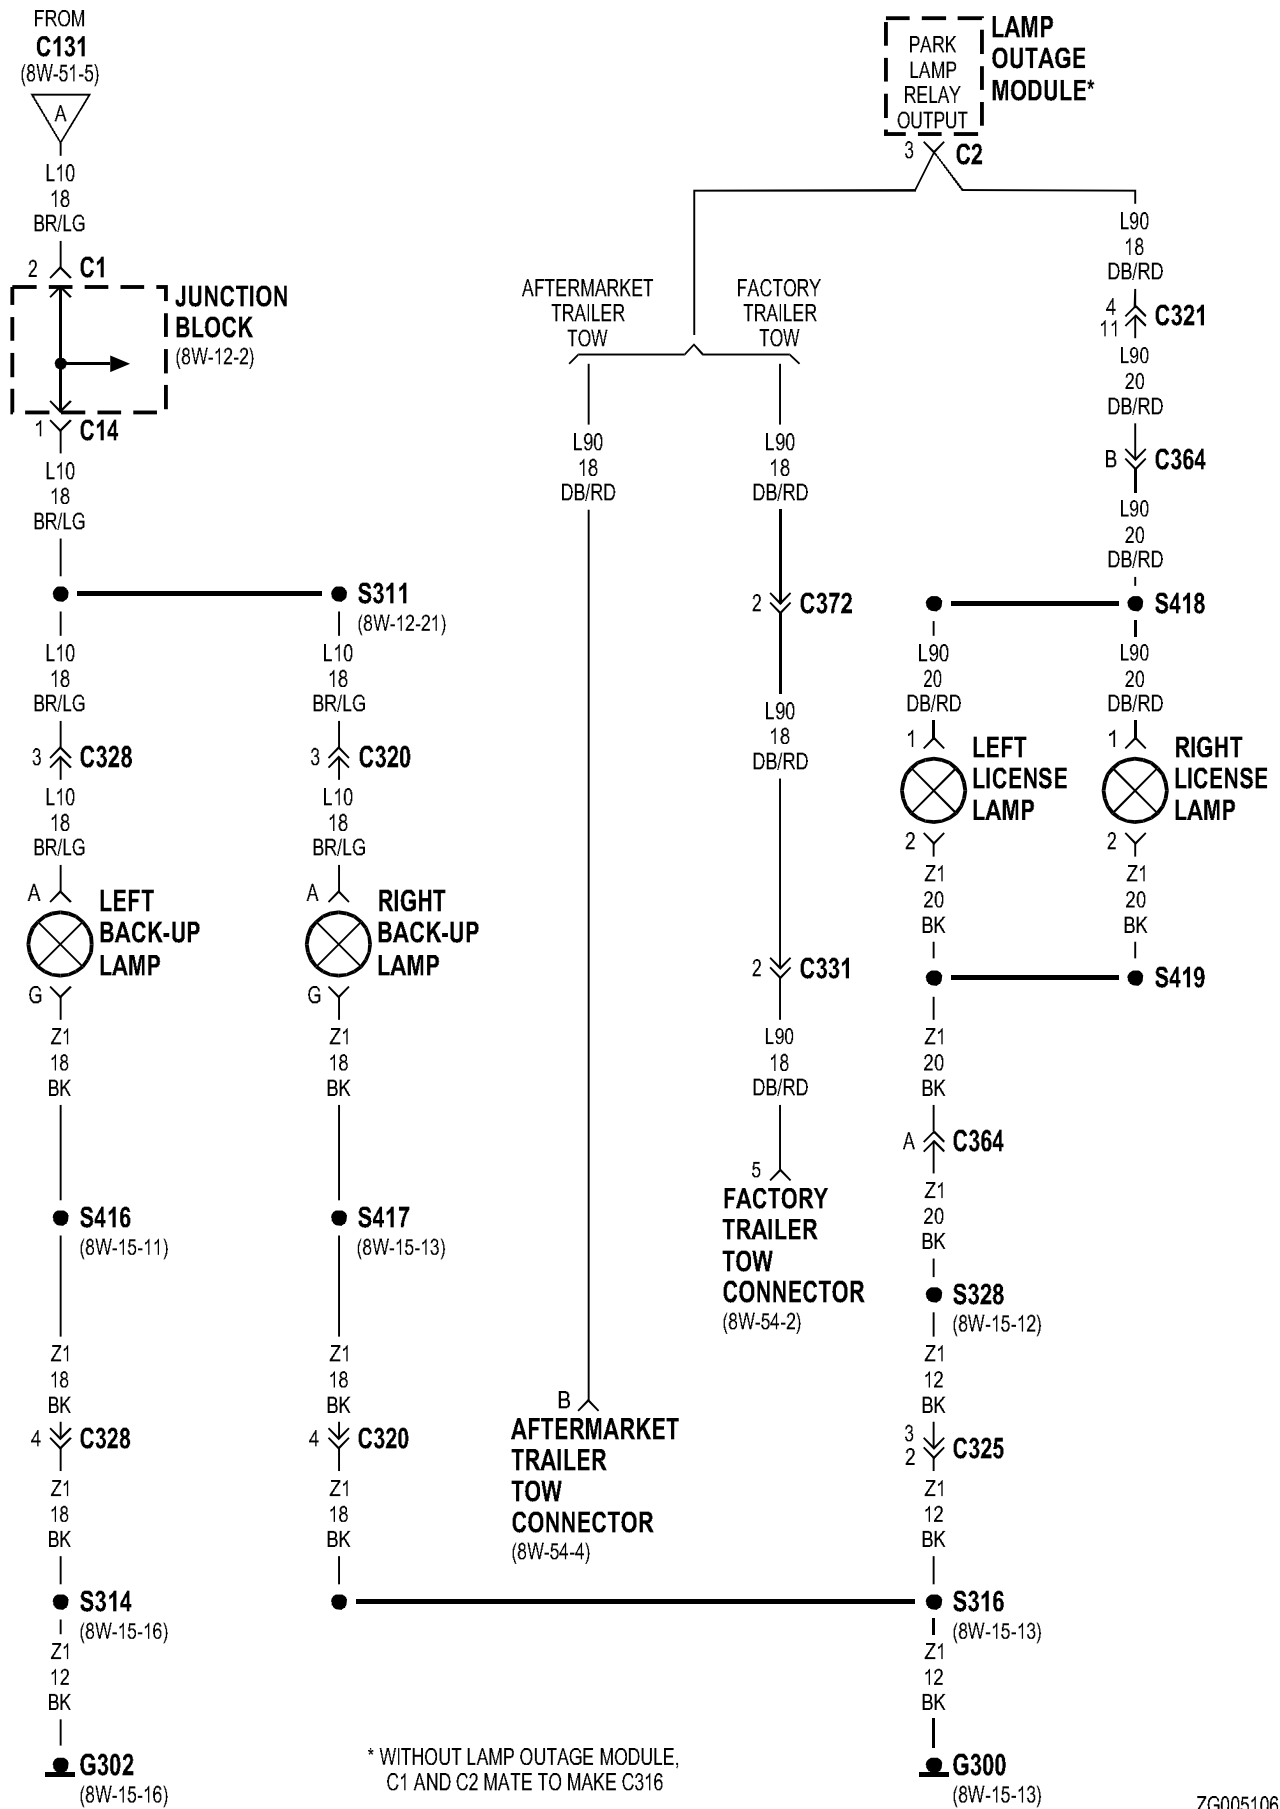






8W-52 TURN SIGNALS


Component	Page	Component	Page
Aftermarket Trailer Tow Connector	8W-52-7	Left Front Turn Signal Lamp	8W-52-3
Electronic Flasher	8W-52-2, 5	Left Rear Turn Signal Lamp	8W-52-6, 7
Fuse 6 (JB)	8W-52-2, 5	Left Side Repeater	8W-52-3
Fuse 8 (JB)	8W-52-7	Park Lamp Relay	8W-52-3, 4
Fuse 13 (JB)	8W-52-2	Right Front Park Lamp	8W-52-4
G106	8W-52-4	Right Front Side Marker Lamp	8W-52-4
G109	8W-52-3	Right Front Turn Signal Lamp	8W-52-4
G300	8W-52-6, 7	Right Rear Turn Signal Lamp	8W-52-6, 7
G302	8W-52-6, 7	Right Side Repeater	8W-52-4
G303	8W-52-2	Trailer Tow Left Turn Relay	8W-52-6
Instrument Cluster	8W-52-2	Trailer Tow Right Turn Relay	8W-52-6
Junction Block.	8W-52-2, 3, 4, 5, 7	Turn Signal/Hazard Warning Switch . . .	8W-52-2, 5
Left Front Park Lamp	8W-52-3	Vehicle Information Center/ Graphic Display Module	8W-52-2, 5
Left Front Side Marker Lamp.	8W-52-3		

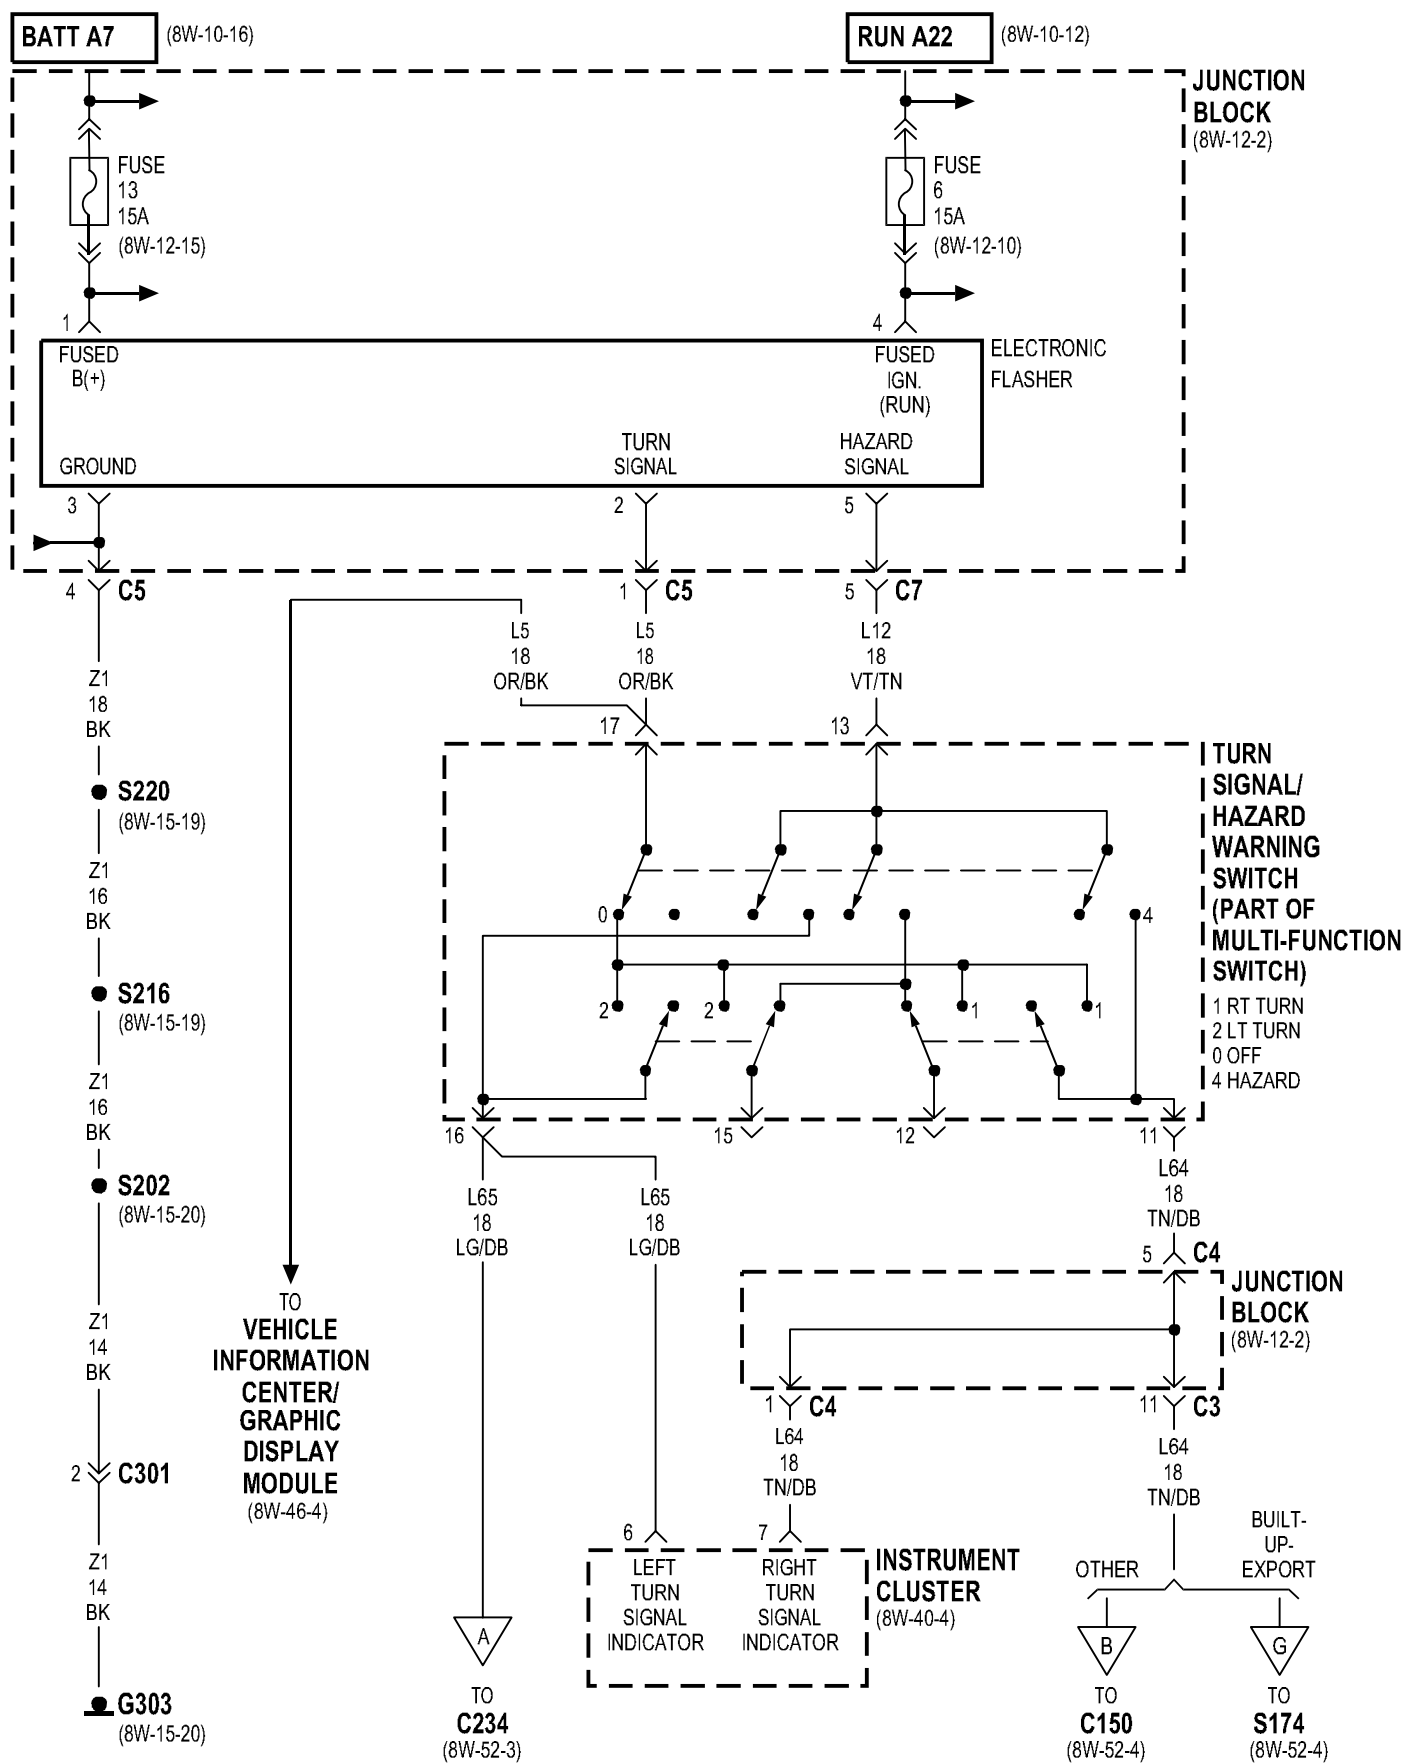


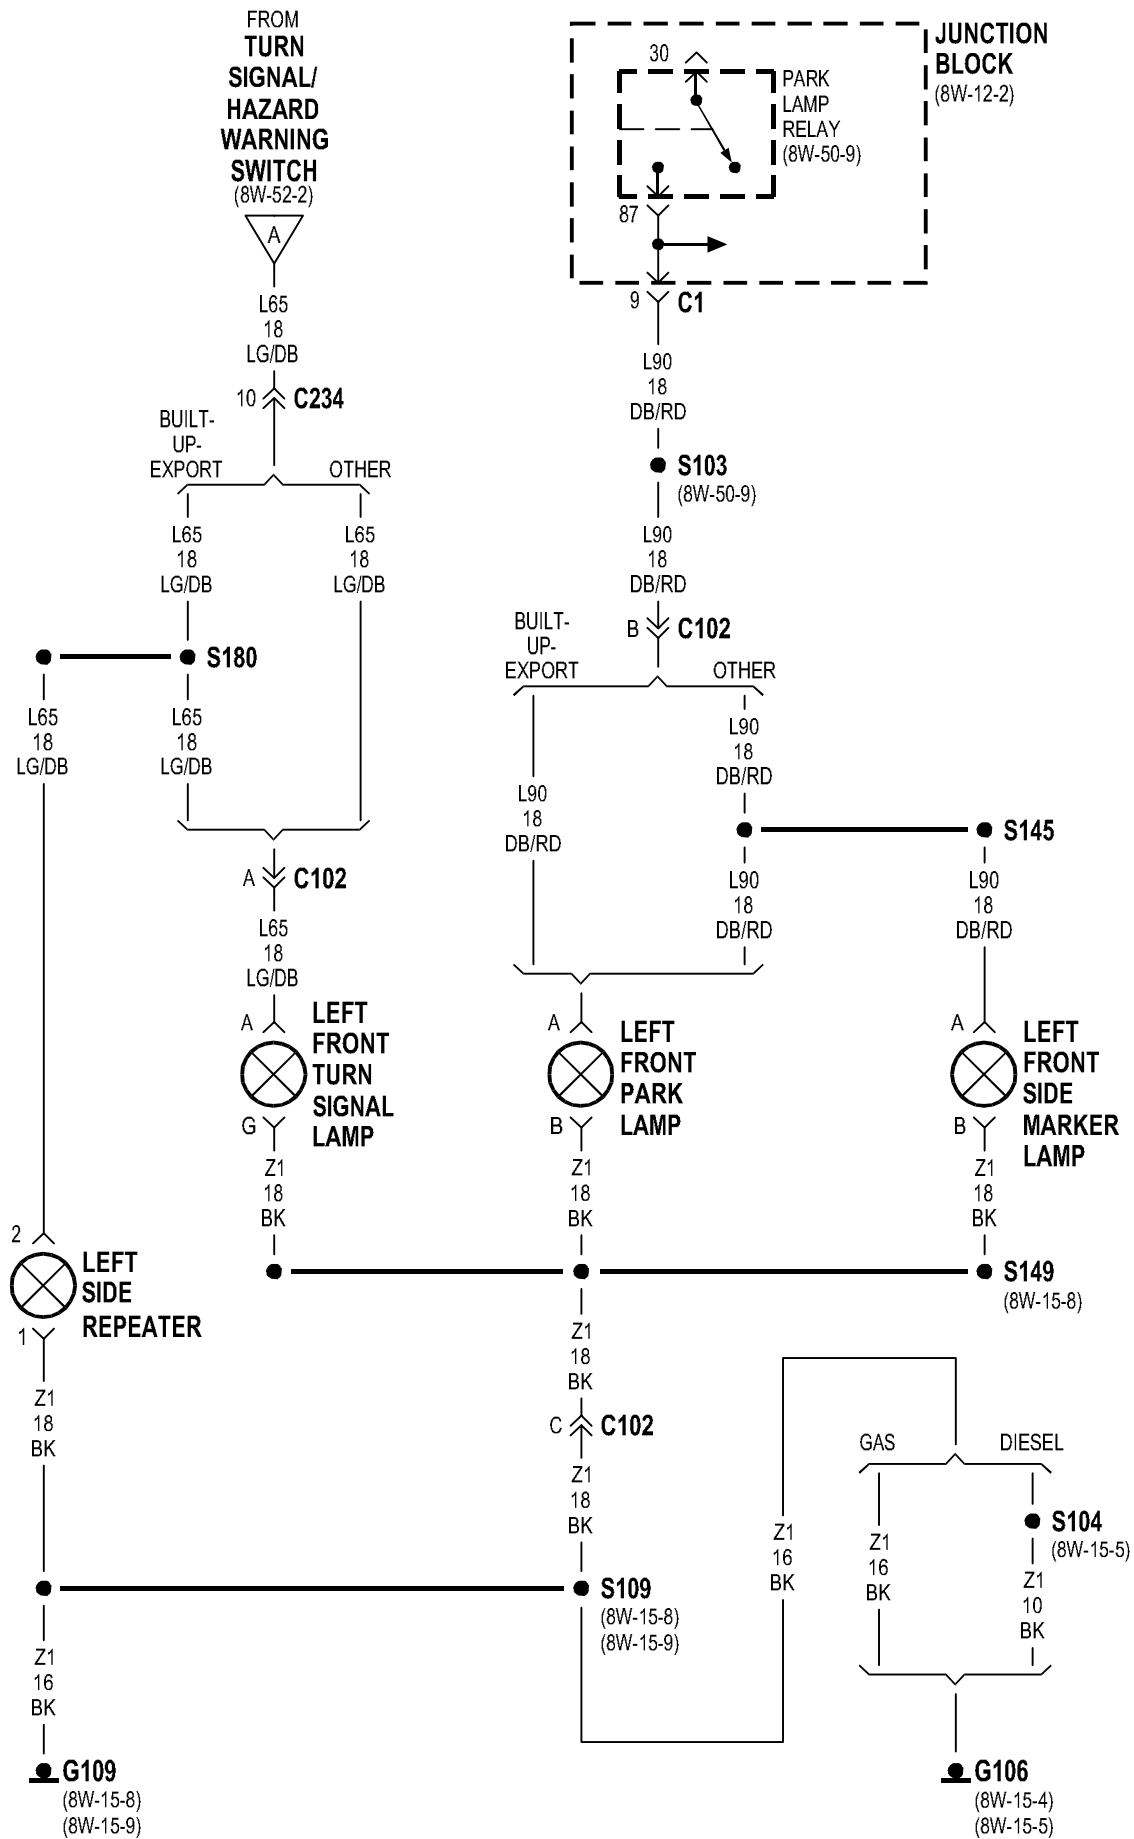

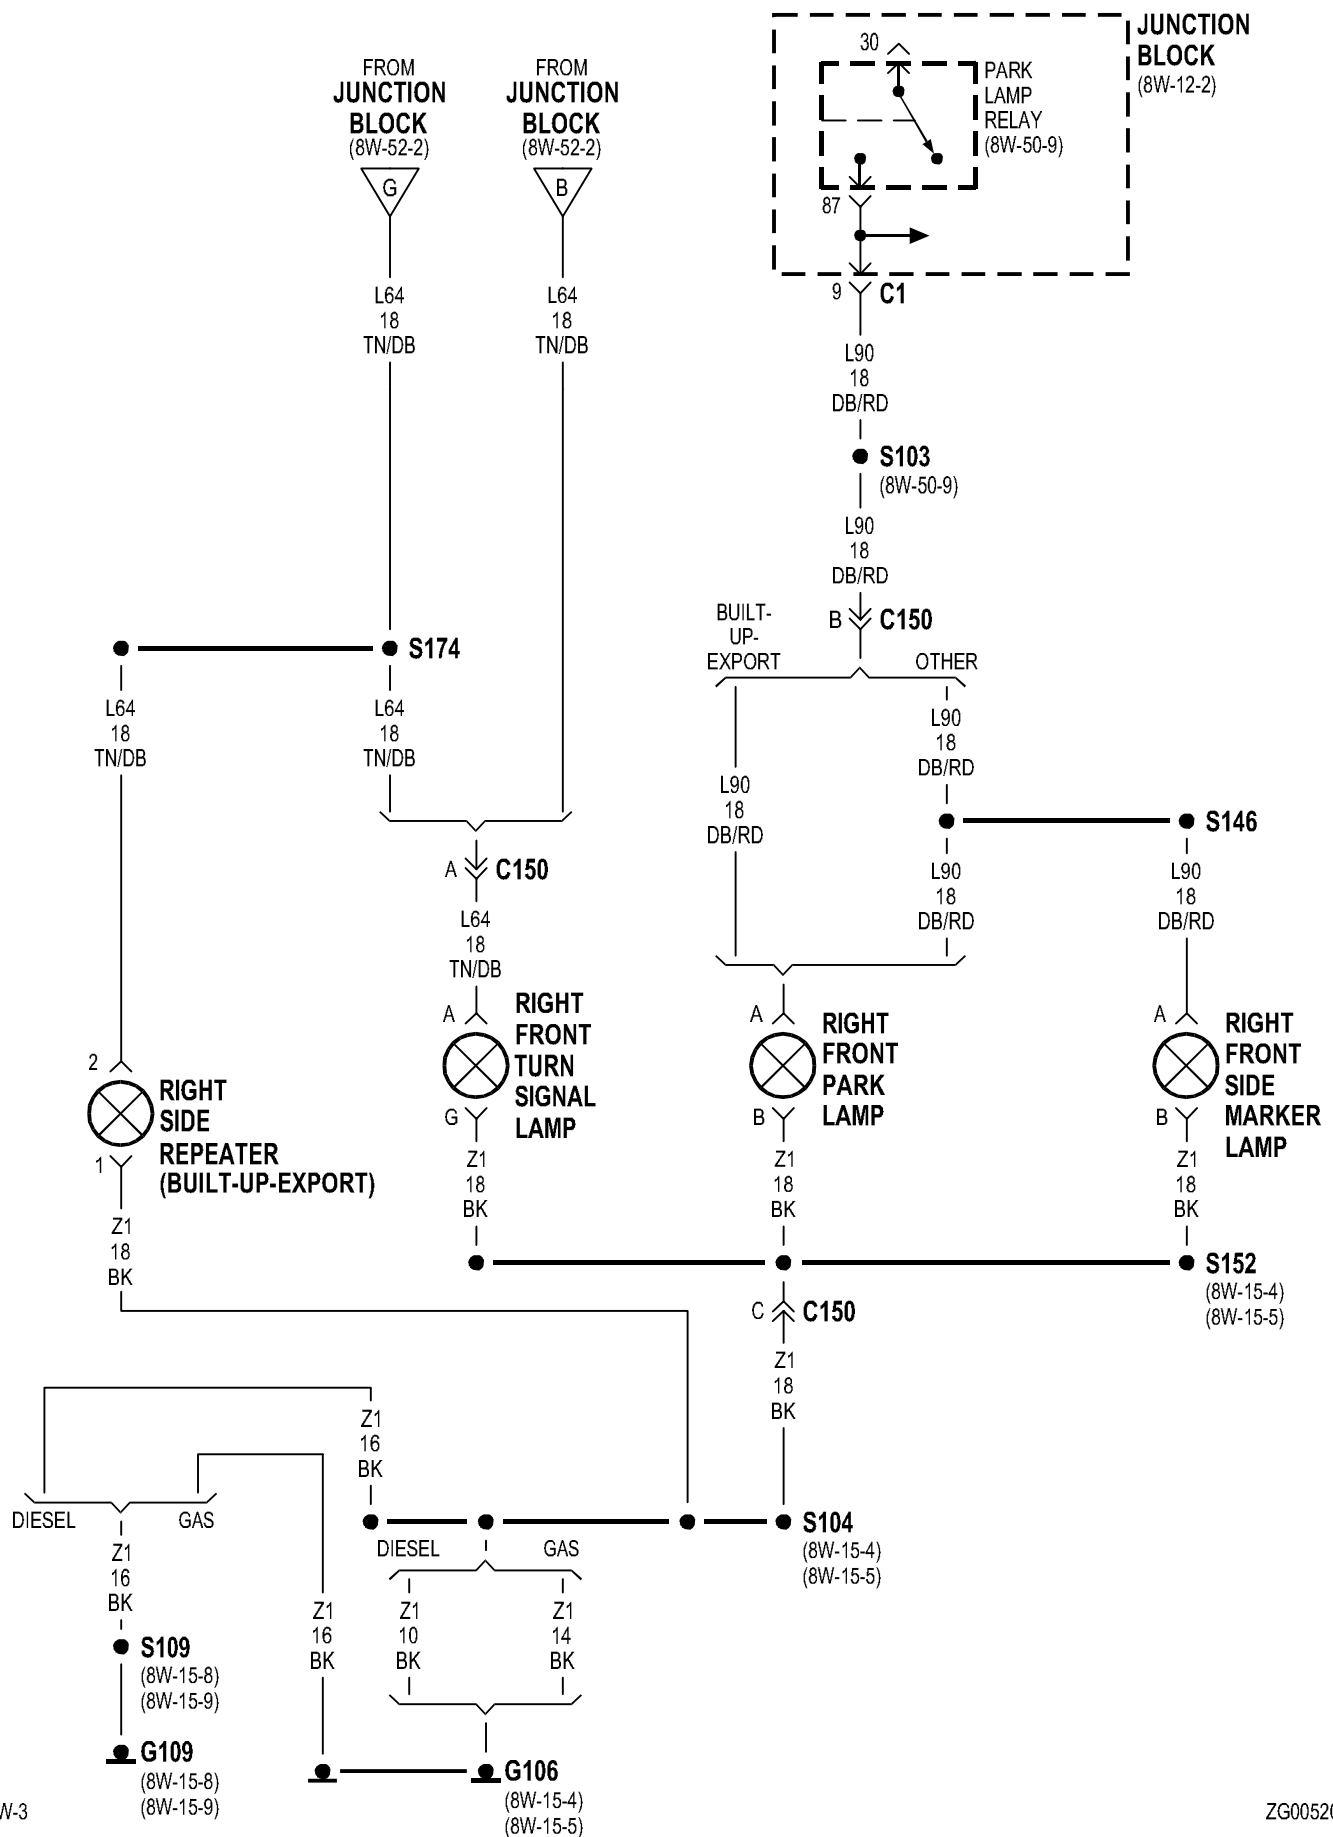

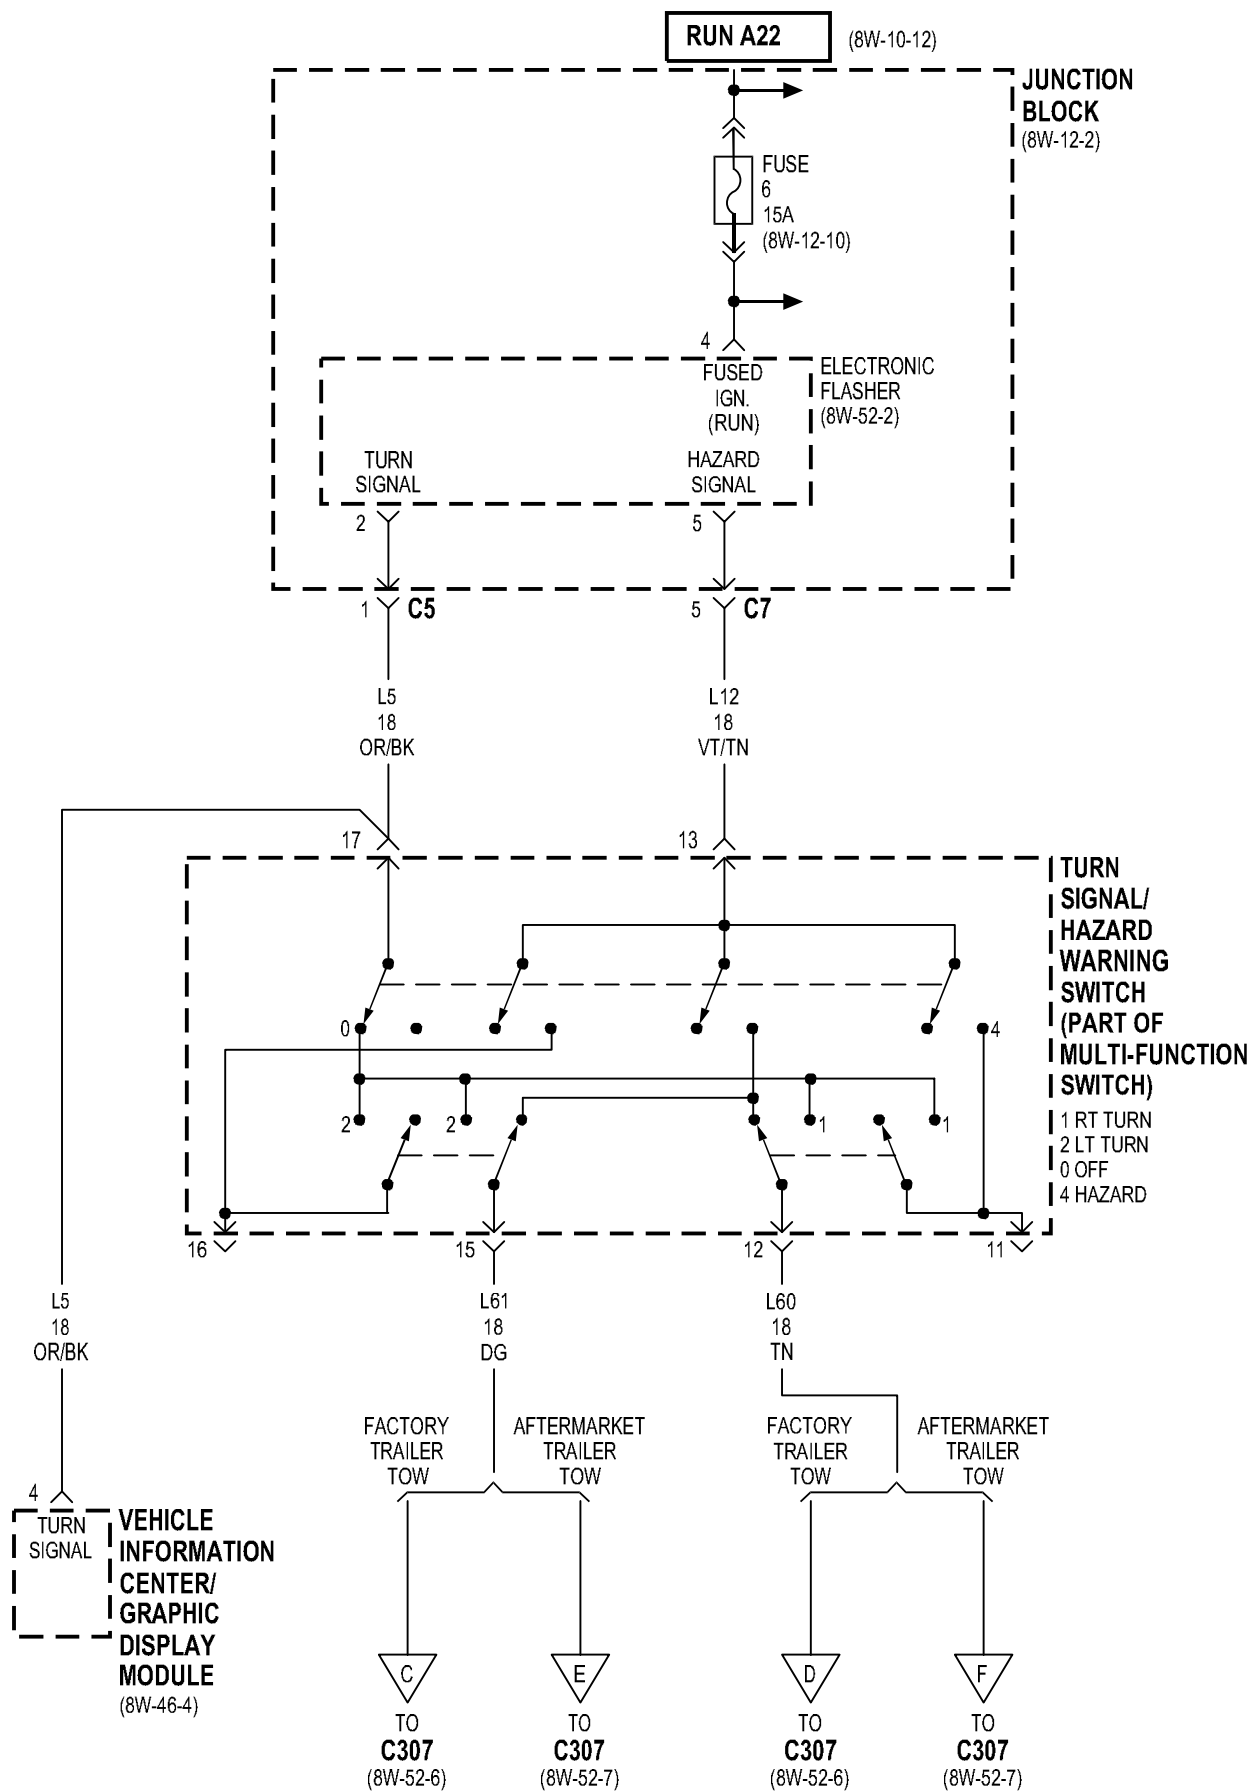


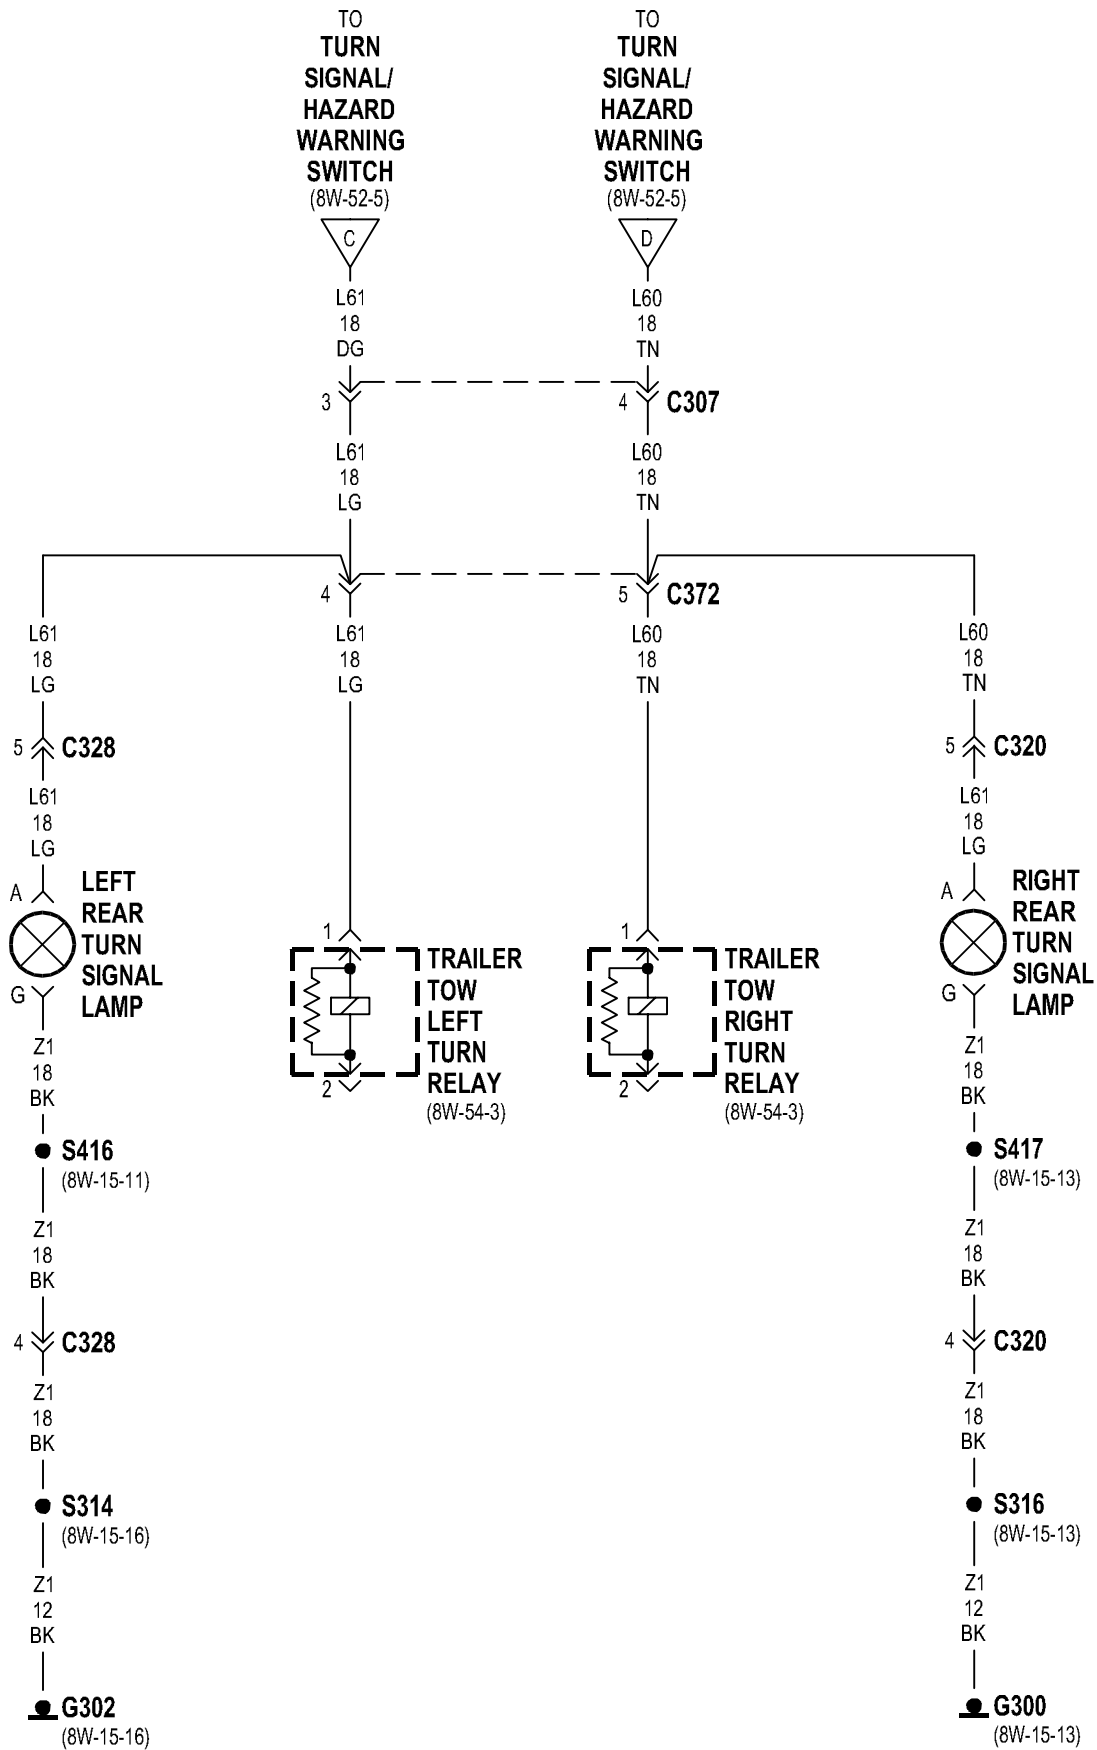


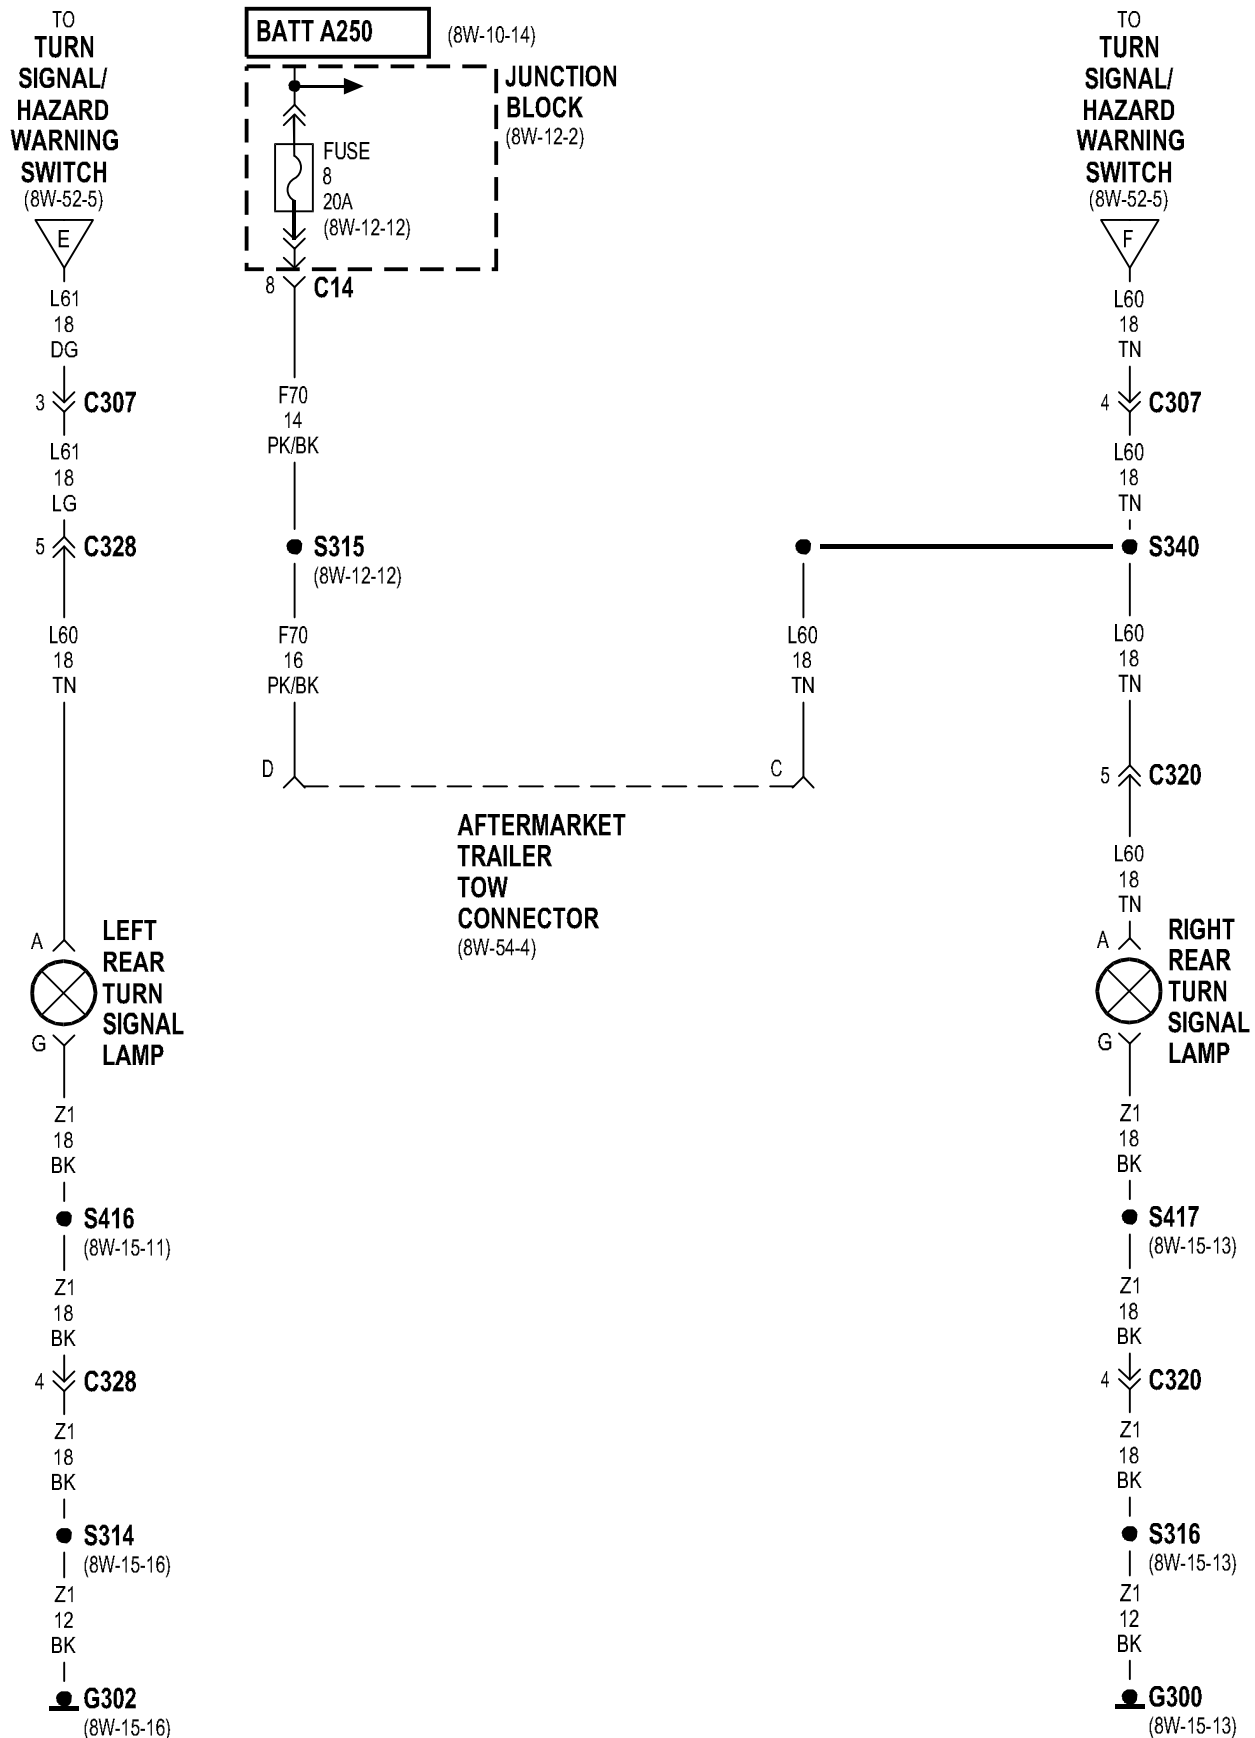


8W-53 WIPERS

Component	Page	Component	Page
Body Control Module	8W-53-2, 3	Liftglass Ajar Switch.	8W-53-5
Circuit Breaker 1	8W-53-2	Rear Washer Pump Motor.	8W-53-5
Fuse 3 (JB)	8W-53-4	Rear Wiper Module.	8W-53-4
Fuse 8 (JB)	8W-53-4	Rear Wiper Motor Control	8W-53-4
G109	8W-53-2, 3, 5	Rear Wiper/Washer Switch	8W-53-4
G300	8W-53-5	Vehicle Information Center/ Graphic Display Module	8W-53-5
Intermittent Wiper Relay	8W-53-3	Windshield Washer Pump Motor.	8W-53-2
Intermittent Wiper Switch	8W-53-2, 3	Windshield Wiper Motor	8W-53-2, 3
Junction Block	8W-53-2, 4	Wiper Fluid Level Sensor	8W-53-5
Liftgate Ajar Switch	8W-53-5		

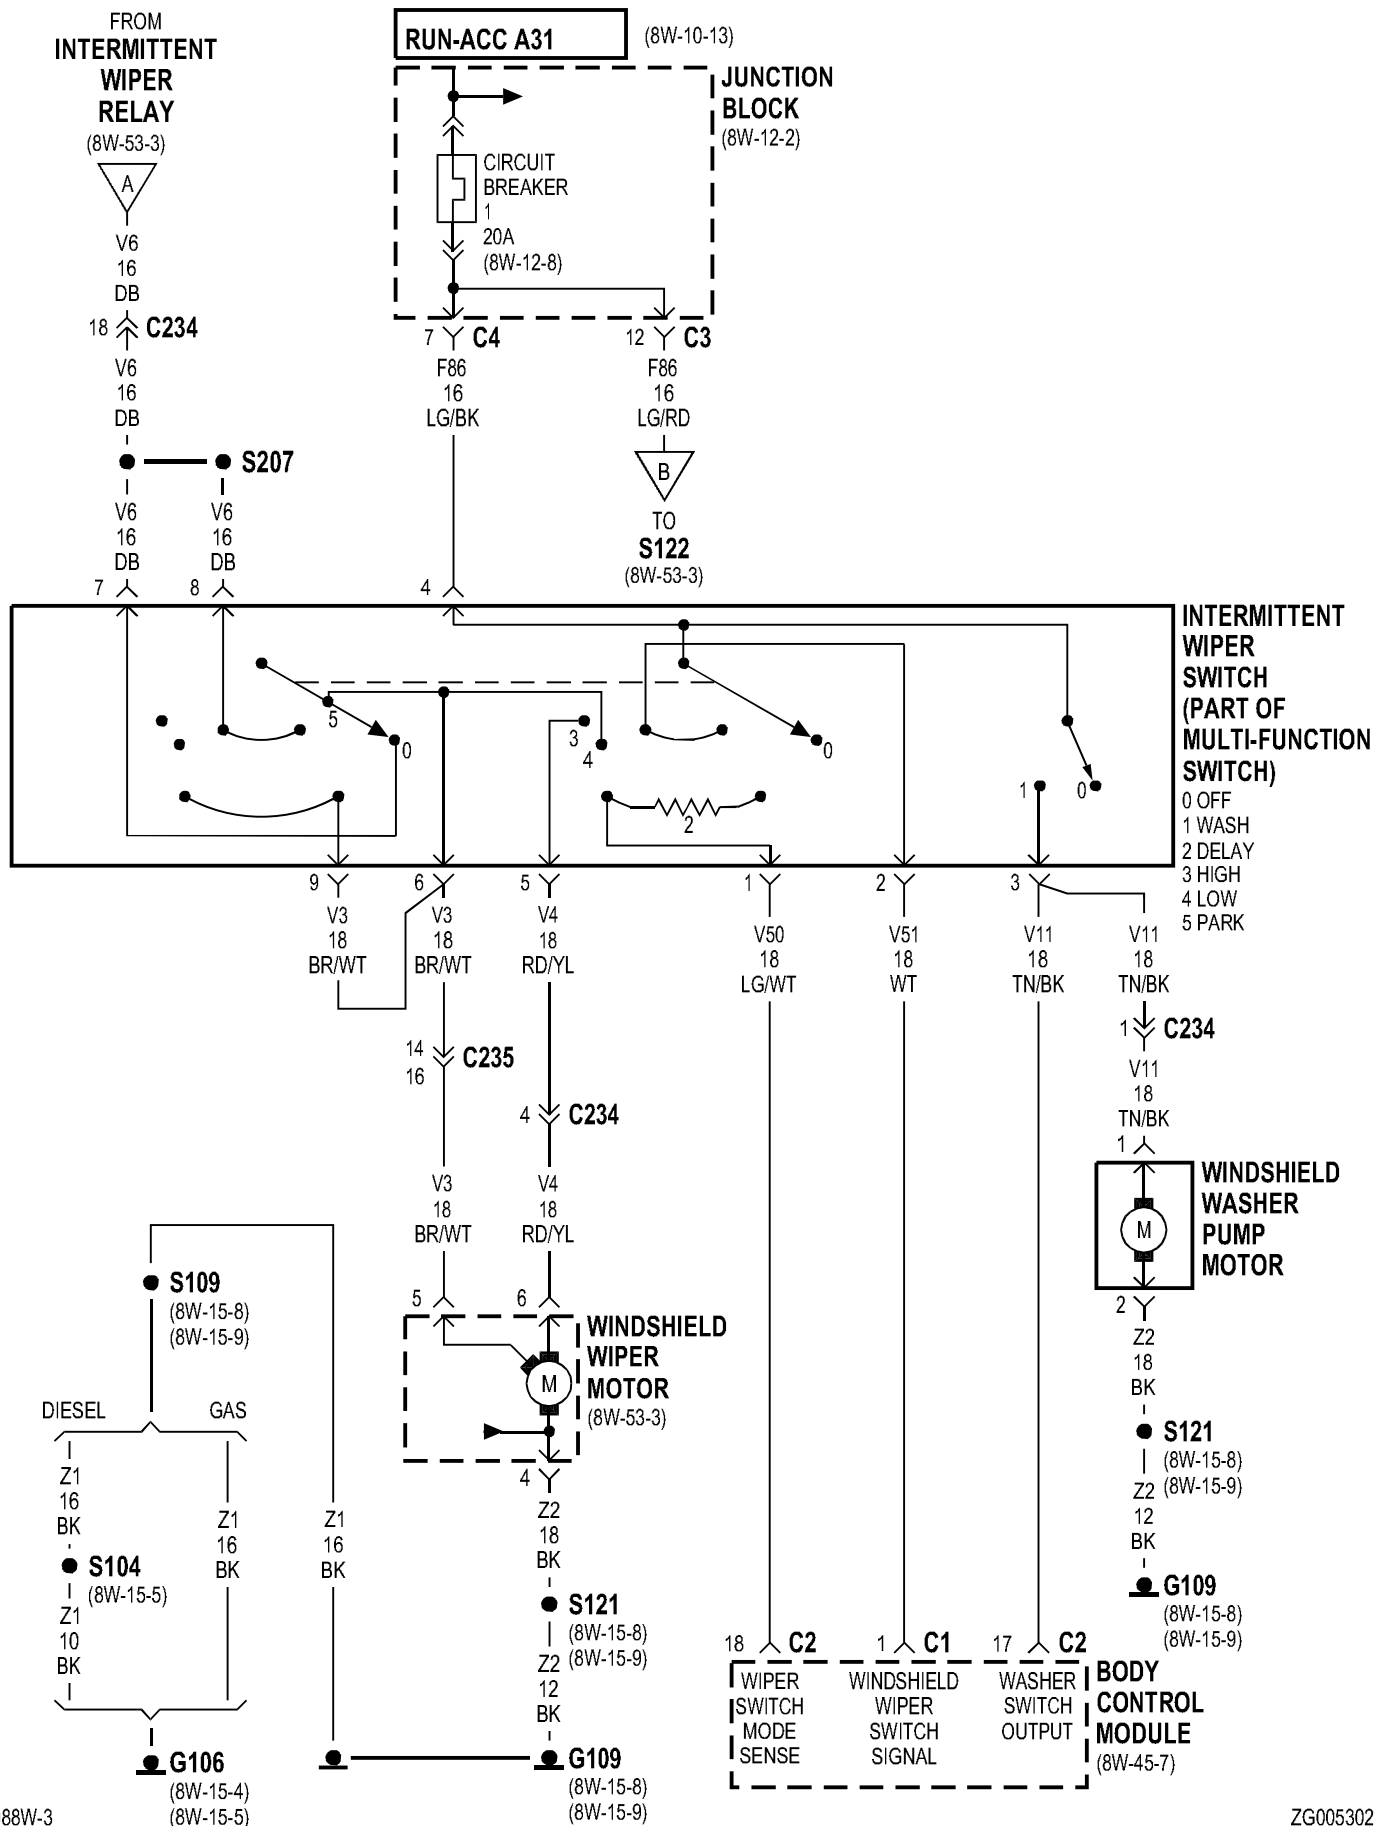

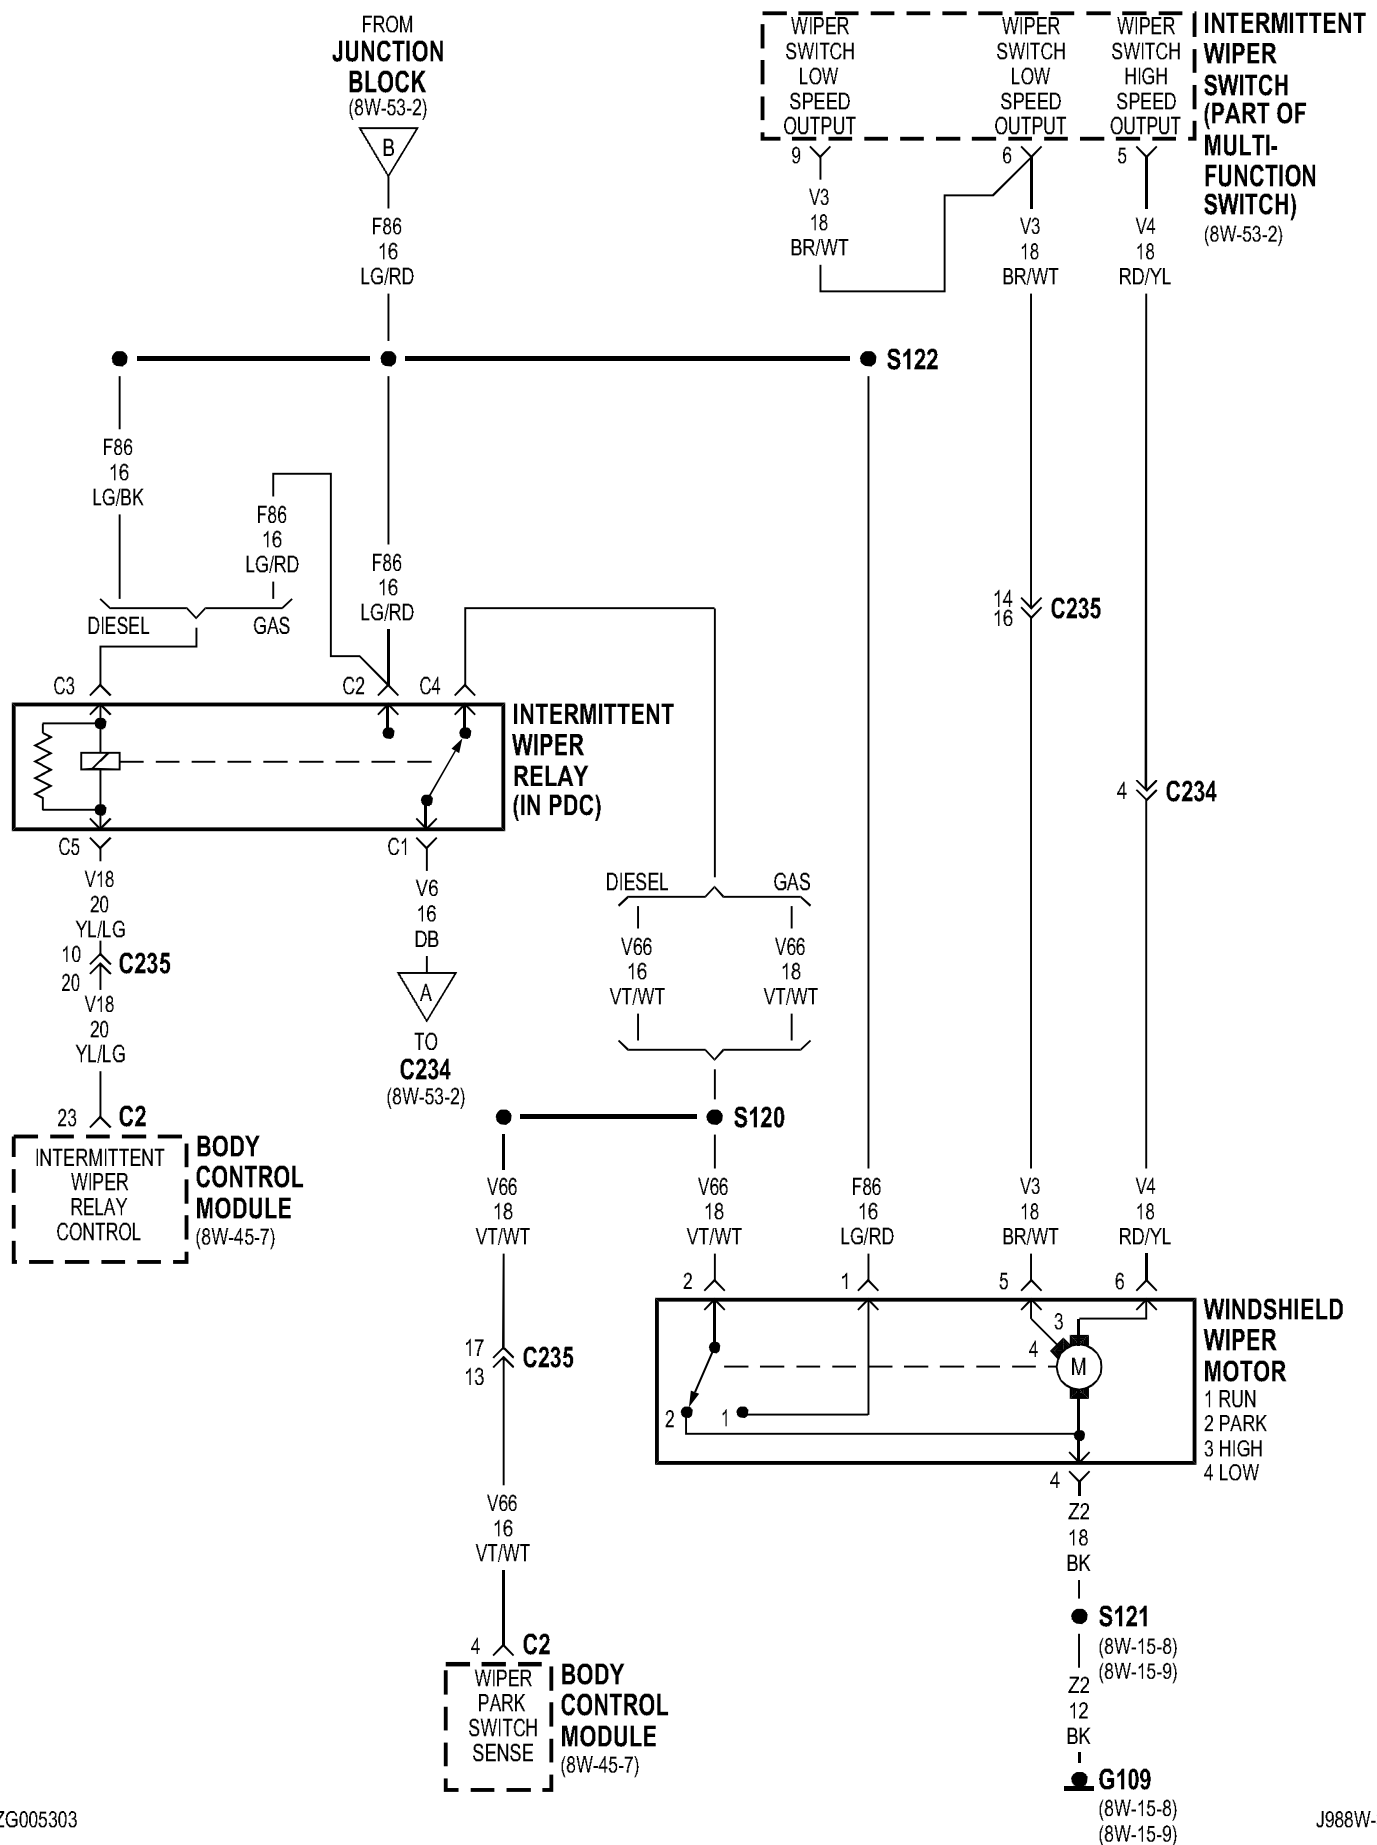


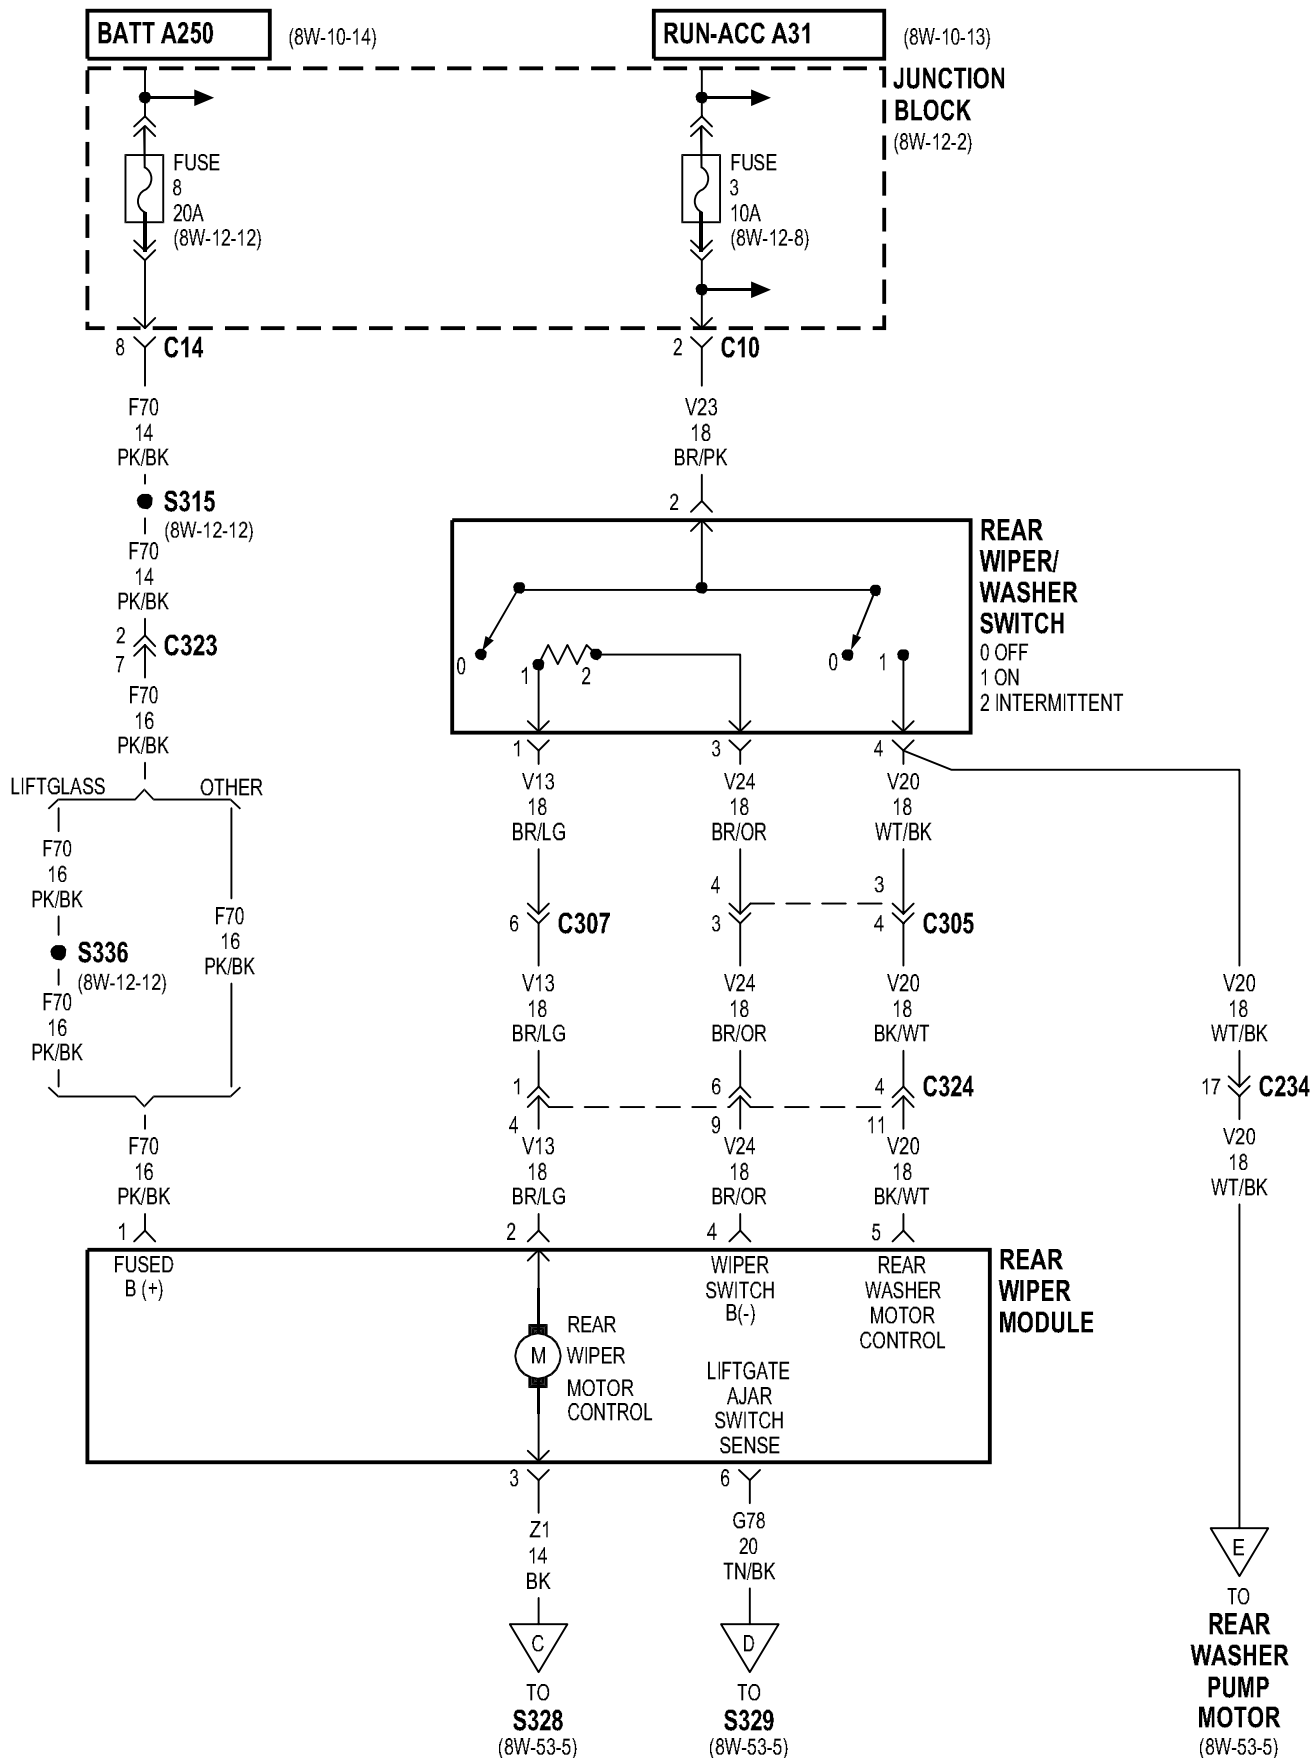





8W-54 TRAILER TOW

Component	Page	Component	Page
Aftermarket Trailer Tow Connector	.8W-54-4	Park/Neutral Position Switch	.8W-54-2
Back-Up Lamp Switch	.8W-54-2	Trailer Brake Provision.	.8W-54-2
Factory Trailer Tow Connector	.8W-54-2, 3	Trailer Tow Circuit Breaker	.8W-54-2
Fuse 8 (JB)	.8W-54-2, 4	Trailer Tow Left Turn Relay	.8W-54-3
G302	.8W-54-3	Trailer Tow Right Turn Relay	.8W-54-3
Junction Block	.8W-54-2, 4	Trailer Tow Stop Lamp Relay	.8W-54-2, 3
Lamp Outage Module	.8W-54-2, 3, 4	Turn Signal/Hazard Warning Switch . . .	.8W-54-3, 4

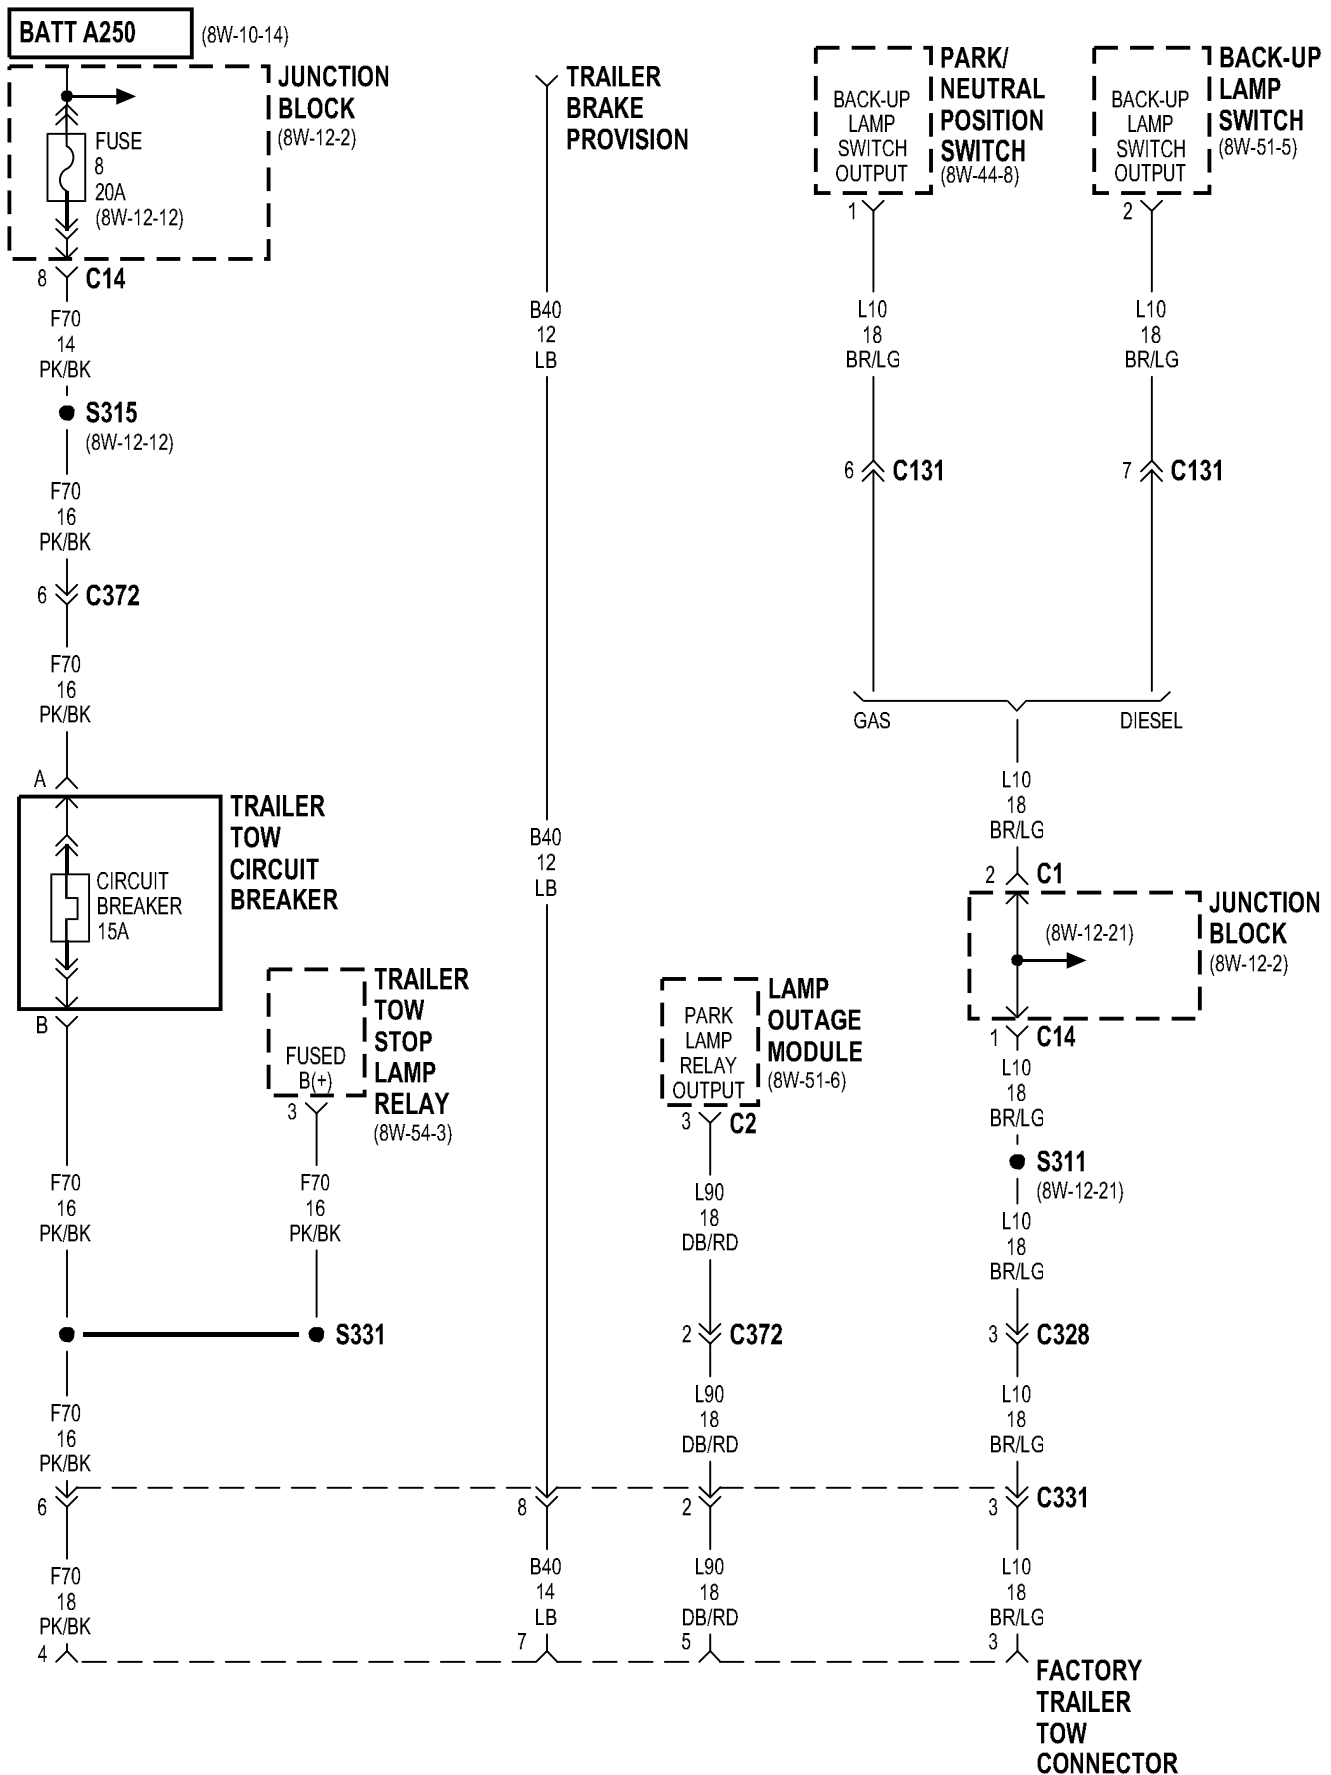


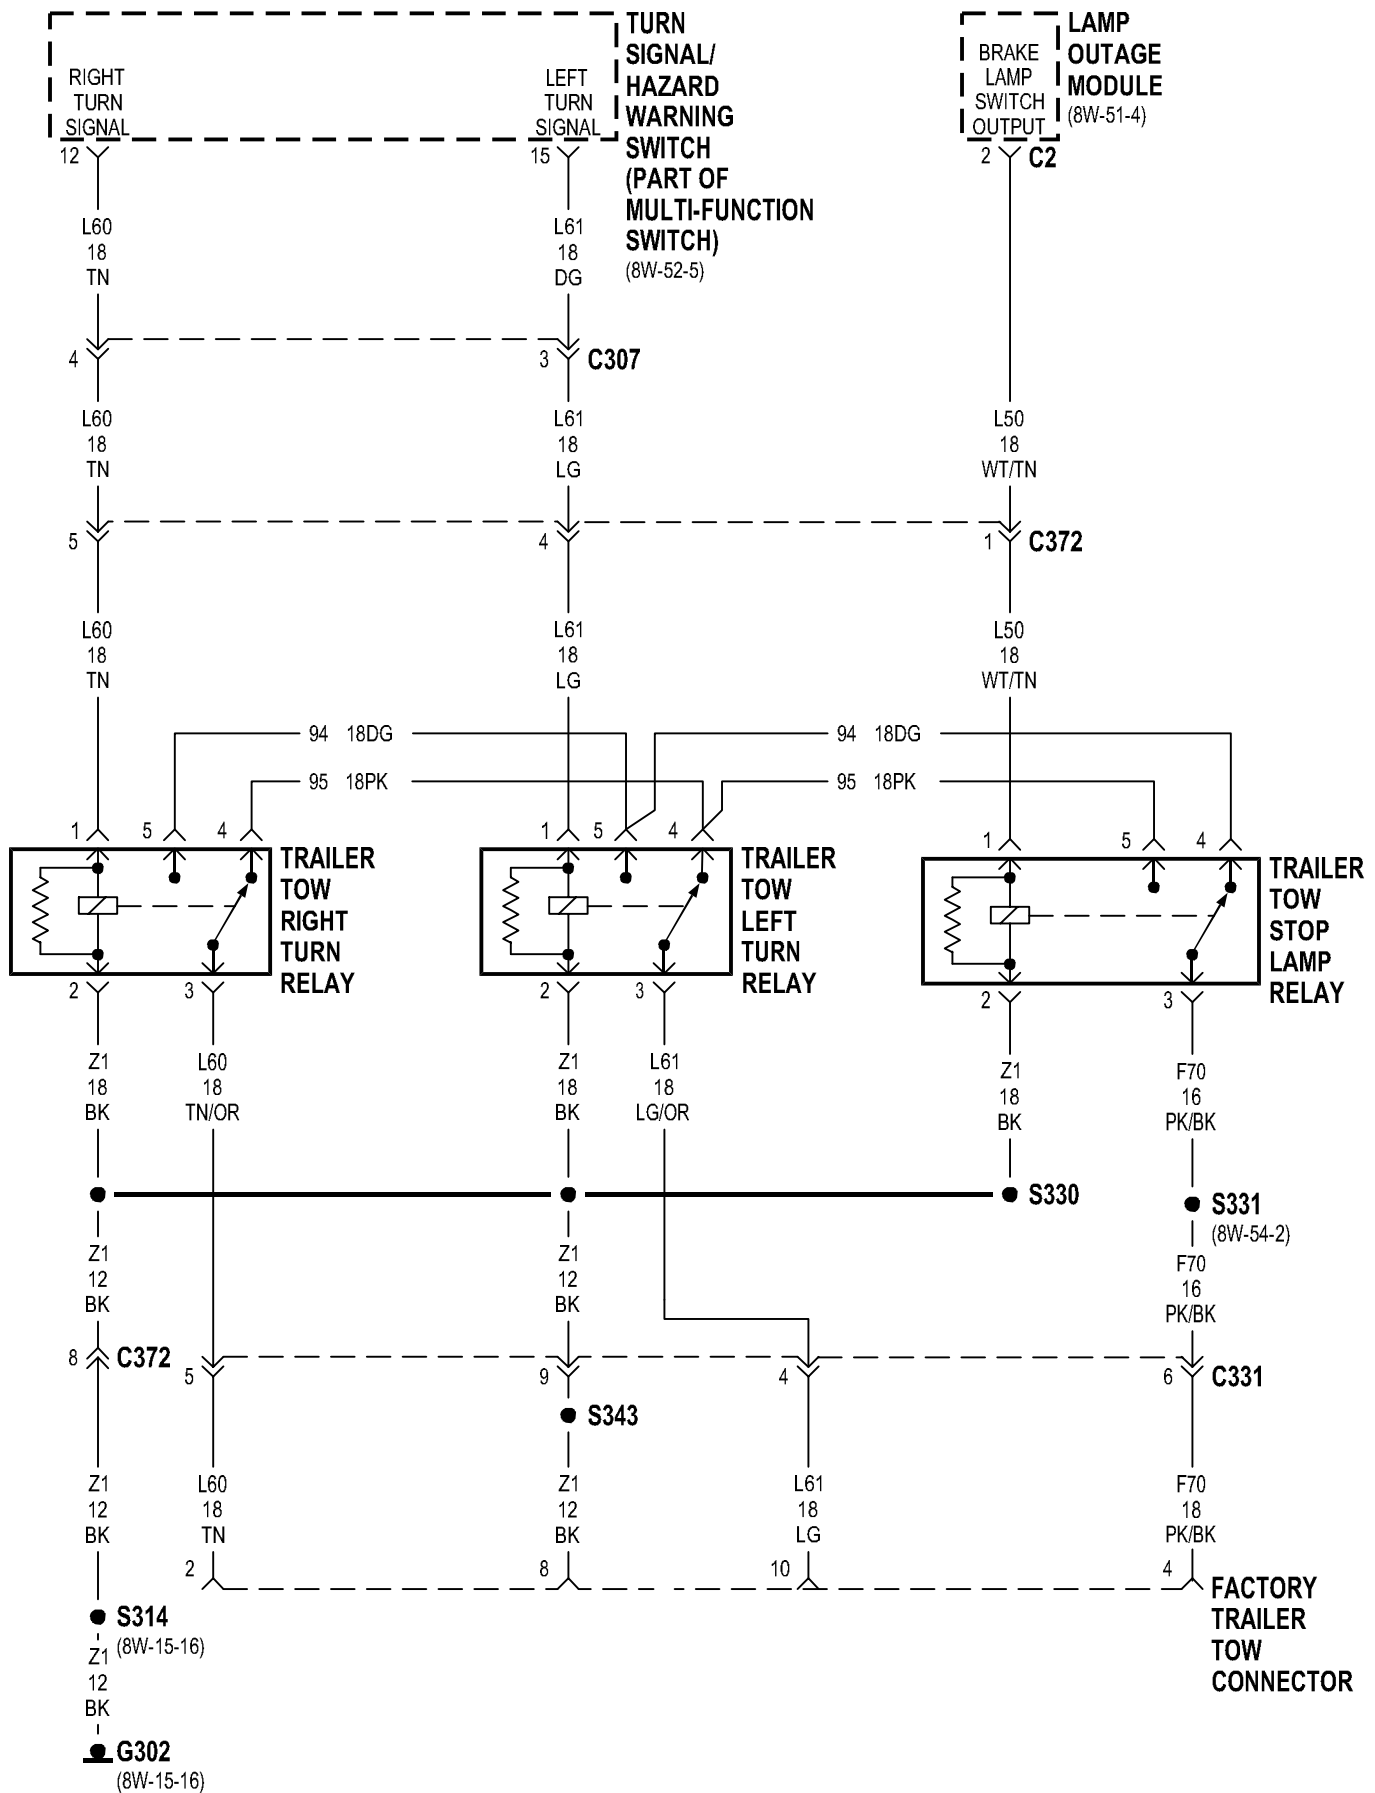


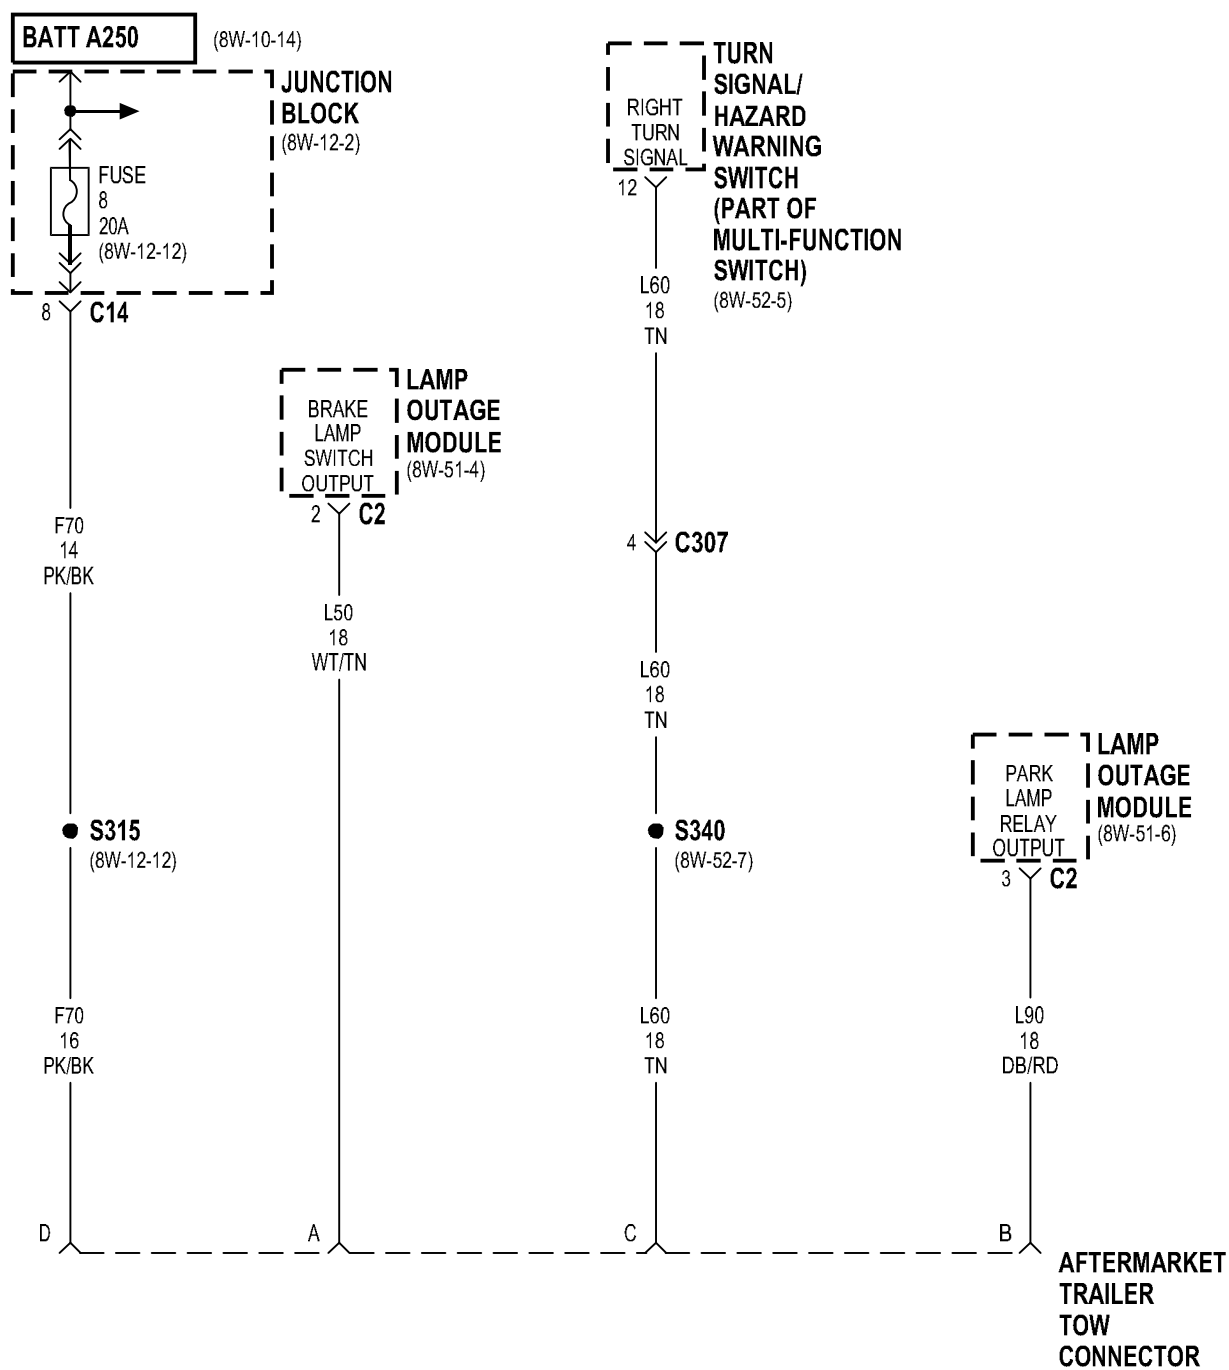


8W-60 POWER WINDOWS

Component	Page	Component	Page
Body Control Module	8W-60-2, 3	G302	8W-60-2, 4
Circuit Breaker 2	8W-60-2, 3	Junction Block	8W-60-2, 3
Driver Door Module	8W-60-2, 4	Passenger Door Module.	8W-60-3, 4
Driver Front Power Window Motor.	8W-60-2	Passenger Front Power Window Motor	8W-60-3
Driver Rear Power Window Motor	8W-60-4	Passenger Rear Power Window Motor	8W-60-4
Driver Rear Power Window Switch.	8W-60-4	Passenger Rear Power Window Switch. . . .	8W-60-4
G301	8W-60-3, 4		

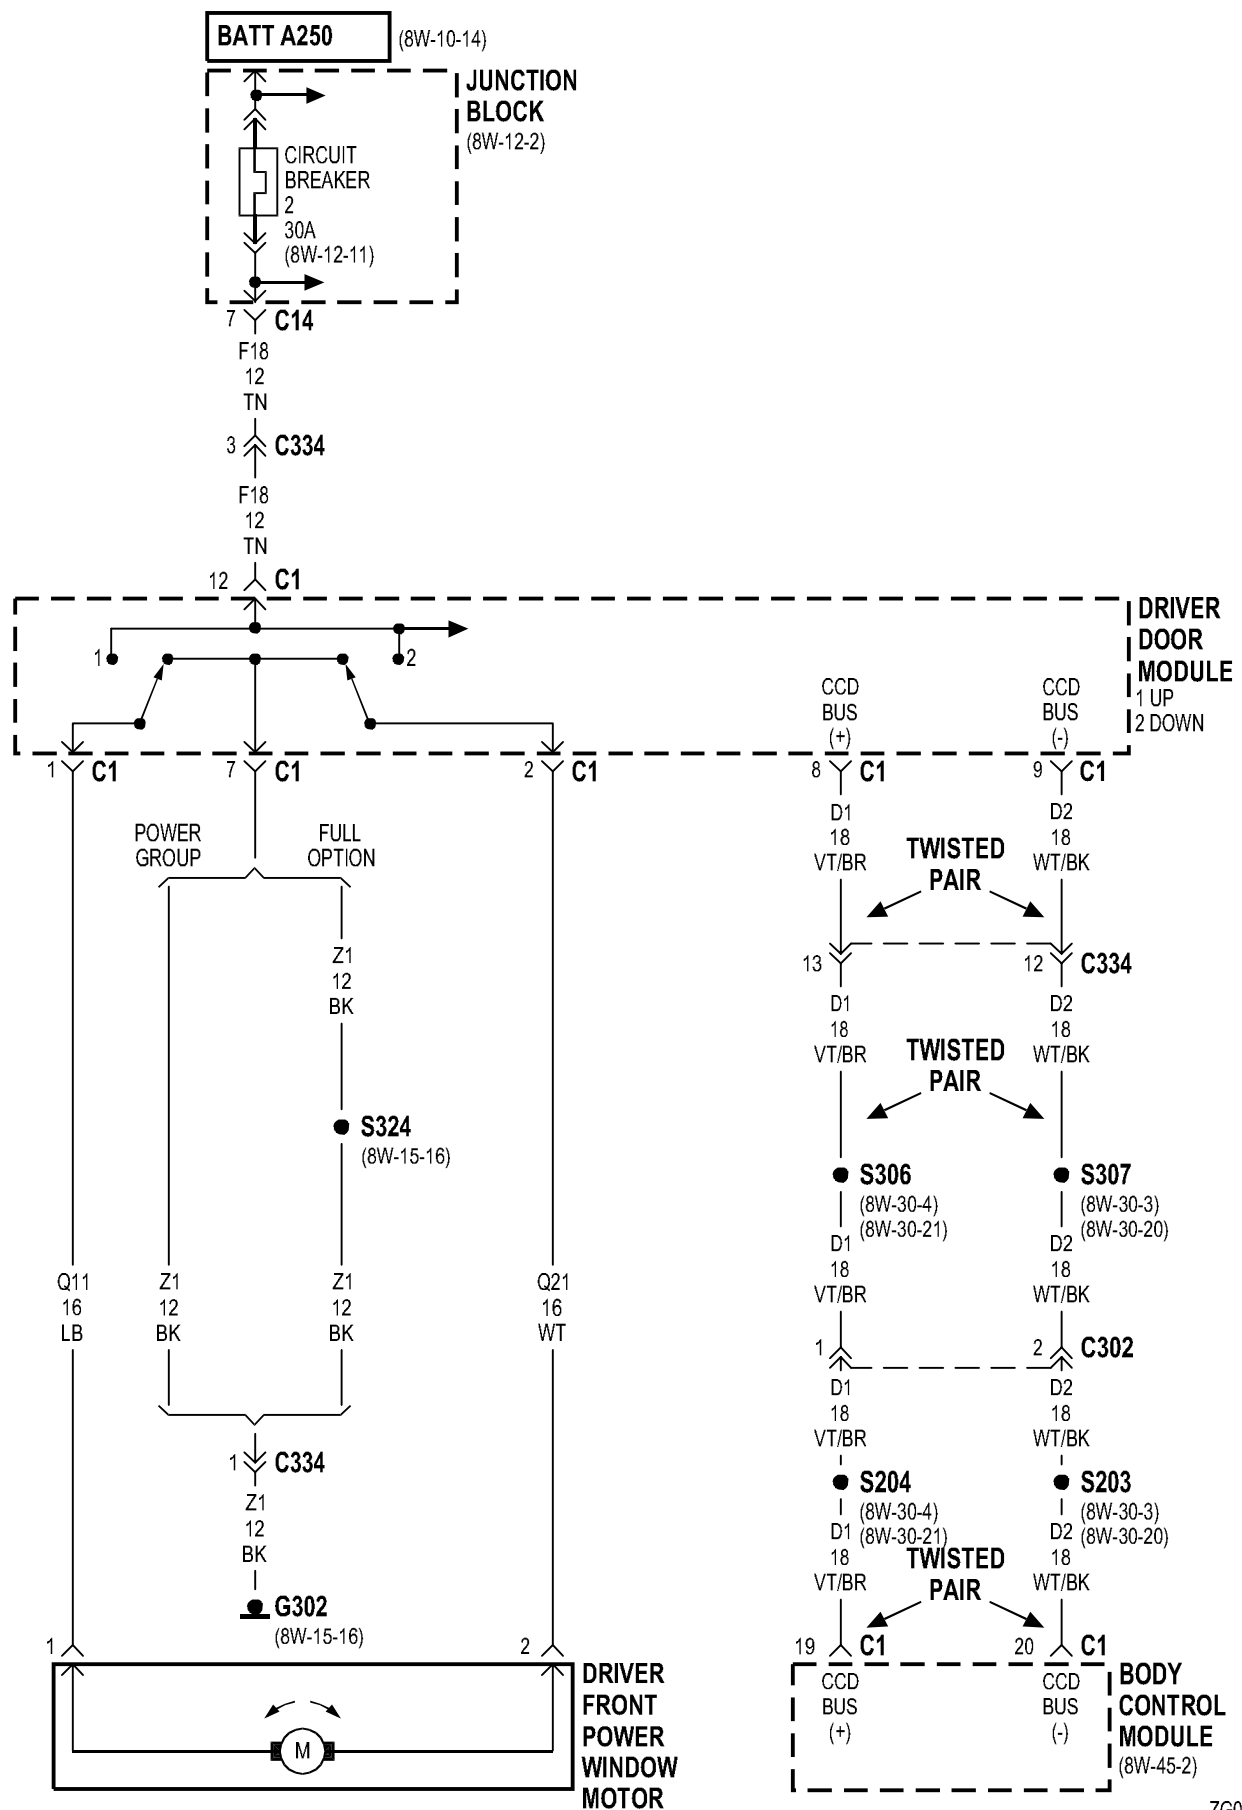




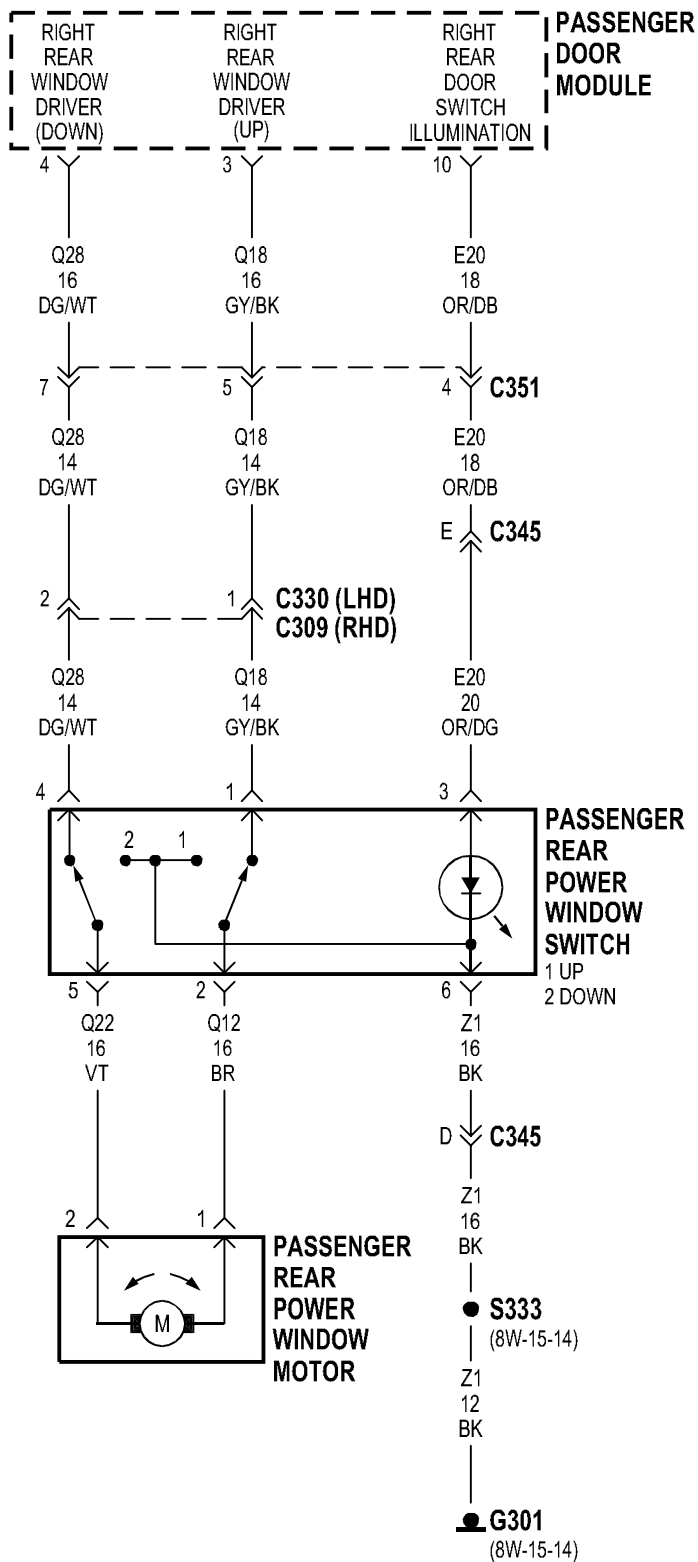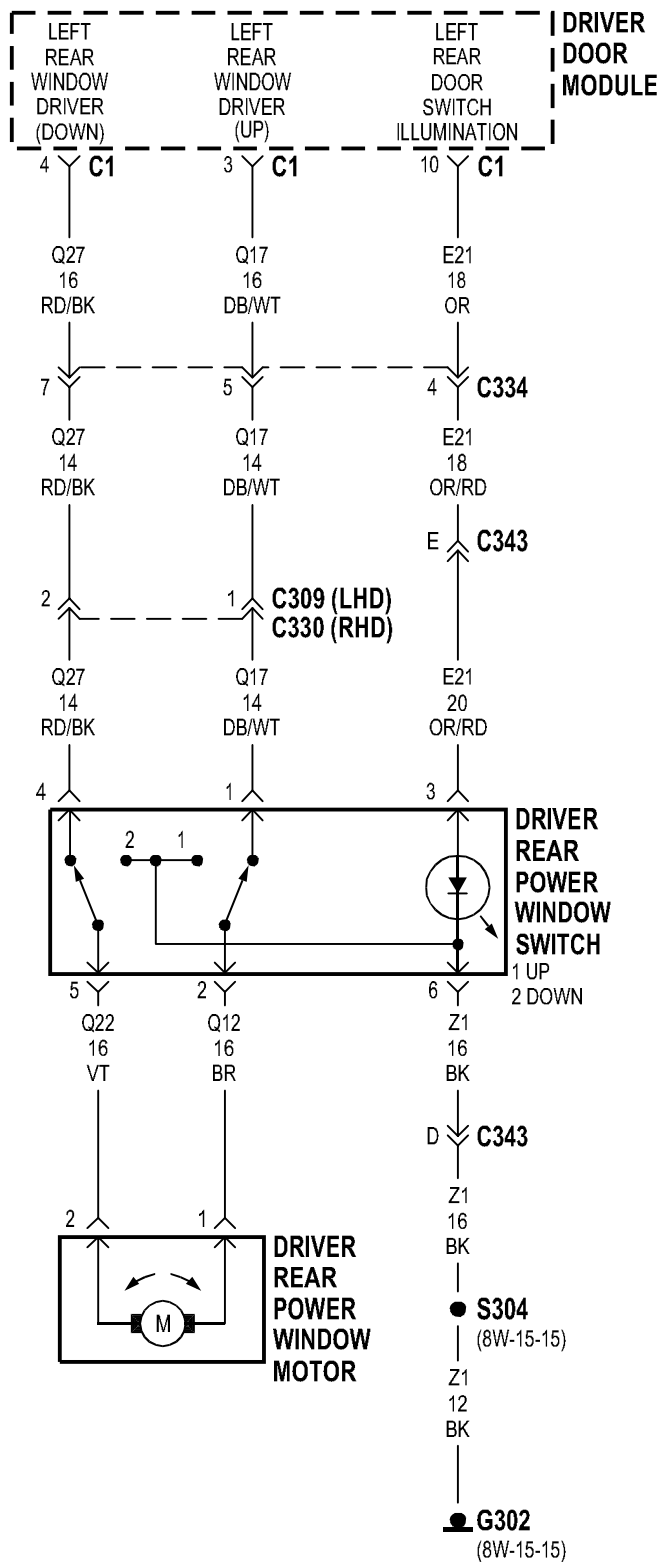


8W-61 POWER DOOR LOCKS


Component	Page
Body Control Module	8W-61-2, 3
Circuit Breaker 2	8W-61-2, 3
Driver Door Module	8W-61-2
Driver Front Door Lock Motor	8W-61-2
Driver Rear Door Lock Motor	8W-61-4
Fuse 8 (JB)	8W-61-5
G300	8W-61-5
G301	8W-61-3
G302	8W-61-2

Component	Page
Junction Block	8W-61-2, 3, 5
Liftgate Lock Motor	8W-61-4
Liftglass Limit Switch	8W-61-5
Liftglass Push Button	8W-61-5
Liftglass Release Solenoid	8W-61-5
Passenger Door Module	8W-61-3
Passenger Front Door Lock Motor	8W-61-4
Passenger Rear Door Lock Motor	8W-61-4

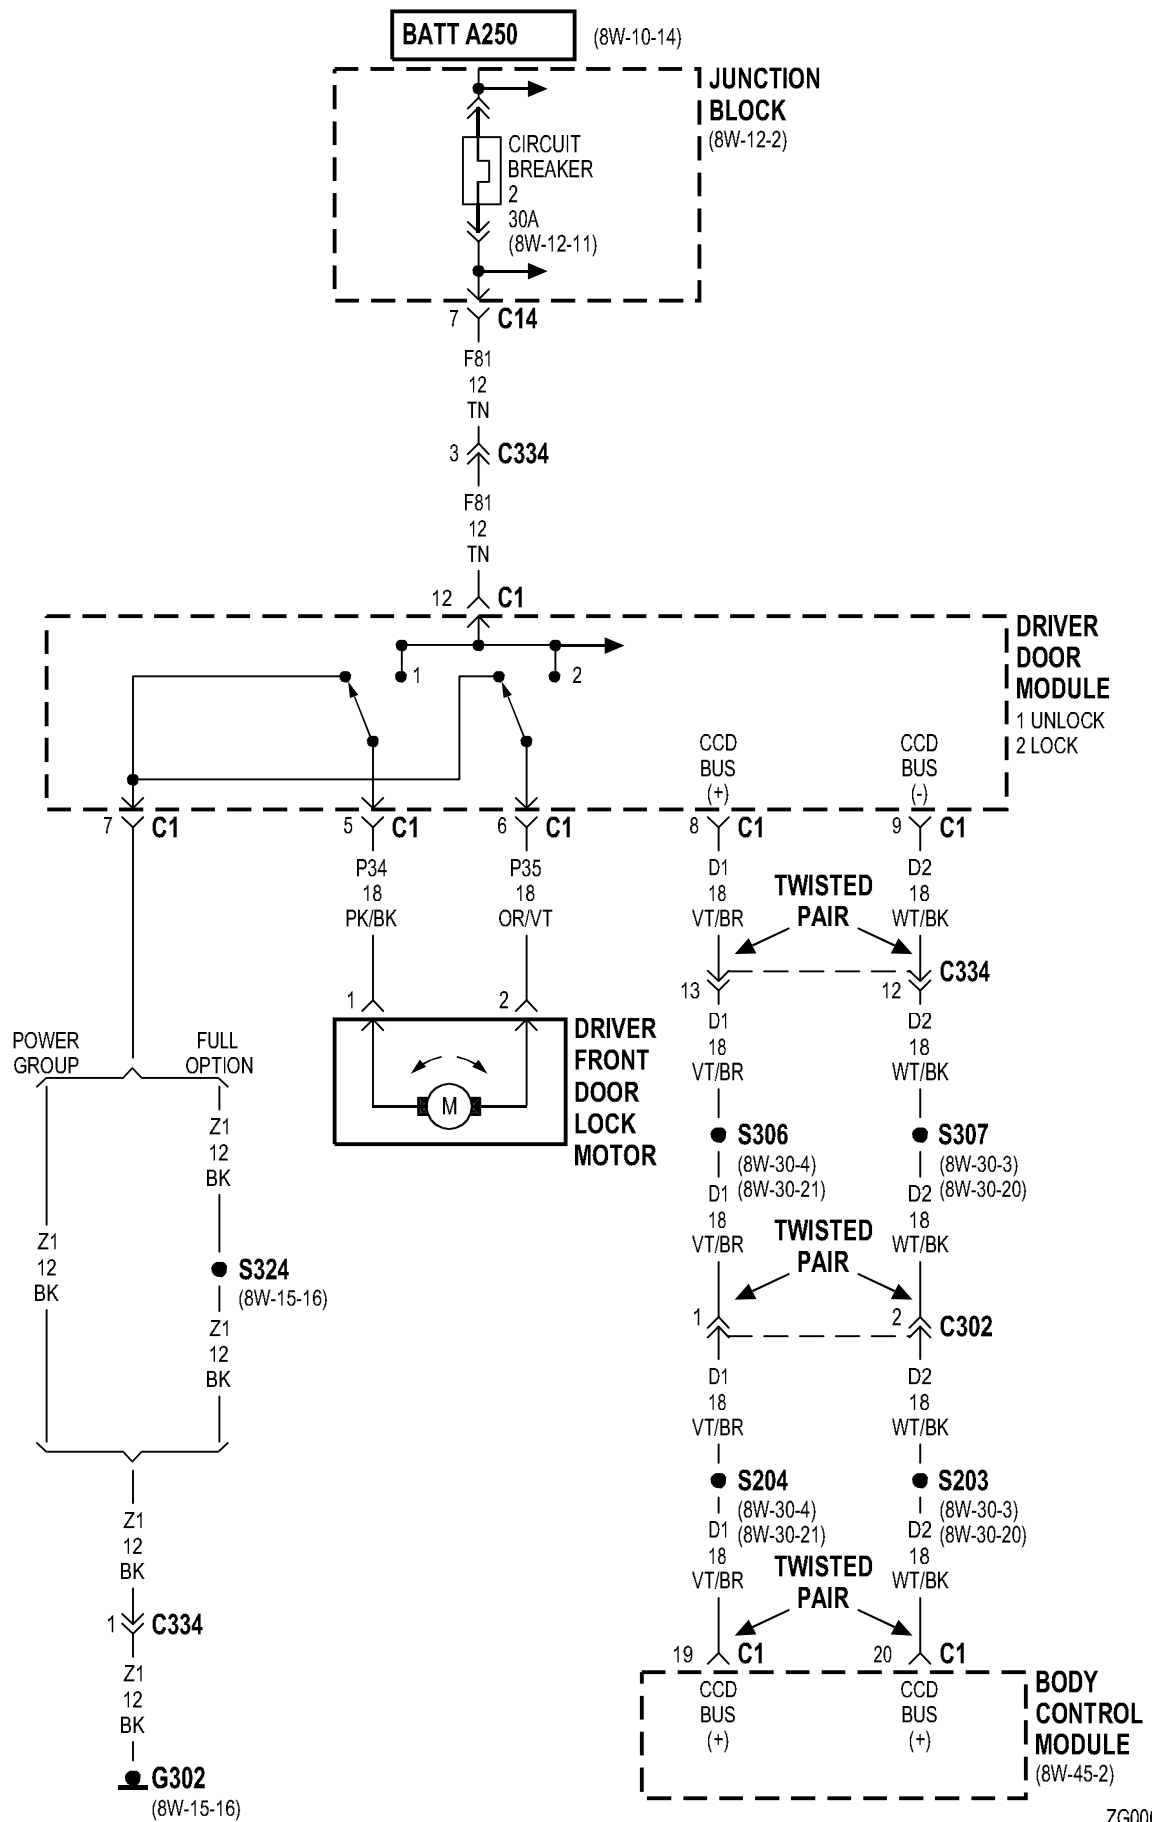




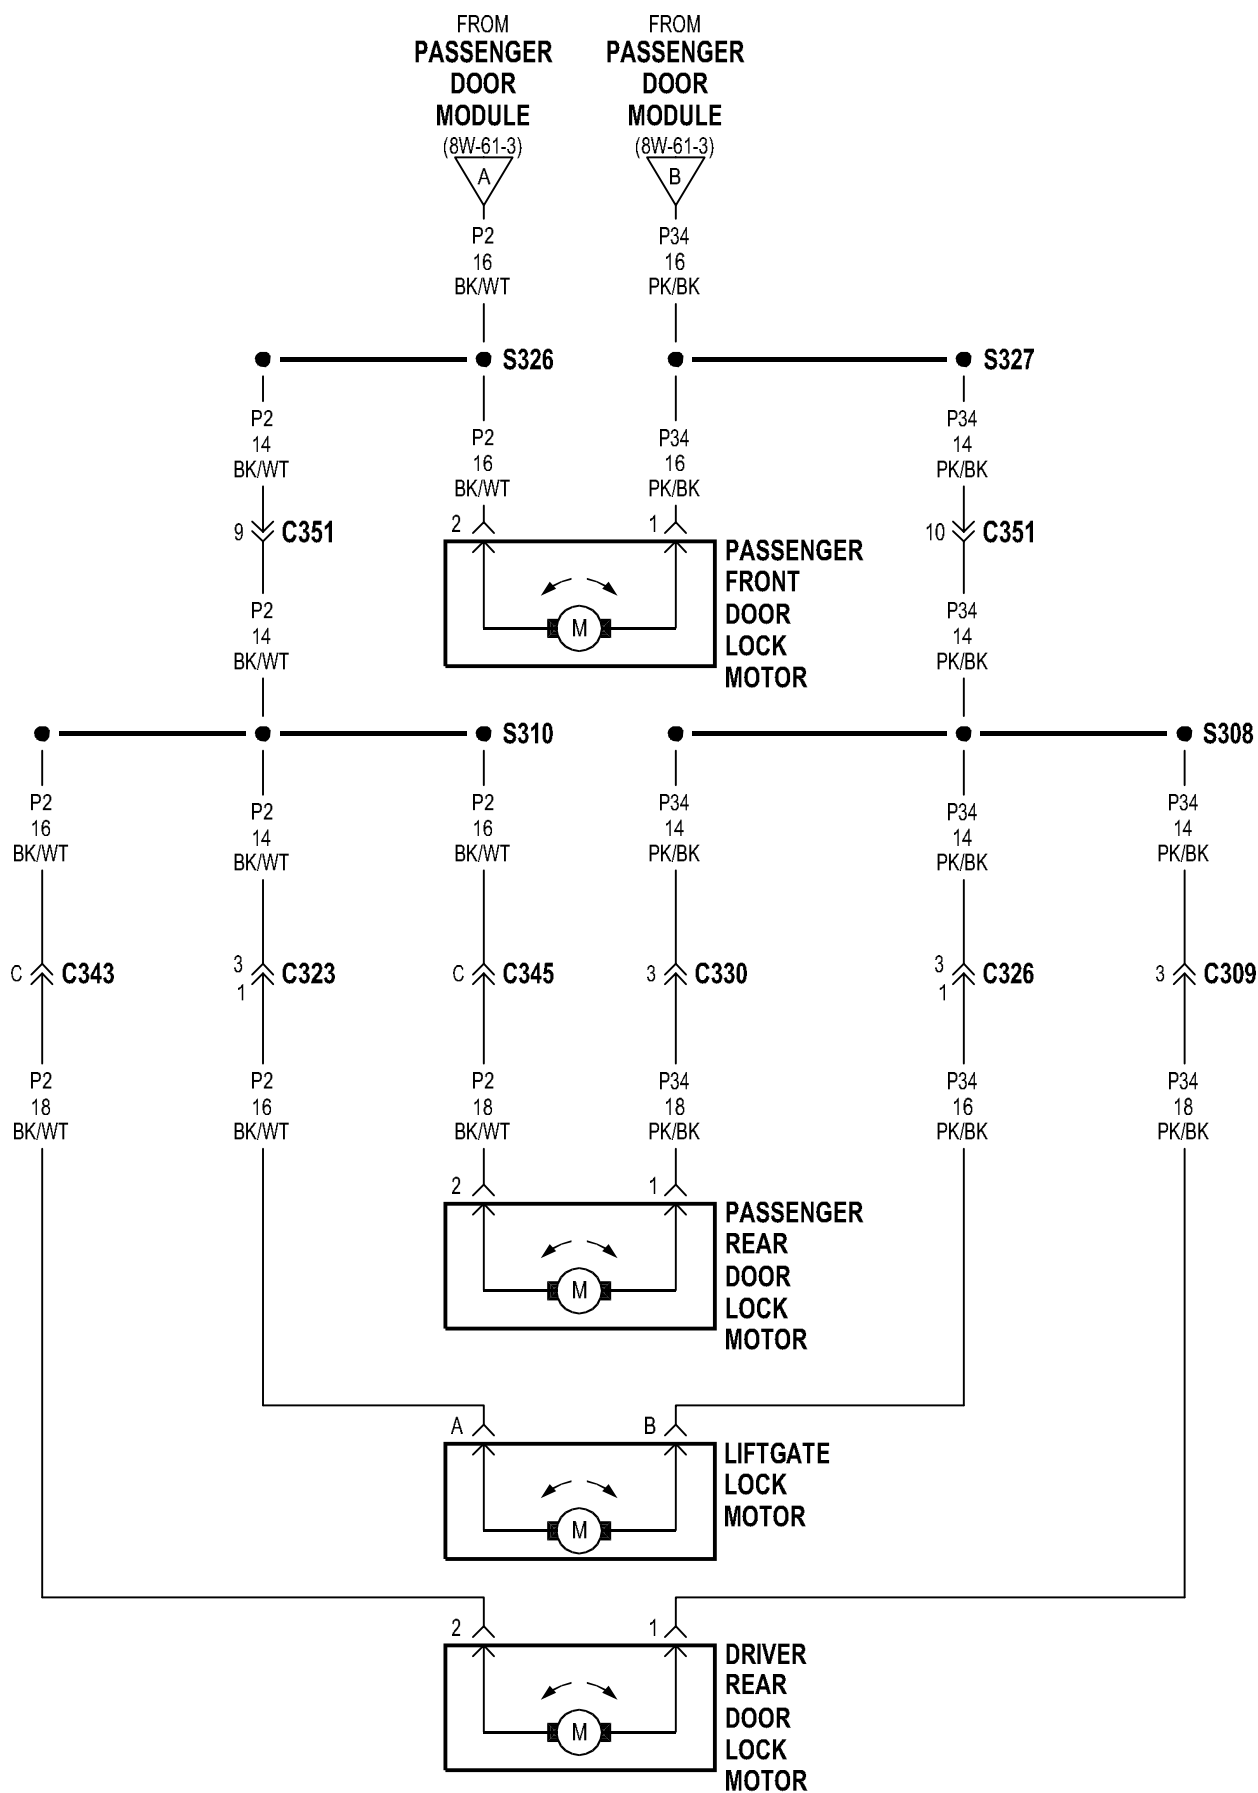


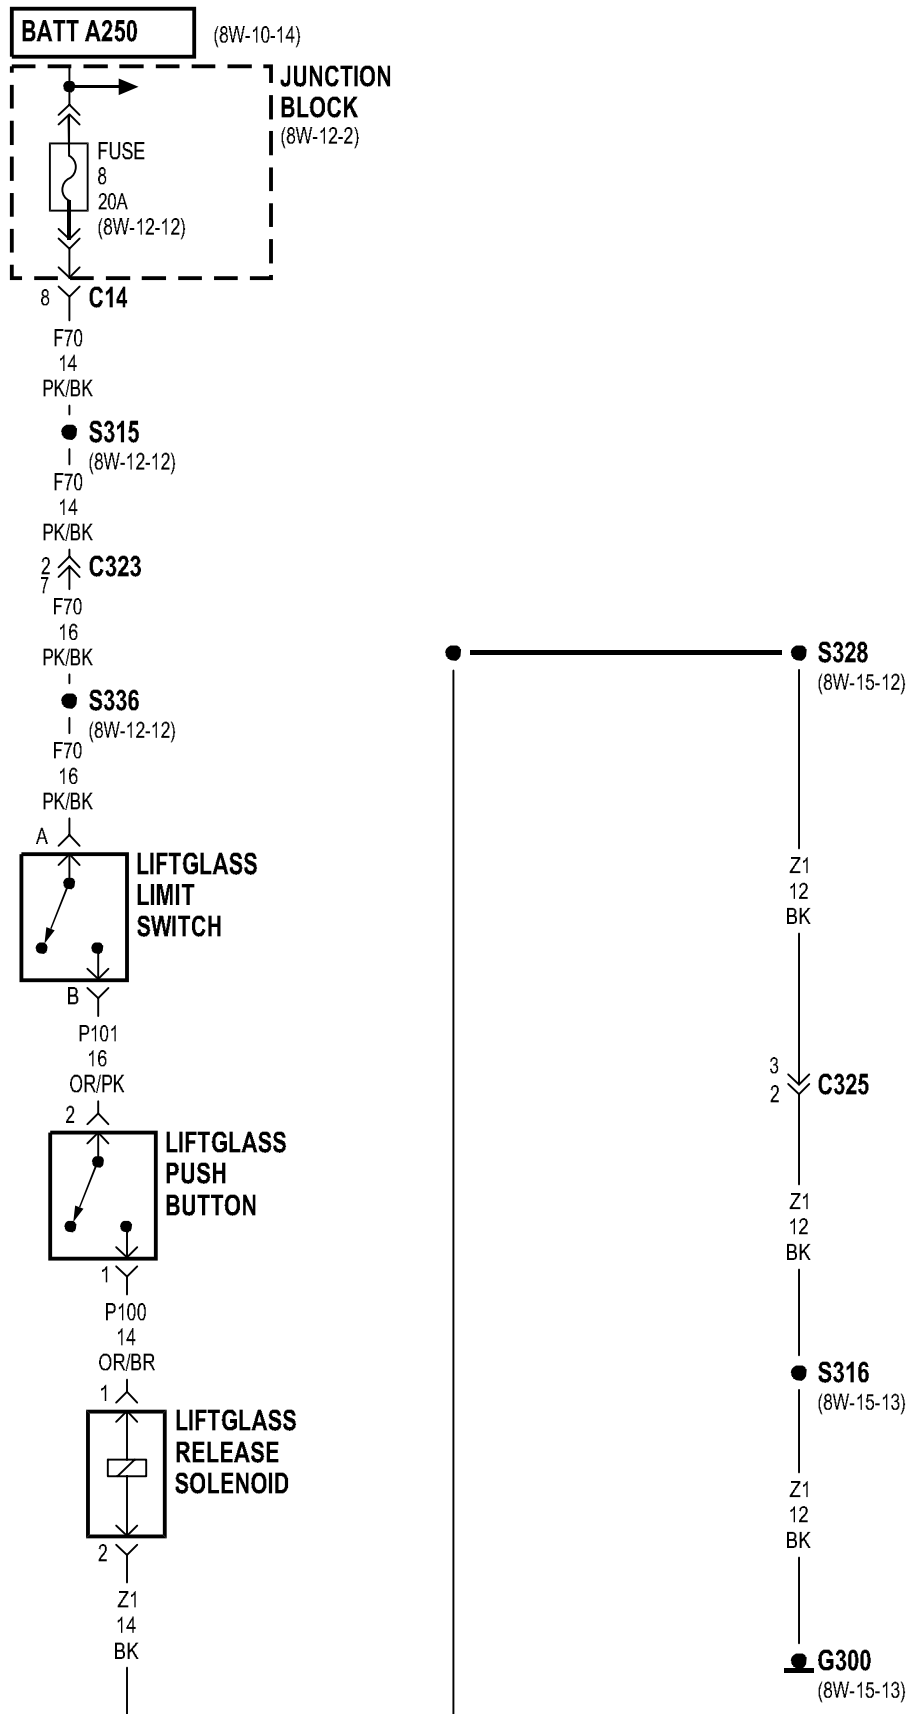


8W-62 POWER MIRRORS

Component	Page	Component	Page
Automatic Day/Night Mirror	8W-62-3	G302	8W-62-2
Circuit Breaker 2	8W-62-2	Junction Block	8W-62-2
Driver Door Module	8W-62-2, 3	Passenger Door Module	8W-62-2, 4
Driver Outside Power Mirror	8W-62-3	Passenger Outside Power Mirror	8W-62-4
G301	8W-62-2		

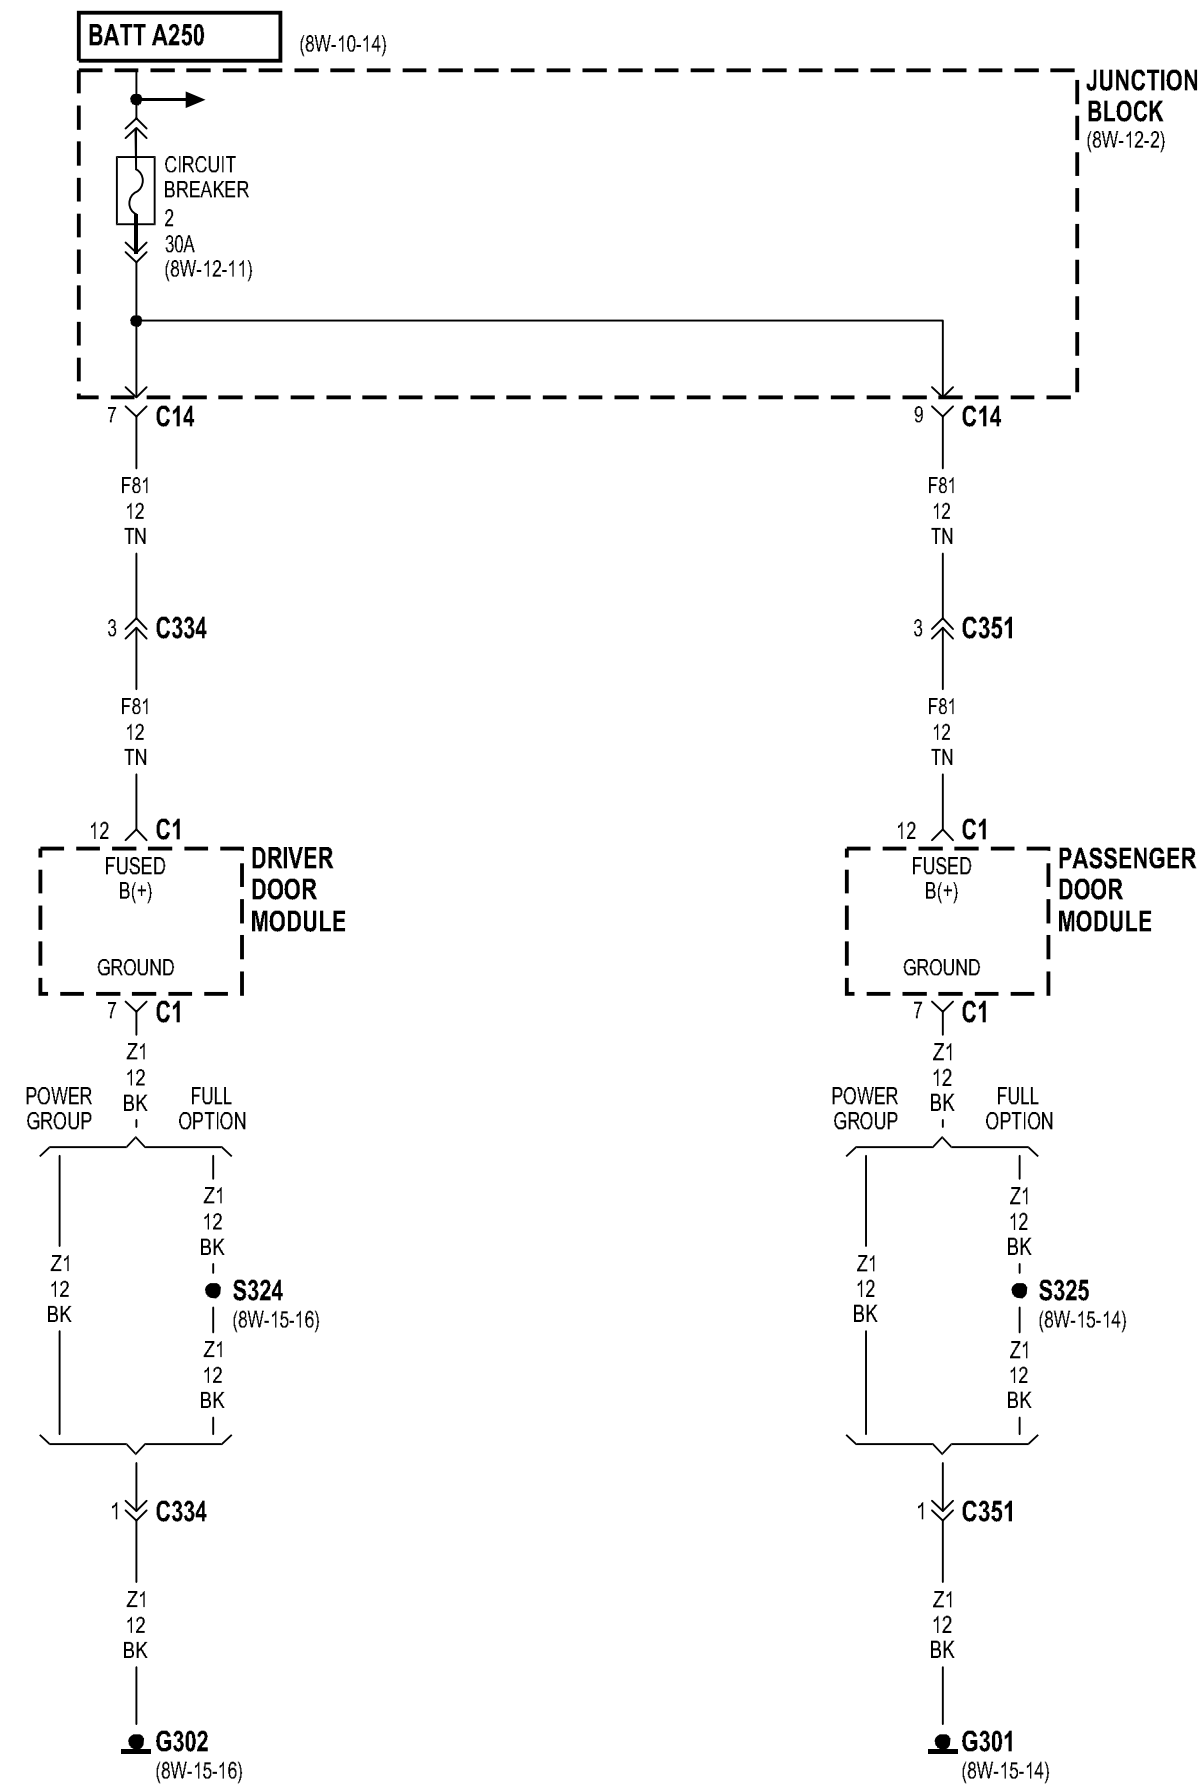

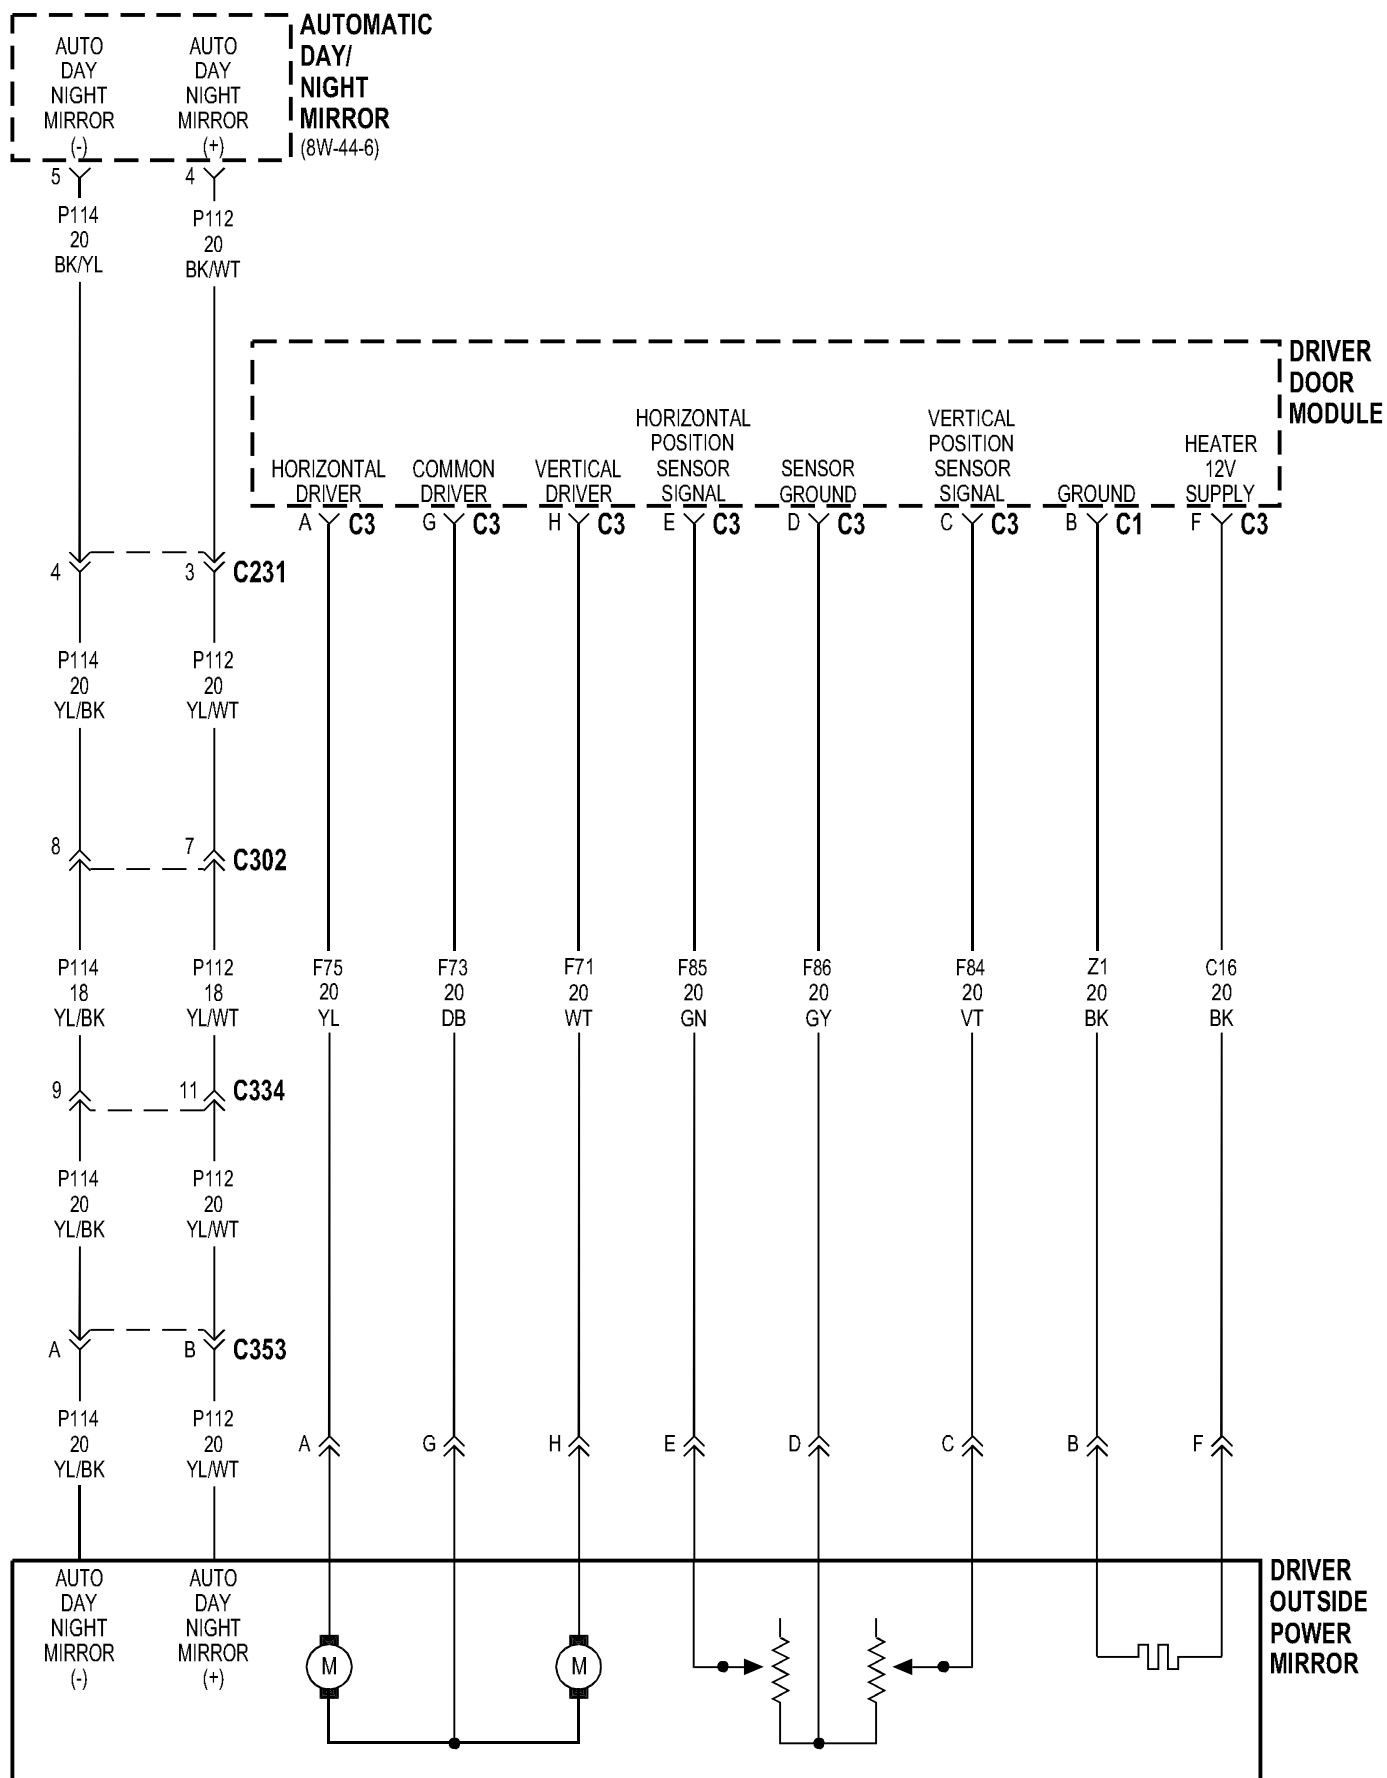

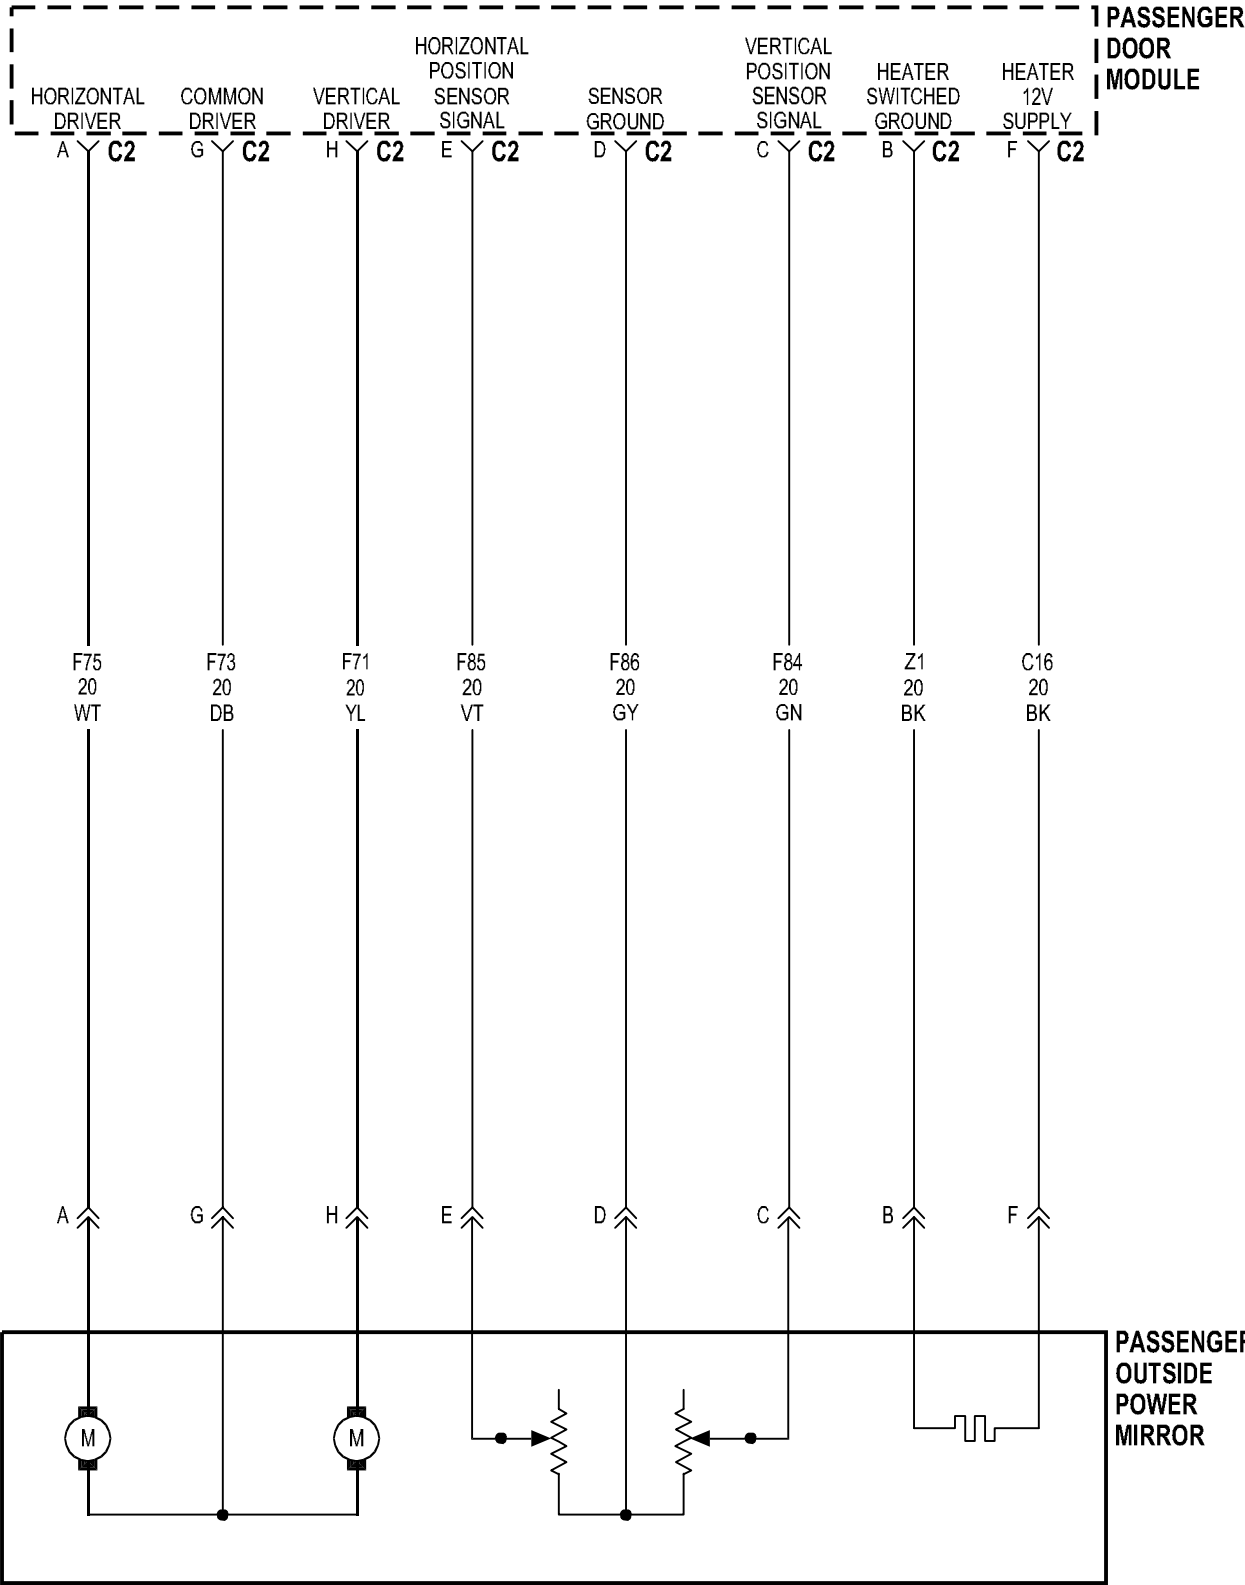

8W-63 POWER SEAT

Component	Page	Component	Page
Circuit Breaker 3	8W-63-2, 3, 4, 8, 9, 10, 13, 14	Fuse 12 (JB)	8W-63-13, 14
Driver Door Module	8W-63-15	G301	8W-63-2, 3, 8, 10, 11
Driver Heated Seat Back	8W-63-11	G302	8W-63-4, 9, 12
Driver Heated Seat Cushion	8W-63-11	G303	8W-63-13, 14
Driver Lumbar Motor	8W-63-3	Heated Seat Switch	8W-63-11, 12, 13, 14
Driver Lumbar Sensor/Motor	8W-63-5, 6	Junction Block	8W-63-2, 3, 4, 8, 9, 10, 13, 14
Driver Lumbar Switch	8W-63-2, 3	Memory Seat Module.	8W-63-2, 5, 6, 7, 8, 15
Driver Power Seat Front Riser Motor . .	8W-63-7, 10	Memory Set Switch.	8W-63-15
Driver Power Seat Front Riser Motor Sensor.	8W-63-6, 7	Passenger Door Module.	8W-63-15
Driver Power Seat Horizontal Motor. . .	8W-63-6, 10	Passenger Heated Seat Back.	8W-63-12
Driver Power Seat Horizontal Motor Sensor	8W-63-6	Passenger Heated Seat Cushion	8W-63-12
Driver Power Seat Rear Riser Motor. . .	8W-63-7, 10	Passenger Lumbar Motor	8W-63-4
Driver Power Seat Rear Riser Motor Sensor.	8W-63-6, 7	Passenger Lumbar Switch	8W-63-4
Driver Power Seat Recliner Motor	8W-63-6, 10	Passenger Power Seat Front Riser Motor . .	8W-63-9
Driver Power Seat Recliner Motor Sensor	8W-63-6	Passenger Power Seat Horizontal Motor . .	8W-63-9
Driver Power Seat Switch.	8W-63-8, 10	Passenger Power Seat Rear Riser Motor. . .	8W-63-9
Driver Seat Heater Control Module. . .	8W-63-11, 14	Passenger Power Seat Recliner Motor	8W-63-9
		Passenger Power Seat Switch.	8W-63-9
		Passenger Seat Heater Control Module	8W-63-12, 13

